

Projection Television

Instructions for use

9P5044C1

9P5544C1

9P6044C1

9P6444C1



Let's make things better.

PHILIPS **MAGNAVOX**

Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

Once your PHILIPS MAGNAVOX purchase is registered, you're eligible to receive all the privileges of owning a PHILIPS MAGNAVOX product. So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your PHILIPS MAGNAVOX warranty.

Owner Confirmation

Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.

Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Congratulations on your purchase, and welcome to the "family!"

PHILIPS MAGNAVOX



Dear PHILIPS MAGNAVOX product owner:

Thank you for your confidence in PHILIPS MAGNAVOX. You've selected one of the best-built, best-backed products available today. And we'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS MAGNAVOX "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

And most importantly you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome—and thanks for investing in a PHILIPS MAGNAVOX product.

Sincerely,

Robert Minkhorst
President and Chief Executive Officer

P.S. Remember, to get the most from your PHILIPS MAGNAVOX product, you must return your Warranty Registration Card within 10 days. So please mail it to us right now!

Know these safety symbols



This "bolt of lightning" indicates uninsulated material within your unit which may cause an electrical shock. For the safety of everyone in your household, please do not remove the product covering.

The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.


CAUTION: To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

ATTENTION: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

PHILIPS MAGNAVOX Visit our World Wide Web Site at <http://www.philipsmagnavox.com>

SAFETY INSTRUCTIONS - Read before operating equipment

This product was designed and manufactured to meet strict quality and safety standards. There are, however, some installation and operation precautions which you should be particularly aware of.

1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating and use instructions should be followed.
5. **Water and Moisture** - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement or near a swimming pool, etc.
6. **Carts and Stands** - The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- 6A.  An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- 6B. **Tilt/Stability** - All televisions must comply with recommended international global safety standards for tilt and stability properties of its cabinet design.
 - Do not compromise these design standards by applying excessive pull force to the front, or top, of the cabinet which could ultimately overturn the product.
 - Also, do not endanger yourself, or children, by placing electronic equipment/toys on the top of the cabinet. Such items could unsuspectingly fall from the top of the set and cause product damage and/or personal injury.
7. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. **Ventilation** - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. **Heat** - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
10. **Power Sources** - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.

11. **Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles, and the point where they exit from the appliance.
12. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
13. **Power Lines** - An outdoor antenna should be located away from power lines.
14. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges.

Section 810 of the National Electric Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure grounding of the lead-in wire to an antenna discharge unit, size of grounding connectors, location of antenna-discharge unit, connection to grounding electrodes and requirements for the grounding electrode. See Fig. below.
15. **Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
16. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
17. **Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
18. **Servicing** - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

Note to the CATV system installer: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Example of Antenna Grounding as per NEC - National Electric Code

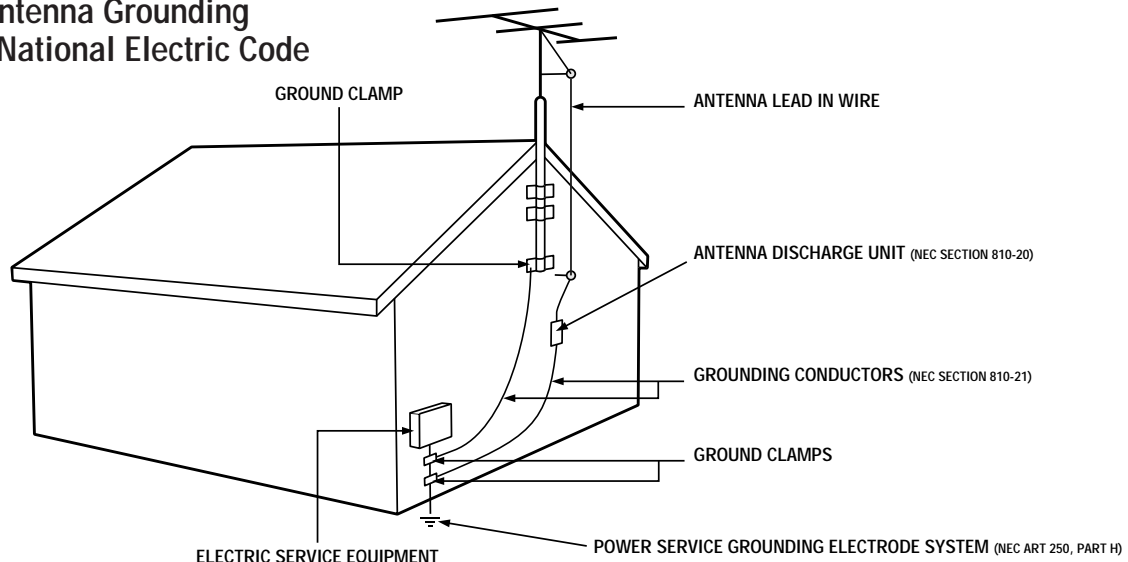


TABLE OF CONTENTS



Getting Started

Welcome/Product Registration	2
Safety/Precautions	3
Table of Contents	4
Features, Model and Cabinet Information	5



On-Screen Features

PICTURE MENU

◇Adjusting Color, Brightness, Sharpness, Tint, and Picture Controls	6
◇Using the Clearview Control	7
◇Adjusting the TV's Convergence Control	8
◇Using the Flesh Correction Control	9

FEATURES MENU

◇Selecting a Picture Source	10
◇Setting the TV for Closed Captioning	11
◇Setting the TV for Cable or Antenna Signals....	12
◇Adding Channels in Memory (Automatically) .	13
◇Adding Channels in Memory (Manually)	14
◇Setting the TV Clock.....	15
◇Alarm Timer	16
◇Using the Sleep Timer Control	17
◇Adjusting the Channel Display Control	18
◇Using the Time/Channel Reminder Control.....	18
◇Using Parental Control/Content Advisory:	
• Code Setup/Blocking Channels.....	19-20
• Content Advisory - Movie Ratings	21-22
• Parental Guidelines.....	23
• Blocking Options/Review Settings.....	24
◇Using the Channel Label Control.....	25
◇Using the Language Selection Control.....	26

SOUND MENU

◇Adjusting Bass, Treble, and Balance Sound Controls.....	27
◇Setting the Bass Boost Control	27
◇Setting the TV for Stereo and SAP Programs ..	28
◇Using the Incredible Stereo Control	29
◇Using the Volume Display Control.....	30
◇Using the TV Speaker On/Off Control with the Audio Output jacks	31
◇Surround Sound Speaker Connections and Variable Audio Output Control	32
◇Using the TV's Audio/Video Input and Output Jacks	33-37



Remote Control Operation

Setting the Smart Picture Control.....	38-39
Using the Smart Sound Control	40
Using the Smart Surf Control	41
Setting the TV Remote to Work Optional Accessory Devices:	
Direct Entry/Code Number Method	42-43
Search and Identify Method	44
Remote Control Direct Entry Code Lists	45-46
Using the Remote's VCR buttons	47



Picture-In-Picture (PIP)

How to Use PIP (Connections).....	48-49
How to Use PIP with the TV Remote.....	50
Selecting the Picture Source for PIP.....	51
Adjusting Picture-in-Picture Color and Tint.....	52
More PIP Connections (Cable Converter).....	53




General Information

TV Help Menu	54
Tips if Something Isn't Working	55
Glossary of TV Terms	56
Index	57
Factory Service Locations	58-59
Warranty	60

SET-UP AND QUICK USE GUIDE

Use the simple Set-Up Guide (supplied with your TV information packet) for details on:

- Antenna Hook-ups
- First Time Set-Up (Automatic Settings)
- Basic TV and Remote Control Operation
- On-Screen Menu Use

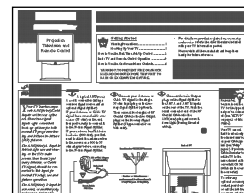

NOTE: This owner's manual is used with several different television models. Not all features (and drawings) discussed in this manual will necessarily match those found with your television set. This is normal and does not require you contacting your dealer or requesting service.

Because of continuous product improvements, the information mentioned in the documents accompanying your product are subject to change without notice.



First Time Set Up - automatically sets the TV for local channels, the correct picture signal (antenna or cable), and assists in the setting of TV's Guide Plus+ feature.

Infrared Remote Control - operates your TV set and a variety of wireless remote control VCRs, Cable TV Converters, and other accessory equipment.

Standard TV broadcast (VHF/UHF) or Cable TV (CATV) channel capability.

Closed Captioning - allows the viewer to read TV program dialogue or voice conversations as on-screen text.

Automatic Programming of channels - for quick and easy selection of favorite stations available in your area.

Picture-In-Picture (PIP) - can show a TV program and the direct video output from an accessory (VCR, etc.) onto the TV screen at the same time.

Parental Control for "Censoring" - this feature can block out channels to keep children from watching undesirable programming. Parental Guideline and Movie Rating settings can also be used as part of the new Content Advisory Data system available with TV programming.

Stereo-TV - with a built-in audio amplifier and a twin speaker system, reception of TV programs in both broadcast stereo sound or (SAP) bilingual broadcast are available.

Twin Antenna (A/B) Inputs - for easy displaying of two separate signal sources on the TV. An A/B button on the remote control switches the TV's Main screen between the two Antenna (A & B) Input options.

Audio/Video Jacks - for direct connections with VCRs (and other accessories) for quality TV picture and sound playback. Component Video Input connectors are also available for high fidelity color and picture resolution when using digital video source material, such as DVD.

Surround Sound - this TV set contains external; audio speaker connections for a more dynamic sound effect.

Sleep-Timer - automatically turns the TV OFF at preset time intervals.

Smart Button - for the control of TV Sound and the Picture levels. Use the Smart Button on the remote to quickly adjust Smart Sound (to select various audio modes matched to specific types of TV programming); Smart Picture (for programmed video level adjustments on a variety of program sources); and Smart Surf (for quick one button channel selection of up to 10 of your favorite channels).

Digital Ready - Projection Television capable of connecting to both the current analog television signals of today as well as interfacing with new upcoming digital source playback products and devices. This TV includes multiple signal connectors (Component Video, S-Video, Composite Video) which give you a variety of equipment playback options for digital set top boxes, satellite receivers, cable boxes, and other digital devices.

While there may exist some digital devices with connections not available on this television, you should be adequately prepared for the vast majority of products coming onto the digital consumer electronics' market. Note: You should always use the connection output on digital devices that gives the highest level of picture quality possible. As listed above the Component Video (or Y Pb Pr) input delivers the best color and picture reproduction; followed by S-Video; and then Composite Video. In addition to the above listed inputs, your television also includes the standard 75ohm cable signal connector for use with antennas or analog cable boxes.

As you unpack your TV please note that the following items have been included with your set:

- Owner's Manual
 - Safety Tip Information
 - Factory Service Center Locations
- Warranty Registration Card
- Remote Control Transmitter
- Batteries for Remote Control Use

Please take a few minutes to complete your registration card. The serial number for the TV is on the back of the set.

Refer to the back of this manual for instructions on the cleaning and care of the TV.

End-of-Life disposal

Your new projection television and its packaging contain materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and minimize the amounts which need to be properly disposed.

Your product also uses batteries which should not be thrown away when depleted, but should be handed in and disposed of as small chemical waste.

Please find out about the local regulations on how to dispose of your old television, batteries, and packaging materials whenever you replace existing equipment.

PICTURE MENU CONTROL ADJUSTMENTS

COLOR, BRIGHTNESS, SHARPNESS, TINT, PICTURE

To adjust your TV color and picture controls, select a TV channel and follow the steps shown below:

BEGIN

- 1 Select **BRIGHTNESS, PICTURE, COLOR, TINT, or SHARPNESS** picture control.

With the PICTURE MENU on screen, move the RED highlight with the MENU (M) ◀▶ buttons. Then press the MENU button.

- 2 Press the (+) or (-) buttons to adjust the selected control.

- 3 Press the **STATUS** button to clear the screen.



SMART HELP



Remember. When the bar scale is centered, control settings are at normal mid-range levels.





BRIGHTNESS Press (-) or (+) until dark parts of the picture show good detail.

PICTURE Press (-) or (+) until whitest parts of the picture are as bright as you prefer.

COLOR Press (-) or (+) to add or eliminate color.

TINT Press (-) or (+) to obtain natural skin tones. (Also see Flesh Correction on page 9 for more information).

SHARPNESS Press (-) or (+) to improve detail in the picture.

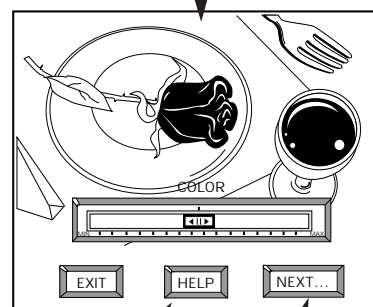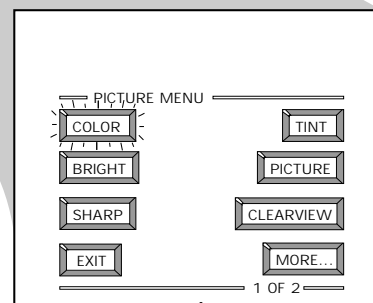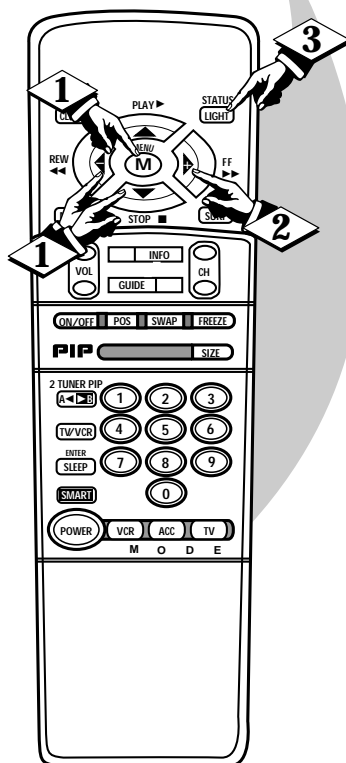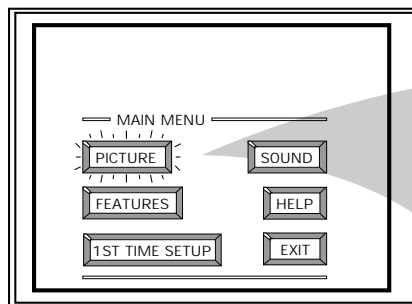

Select and then press MENU (M) button to view an explanation of the selected feature.

Select and then press MENU (M) button to view additional controls grouped under same feature heading. For Example: Tint, Brightness, Picture, etc.



CLEARVIEW

Clearview is a sharpness feature which smoothes out background snow (or picture noise) without losing picture image detail or crispness.





(BEGIN)

1 Select CLEARVIEW control.

With the PICTURE MENU on screen, move the RED highlight with the MENU (M) buttons. Then press the MENU button.

2 Press the MENU buttons to move the RED highlight. Press the MENU button to select (✓) the ENHANCED mode.

3 Press the STATUS button to clear the screen.

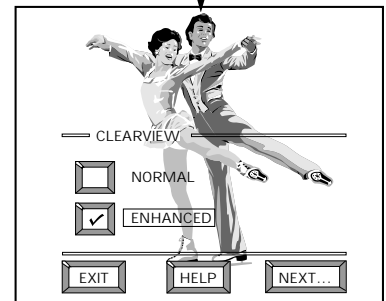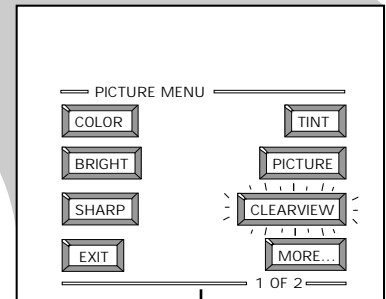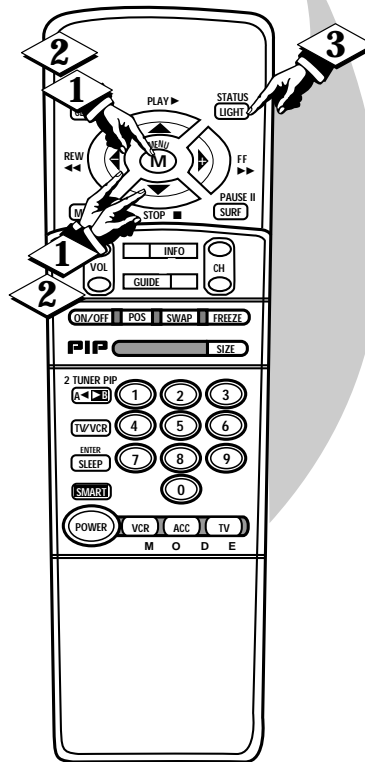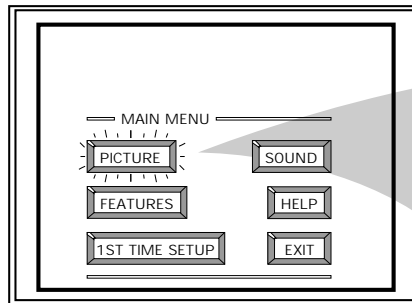

RED/BLUE CONVERGENCE

Convergence is the correct lining up of the red and blue light paths on the TV screen.

NOTE: If no color fringing (see *Smart Help*) shows, then no Convergence adjustments are necessary for your TV.

(BEGIN)

- 1 Select **CONVERGENCE** control.

With PICTURE MENU (2 of 2) on screen, move the RED highlight with the MENU (M) button. Then press the MENU button.

- 2 If there is **RED or BLUE** color fringing on the White cross, press the MENU button to continue.

- 3 Press the MENU button to move the red or blue cross directly over the white cross on the TV screen.

The red or blue cross is properly adjusted when it is completely merged with the white cross. (No color appears around the edge of the white cross).





- 4 Press the **STATUS** button to clear the screen when convergence adjustments are complete.



SMART HELP




Remember. Convergence has been set at the factory for best viewing, but if one or more of the (red or blue) colors appear around the edges of objects (color fringing) follow the steps given in this section.

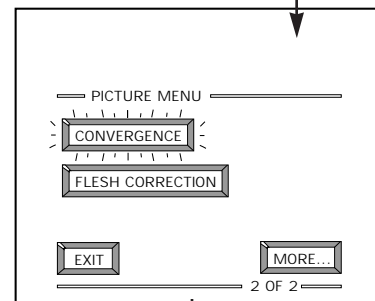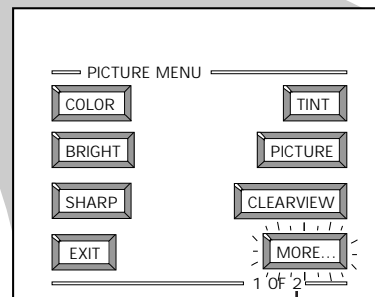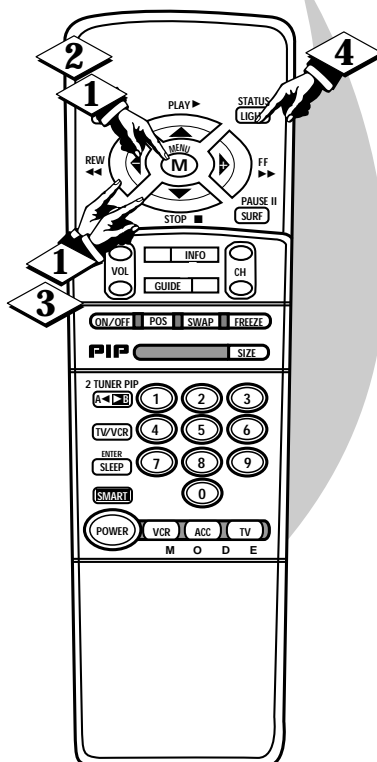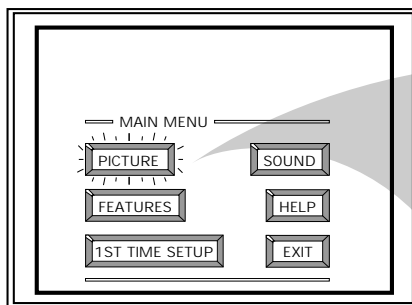

If there is **RED or BLUE** fringe on the **WHITE** cross, use this adjustment to improve the picture.



Press "M" to Continue
or
Press "▶" to Return

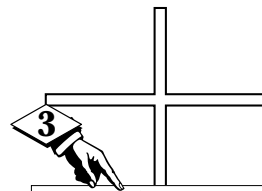


Use the ◀▶ keys to merge the **RED** fringe into the **WHITE** cross. Press "M" to Continue.

NOTE: Adjustments for "Multi-Point" on-screen color fringing can also be made as part of the TV's Convergence control system. Follow the TV's on-screen menu directions to select individual screen areas that can be readjusted and set for varying red/blue color fringing conditions. These multi-point settings can then be "Saved" to memory for the specific areas of the TV screen (or Factory Settings for convergence can be recalled and put back into place for use).


MULTI-POINT CONVERGENCE

Use the ◀▶ keys to adjust

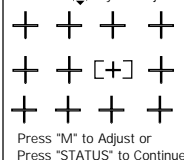

Press "M" to Adjust or
Press "STATUS" to Continue

 Press "M" to Save
Press "▶" to Undo




Press "▶" to
recall Factory Settings



FLESH CORRECTION

Use the Flesh Correction control to keep skin tone hues (or facial tint) from varying from TV channel to TV channel.





BEGIN

- 1 **Select FLESH CORRECTION control.**

With PICTURE MENU (2 of 2) on screen, move the RED highlight with the MENU (M)  buttons. Then press the MENU button.

- 2 **Press the MENU   buttons** to move the RED highlight. Press the MENU button to turn (✓) the FLESH CORRECTION control ON.

- 3 **Press the STATUS button** to clear the screen.

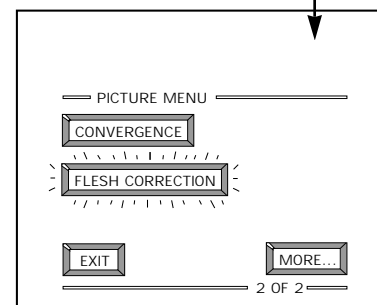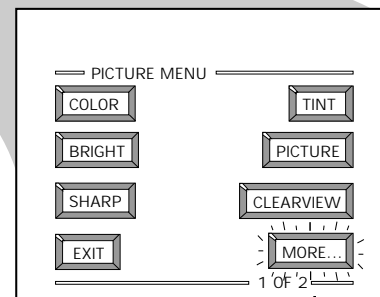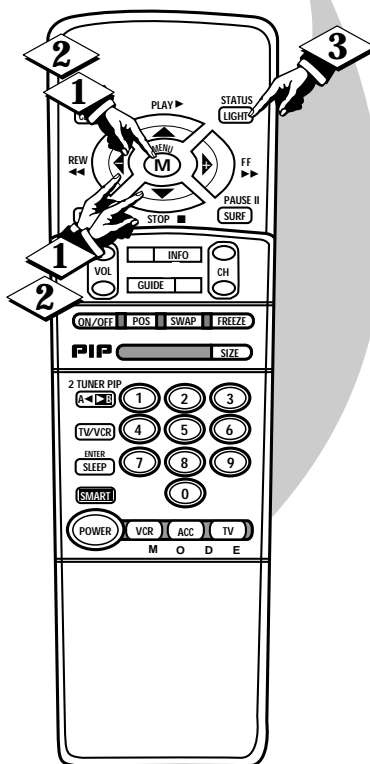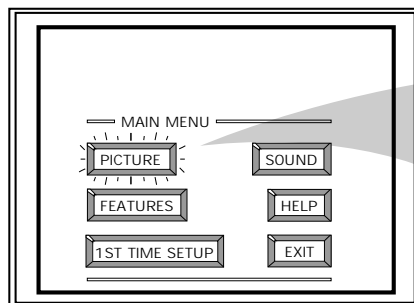

PICTURE SOURCE

The picture for the TV can come through either the ANTENNA plug or the AUDIO/VIDEO Input jacks (on the rear of the TV). The Picture Source control simply tells the TV which one of these picture sources it is to show on the TV screen.

(BEGIN)

1 Select PICTURE SOURCE SELECT control.

With the FEATURES MENU on screen, move the RED highlight with the MENU (M) and the left/right arrow buttons. Then press the MENU button.

2 Press the MENU ▲▼ buttons to move the RED highlight. Press the MENU button to turn the desired PICTURE SOURCE control ON (✓).

ANT A or B- for a picture signal coming from either the ANT(enna) A or B Input plugs on the TV.

AUX 1 VIDEO- for a picture signal coming from the AUX 1 Video Input jack on the rear of the TV.





AUX 1 Y Pb Pr- for picture signals coming from the component (Y Pb Pr) luminance and color input jacks on the rear of the TV.

AUX 2 VIDEO- for a picture signal coming from the AUX 2 Video Input jack on the rear of the TV.

SIDE VIDEO- for a picture signal coming from the Video Input jack on the right side panel of the TV.

3 Press the STATUS button to clear the screen.

STOP

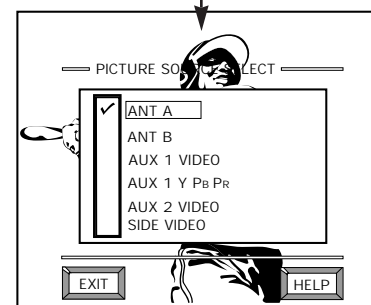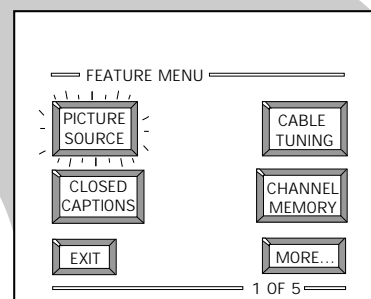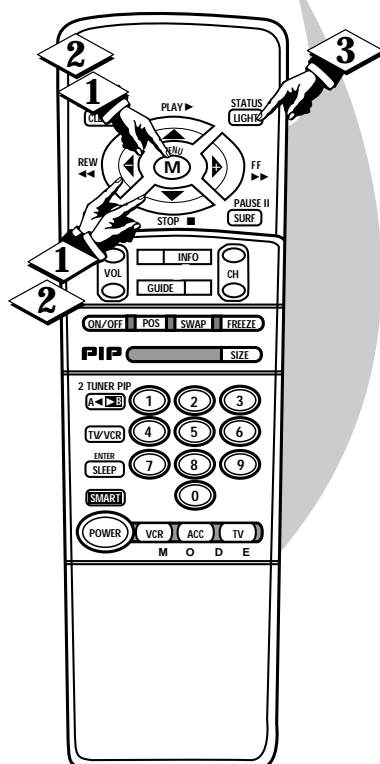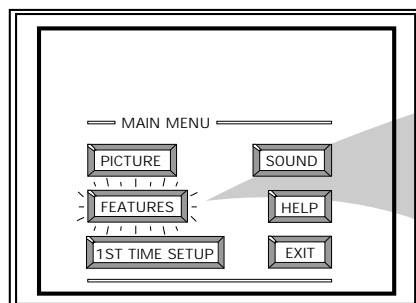

Note: A "S-VIDEO 1" (or 2) Input will appear as a PICTURE SOURCE SELECT(ion) in place of the AUX 1 VIDEO (or AUX 2 VIDEO) position when the S-VIDEO plugs (on the rear of the TV) are connected. See page 35 for operating details on S-VIDEO.

SMART HELP



Remember, the Auxiliary Input modes (AUX 1 VIDEO, etc.) must have a compatible video signal source properly connected (to the INPUT plug on the rear of the TV), or the TV screen will be blank.

CLOSED CAPTION

Closed Captioning (CC) allows you to read the voice content of television programs on the TV screen. Designed to help the hearing impaired this feature uses on-screen "text boxes" to show dialogue and conversations while the TV program is in progress.

(BEGIN)

1 Select CLOSED CAPTIONING control.

With the FEATURES MENU on screen, move the RED highlight with the MENU (M) buttons. Then press the MENU button.

2 Press the MENU ▲▼ buttons to move the RED highlight. Press the MENU button to select (✓) the desired Closed Caption mode - For Example: "ALWAYS ON" and "CAPTION 1".

CAPTION 1, 2, 3, 4:

dialogue (and descriptions) for the action on the captioned TV program shows on-screen. (See Important Note on this page.)

TEXT 1, 2, 3, 4:

often used for channel guide, schedules, or bulletin board information for CC programs.

3 After making your Caption mode selection, press the STATUS button to clear the TV screen. The selected Closed Caption mode will be active.

To cancel, set the Closed Captioned feature to OFF when finished.






SMART HELP




Remember. Broadcast stations will often use spelling abbreviations, symbols, dropouts and other grammatical shortcuts in order to keep pace with the on-screen action. These type factors vary upon the source of the captioned text material and do not indicate a need for service on the part of the TV.

NOTE: Not all TV programs and product commercials are made for broadcast with Closed Caption (CC) information included. Neither are all Closed Caption modes (CAPTION 1-4; or TEXT 1-4) necessarily being used by a broadcast station during the transmission of a closed caption program. Usually "CAPTION 1" is the most used mode to view captioned material. Refer to your area's TV program listings for the stations and times of Closed Caption shows.

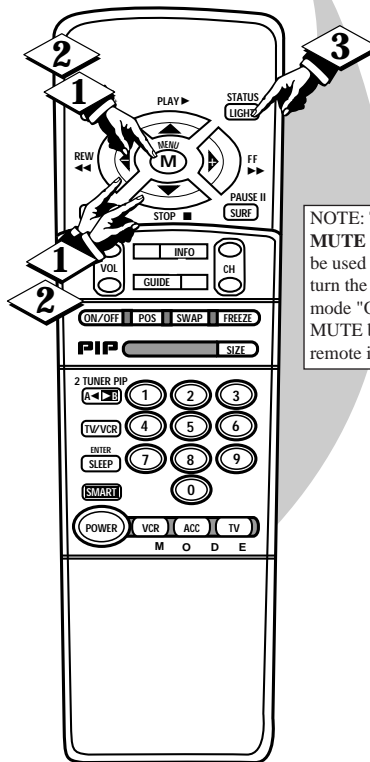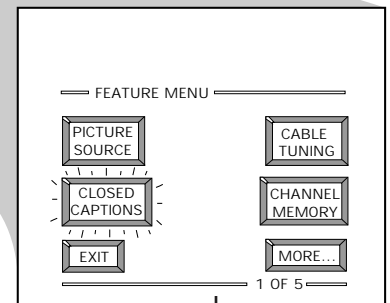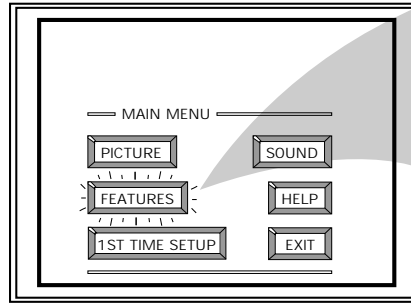

NOTE: The ON DURING MUTE ONLY control can be used to set the TV to turn the Closed Caption mode "ON" whenever the MUTE button on the remote is pressed.

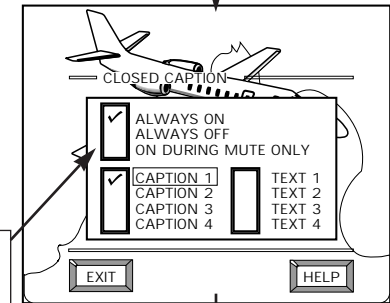

CAPTION 1 mode
Example Screen Display



FULL SCREEN TEXT
will block TV screen from viewing

Closed Caption information will usually appear in black and white (although some broadcasters or networks may occasionally use color to highlight or draw attention to certain areas.)

 
CABLE TUNING

You need to make sure the TV is set to pick up either Cable TV or Antenna signals. In other words, the TV needs to know if you connected a Cable TV signal or a normal antenna to its ANTENNA plug.

NOTE: If you went through First Time Setup (in your Quick Use Guide), this task has already been completed for you.

BEGIN

1 Select CABLE CHANNEL TUNING control.





With the FEATURES MENU on screen, move the RED highlight with the MENU (M)  buttons. Then press the MENU button.

2 Press the MENU buttons to move the RED highlight. Press the MENU button to select (✓) the desired mode - For Example: CABLE.

CABLE- If you **DO** have Cable TV connected to the TV. Channels 1-125 available.

NORMAL- If you have an Antenna connected to the TV. Channels 2-69 available.

3 Press the STATUS button to clear the screen.

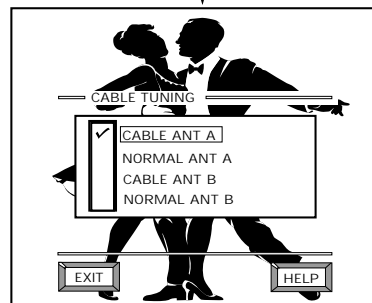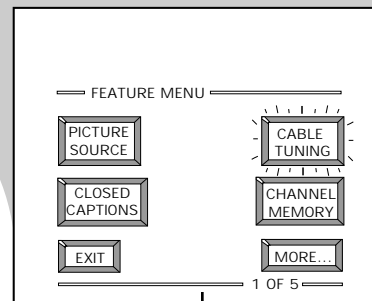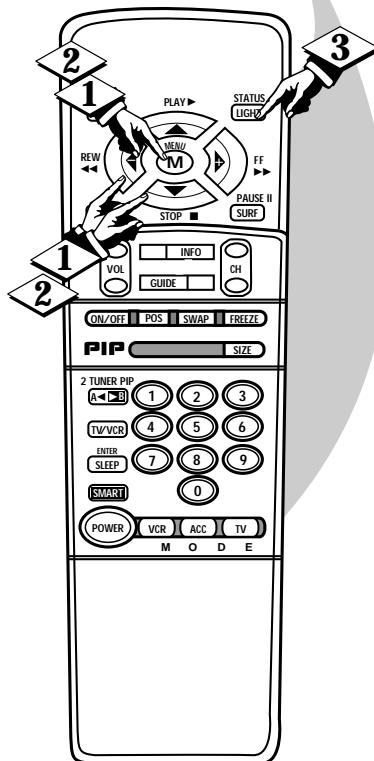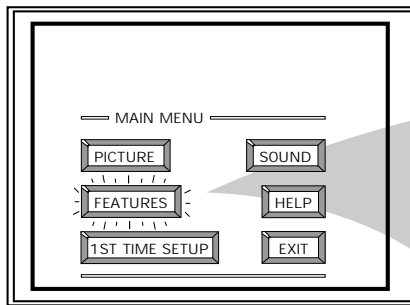

Note: Both ANT(enna) A and ANT B inputs on the rear of the TV can be set for the correct connected signal (either an Antenna or Cable TV source).

CHANNEL MEMORY AUTO-PROGRAMMING

Your TV can automatically set itself for local area (or Cable TV) channels. This makes it easy for you to select only the TV stations in your area when the CHANNEL ▲▼ buttons are pressed.

NOTE: If you went through First Time Setup (in your Quick Use Guide), this task has already been completed for you.

(BEGIN)

- 1 Select **CHANNEL MEMORY (START AUTO-PROGRAMMING)** control.

With the FEATURES MENU on screen, move the RED highlight with the MENU (M) button. Then press the MENU button.

- 2 Press the **MENU** button to turn **AUTO-PROGRAMMING ON**.

The TV shows which channel numbers are "SAVED" (✓) as they are added into memory.

"Auto-programming CHANNEL MEMORY is finished" shows when the TV is through adding channels.

- 3 Press the **STATUS** or **Menu (M)** button to clear the screen.








SMART HELP



Try it out. Press the **CHANNEL ▲▼** buttons and see which channels you can select.

Remember, an Antenna or Cable TV signal must first be connected to your TV so that channels can be saved.

If you want to delete any unwanted channels from the TV's memory, see "ADD/DELETE CHANNELS" on the next page.

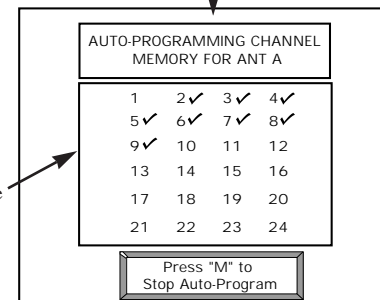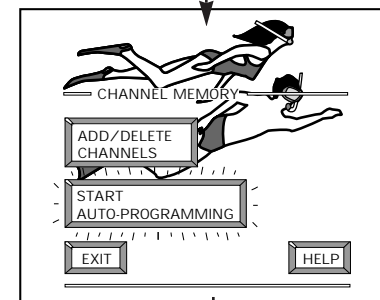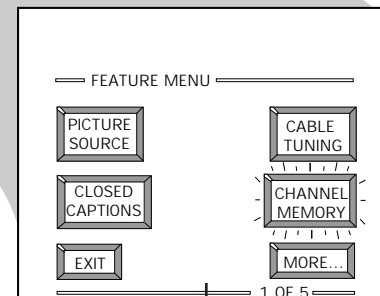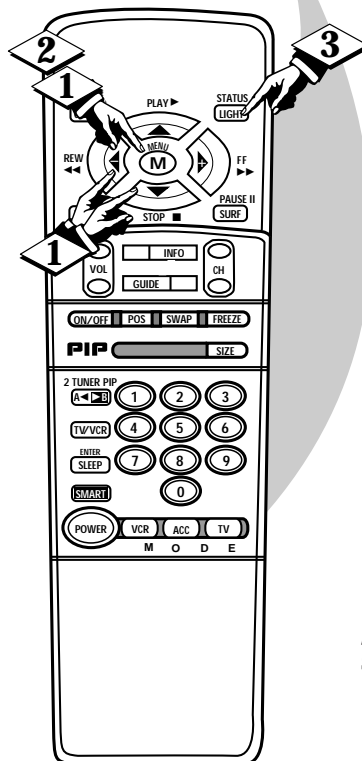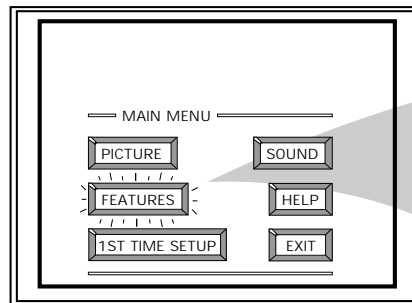

✓ Channel Numbers are Saved in Memory

ADD/DELETE CHANNELS

Auto-Programming (see *previous page*) adds all the channels it can find (on your Antenna or Cable TV system) into the TV's memory. Add/Delete Channels makes it easy for you to add other channels, or drop unwanted channels, from the list of channels in the TV's memory.

(BEGIN)

- 1 Select **CHANNEL MEMORY (ADD/DELETE CHANNELS)** control.

With the **FEATURES MENU** on screen, move the **RED** highlight with the **MENU (M)** buttons. Then press the **MENU** button.






- 2 Press the **CHANNEL ▲▼** or **number** buttons to select the channel you want to add or delete.

- 3 Press the **MENU ►** button to ADD the channel into the TV's memory.

Press the **MENU ◀** button to DELETE the channel from memory.

Repeat steps 2 and 3 for each channel you wish to add or delete.

- 4 Press the **STATUS** or **MENU** button to clear the screen when through.

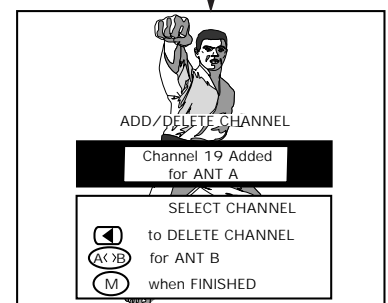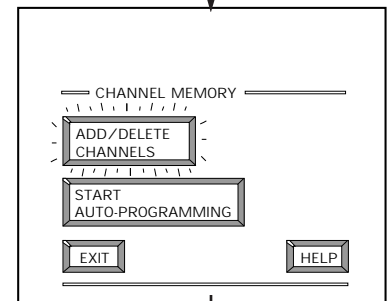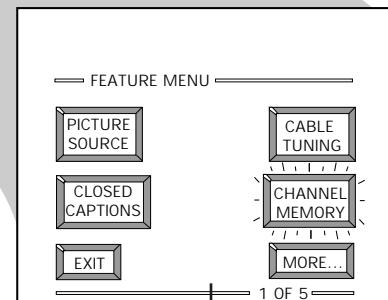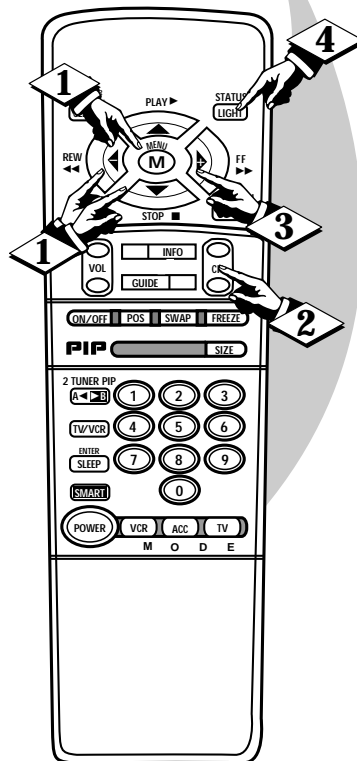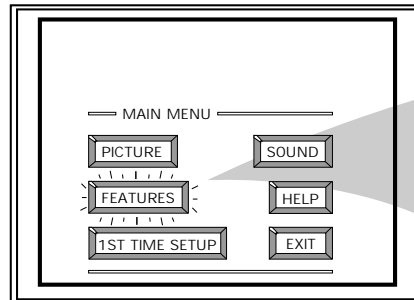

NOTE: A separate ADD/DELETE CHANNEL memory may also be created for the ANT(enna) B Input on the rear of the set (if an Antenna or Cable TV signal has been connected). Just press the **◀▶** button on the remote, while in the ADD/DELETE CHANNEL mode, to switch between the ANT A and ANT B channel memory lists. Then follow steps 2 and 3 as shown to the left to add or delete the desired channels.

SMART HELP

Remember. You can also add the **AUX 1 VIDEO**, **AUX 2 VIDEO**, **AUX 1 Y Pb Pr**, or **SIDE VIDEO** modes just like a channel. Then by pressing the **CHANNEL ▲▼** buttons the **AUX(iliary)** mode can quickly be selected to use the desired set of Input jacks (see page 33).

Note: **AUX(iliary) VIDEO** modes are located between the lowest and highest channel numbers within the **ADD/DELETE CHANNEL** control screen.

SET CLOCK

Your TV comes with an on-screen clock. During normal operation the clock appears on the screen with every channel change (and when the **STATUS** button is pressed).

BEGIN

- 1 Select **SET CLOCK** control.

With **FEATURES MENU** (2 of 5) on screen, move the **RED** highlight with the **MENU (M)** buttons. Then press the **MENU** button.

- 2 Press the remote's **number buttons** to set the time clock.

- 3 Press the **STATUS** button to set the clock in operation and clear the screen.









SMART HELP



Remember, be sure to press "0" first and then the hour number for single digit entries.

The remote's **MENU (M)** buttons can also be used to set the hours, minutes and **AM/PM** portions of the clock.

TV Clock settings may be lost when the TV is unplugged (or AC power to the set is interrupted).

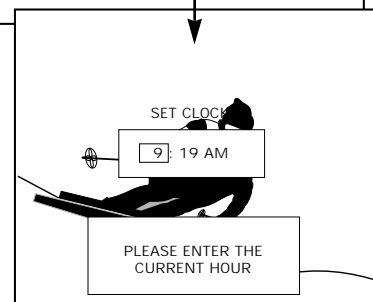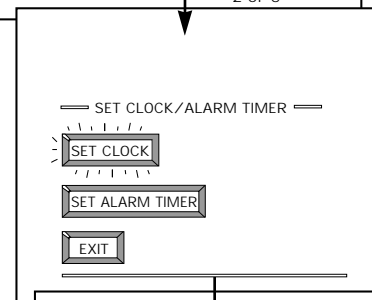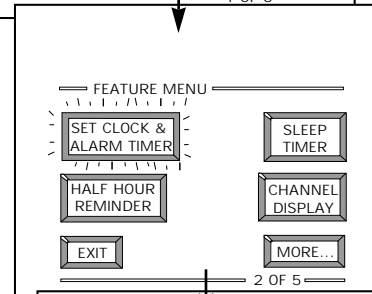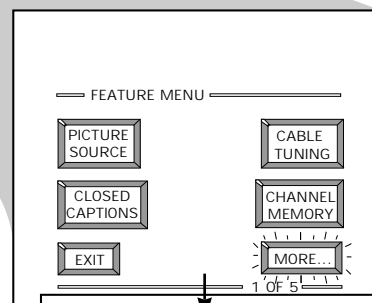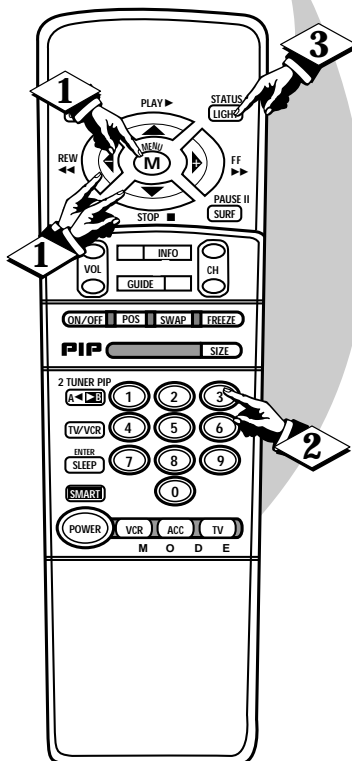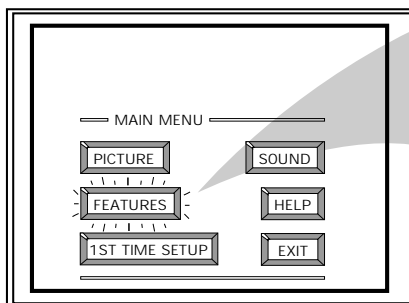


FEATURE MENU CONTROLS (CONTINUED)




SET ALARM TIMER

Just like an alarm clock you can set the TV to turn itself on at the same time everyday.


BEGIN

- 1 Select SET ALARM TIMER control.








With FEATURES MENU (2 of 5) on screen, move the RED highlight with the MENU (M)  buttons. Then press the MENU button.

- 2 Press the MENU  and MENU (M)  buttons to highlight and select "ON" ().

- 3 Press the MENU  and then the MENU (M)  buttons to select "SET ALARM TIME".

- 4 Press the remote's number buttons to set the "TURN ON" time for the TV. (Press MENU  for AM or PM.)

- 5 Press the STATUS button to set the "ALARM TIME" and clear the screen.

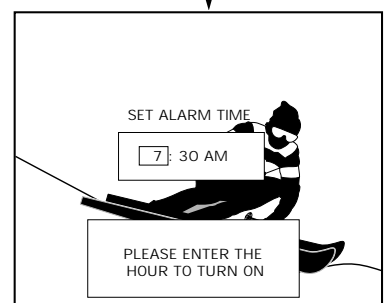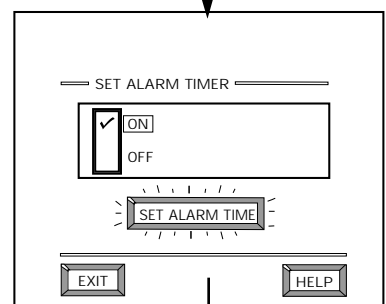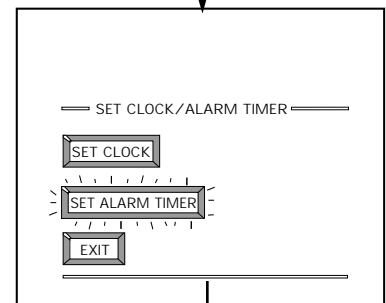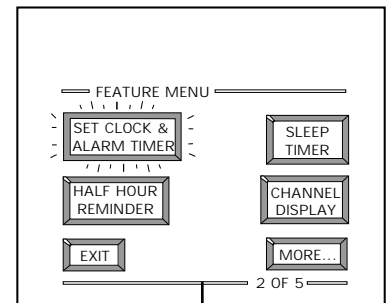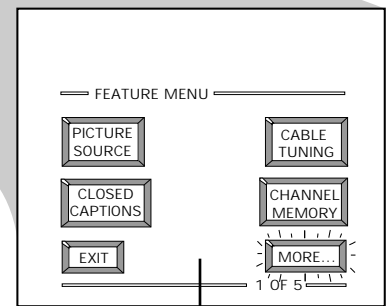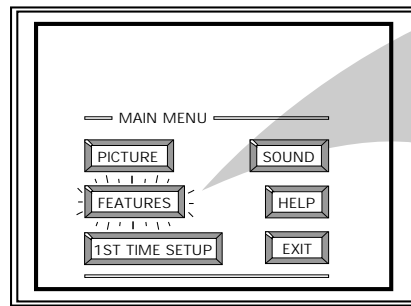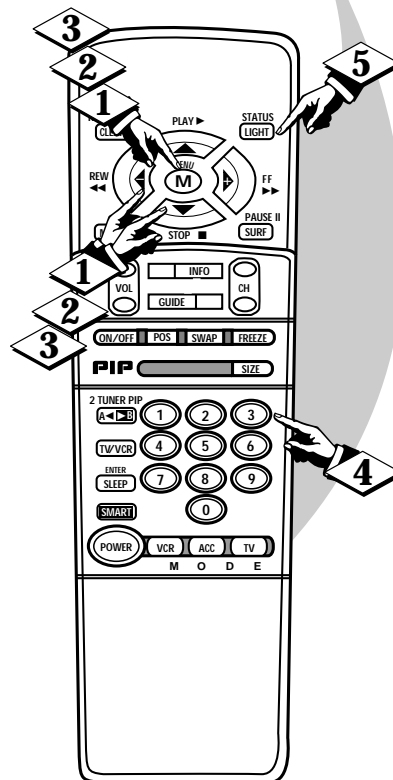

SLEEP TIMER

Have you ever fallen asleep in front of the TV only to have it wake you up at two in the morning with a test pattern screeching in your ears? Well, your TV can save you all that trouble by automatically turning itself off.

BEGIN

- 1 Press the **SLEEP** button on the remote control.

Note: you can also select the SLEEP control with the TV's on-screen FEATURES MENU (2 of 5). Move the RED highlight with the MENU (M) button. Then press the MENU button.

- 2 Press the **SLEEP** button repeatedly to pick the amount of time (15 minutes to 2 hours ahead) before the TV will turn itself off.

The (+), (-) buttons can also be used to set the amount of time.

- 3 Press the **STATUS** or **MENU** (M) button to clear the screen after you have set the time for the TV to turn off.








SMART HELP



Remember, to see how many minutes are left before the TV shuts itself off, reselect the SLEEP TIMER control screen.

To stop a SLEEP TIMER setting, reset the timer back to OFF. (Turning the TV off and on, or pressing a button during the last minute of a timer setting, will also cancel a setting.)

A few seconds before the TV is to shut off a message will come on the screen telling you *GOOD NIGHT*.

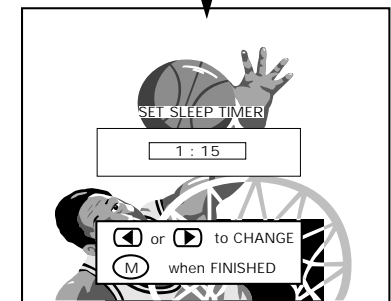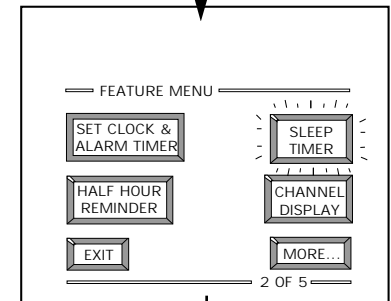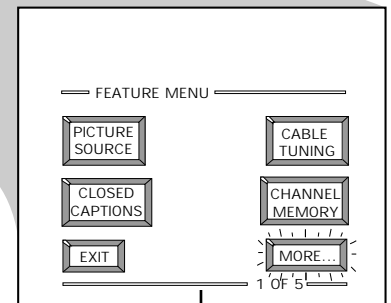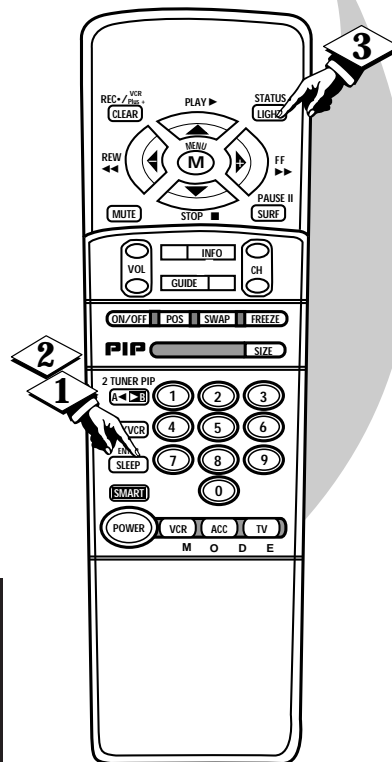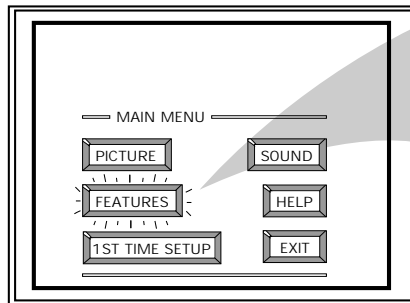

CHANNEL DISPLAY

With the Channel Display control you can change the size and location of the on screen channel and clock information.






(BEGIN)

- 1 Select **CHANNEL DISPLAY** control.

With FEATURES MENU (2 of 5) on screen, move the RED highlight with the MENU (M) buttons. Then press the MENU button.

- 2 Press the MENU ▲▼ and MENU (M) buttons to highlight and select (✓) the LARGE or SMALL display control.

- 3 Press the STATUS button to clear the screen.

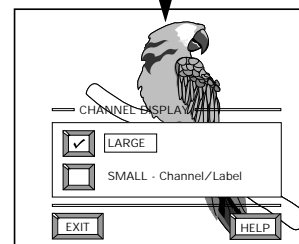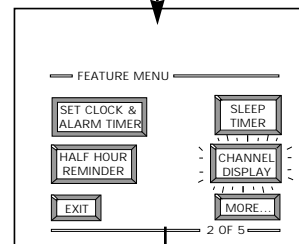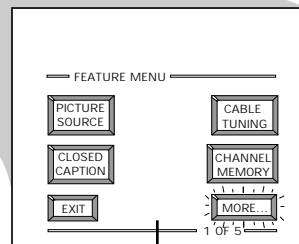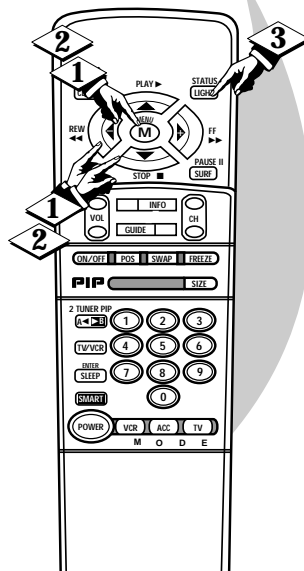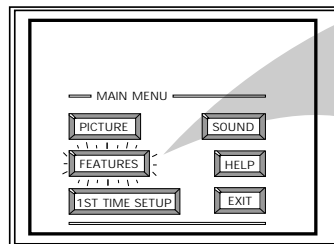

SMART HELP



Try it out. Press the CHANNEL ▲▼ buttons and you should see the Display Size you selected.

Remember. The SMALL SIZE display shows only the channel number, not the time (or clock).

HALF HOUR REMINDER

With the Half Hour Reminder control the TV automatically shows you the current time and channel every thirty minutes.






(BEGIN)

- 1 Select **HALF HOUR REMINDER** control.

With FEATURES MENU (2 of 5) on screen, move the RED highlight with the MENU (M) buttons. Then press the MENU button.

- 2 Press the MENU ▲▼ and MENU (M) buttons to highlight and select (✓) the EVERY HALF HOUR item.

- 3 Press the STATUS button to clear the screen.

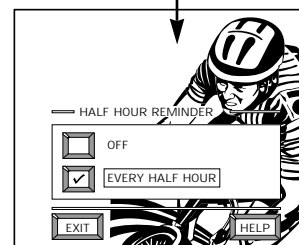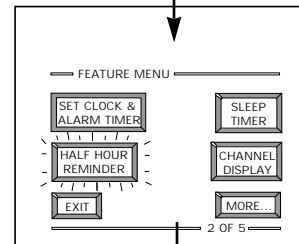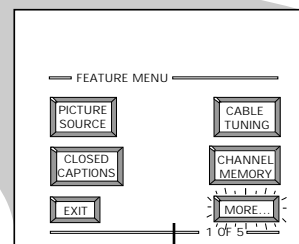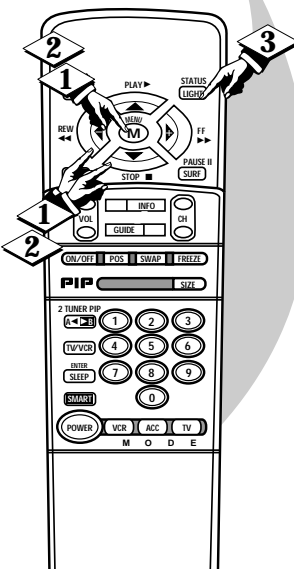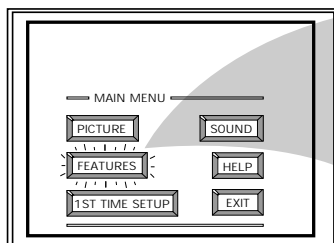

SMART HELP



Remember. The Time and Channel Reminders will show on the hour and the half-hour for about five seconds.

PARENTAL CONTROL SETUP CODE NUMBER

Parental Control allows parents to block out, or "censor", any channels they think children should not watch. A channel placed under Parental Control cannot be viewed until a correct access code is used to unlock the channel for viewing.

First let's set your Parental Code:

(BEGIN)

1 Select the PARENTAL CONTROL.

With FEATURES MENU (3 of 5) on screen, move the RED highlight with the MENU (M) buttons. Then press the MENU button.

"CHANNEL BLOCKING" and "SETUP CODE" show on screen.

2 Press the MENU and MENU (M) buttons to highlight and select the SETUP CODE item.

3 Press 0, 7, 1, 1 on the remote.

"XXXX" shows on the ACCESS CODE SETUP screen as you press the number buttons.

"INCORRECT ACCESS CODE - TRY AGAIN" will also show on the screen.

4 Press 0, 7, 1, 1 on the remote again.







"Next Enter Your New Access Code" shows on the screen.

5 Enter a new four digit number code using the remote.

"Access Code Changed" shows on the screen to let you know the new code has been set.

Continue to the next page to find out how to "BLOCK" channels from viewing.

NOTE: Your TV left the factory with the Parental Code set to "0000". If you are using your TV and the Parental Control for the first time, and don't want to SETUP a new Access code number, you can use the "0000" number to block channels - see next page. The "0711" Parental Code (shown on this page) is given as a default or way to reset the Code when the current Access number is not known.

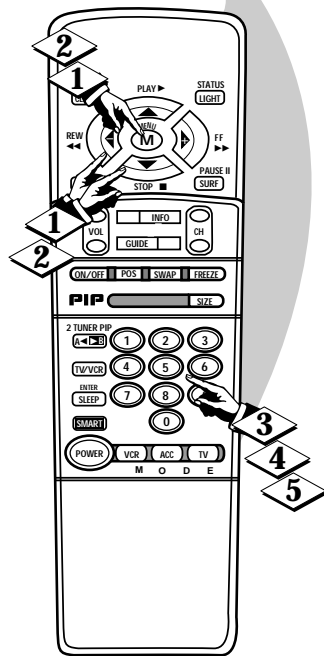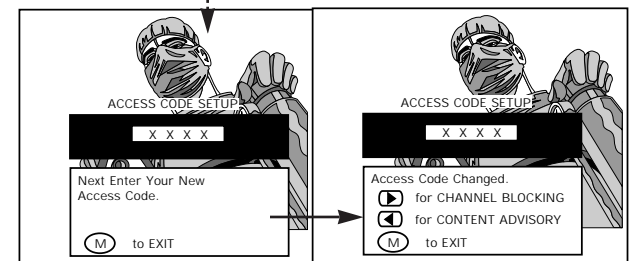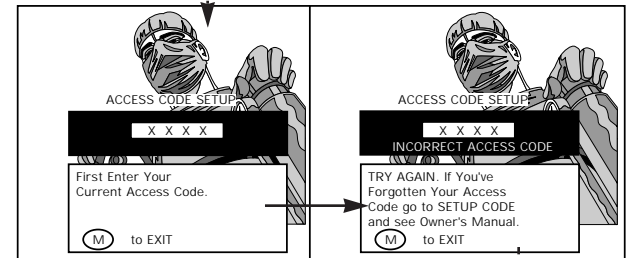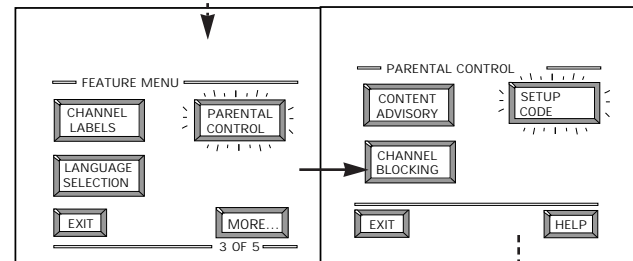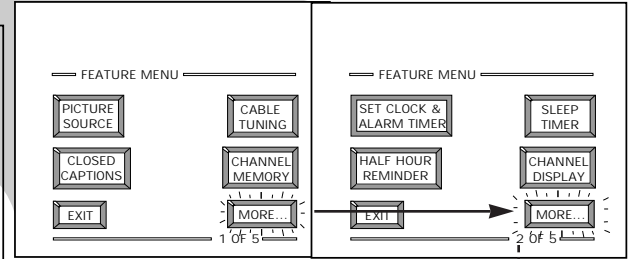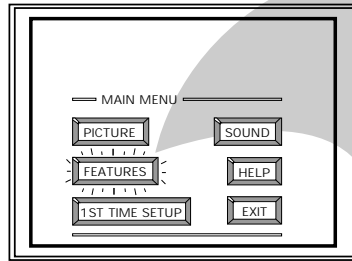

- Press MENU to go on and start to "block" channels.
- Press MENU to go to "Content Advisory" (or TV and Movie Ratings system of channel blocking).
- Press MENU to return to the Parental Control Menu screen.
- Press STATUS to clear the screen.

SMART HELP



Parents - it isn't possible to unlock or defeat your Censor Code without changing to a new code number. So if your Code number changes, and you didn't change it yourself, then you will know that someone has altered the code and the blanked out channel has been viewed.

PARENTAL CONTROL CHANNEL BLOCKING

After your personal Parental Code number has been set (see previous page), you are now ready to select the channels you want to block out or censor.

BEGIN

1 Select the **BLOCK CHANNELS** control.

With FEATURES MENU (3 of 5) on screen, move the RED highlight with the MENU (M) buttons. Then press the MENU button.

2 Press the MENU and MENU (M) buttons to highlight and select the CHANNEL BLOCKING item.

3 Enter the correct Parental Code number.

4 Press Channel or Channel Number buttons to select the channel you want to block.


5 Press the MENU button to "BLOCK VIEWING" on the selected channel. Press the MENU button to "ALLOW VIEWING" on a blocked channel.

Repeat steps 3 and 4 for any other channels you wish to block out.



SMART HELP

Remember, once set Parental Control blocks out the selected channel number on both the ANT A and ANT B channel rings. Also, to make TV viewing easier all channels (for both ANT A/B and Audio/Video Input jacks) will be unblocked, once the correct Parental Code number has been entered. When the TV is turned OFF and then back ON again, is when Parental Control is back in place for all blocked out channels.

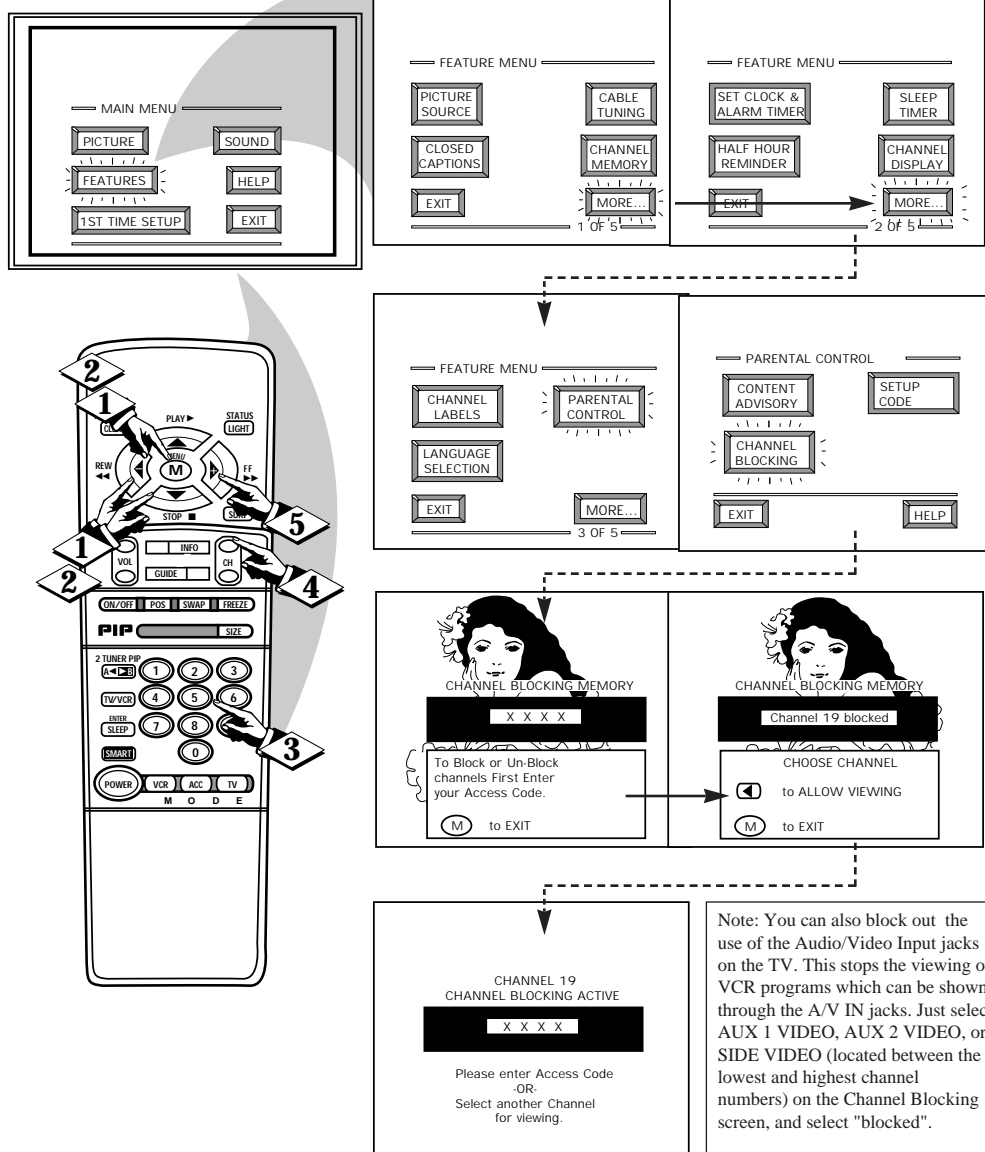

BLOCKED CHANNEL SCREEN MESSAGE
(Appears when an attempt to select a blocked channel is made and Parental Control is ON.)


PARENTAL CONTROL CONTENT ADVISORY

Another new area available to parents for the censoring of program material is through the TV Guidelines and Movie Ratings system. Program Content Advisory data will soon be contained within the broadcast signals of received TV programs. When setup by the parent or viewer, the TV can respond to transmitted advisory data by blocking out or denying access to TV shows (based on whether the program meets or exceeds the limitations you select as viewable). The TV program can then only be viewed by entering the correct and current Parental Code Access number.

The Content Advisory system uses both "Movie Ratings" and a "Parental Guidelines" form of censoring. Refer to the following page sections for explanations on the different Rating system levels and their uses.

BEGIN

1 Select the CONTENT ADVISORY Menu option

With PARENTAL CONTROL Menu on screen, move the RED highlight with the MENU  buttons. Then press the MENU (M) button.

A Parental Guideline/Movie Rating status screen will appear with a review of currently BLOCKED Content Advisory categories.







2 Press the MENU button to select the ENTER ACCESS CODE Menu item.

3 Enter the correct Parental Code number (see note at the top of this page).

"CONTENT ADVISORY" Menu screen appears. Parental Guidelines, Movie Ratings and other blocking control items are ready for selection and use.



Note: Please remember that a valid and current Access Code number will be required in the setup and use of the TV's "Content Advisory" system. Review the previous **SETUP CODE** section on how to obtain a valid Parental Access Code number before attempting to make adjustments within the Movie Ratings and Parental Guidelines system.

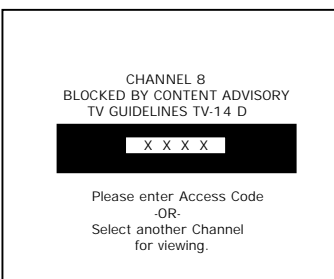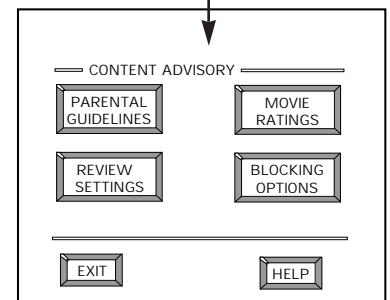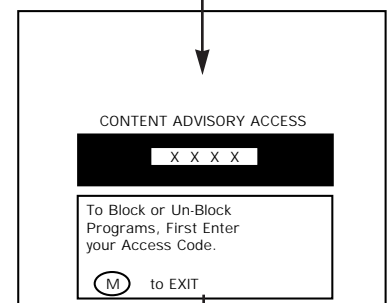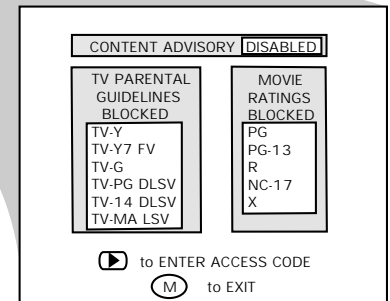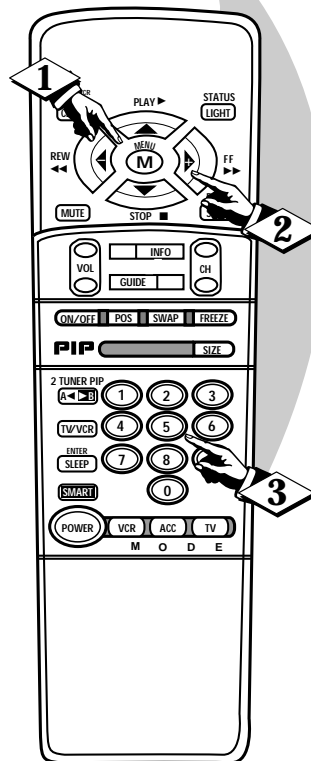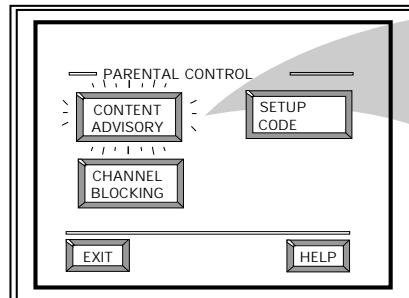


NOTE: In normal Content Advisory system operation the TV screen will display a message when programming is blocked by a Movie Rating, Parental Guideline, or Blocking Option control feature. Entering the correct ACCESS CODE number will unblock all the blocked Content Advisory Rated channels until the TV is turned Off. The blocked Advisory Ratings will be back in place when the TV is turned back On again.

CONTENT ADVISORY MOVIE RATINGS

Movie Ratings set viewing access levels for TV programming according to current Motion Picture Association of America (MPAA) ratings. These ratings are similar to the categories used with the rated movies appearing in cinema theaters and with video rental material.

BEGIN

1 Select the MOVIE RATINGS Menu option.

With CONTENT ADVISORY Menu on screen, move the RED highlight with the MENU  buttons. Then press the MENU (M) button.

2 Press the MENU and MENU (M) buttons to highlight and select (✓) the desired MOVIE BLOCKING level.




When in operation a “Blocked - Movie Rating” TV screen appears when movies are received which include the same selected rating as the Movie Blocking setting(s). Only the correct Access Code number, entered by the viewer, will unblock or allow the viewing of a block rated program.



SMART HELP



Note: When a Movie Rating is selected (✓) all higher level ratings are automatically blocked (although each individual Movie Rating can be manually selected and turned On or Off as desired). Programs with lower than the selected rating level are allowed for viewing or unblocked.

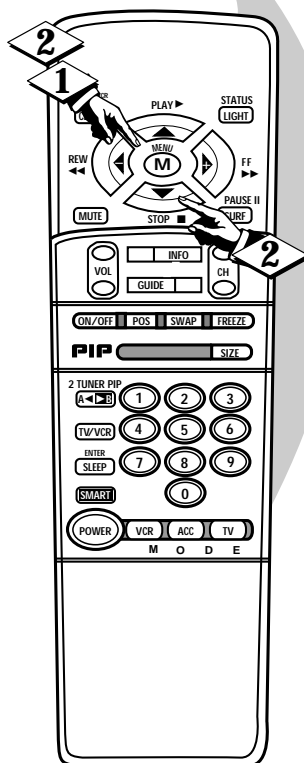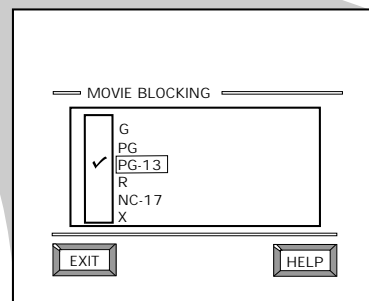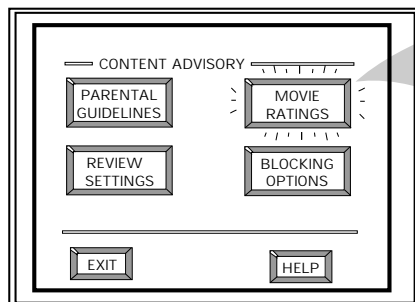


- **G - General Audience:** Most parents would find this program suitable for all ages. This type of programming contains little or no violence, no strong language, and little or no sexual dialogue or situations.
- **PG - Parental Guidance:** This programming contains material that parents may find unsuitable for younger children. It may contain one or more of the following: Moderate violence, some sexual situations, infrequent coarse language, or some suggestive dialogue.
- **PG-13:** This programming contains material that parents may find unsuitable for children under the age of 13. It contains one or more of the following: violence, sexual situations, coarse language, or suggestive dialogue.
- **R - Restricted:** This programming is specifically designed for adults. Anyone under the age of 17 should only view this programming with an accompanying parent or adult guardian. It contains one or more of the following: intense violence, intense sexual situations, strong coarse language, or intensely suggestive dialogue.
- **NC-17 - No one under 17 admitted:** This type of programming should be viewed by adults only. It contains graphic violence, explicit sex, or crude indecent language.
- **X - Mature audience only:** This type of programming contains one or more of the following: very graphic violence, very graphic and explicit or indecent sexual acts, very coarse and intensely suggestive language.

CONTENT ADVISORY PARENTAL GUIDELINES

Parental Guidelines can be even more defined and specific in the degree and extent of material parents may allow for TV program viewing. Sub-settings for Language, Violence, and other blocking factors can be manually switched On or Off for use within the major Parental Guideline categories (TV-Y7, TV-PG, etc.).

(BEGIN)




1 Select the PARENTAL GUIDELINES Menu option.

With CONTENT ADVISORY Menu on screen, move the RED highlight with the MENU  buttons. Then press the MENU (M) button.

2 Press the MENU to highlight and select the desired PARENTAL GUIDELINE rating level (TV-Y, TV-Y7, etc.).

3 Press the MENU and MENU (M) buttons to Block (✓) the selected Parental Guideline category (or to set other individual blocking feature items available within that Guideline category (L, V, S, D, etc.) as desired).

Note: Selecting "ALWAYS BLOCKED" (or individually adjusting the L, V, S, D settings) for any one rating will set all other higher level ratings to be automatically blocked as well.

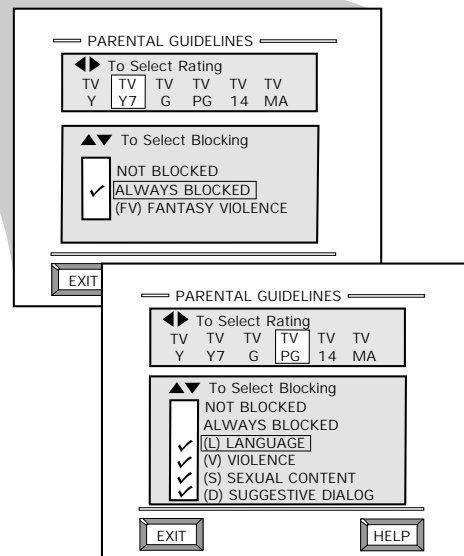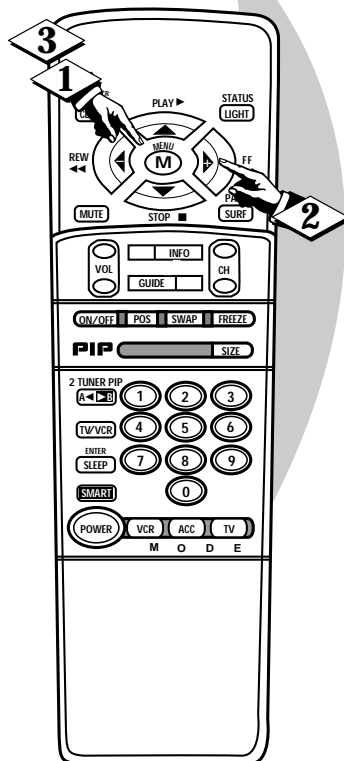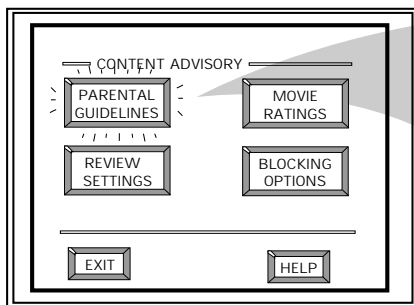

- **TV-Y - Appropriate for all children:** Designed for a very young audience, including children ages 2-6. This type of programming is not expected to frighten younger children.
- **TV-Y7 - Appropriate for children seven and older:** It may be more appropriate for children who have acquired the development skills needed to distinguish between make-believe and reality. This programming may include mild fantasy and comic violence (FV).
- **TV-G - General Audience:** This type of programming contains little or no violence, no strong language, and little or no sexual dialogue or situations.
- **TV-PG - Parental Guidance suggested:** This type of programming contains one or more of the following: Moderate violence (V), some sexual situations (S), infrequent coarse language (L), or some suggestive dialogue (D).
- **TV-14 - Unsuitable for children under 14:** This type of programming contains one or more of the following: intense violence (V), intense sexual situations (S), strong coarse language (L), or intensely suggestive dialogue (D).
- **TV-MA - Mature audience only:** This type of programming contains one or more of the following: graphic violence (V), explicit sexual situations (S), or crude indecent language (L).

- **(V) - Violence**
- **(S) - Sexual situations**
- **(L) - Language**
- **(D) - Inappropriate dialogue**
- **(FV) - Fantasy Violence** may frighten children under seven. Some cartoons may have this rating. Available in the TV-Y7 category only.

SMART HELP



The TV-Y7; TV-PG; TV-14; and TV-MA guidelines also include customized settings for various additional items such as V (violence), S (sexual situations), L (coarse language), D (suggestive dialogue), and FV (fantasy violence). These additional settings are category specific and can be individually selected for use as desired.

FEATURE MENU CONTROLS (CONTINUED)

CONTENT ADVISORY BLOCKING OPTIONS




The Content Advisory system also has “Blocking Option” controls which can be used to deny viewing access for channel programs and movies even when they are “unrated”, or contain “no rating” information as broadcasted.

(BEGIN)

1 Select the **BLOCKING OPTIONS** Menu control.

With CONTENT ADVISORY Menu on screen, move the RED highlight with the MENU buttons. Then press the MENU (M) button.

2 Press the MENU and MENU (M) buttons to turn the Blocking System On (highlight and select ENABLED). Then use the remote Menu buttons to select the desired programming and information blocking options. Please refer to Note shown with this page section for details on “unrated” and “no rating” program control options.

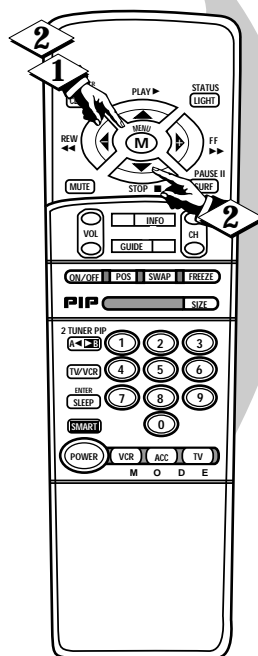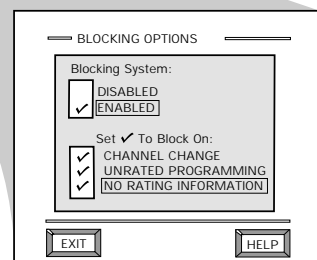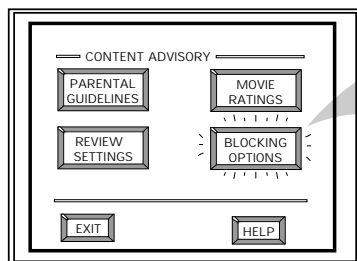

Note: Remember that Content Advisory data or encoded information is not available with all received TV programming (this also includes commercials, and other program spot announcements). Broadcaster's can decide **not to encode** any kind of content advisory ratings with their programming, or they can actually choose to **encode programs to be “unrated.”**

The TV Blocking Options allow the viewer to block any program without content advisory data with the use of its “NO RATING INFORMATION” control. And to block programs that are encoded as “unrated” with its “UNRATED PROGRAMMING” control option.

Since the reception of Content Advisory data can take a few seconds, you may want to use the “CHANNEL CHANGE” option to be sure no viewing is allowed during blocked program channel changes. This can eliminate the display of a few seconds of undesirable video on the TV, or receiving scenes from a Ratings blocked channel source.

CONTENT ADVISORY REVIEW SETTINGS




Use the Review Settings control to quickly check the status for Content Advisory system Parental Guidelines and Movie Rating “Blocked” program levels.

(BEGIN)

1 Select the **REVIEW SETTINGS** Menu option.

With CONTENT ADVISORY Menu on screen, move the RED highlight with the MENU buttons. Then press the MENU (M) button.

The TV screen will display the current Parental Guideline and Movie Ratings Blocked program settings. Content Advisory system status will also be shown (Enabled - On, or Disabled - Off).

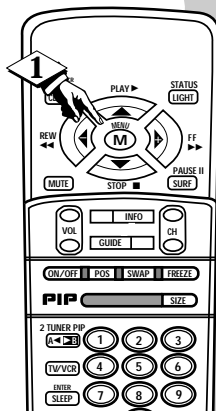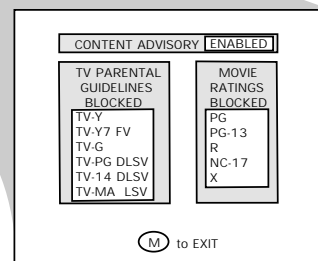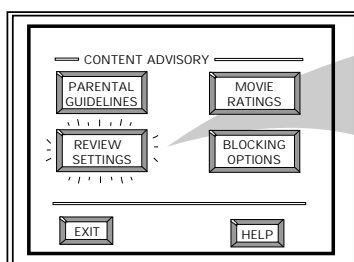

CHANNEL LABELS

Do you ever have trouble remembering on which channel a particular station or network is located? The Channel Labels Control is a quick way to view and select channels from a list of Labeled channels.

A Label is a four letter callout you can set to appear with the on screen channel number. Example Label: WXYZ - for a TV station's call letters.

To select channels from the Channel Labels Control:

BEGIN

1 With the FEATURE MENU screen (3 of 5) on the TV's screen, move the RED highlight using the MENU (M) buttons to select CHANNEL LABELS. Press the MENU (M) button.


2 Press the MENU ▲▼ and MENU (M) buttons to highlight and select either:

"MANUAL" to create your own label for a channel.

"PRESETS" to choose from a list of prewritten channel labels.

(See instruction details on this page.)

3 Press the STATUS button to clear the screen.

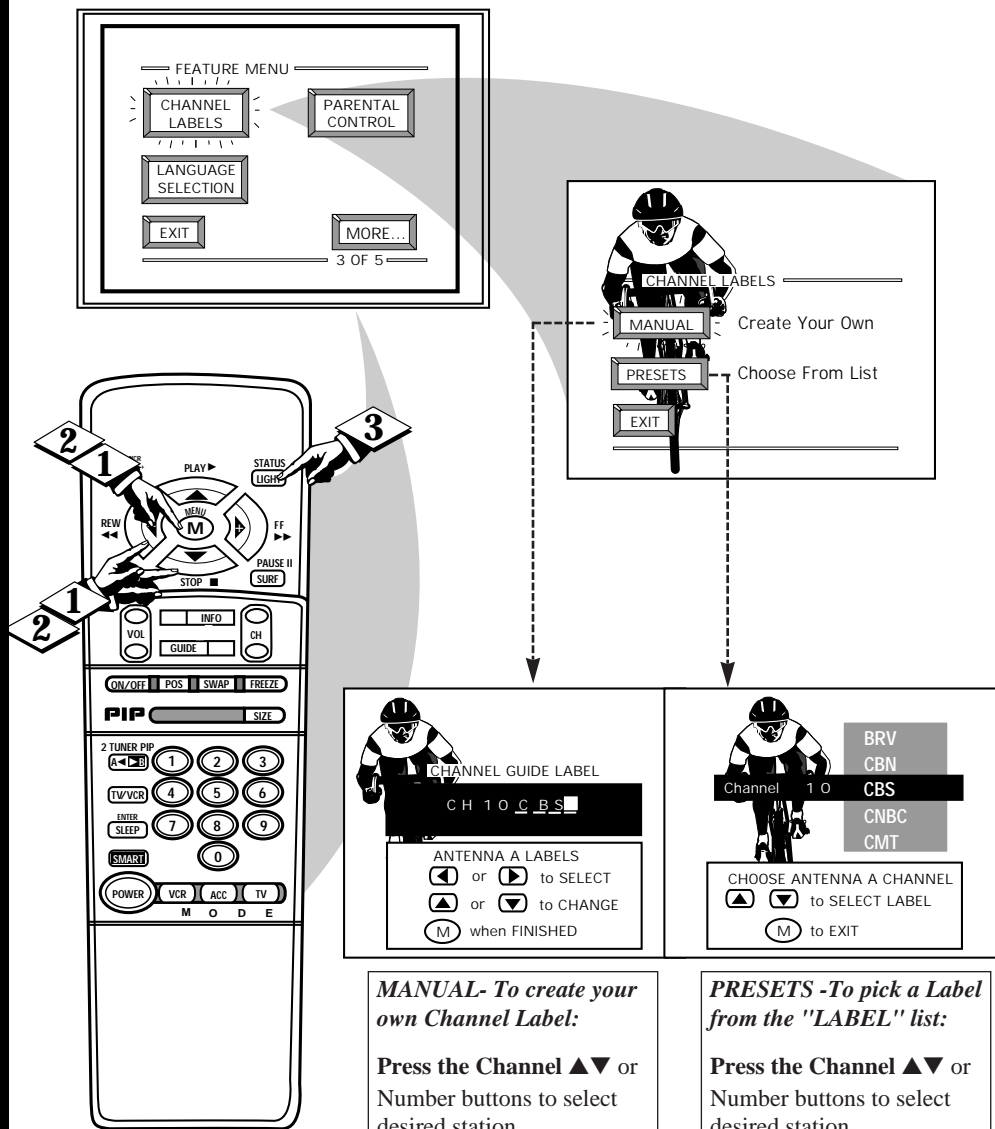

MANUAL- To create your own Channel Label:

Press the Channel ▲▼ or Number buttons to select desired station.

A red highlight shows the active letter space for the channel label.

Press the MENU ▲▼ buttons to pick any of the letters or symbols that are given for your use.

Press the MENU ◀▶ buttons to move the red highlight to the other letter spaces and repeat.

Press the STATUS button to clear the screen when finished.

PRESETS -To pick a Label from the "LABEL" list:

Press the Channel ▲▼ or Number buttons to select desired station.

Press the MENU ▲▼ buttons to move up and down the Channel Label list.

Just stop on any label you might want to use.

The selected label automatically appears with channel changes and when the STATUS button is pressed.

Press the STATUS button to clear the screen when finished.

LANGUAGE

Note: If you went through First Time Setup, This task has already been completed for you.

For our Spanish and French speaking TV owners an on-screen LANGUAGE option is present. With the LANGUAGE control you can set the TV's on-screen features to be shown in either English, Spanish or French.

BEGIN

- 1 Select the **LANGUAGE DISPLAY** control.

With FEATURES MENU (3 of 5) on screen, move the RED highlight with the MENU buttons. Then press the MENU (M) button.

- 2 Press the MENU and MENU (M) buttons to highlight and select (✓) English, Español, or Français on the display control.

Text for the on-screen Menu will change to the selected language.







- 3 Press the STATUS button to clear the screen.



SMART HELP



Remember, the Language control only makes the TV's on-screen (MENU) items appear in English, Spanish, or French text. It does not change the other on-screen text features such as Closed Captioned (CC) TV shows.

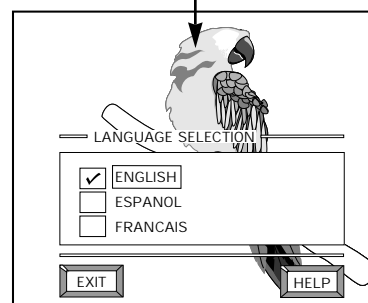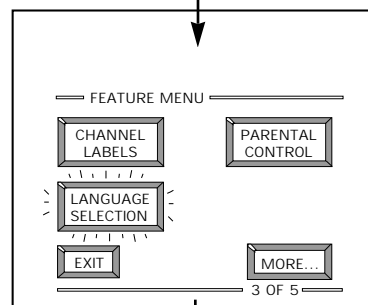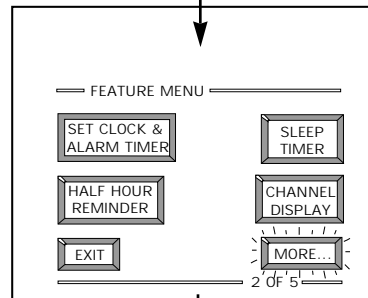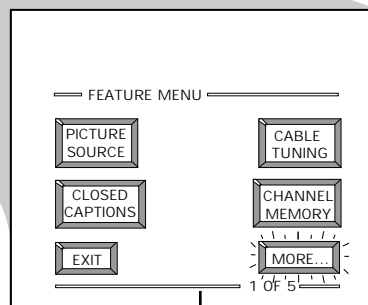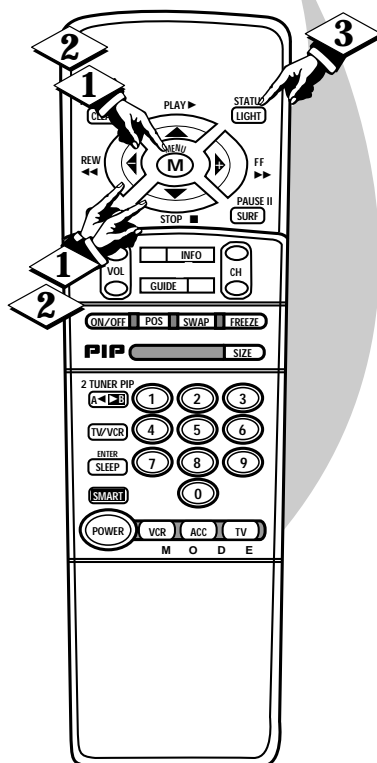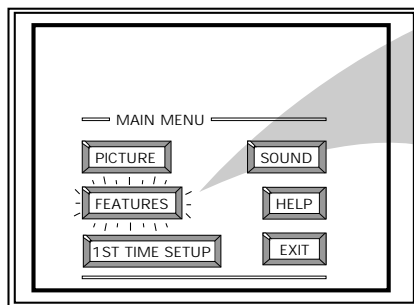

BASS, TREBLE, BALANCE

Your TV also has individual sound adjustment controls. The **BASS** (low frequency), **TREBLE** (high frequency), and **Speaker BALANCE** may all be used to adjust the sound playback of TV programs.





BEGIN

- 1 Select **BASS**, or **TREBLE**, or **BALANCE** sound control.

With the **SOUND MENU** on the screen, move the **RED** highlight with the **MENU (M)** button. Then press the **MENU** button.

- 2 Press the **(+)** or **(-)** buttons to adjust the sound control to levels you prefer.

- 3 Press the **STATUS** button to clear the screen.

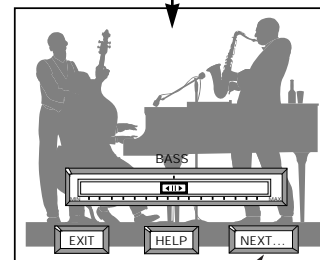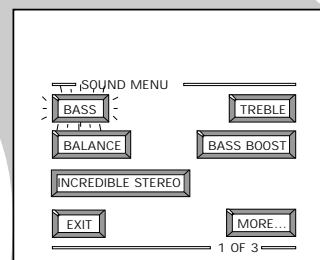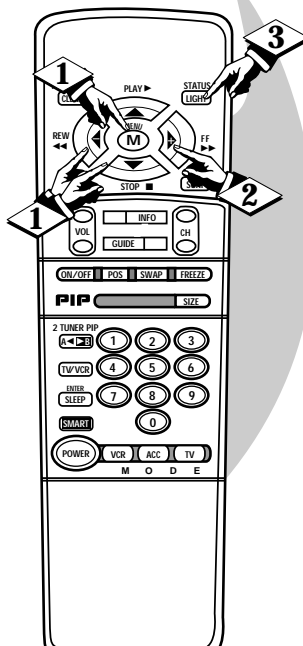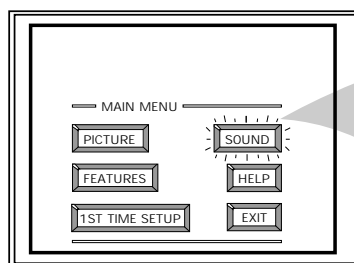

Select and then press **MENU (M)** button to view additional controls grouped under same feature heading. For Example: Treble, Balance, Bass Boost, Stereo, etc.

BASS BOOST

The **BASS BOOST** control increases the low frequency audio range of the TV. This creates a deeper, fuller playback sound which can be heard through the TV's speakers.





BEGIN

- 1 Select **BASS BOOST** sound control.

With the **SOUND MENU** on the screen, move the **RED** highlight with the **MENU (M)** button. Then press the **MENU** button.

- 2 Press the **MENU** **▲▼** and **MENU (M)** buttons to highlight and turn **ON** (✓) the **BASS BOOST** control.

- 3 Press the **STATUS** button to clear the screen.

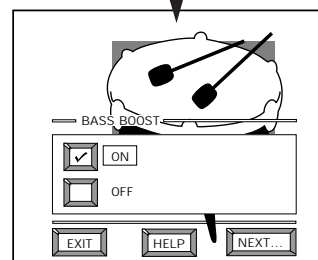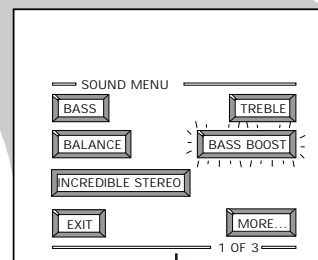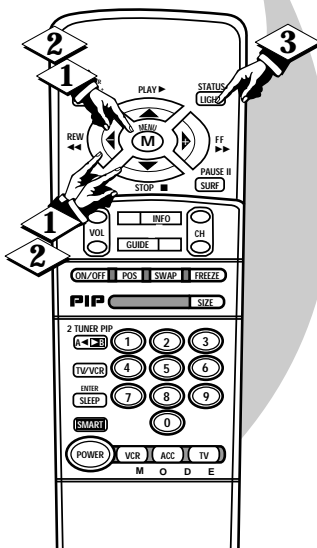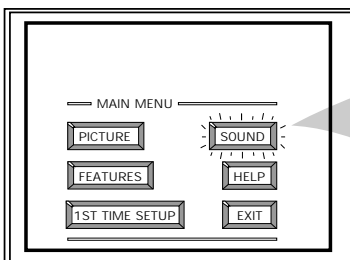

STEREO

Your TV is able to receive broadcast stereo TV programs. The TV is equipped with an amplifier and twin speaker system through which the stereo sound can be heard.

Note: STEREO will appear on the TV's channel status screen to indicate when a stereo broadcast signal is available and received.



BEGIN

1 Select STEREO sound control.

With the SOUND MENU on the screen, move the RED highlight with the MENU (M) button. Then press the MENU button.

2 Press the MENU ▲▼ and MENU (M) buttons to highlight and turn ON (✓) the STEREO mode.




3 Press the STATUS button to clear the screen.

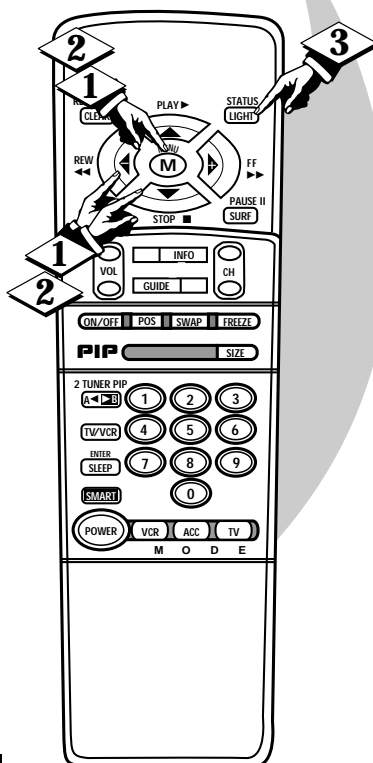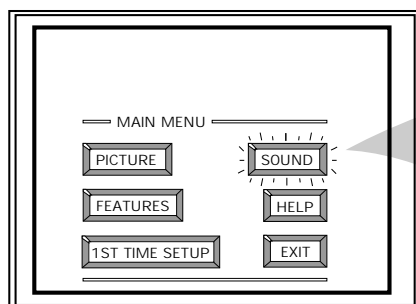

SMART HELP




Remember. If a stereo signal is not available and the TV is placed in the STEREO mode, sound coming from the TV will remain monaural (mono).

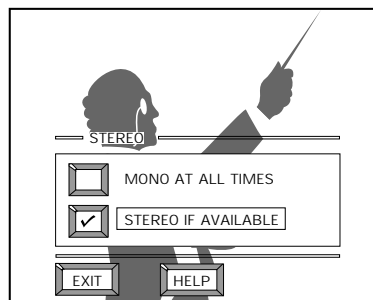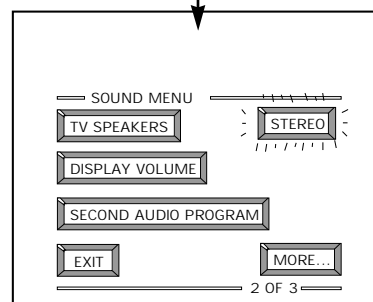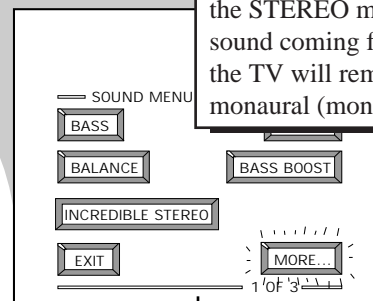


SECOND AUDIO PROGRAM

Second Audio Program (SAP) is part of the stereo broadcast system. Sent as an additional audio channel SAP can be heard apart from the current TV program sound. TV stations are free to use SAP for any number of purposes, but many experts believe it will be used for foreign language translations of TV shows (or for weather and news bulletins.)

NOTE: If a SAP signal is not present with a selected program, the SAP option can not be selected. "This program does not contain SAP information" will show on the TV screen.

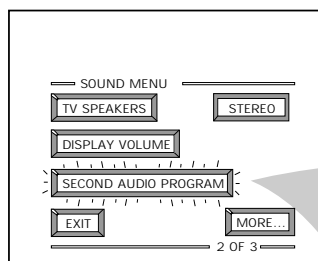

SECOND PROGRAM SOUND CAN ONLY BE SELECTED (✓) WHEN SAP INFORMATION IS PRESENT ON CURRENT CHANNEL.

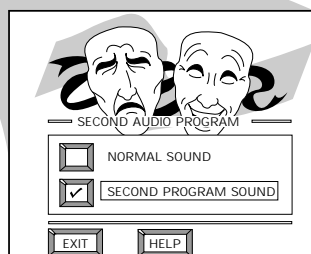



INCREDIBLE STEREO

The Incredible Stereo control can be used to add greater depth and dimension to both monaural (MONO) and STEREO TV sound.

BEGIN





- 1 Select **INCREDIBLE STEREO** control.

With the **SOUND MENU** on the screen, move the **RED** highlight with the **MENU (M)**  buttons. Then press the **MENU** button.

- 2 Press the **MENU**  and **MENU (M)** buttons to highlight and turn ON (✓) the **INCREDIBLE STEREO** mode.

For Example: “**MAXIMUM**” spreads the Incredible Stereo effect as wide as possible.

- 3 Press the **STATUS** button to clear the screen.

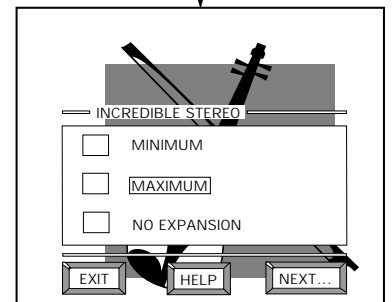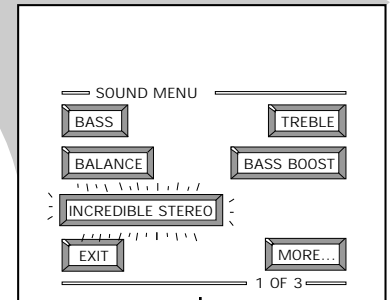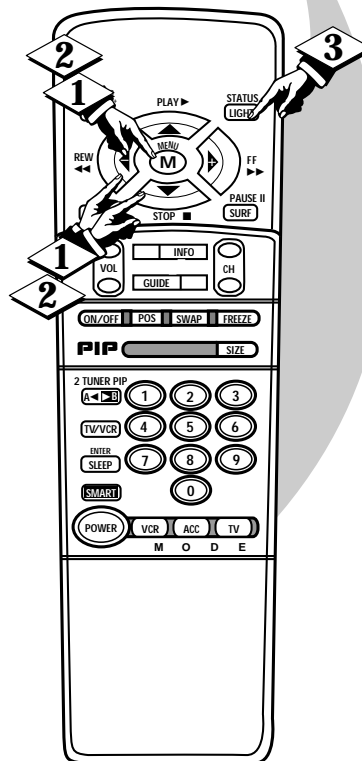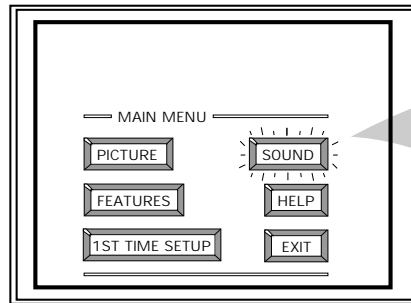

SMART HELP




Remember, with the Incredible Stereo control turned ON even monaural (mono) audio source material can be heard through rear Surround Sound speaker connections (see page 32). Note: The monaural version of Surround Sound may be louder at the rear set of speakers than what is normally heard with true stereo signal Surround Sound, but this is normal.


DISPLAY VOLUME

Use the **DISPLAY VOLUME** control to see the TV's volume level settings on the TV screen. Once set the Volume Display will be seen each time the **VOLUME** buttons (on the TV or remote) are pressed.

BEGIN

- 1 Select **DISPLAY VOLUME** control.

With **SOUND MENU** (2 of 3) on screen, move the **RED** highlight with the **MENU (M)**  buttons. Then press the **MENU** button.

- 2 Press the **MENU**  and **MENU (M)** buttons to highlight and turn ON (✓) the **DISPLAY VOLUME** control.






- 3 Press the **STATUS** button to clear the screen.



SMART HELP



Remember, "DURING ADJUSTMENT" means the volume level will be on screen whenever the Volume buttons are pressed.

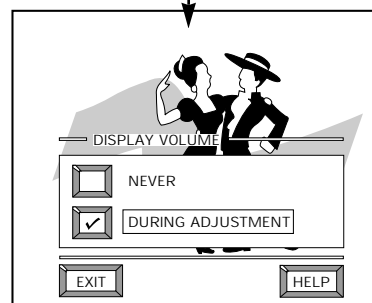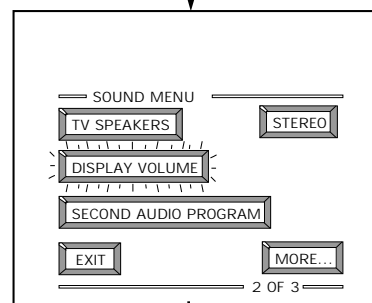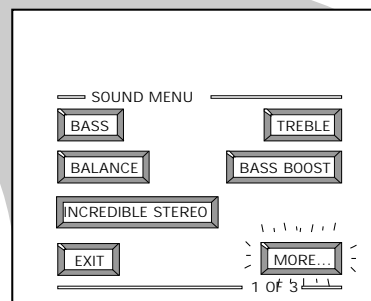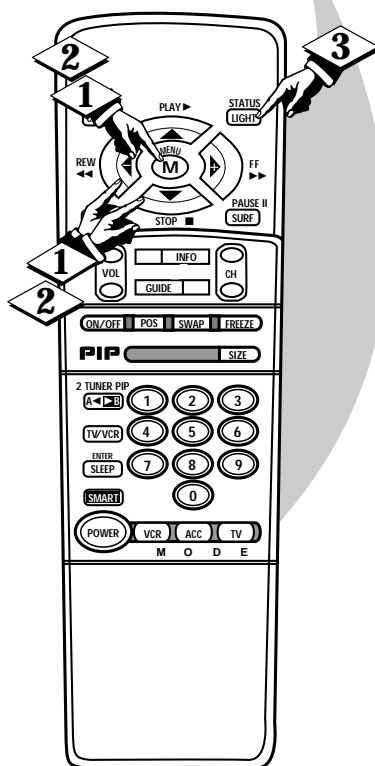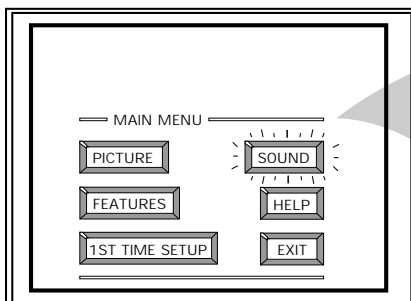



TV SPEAKERS

Would you like to hear TV programs through your audio hi-fi system? The TV's Variable Audio Output jacks and TV Speaker On/Off control work together to offer you this TV sound option.

(BEGIN)

- 1** Connect the R(ight) and L(eft) **VARIABLE AUDIO OUT** jacks on the TV to the R and L Audio Input jacks on your amplifier or sound system.

Set the audio system's volume to normal listening level.

- 2** Turn the TV and audio system ON. You can now adjust the sound level coming from the audio system with the Volume ▲▼ buttons on the TV or remote.

- 3** To hear the TV sound from only the audio system speakers, select **TV SPEAKERS** control.

With **SOUND MENU** (2 of 3) on screen, move the RED highlight with the **MENU (M)** ◀▶ buttons. Then press the **MENU** button.

- 4** Press the **MENU** ▲▼ and **MENU (M)** buttons to highlight and turn OFF (↵) the **TV SPEAKERS** control.

You should now only hear TV sound coming from the audio system speakers.

- 5** Press the **STATUS** button to clear the screen.




SMART HELP




Remember, the audio system may have to be in **AUX(iliary)** mode to play sound from the TV (Outputs).

Note: When the **TV SPEAKER** control is set to "NORMAL" (for TV speaker operation) make sure the **VARIABLE AUDIO OUTPUT** control (see next page) is also set to "STEREO" in order for the TV's **AUDIO OUTPUT** jacks to work properly.

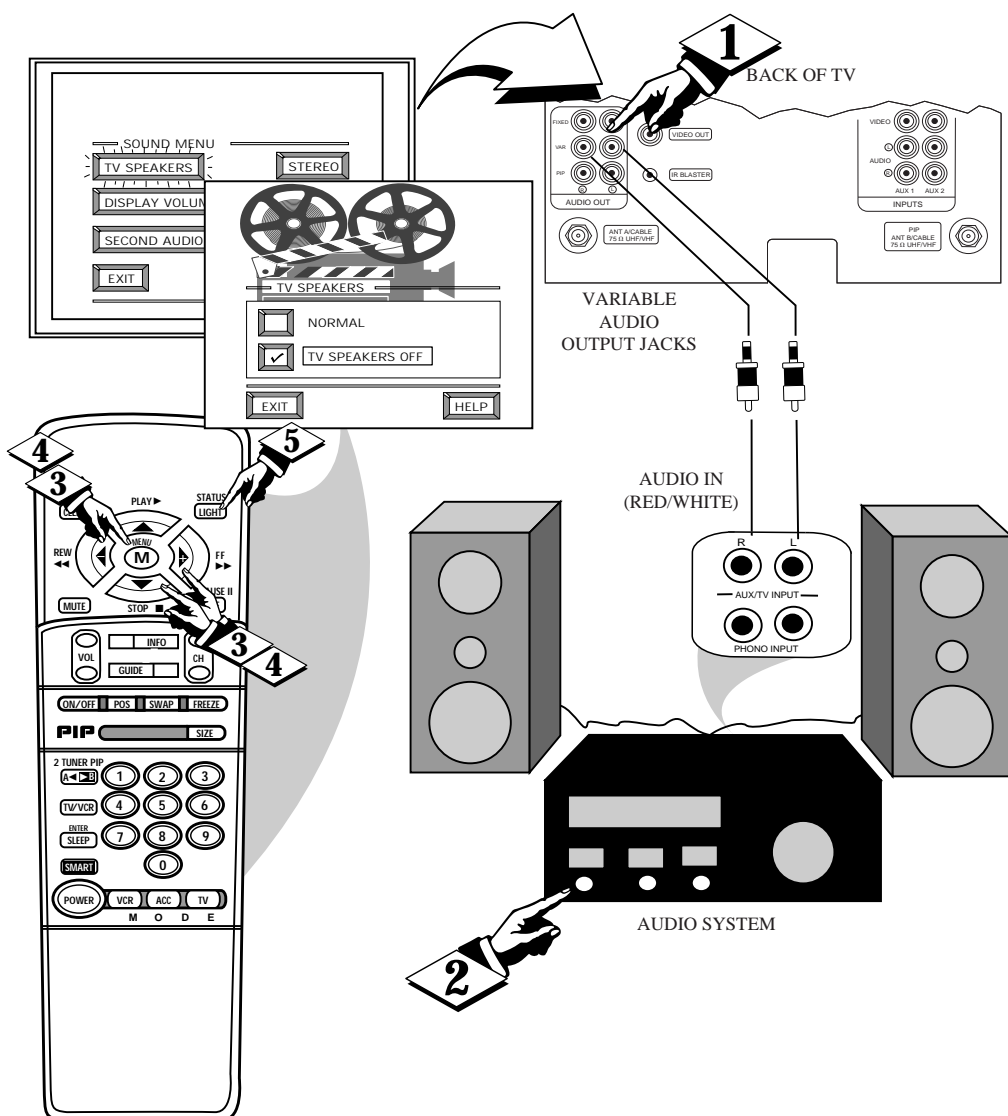

NOTE: The TV's **FIXED AUDIO OUTPUT** jacks can also be used for the playback of TV program sound with an external audio amplifier, or home theater hi-fi system. Connection of the **FIXED AUDIO OUT(puts)** is similar

to the **Variable Audio Outputs** (as shown above). However, specific sound level adjustments will be made with the controls at the external amplifier or home sound system (instead of through the TV's audio level controls.)

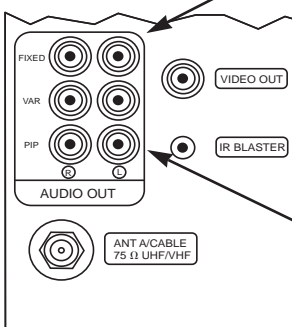

NOTE: The TV's **PIP AUDIO OUTPUT** jacks can also be used for additional stereo playback options such as wireless transmitter headphone hook-up, or as an external amplifier connection source. However, with normal **PIP** feature operations (when

the **ANT A** and **ANT B** Input sources are connected for use), the **PIP AUDIO OUTPUTS** will switch from stereo to monaural (mono) sound. Stereo sound will only be available with the TV's Main screen (or **ANT A** supplied signal) at that time.

SURROUND SOUND

By adding optional external speakers to the TV's sound system, you can create the feeling of reflected sound that surrounds you at a movie theater or concert hall.

BEGIN


- 1 **Connect both external speakers** to the speaker wire terminals on the TV.

Recommended speakers: 8ohm, 15 watt minimum. Be sure the (+) and (-) speaker wires are connected to the correct R(ight) and L(ef) speaker terminals on the TV.

- 2 **Place the speakers** so the viewing area is between the TV and the rear surround speakers. (See overhead view drawing.)

- 3 **Turn TV ON** and place the STEREO control to the "STEREO IF AVAILABLE" (✓) position.

After setup whenever a stereo signal is received the audio will be heard in Surround Sound.

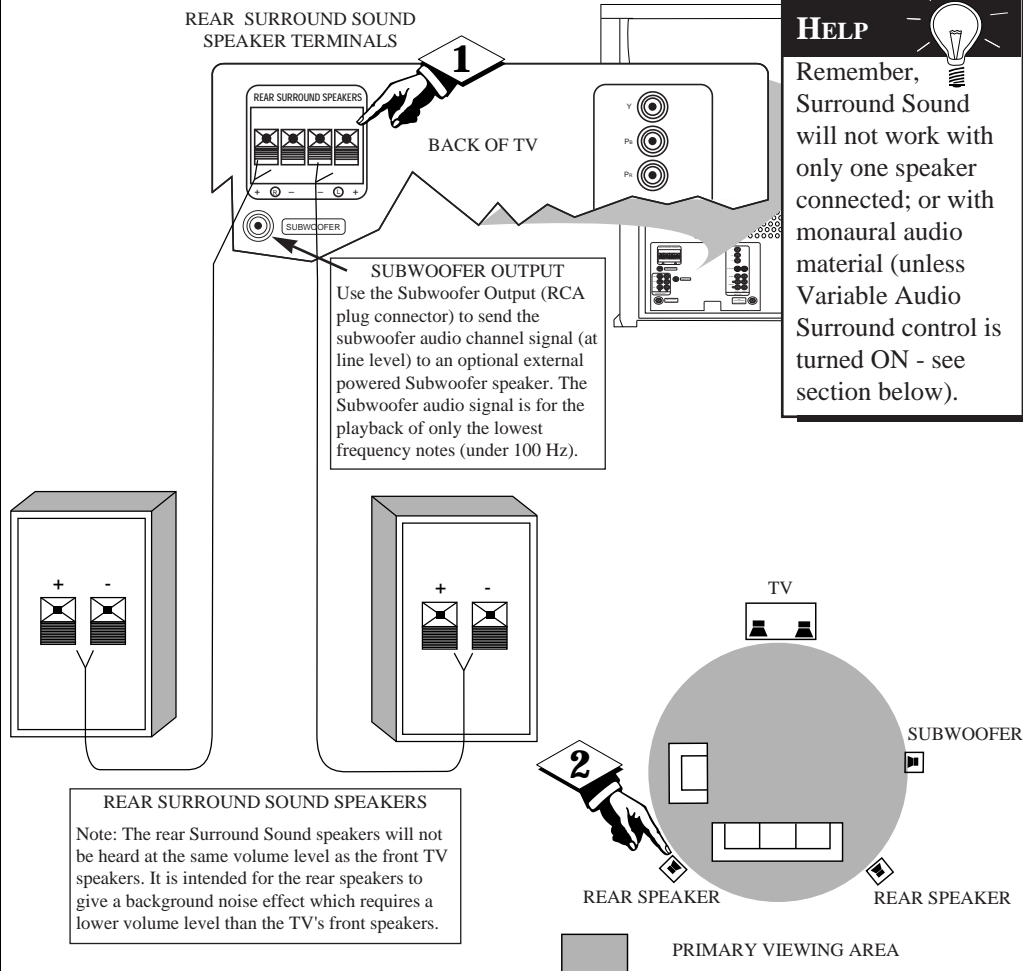

SMART HELP



Remember, Surround Sound will not work with only one speaker connected; or with monaural audio material (unless Variable Audio Surround control is turned ON - see section below).

VARIABLE AUDIO OUTPUT


The TV's Variable Audio Output jacks can also be used for Surround Sound. Once they are connected to an external hi-fi system its speakers can be used for the playback of Surround Sound.

BEGIN

- 1 **Connect the R(ight) and L(ef) VARIABLE AUDIO OUT** jacks on the TV to the R and L Audio Input jacks on your amplifier or sound system.

- 2 **Turn TV ON** and place the VARIABLE AUDIO OUTPUT on screen control to the SURROUND (✓) position. (Sound Menu 3 of 3).

Note: This will change the Left/Right channel audio line level signal at the Audio Output jacks to the same signal found at the TV's Surround Sound Speaker terminals.

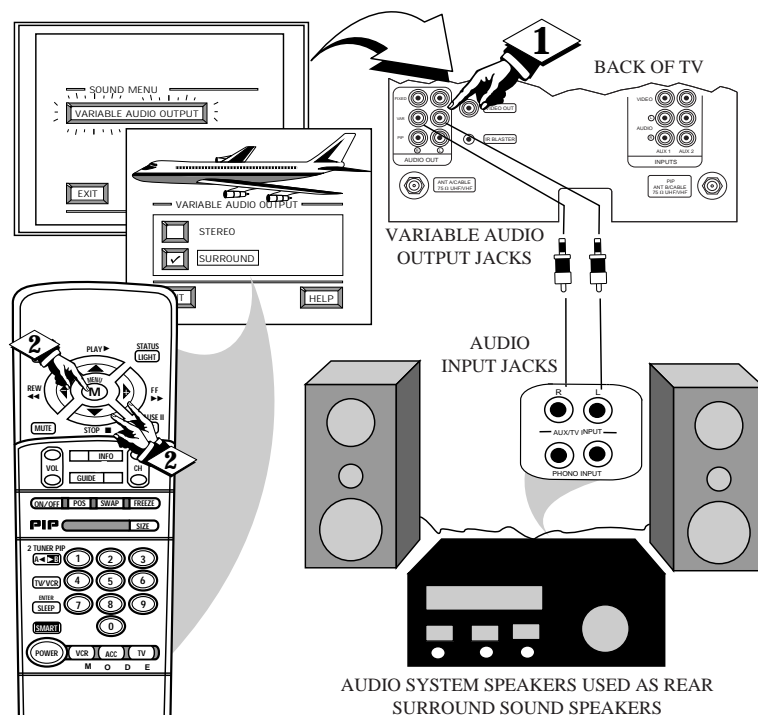



AUX 1 VIDEO INPUTS

The TV's Audio/Video Input jacks are for direct picture and sound connections between the TV and a VCR (or Video Disc Player, etc.) that has Audio/Video Output jacks.

To view the playback of a VCR tape by using the Audio/Video Input jacks on the TV:

BEGIN

- 1 **Connect the VIDEO OUT** jack from the VCR to the AUX 1 VIDEO IN jack on the TV.
- 2 **Connect the AUDIO OUT** jacks R(ight) and L(ef) from the VCR to the AUX 1 AUDIO IN jacks on the TV.
- 3 **Select the "AUX 1 VIDEO" PICTURE SOURCE SELECT** control on the TV.
With the FEATURES MENU on screen, move the RED highlight with the MENU (M) button. Then press the MENU button.
- 4 **Press the MENU ▲▼ and MENU (M) buttons** to highlight and select (✓) the AUX 1 VIDEO mode.
- 5 **Turn the VCR ON** and press **PLAY** to view the tape on the TV.




SMART HELP



Remember, after it is connected an easy way to select the AUX 1 VIDEO mode is to press the TV/VCR button on the remote. AUX 2 VIDEO; SIDE VIDEO; AUX 1 Y Pb Pr; ANT A/B, and the last channel viewed can also be selected in this way.

Also, if you have added AUX 1 VIDEO to the TV's channel memory (see page 14), you can just press the CHANNEL ▲▼ buttons to select the AUX 1 mode.

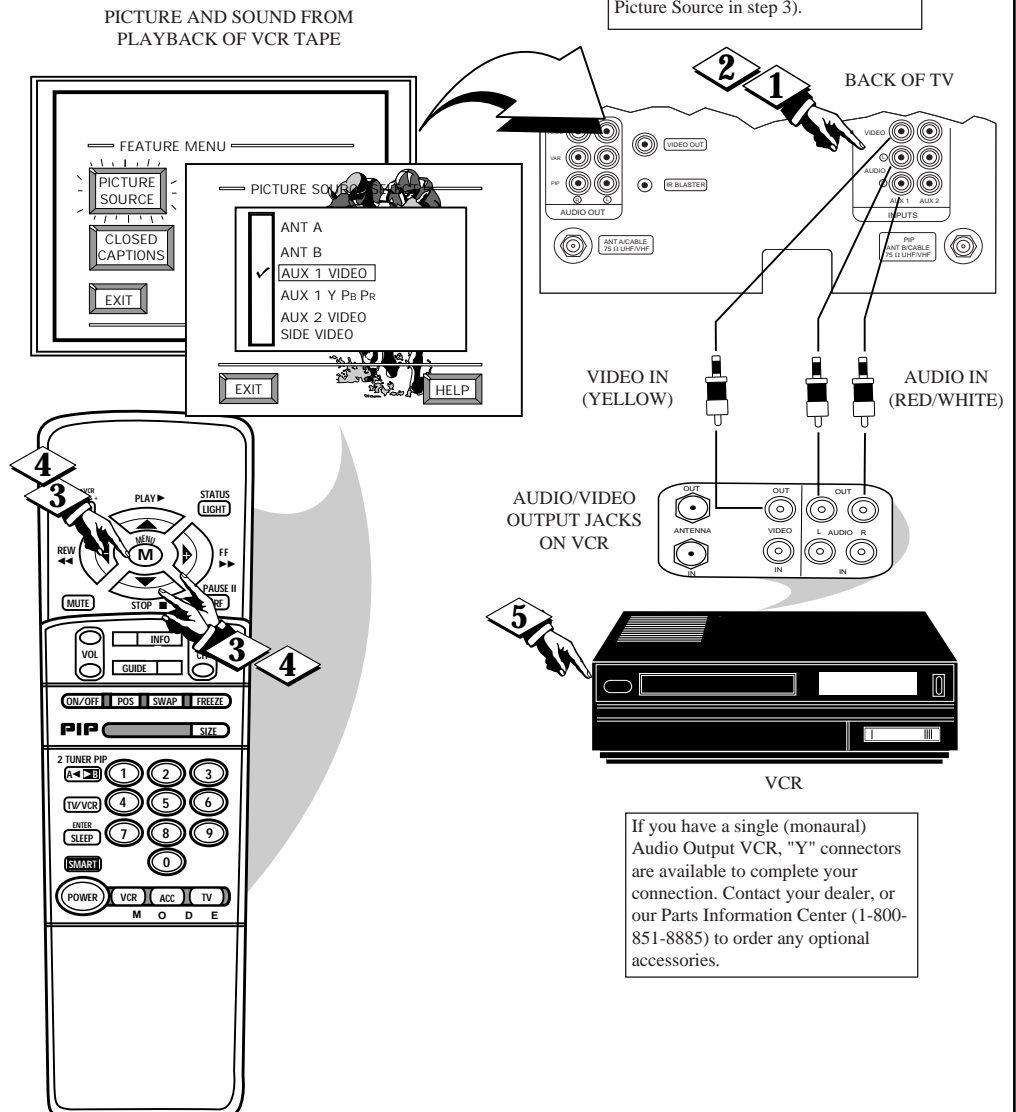

USING THE AUDIO/VIDEO INPUT JACKS (CONTINUED)

SIDE VIDEO INPUTS

For more convenient Direct playback connections the TV's Side Video Input panel can be used. Located on the TV's right side panel (angled toward the front for easy access) these Audio/Video Input jacks allow for quick connections, particularly for the playback of Camcorder tape recordings.

To view the playback of a Camcorder recording using the Audio/Video Input jacks on the side of the TV:

BEGIN

- 1 Connect the VIDEO OUT jack from the Camcorder to the VIDEO IN jack on the side of the TV.
- 2 Connect the AUDIO OUT jacks R(ight) and L(eft) from the Camcorder to the AUDIO IN jacks on the side of the TV.
- 3 Select the "SIDE VIDEO" PICTURE SOURCE control on the TV.
With the FEATURES MENU on screen, move the RED highlight with the MENU (M) and arrow buttons. Then press the MENU button.
- 4 Press the MENU $\blacktriangle/\blacktriangledown$ and MENU (M) buttons to highlight and select (✓) the SIDE VIDEO mode.
- 5 Turn the Camcorder ON and press PLAY to view the tape on the TV.




SMART HELP



Remember, an easy way to select the SIDE VIDEO mode is to press the TV/VCR button on the remote. AUX 1 VIDEO; AUX 2 VIDEO; AUX 1 Y Pb Pr; ANT A/B, and the last channel viewed can also be selected in this way.

Also, if you have added SIDE VIDEO to the TV's channel memory (see page 14), you can just press the CHANNEL $\blacktriangle/\blacktriangledown$ buttons to select the SIDE VIDEO mode.

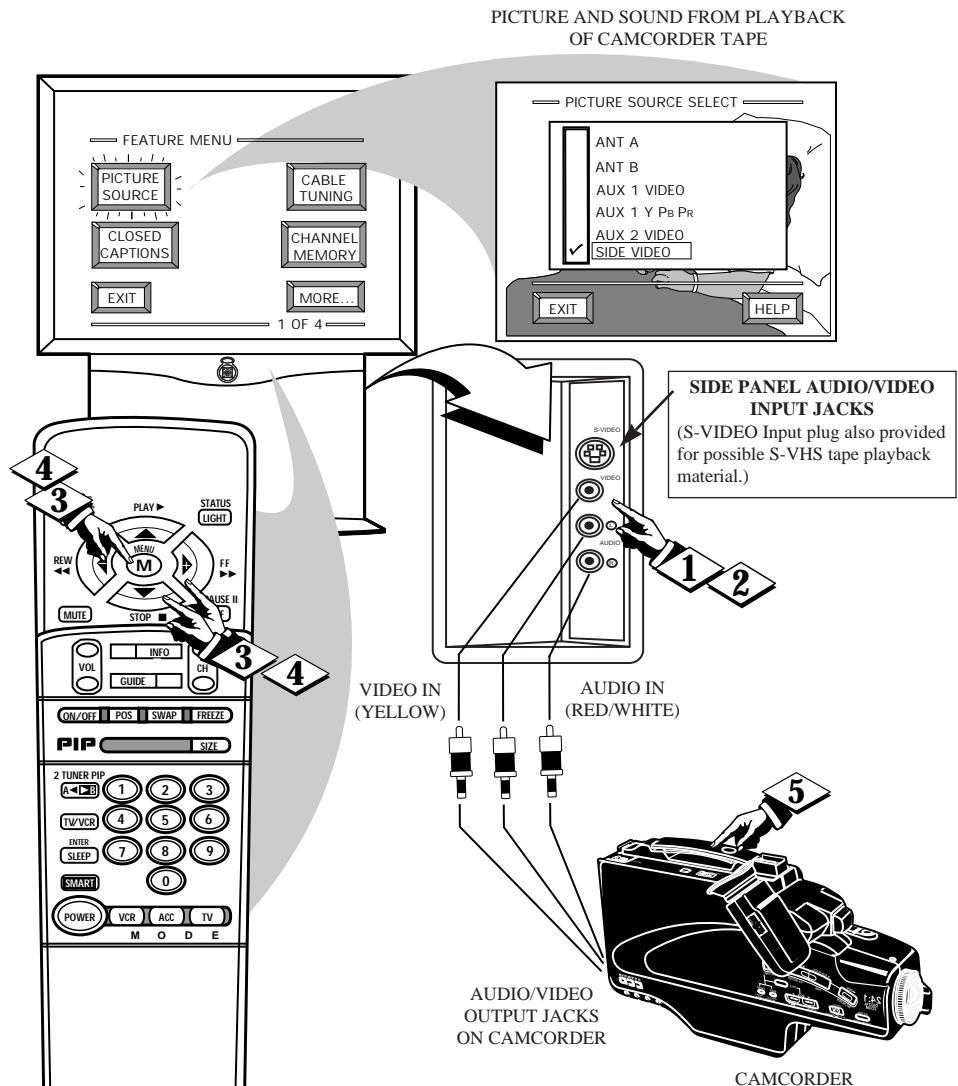



AUX1 - S-VIDEO INPUTS

The S(uper)-Video connection on the rear of the TV can give you better picture detail and clarity, for the playback of S-VHS VCR tapes or Video Discs, than the normal antenna picture connections.

Note: The VCR (or Video Disc Player) must have a S-VIDEO OUT(put) jack in order for you to complete the connections shown on this page.

BEGIN

- 1 **Connect the S-VIDEO (S-VHS) OUT** jack from the VCR to the S-VIDEO AUX 1 IN(put) jack on the TV.

The S-VIDEO connecting cable will be supplied with the S-VHS VCR (or Video Disc Player).

- 2 **Connect the AUDIO OUT** jacks R(ight) and L(eft) from the VCR to the AUDIO AUX 1IN(put) jacks on the TV.

- 3 **Select the "AUX 1 S-VIDEO" PICTURE SOURCE** control.


With the FEATURES MENU on screen, move the RED highlight with the MENU (M) button. Then press the MENU button.

The "AUX 1 S VIDEO" picture source option appears only when a S-VIDEO cable has been connected to the TV's AUX 1 IN(puts).

- 4 **Turn the VCR ON** and place it in the S-VIDEO (or S-VHS) playback mode. Insert S-VHS cassette tape and playback in a normal manner.



PICTURE AND SOUND FROM
PLAYBACK OF S-VHS VCR TAPE

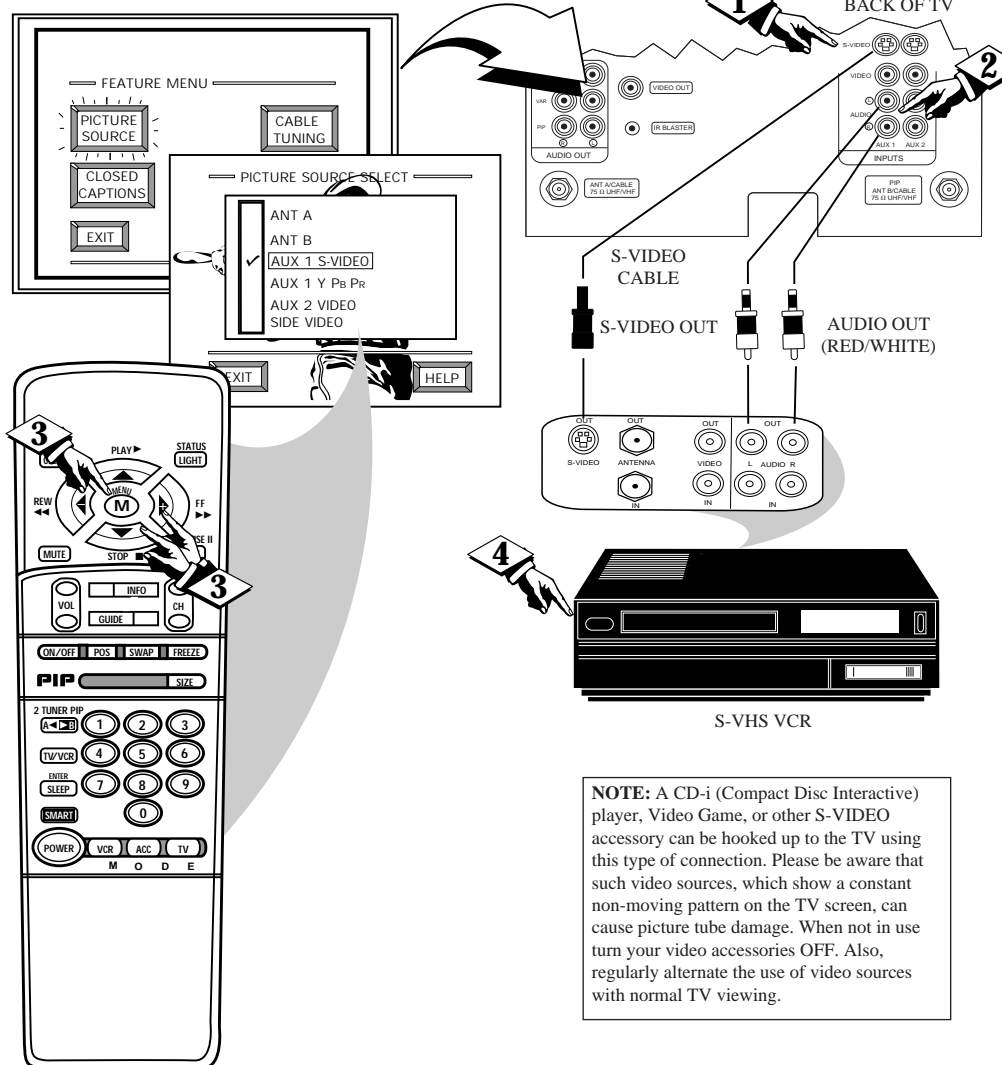

S-VHS VCR

NOTE: A CD-i (Compact Disc Interactive) player, Video Game, or other S-VIDEO accessory can be hooked up to the TV using this type of connection. Please be aware that such video sources, which show a constant non-moving pattern on the TV screen, can cause picture tube damage. When not in use turn your video accessories OFF. Also, regularly alternate the use of video sources with normal TV viewing.

SMART HELP



Remember, after it is connected an easy way to select the AUX 1 S-VIDEO mode is to press the TV/VCR button on the remote.)

Also, if you have added AUX 1 to the TV's channel memory, you can just press the CHANNEL ▲▼ buttons to select the S-VIDEO mode (when active).

COMPONENT VIDEO INPUTS




Component Video Inputs provide for the highest possible color and picture resolution in the playback of digital signal source material such as with DVD players. The color difference signals (PB, PR) and the luminance (Y) signal are connected and received separately which permits for improved color bandwidth information (not possible when using composite video or S-Video connections).

BEGIN

- 1** Connect the **Component (Y Pb Pr) VIDEO OUT** jacks from the DVD player to the (Y Pb Pr) VIDEO IN(put) jacks on the TV.
- 2** Connect the **AUDIO OUT** jacks R(ight) and L(eft) from the DVD player to the AUX 1 AUDIO IN jacks on the TV.
- 3** Select the **"AUX 1 Y Pb Pr" PICTURE SOURCE** control on the TV.
With the FEATURES MENU on screen, move the RED highlight with the MENU (M) buttons. Then press the MENU button.
- 4** Press the **MENU** ▲▼ and **MENU (M)** buttons to highlight and select (✓) the AUX 1 Y Pb Pr mode.
- 5** Turn the **DVD player ON** and press **PLAY** to view the source material playback on the TV.



PICTURE AND SOUND FROM PLAYBACK OF DVD SOURCE MATERIAL

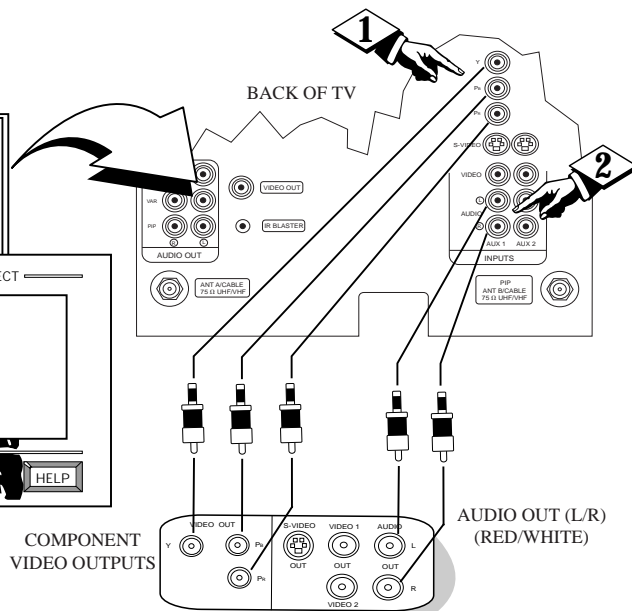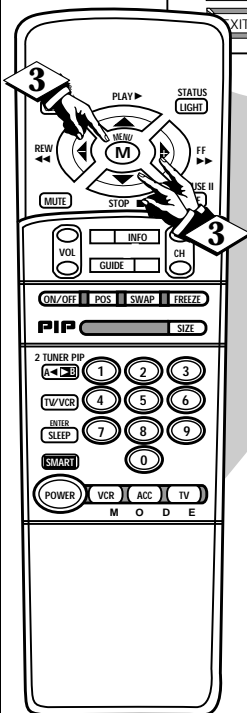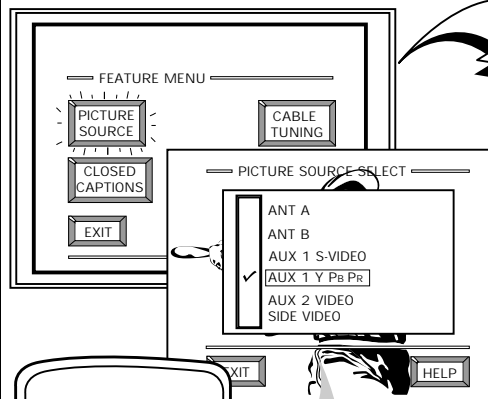

Optional Video/Audio Cables (with standard RCA plug connectors) are available to complete your Component Input Jack connections. Contact your dealer, or our Parts Information Center (1-800-851-8885) to order any optional accessories.

SMART HELP



The description for the component video connectors may differ depending on the DVD player or accessory digital source equipment used (e.g. Y Pb Pr; R-Y/B-Y/Y; Cr/Cb/Y, etc.). Although abbreviations and terms may vary, the letters "B" and "R" stand for the blue and red color component signal connectors and "Y" indicates the luminance signal. Refer to your DVD or digital accessory Owner's Manual for definitions and connection details.

AUDIO/VIDEO OUTPUTS

The Audio/Video Output jacks on the TV can be used to record TV programs on VCRs which have Audio/Video Input jacks.

To record TV programs by using the Audio/Video jacks on the TV:

BEGIN

1 Connect the VIDEO OUT jack from the TV to the VIDEO IN jack on the VCR.

2 Connect the AUDIO OUT jacks R(ight) and L(eft) from the TV to the AUDIO IN jacks on the VCR.


3 Select the "ANTENNA A" PICTURE SOURCE control on the TV.

With the FEATURES MENU on screen, move the RED highlight with the MENU (M) buttons. Then press the MENU button.

Select the channel on the TV that you want to record.

4 Turn the VCR ON. Put a cassette tape in the unit and place the VCR in the RECORD mode.

STOP

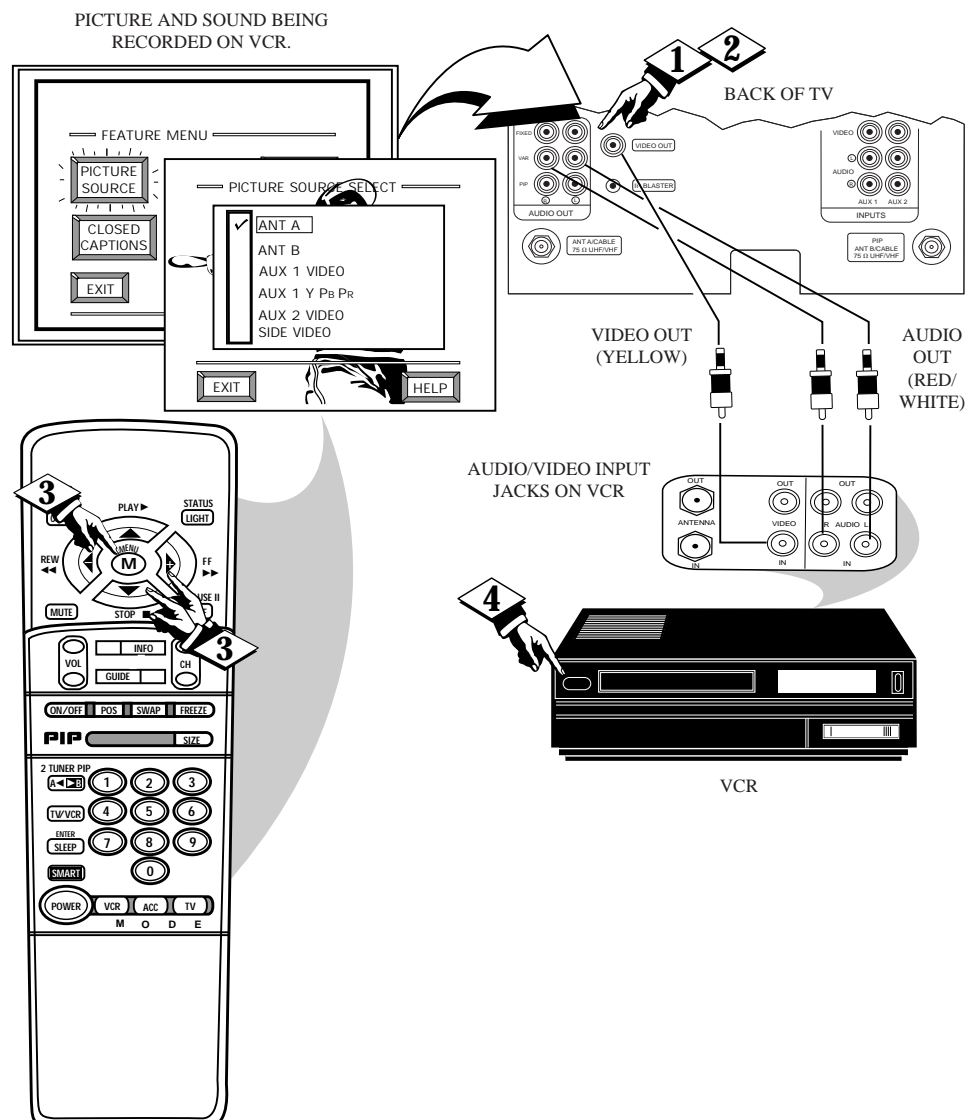

SMART HELP



Remember, If the VCR has an INPUT SELECTOR switch, place it in the LINE or CAMERA position.


Unattended Timer Recordings with a VCR are possible, but not recommended with this connection since the TV must be left ON for the VCR to record.

SMART PICTURE

With Smart Picture you can set a number of video and audio controls to your own personal preference. Once the individual controls have been adjusted to the levels you desire, use the list of Smart Picture feature category titles to quickly reselect these “personalized” settings contained within the memory of the TV. (See the next page for more details on the labeling options and use of Smart Picture.)

BEGIN

- 1 Press the SMART button on the remote.**
Press the MENU (M) button to select the Smart Picture feature (highlighted in RED).
- 2 Press the MENU ▲▼ buttons to highlight the category list for Smart Picture. Press the MENU button to select (✓) the desired title.**
- 3 Press the MENU(M) ◀▶ buttons to choose any of the individual controls you wish to adjust for the Smart Picture selected title. Then press the Menu (M) button to select the highlighted control.**
- 4 Press the Menu (M) ◀▶ buttons to adjust the selected control.**
- 5 Press the STATUS button on the remote to clear the screen after you have finished with all of your Smart Picture feature control adjustments.**

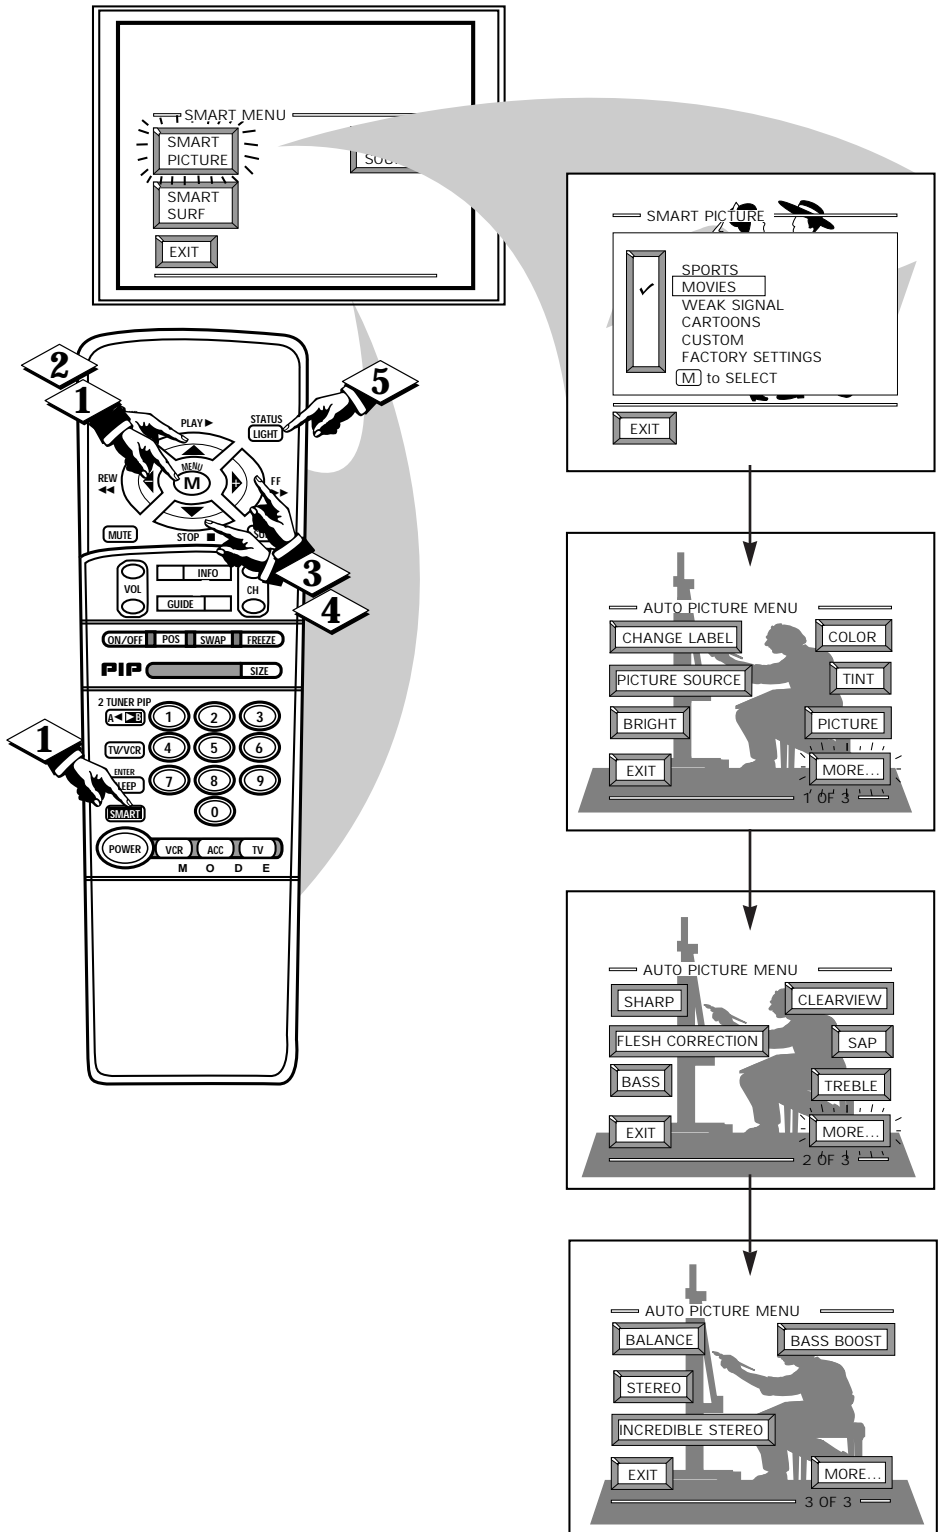

SMART HELP

Note: Select the “FACTORY SETTINGS” category to automatically return the TV to the video and audio control levels preset at the factory prior to product shipment.



SMART PICTURE

Following your initial setup adjustments (see previous page), just select the desired Smart Picture category in order to place the TV to the personalized set of audio and video control settings for that title.




(BEGIN)

- 1 Press the **SMART** button on the remote.

Then press the **MENU** button to select the **SMART PICTURE** control feature.

- 2 Press the **MENU (M)** ▲▼ buttons with the list of "SMART PICTURE" categories on the TV screen to highlight the desired category. Then press the **Menu (M)** button to select the audio and video control settings for that particular title.

- 3 Press the **STATUS** button on the remote to clear the screen.

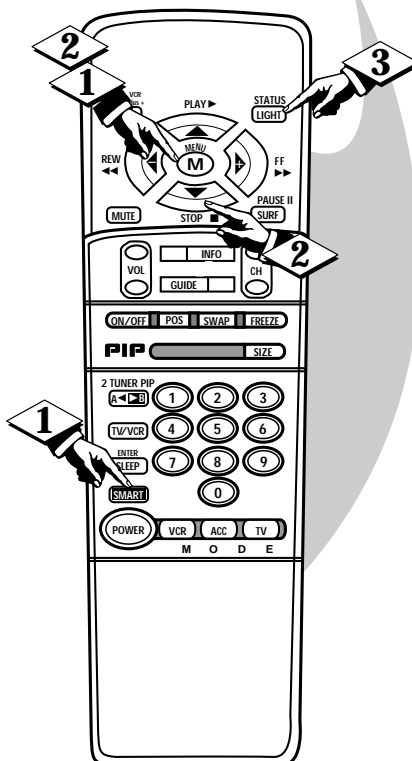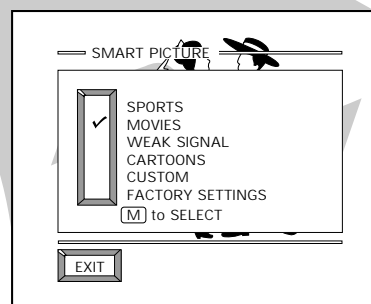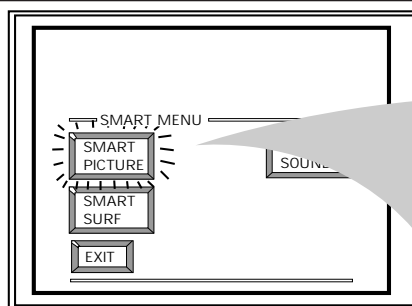

CHANGE LABEL




The "CHANGE LABEL" control can be used to change the title of a SMART PICTURE setting into a name or label that may be easier for you to remember.

(BEGIN)

- 1 With the **SMART PICTURE** "CHANGE LABEL" control on the screen, **press the MENU** ▲▼ buttons to spell out a new label or title for the selected **SMART PICTURE** category.

- 2 Press the **MENU** ◀▶ buttons to move the red highlight to each letter space.

- 3 Press the **STATUS** button to clear the screen when the new label is finished.

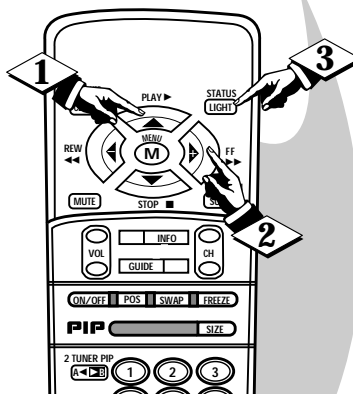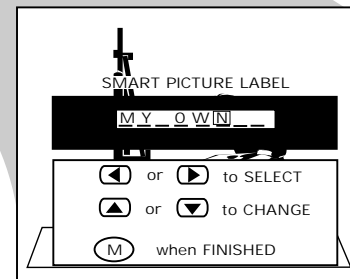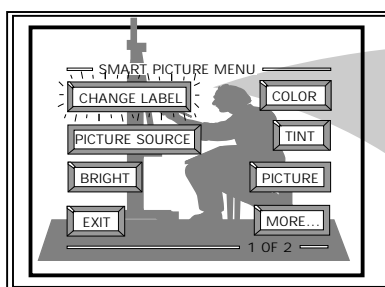



REMOTE CONTROL OPERATION (CONTINUED)

SMART SOUND

Are you tired of the sound of commercials following you throughout the house? Smart Sound allows you to preset a desired volume level that the TV sound will not go above. This makes for an even, more consistent sound by reducing the “peaks” and “valleys” that can occur during commercials.

BEGIN

- 1** Press the **Smart** button on the remote.
- 2** With the **SMART Menu** on screen, move the **RED** highlight with the **Menu** (◀▶) buttons. Then press the **MENU** (M) button to select the highlighted **Smart Sound** control.
- 3** Press the **Menu** ▲ or ▼ and then the **Menu** (M) button to turn the **Smart Sound** control **ON** (or **OFF**.)
- 4** Press the **STATUS** button to clear the screen when completed.






SMART HELP



Remember, **Smart Sound** works for sound levels coming from either the **Antenna/Cable** input on the rear of the TV (**RF** audio); or the **Auxiliary (VCR/AUX IN)** audio inputs.

When using a **Cable Converter Box** with the **Smart Sound** Control **ON**, the TV's volume level may take up to ten seconds to gradually increase to normal listening levels (when the TV's first turned on). This is considered **NORMAL** with various **Cable Converter Box** use.

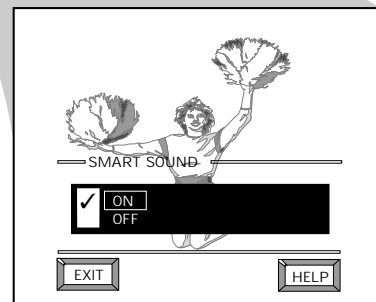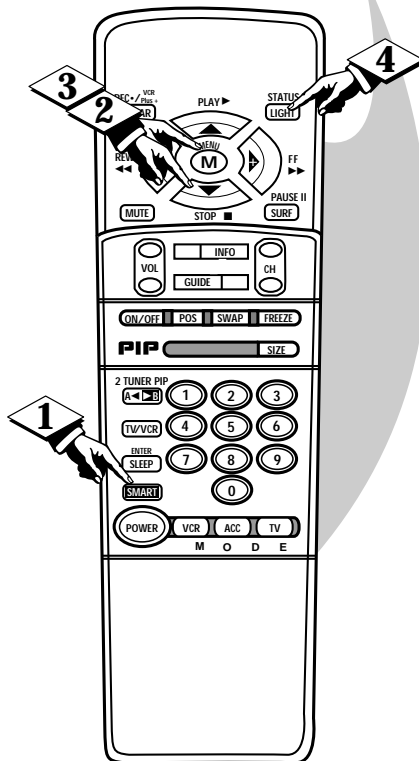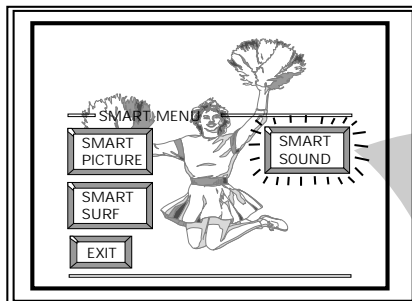


REMOTE CONTROL OPERATION (CONTINUED)

2-CHANNEL SURF/SMART SURF

A "list" or series of previously viewed channels can be selected with the SURF button on your remote control. With this feature you can easily switch between different TV programs that currently interest you. The Smart Surf control allows you to set up to 10 channels in its quick viewing "list".

BEGIN

- 1 Press the Smart button on the remote.
- 2 With the SMART Menu on screen, move the RED highlight with the Menu (M) button. Press the MENU button to select the highlighted Smart Surf control.
- 3 Press the Menu ▲ or ▼, then the Menu (M) button to select either Smart Surf or 2-Channel Surf. (See explanation of Surf options with the illustration on this page.)
- 4 Press STATUS button on the remote control to clear the screen.

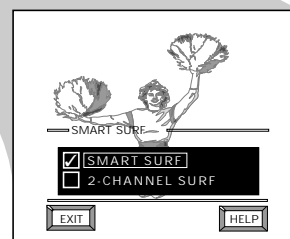

2 CHANNEL SURF- Current and one previous channel in the ring.

SMART SURF - Current and up to nine additional channels available in the ring. Note: The Channel Surf ring can be used with fewer than ten channels. In this way, the number of Surf channels can match or fit your present viewing interests.

SMART HELP






To Use 2-Channel Surf:

With the 2-Channel Surf control ON, select the two desired channels for viewing with the number buttons on the remote control. Then press the SURF button on the remote to "toggle" between the two selected channels.


HOW TO USE SMART SURF

BEGIN

- 1 With the Smart Surf control ON (see above), select a desired channel for viewing. You can use the number buttons on the remote (or the Channel ▲▼ buttons).
- 2 Press the SURF button on the remote. (Some channel numbers may already appear within the Surf channel list.)
- 3 Press the Menu button to "ADD" the selected channel to the Surf list. Select the next desired channel and repeat steps 2 and 3. Continue until all desired channels are on the Surf list.
- 4 Press the SURF button on the remote to quickly review current action on channels contained within the Surf list.

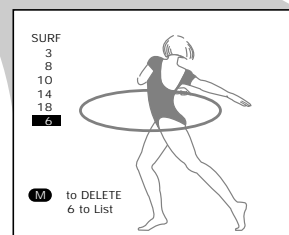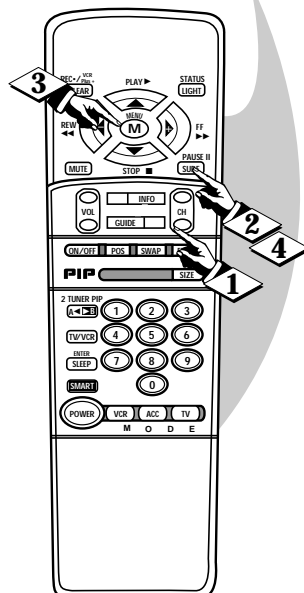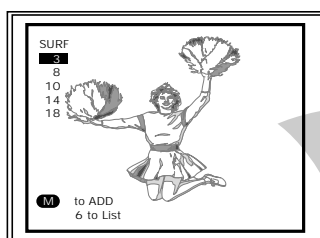

Note: To Delete a channel from the Surf list just press the SURF button to select the desired channel. Then press the Menu button and the channel will be immediately dropped from the on-screen Surf list.

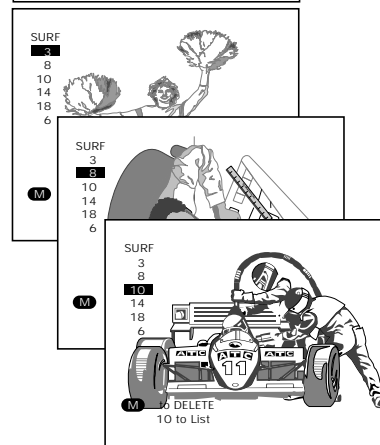



SETTING THE TV REMOTE TO WORK ACCESSORY DEVICES

Your remote control is set to work your TV and many infrared remote (IR) control VCRs, Cable TV Converter Boxes, DVD players, Home Satellite receivers, etc. However, an easy one-time step may be necessary before the remote will work with your accessory device.


To begin, try this initial check to see if going on to the following section is necessary.

BEGIN

- 1 Press the **VCR** or **ACC(essory) System** button on the TV remote for the desired accessory device category.

Note: The ACC(essory) system button contains product codes for Cable TV Converters, DVD players, and Satellite receivers.

- 2 Point the TV remote toward the desired accessory device and press the **POWER** button.

- 3 Does the remote turn the accessory device **ON**?
IF YES,  and try other function buttons on the TV remote. If they also work the accessory device, then the remote is ready and no further steps are needed.

If NO, continue...

- 1 First look up a **THREE-DIGIT remote code number** for your brand of Accessory Device before going through the simple Direct Access Method steps shown on the following page.


Find your Three Digit Code Number on pages 45-46.

SMART HELP



Remember, if more than one number is listed, you may have to try more than the first three-digit code given in order to locate your device's correct code.

TV REMOTE VCR/ACCESSORY SYSTEM BUTTONS

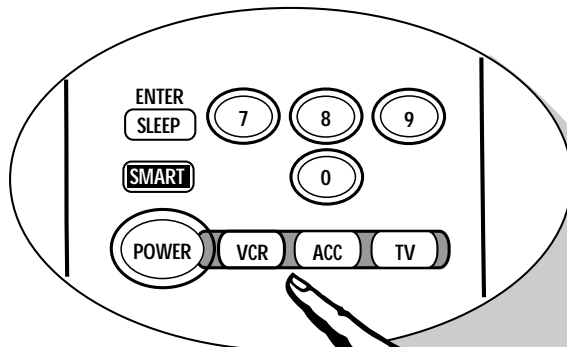


VCR



SATELLITE
RECEIVER



CABLE CONVERTER

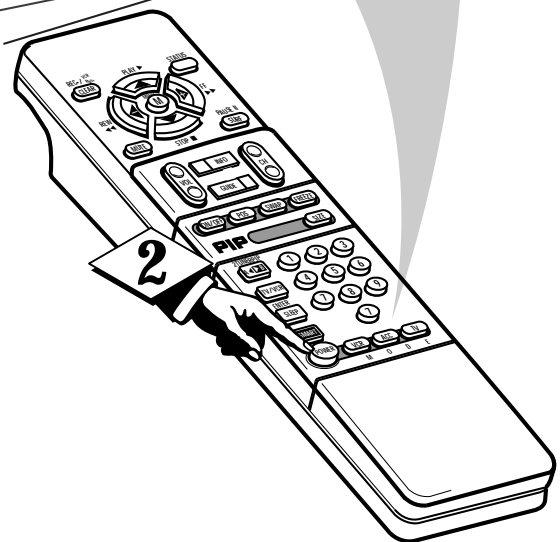

SETTING THE TV REMOTE TO WORK ACCESSORY DEVICES



DIRECT ACCESS METHOD

Now that you have looked up the three-digit Remote Code Number for your brand of accessory device (see page 45-46), you are ready to follow the simple steps shown below.

Please read through all the steps before beginning.

(BEGIN)

- 1 Press and release the REC (RECORD) button.
- 2 Within three seconds after releasing the REC button, press and release the correct VCR or ACC(essory) System button.
- 3 Within thirty seconds after releasing the VCR or ACC System button, ENTER THE THREE DIGIT CODE NUMBER for the desired device. The remote is now ready to send commands to the accessory.
- 4 Point the remote at the accessory device. Press the POWER button on the remote to turn the device ON.




SMART HELP



Remember, if this does not work the first time, repeat steps using the same remote code number.

If after a second try the remote does not operate your accessory device, and there are more code numbers listed for your brand, use the next listed code number.

If after repeated attempts the code number method does not work your accessory device, try the "SEARCH METHOD" shown on the following page.

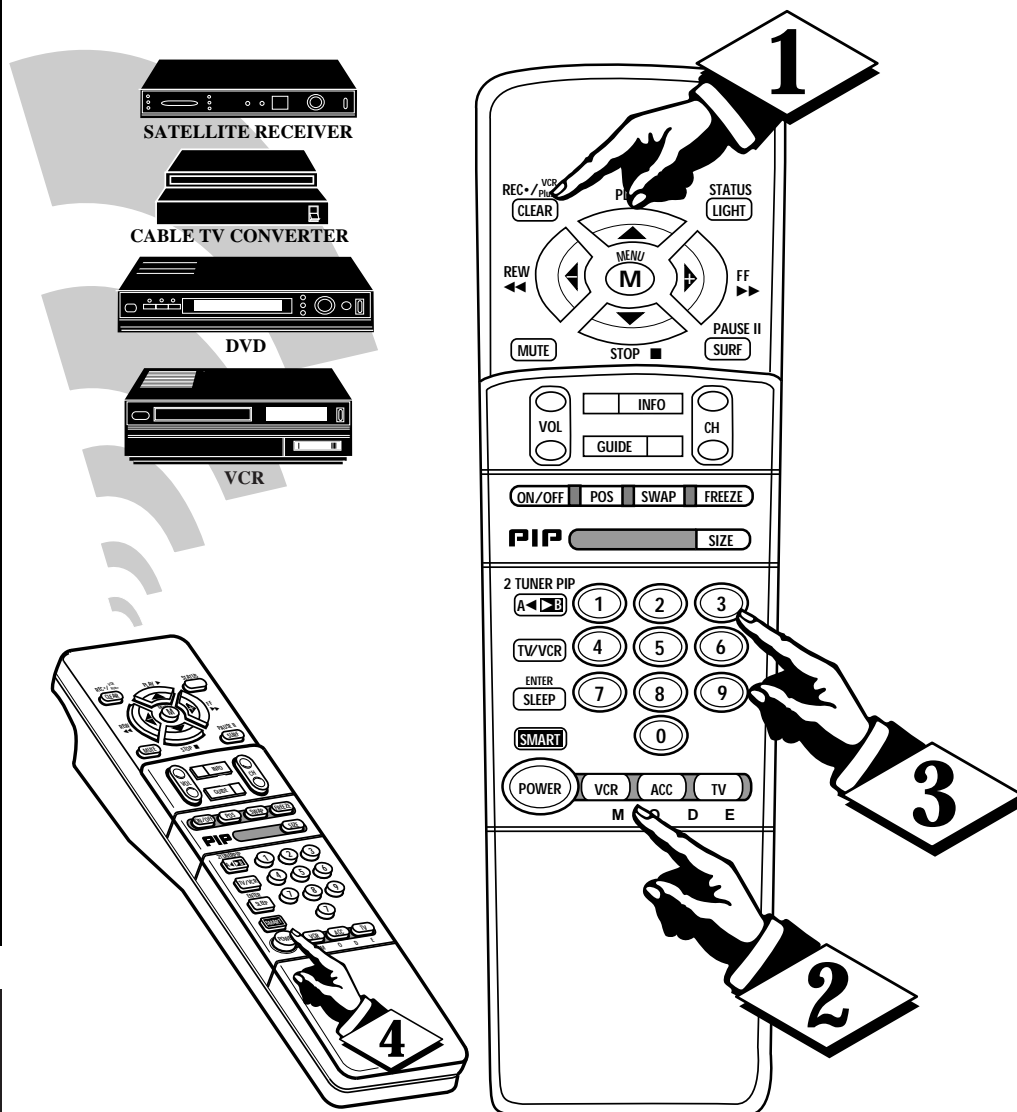

Note: For TV remote's equipped with a backlight option, the unit may "blink" or flash after three-digit Direct Access code numbers are entered on the keypad. (Two blinks indicate a valid code number entry; one long blink indicates an invalid code number or the thirty second time interval for entering code numbers has expired.)



SETTING THE REMOTE TO WORK OTHER DEVICES - SEARCH

SEARCH METHOD

Your TV remote can be set to work various accessory devices (VCRs, Cable Converters, Satellite Receivers) by what is called the **SEARCH** method.

Note: The **Search Method** only works with devices equipped with **Channel Display Indicators** or capability. If the "Direct Access" code number method (shown in the previous section) did not set your remote to work your accessory device, then follow the easy steps listed below.

(BEGIN)

- 1** Turn ON the desired device. Press the correct VCR or ACC system button on the remote.
- 2** Stand at least six feet away from the front of the accessory device. Point the remote toward the unit. HOLD DOWN the SURF and the desired System (VCR or ACC) buttons at the same time. KEEP HOLDING BUTTONS DOWN.
- 3** Watch the Channel Indicator on the unit. Channel Numbers will SCAN UP when the unit has been identified. This may take up to two minutes.
- 4** Release the SURF and System (VCR or ACC) buttons as soon as channel numbers start to scan up. The code has been identified and the remote is ready to operate with the accessory device.




SMART HELP



Remember, a minute or two can seem very long, but the code should be located within two minutes.

Don't let the accessory device scan up more than five channels. The remote may pass up the right code and another two minute search cycle will have to be repeated.

If no channel change happens within two minutes, repeat steps 1-4. Should a channel change still not occur, the remote will not work with the desired unit.

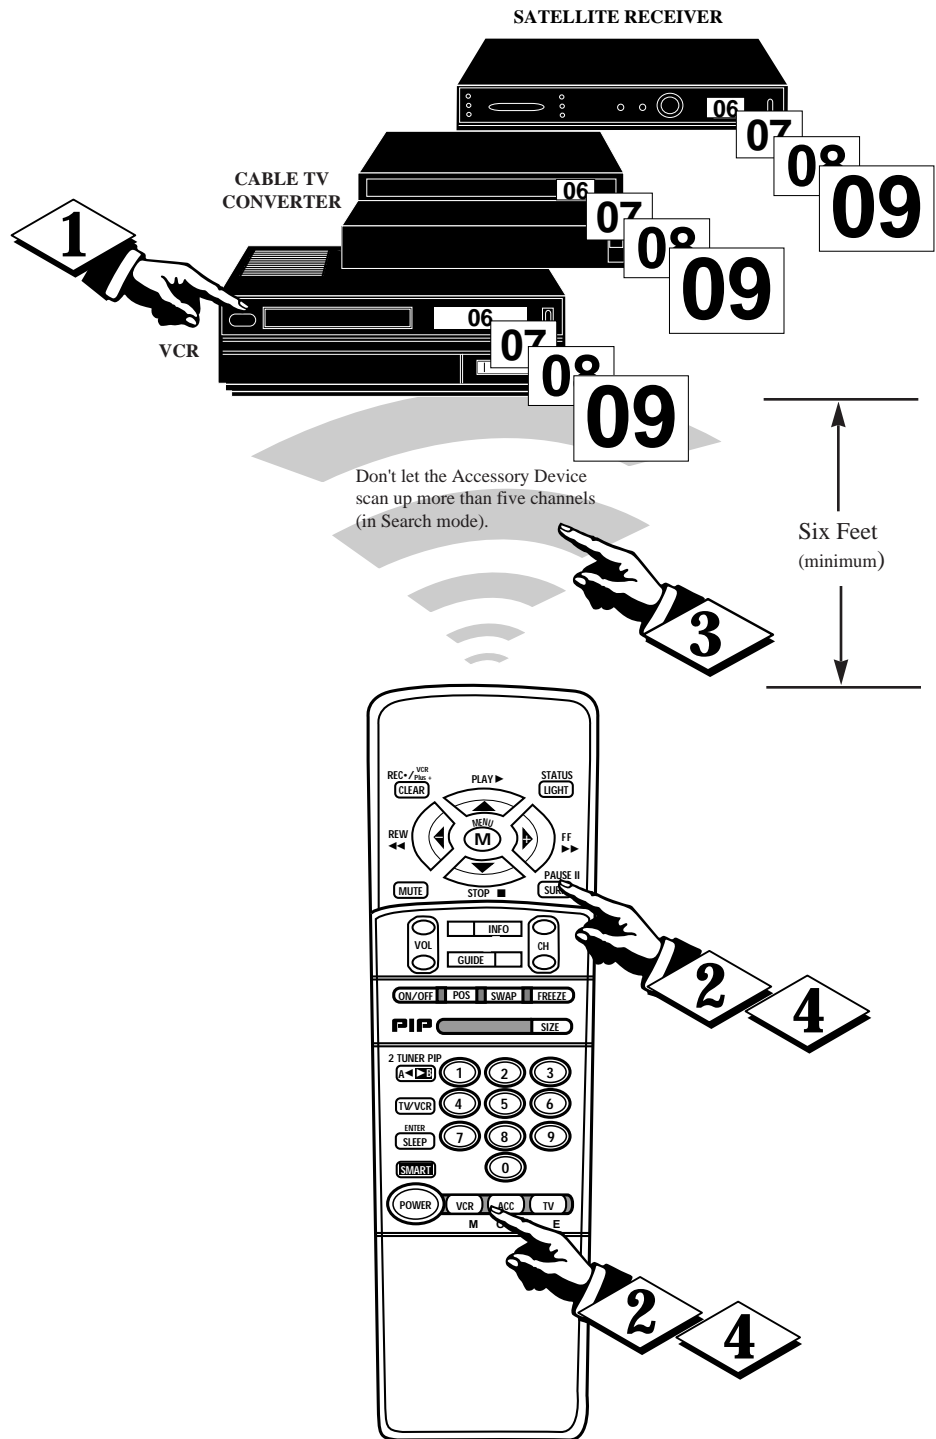

Note: For TV remote's equipped with a backlight option, the unit may "blink" or flash as the remote moves through its product code list. Once a product code has been identified and the buttons on the remote are released, the unit will blink twice.

REMOTE CONTROL DIRECT ENTRY CODES FOR ACCESSORY DEVICES



VCR BRAND REMOTE CODE NO.

Action 317
 Admiral048
 Advantz356
 Adventura000
 Aiko278
 Aiwa406, 307, 468, 000, 037
 Akai106, 053, 041, 049, 061, 156,
242, 315
 American High035
 Asha240
 Audiovox037
 Beaumark240
 Bell & Howell104
 Broksonic121, 184, 002, 209, 211,
295, 361, 479
 CCE072, 278
 Calix037
 Canon167, 035
 Capehart020, 554
 Carver081
 Cinal278
 Citizen278, 037
 Colt072
 Craig037, 072, 047, 240, 271
 Curtis Mathes035, 041, 060, 162
 Cybernex051, 240
 Daewoo278, 561, 020, 554, 017,
045, 087
 Daytron020, 554
 Denon042
 Dynatech000
 Electrohome037
 Electrophonic037
 Emerex032
 Emerson184, 002, 209, 278, 036,
 121, 211, 208, 294, 479, 561, 061, 088,
 .212, 000, 037, 043, 068, 295, 361, 510
 Fisher047, 104, 054, 066
 Fuji033, 035
 Fujitsu000
 Funai000
 GE035, 060, 048, 065, 202, 240
 Garrard000
 Go Video279, 432, 526, 350, 232
 GoldStar037, 018, 038, 471, 480
 Gradiente008, 000, 408
 Grundig195
 HI-Q047
 Harley Davidson000
 Harman/Kardon038, 075, 081
 Harwood068, 072
 Headquarter046
 Hitachi042, 166, 105, 065, 292,
000, 041, 082, 235
 JVC067, 008, 206, 207, 041, 384
 Jensen041

VCR BRAND REMOTE CODE NO.

KEC037, 278
 KLH072
 Kenwood041, 067, 384, 038
 Kodak035, 037
 LXI037
 Lloyd's000, 208
 Logik072
 MEI035
 MGA043, 061, 240
 MGN Technology240
 MTC000, 240
 Magnasonic278
 Magnavox035, 081, 000, 039, 149
 Magnin240
 Marantz081, 035
 Marta037
 Matsushita035, 162
 Memorex104, 047, 000, 037, 048,
035, 046, 240, 307, 039, 162, 299
 Minolta105, 042
 Mitsubishi043, 173, 061, 075, 214,
242, 048, 067, 443
 Motorola035, 048
 Multitech000, 072
 NAD058, 104
 NEC .038, 040, 041, 050, 067, 082, 104
 Nikko037
 Nikon034, 253
 Noblex240
 Olympus035, 226
 Optimus .048, 058, 037, 104, 162, 432
 Optonica062
 Orion479, 002, 184, 295
 Panasonic035, 226, 077, 162, 378,
225, 227, 246
 Penney035, 240, 037, 042, 038,
040, 054
 Pentax042, 065, 105
 Philco035, 209, 479
 Philips081, 035, 062, 403
 Pilot037
 Pioneer058, 168, 067
 Portland020, 554
 Profitronic240
 Proscan060, 202
 Protec072
 Pulsar039, 051
 Quarter046
 Quartz046, 155
 Quasar035, 162, 077
 RCA060, 149, 202, 042, 105,
035, 048, 065, 077, 106, 240, 277
 Radio Shack000
 Radix037
 Randex037

VCR BRAND REMOTE CODE NO.

Realistic000, 104, 047, 048, 037,
035, 062, 046, 066
 Ricoh034, 253
 Runco039
 STS042
 Salora075
 Samsung045, 051, 053, 240
 Sanky039, 048
 Sansui041, 479, 000, 067, 082, 271
 Sanyo047, 046, 104, 240
 Scott .184, 211, 121, 043, 045, 210, 212
 Sears054, 105, 037, 042, 000,
035, 046, 047, 057, 066, 104
 Semp045
 Sharp048, 062
 Shintom072
 Shogun051, 240
 Singer072
 Sony .033, 034, 032, 253, 000, 011, 035
 Sunpak253
 Sylvania035, 081, 000, 043
 Symphonic000
 TMK036, 208, 240
 Tandy000, 104
 Tatung041
 Teac000, 041
 Technics035, 162, 246
 Teknika000, 035, 037, 052
 Thomas000
 Toshiba045, 057, 210, 212, 043,
066, 366
 Totevision037, 240
 Unitech240
 Vector045
 Vector Research038, 040
 Video Concepts040, 045, 061, 221
 Videosonic240
 Wards035, 060, 062, 000, 047, 212,
240, 042, 048, 072, 081, 149
 White Westinghouse278
 XR-1000072, 000, 035
 Yamaha038
 Zenith039, 000, 033, 034

Continued on Next Page



REMOTE CONTROL DIRECT ENTRY CODES FOR ACCESSORY DEVICES

CABLE CONVERTER REMOTE CODE NO.

ABC003, 001, 007, 008, 011, 013,014, 017, 047, 206
ABC Cable033
Allegro153, 315
Antronix022, 207
Archer022, 039, 153, 207, 797
BBT267
Belcor056
Bell & Howell014
Cable Star056
Cabletenna022
Cableview022
Century153
Citizen153, 315
Colour Voice025, 031
Combant232, 233
Comtec274
Comtronics040, 060
Contec019
Digi637
Eastern002, 274
Electricord078
Emerson797
Everquest015, 040
Focus400
GC Electronics056, 207
GE232, 233
GMI057
Garrard153
Gemini015, 057, 070, 242
General Instrument .276, 476, 011, 810
GoldStar040, 144
Goodmind797
Hamlin . . .020, 009, 259, 034, 206, 273
Hitachi011
Hytex007
Jasco015, 153, 315
Jerrold003, 012, 276, 014, 011,024, 476, 015, 047, 098, 810
Linsay440
Macom033
Magnavox027, 334
Memorex000
Movie Time063, 078, 156, 203
NSC156, 063, 070, 203
Northcoast314
Novaplex618
Oak019, 007, 248
Optimus021
Panasonic021, 107, 000
Panther637
Paragon000
Philips025, 030, 031, 242, 290,027, 028, 029, 153, 334, 652
Pioneer44, 023, 260, 533
Popular Mechanics400

CABLE CONVERTER REMOTE CODE NO.

Prelude770
Pulsar000
Quasar000
RCA021
RK304
Radio Shack015, 315, 797, 883
Realistic207
Recoton400
Regal273, 279, 020, 259
Regency002
Rembrandt011, 070
Runco000
SL Marx040
Samsung040, 144
Scientific Atlanta . .008, 017, 006, 477
Seam510
Signal015, 040
Signature011
Sprucer307, 021
Standard Components096
StarSight542, 422
Starcom003, 015, 047, 098
Stargate040, 015, 770, 797
Starquest015
Sylvania001
TFC310
TV86063
Tandy258
Tatung097
Teknika146
TeleCaption221
Teleview040
Texscan096, 001
Timeless274, 418
Tocom012, 013, 059
Toshiba000
Tusa015
Uniden225
Unika153, 207, 022
United Artists007
Universal207, 022, 039, 056, 077,078, 153, 191, 322
Videoway250
Vidtech244
Viewstar258, 027, 060, 063, 111,211, 289
Zenith000, 525, 054
Zentek400

SATELLITE RECEIVER REMOTE CODE NO.

AlphaStar772
Echostar775
Expressvu775
General Instrument361, 869, 627
HTS775
Hitachi819
Hughes Network Systems749
JVC775
Jerrold361, 627
Magnavox722, 724
Memorex724
Next Level869
Panasonic701
Philips200, 722, 724
Primestar627, 361
RCA566, 143, 855
Sony639
Star Choice869
Toshiba790
Uniden724, 722
Zenith856

DVD BRAND REMOTE CODE NO.

Harman/Kardon818
JVC814
Kenwood807
Magnavox802
Mitsubishi803
Onkyo802
Panasonic800, 801
Philips802, 808
Pioneer805, 815
Proscan804
RCA804
Samsung816
Sony806
Technics800
Toshiba802
Yamaha800, 813
Zenith822, 802



When using the TV remote with a VCR, first make certain it is set to control your VCR (by the REMOTE CODE or SEARCH method - see earlier sections).

BEGIN

- 1** Press the VCR System button on the remote.
- 2** Point the top of the remote toward the front of the VCR (remote sensor window) when pressing buttons.



Record Button

Hold the RECORD button down, and then press the PLAY button to begin a VCR recording.

Rewind Button


Press to rewind tapes. For some VCRs you may need to press STOP button first then REWIND. In playback mode, hold button down to view picture moving rapidly in reverse.

Pause Button

Press to temporarily stop the tape during a playback, or recording. Press again to release Pause.

TV-VCR Button

Press to the VCR position ("VCR" indicator on the VCR will light) to view the playback of a tape. Press again to place in the TV position ("VCR" indicator on the VCR will go OFF) to view one program while recording another program. When used with the TV the TV/VCR button works as a source button. Each press cycles the TV between the AUX(iliary) Input modes, ANT A/B inputs, and the the last view channel. It is a quick one-button way to select these channels and modes (without directly entering the TV's Menu system.)

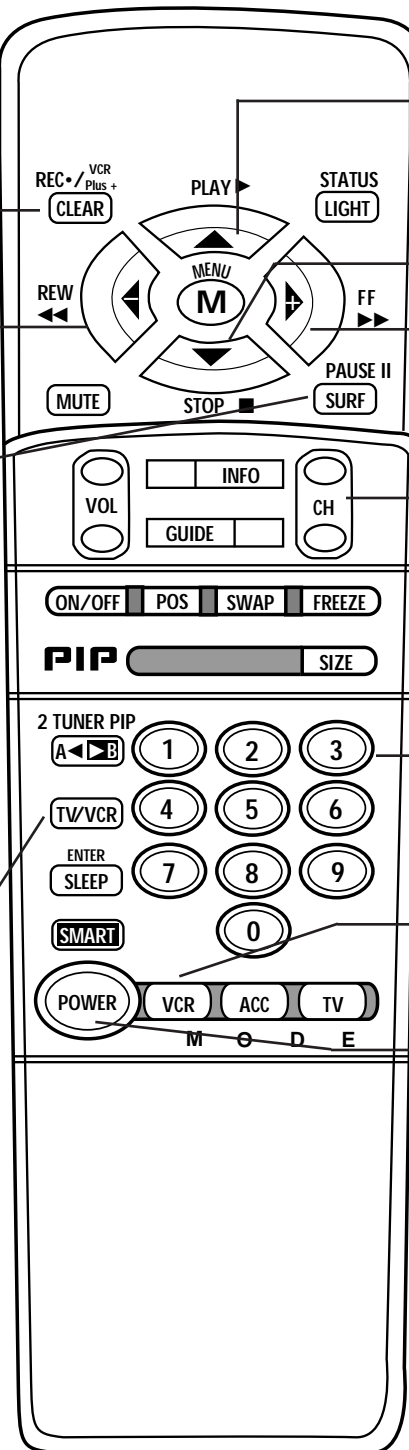

Play Button

Press to playback a tape. Hold down after pressing the RECORD button to start a recording.

Stop Button

Press to stop the tape.

Fast Forward Button

Press to rapidly advance the tape. For some VCRs you may need to press STOP first then FF. In Playback mode hold button down to view the picture moving rapidly in the forward direction.

Channel Scan Buttons

Press to scan up or down through VCR channel numbers.

Number Buttons

Press buttons for direct VCR channel selections.

VCR System Button

Press to send remote commands to the VCR.

Power Button

Press to turn the VCR ON and OFF.

SMART HELP



Remember, the VCR buttons on the remote will not operate your VCR if those features are not already found on your VCR remote control.

Note: All VCR functions (particularly Search, Rewind, Fast Forward, etc.) will operate the same as with the original VCR remote control provided with the VCR.

HOW TO USE THE PICTURE-IN-PICTURE (PIP) FEATURE

Picture-in-Picture (PIP) is the showing of two pictures on the TV screen at the same time. (One main screen picture and one small inset picture - or PIP). For your ease and convenience this TV has two separate inputs (ANTenna A and ANTenna B) for your home's Antenna and/or Cable TV system signal.

The ANT A input is primarily for the TV's main screen picture.

The ANT B input is provided as a second, dedicated source option for the TV's PIP "window" and its feature operations. The signal connected to the ANT B input can be either a Split Signal Input (as described in the section on this page), or another type of external signal source (such as a satellite dish system, additional home antenna, video accessory, etc.).

See the following steps on how channels connected to the ANT(enna) B Input can be shown and used within the PIP window:

BEGIN

1 Connect your Antenna or Cable TV signal to the single 75 ohm INPUT plug on a two-way Signal Splitter (not supplied).

Connect two lengths of RF Coaxial Cable (F-type connectors on both ends) to the two OUTPUT plugs on the two-way Signal Splitter.

2 Connect the twin OUTPUT plugs on the Signal Splitter to the ANT A and ANT B Inputs on the rear of the TV.

continue to next page


SMART HELP




For other possible PIP connections see page 53 for the "More PIP Connections" section.

If you need any accessories or parts to complete the described PIP connections, contact your dealer, or our Parts Information Center at (1-800-851-8885) for details.

- MAIN SCREEN -
Display signal supplied primarily through ANT A Input on rear of TV.

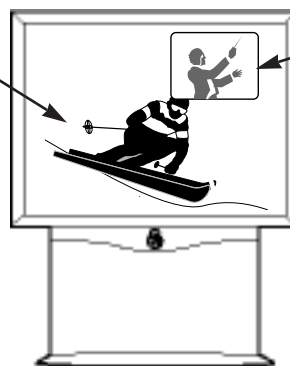

- PIP WINDOW -
Display signal supplied primarily through ANT B Input on rear of TV.

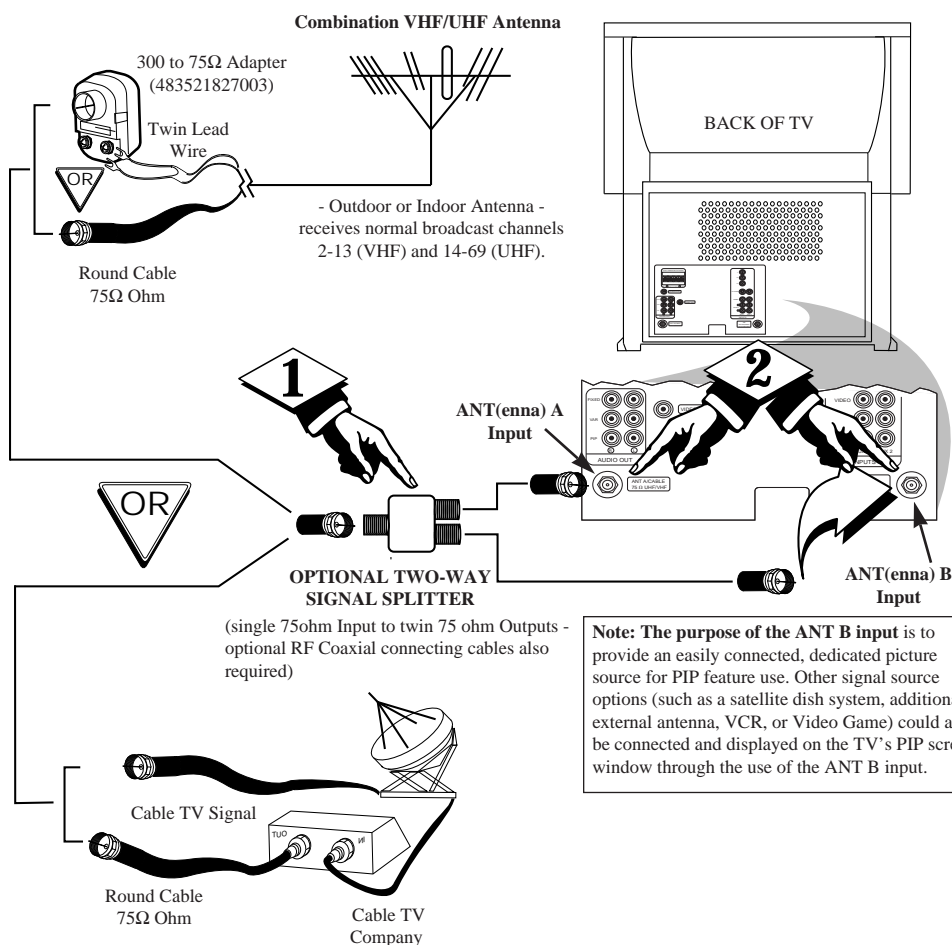

Note: The purpose of the ANT B input is to provide an easily connected, dedicated picture source for PIP feature use. Other signal source options (such as a satellite dish system, additional external antenna, VCR, or Video Game) could also be connected and displayed on the TV's PIP screen window through the use of the ANT B input.

See the Set-Up Guide also provided with your TV set for further Cable TV connection options and accessories.



Now that you have completed the required connections on the previous page you are ready to follow the simple steps shown below.

3 Turn the TV ON.

Place the TV's PIP SOURCE SELECT control to "ANT B"-

- With FEATURES MENU (4 of 5) on screen, move the RED highlight with the MENU (M) buttons. Then press the MENU button.
- Press the MENU ▲▼ and MENU (M) buttons to highlight and select the ANT B" (✓) item.

Also place the TV's Main screen PICTURE SOURCE SELECT control to "ANT A"-

- See the Picture Source option FEATURES MENU (1 of 5).


Press the STATUS button to clear the screen when the above Menu items have been set.

4 Press the PIP ON/OFF button on the remote.


The PIP window should show in one of the corners of the TV screen.

5 Press the SWAP (or A◀▶B) buttons on the remote to move the ANT B and ANT A Input pictures between the PIP window and Main screen.

Use the Channel Number or CH ▲▼ buttons to select desired programs for viewing. Program Sound occurs with the channels displayed on the Main screen.

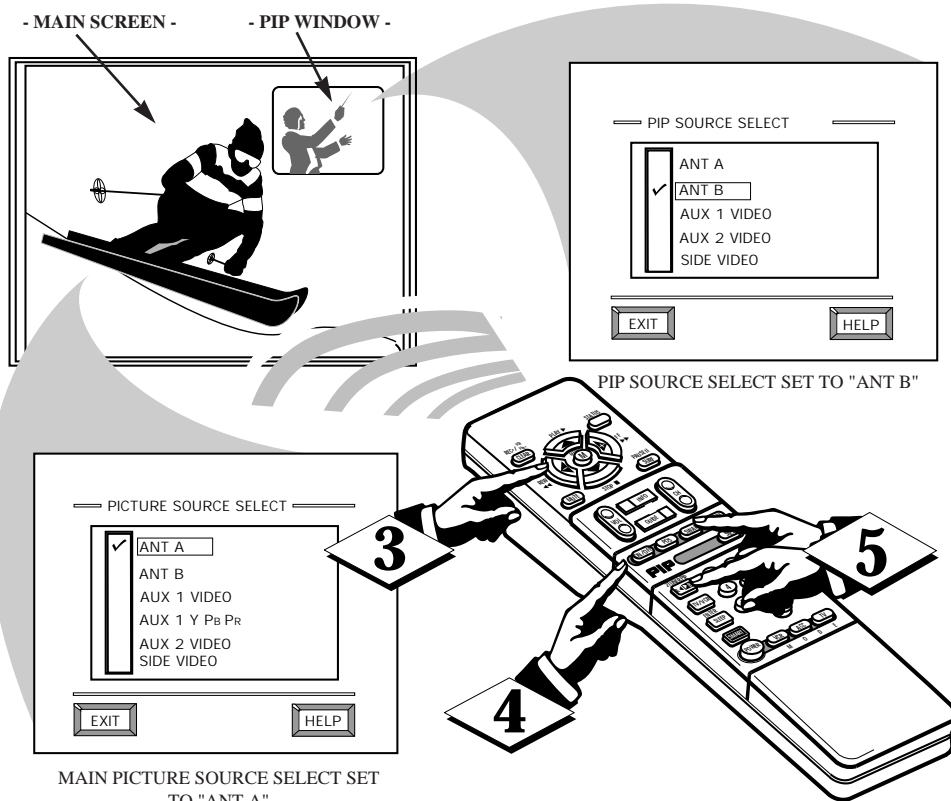


BLACK frame around the PIP window appears when the ANT A Input is on the Main screen.

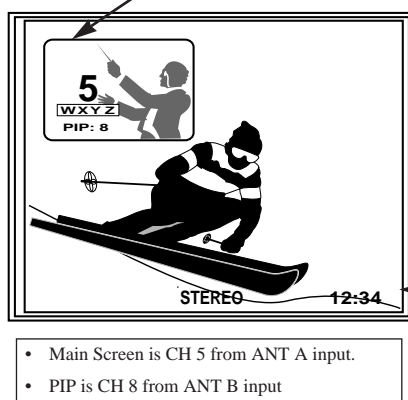

PRESS

SWAP

WHITE frame around the PIP window appears when the ANT B Input is on the Main screen.

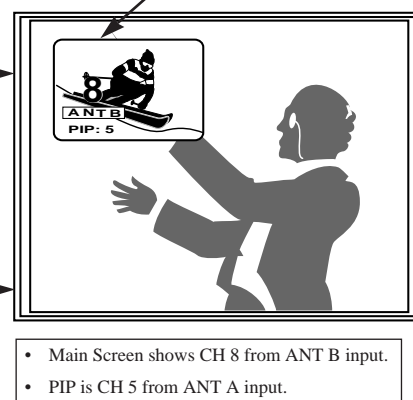

PRESS
2 TUNER PIP


A◀▶B
on remote then
adjust channels
with CH▲▼ or
Number buttons

SMART HELP



Remember, if you see the same picture on the main screen and in the PIP window, check to be sure the TV's PIP Source Select and Main screen Picture Source select are set for ANT B and ANT A respectively. See the following page on how to operate other PIP features with the TV's remote control.

NOTE: Sound for TV programs displayed in the PIP window can also be heard through the use of PIP AUDIO OUT jacks on the rear of the TV. Just connect the TV's Left/Right PIP AUDIO OUTPUTS to the correct AUX(iliary) Inputs on an external stereo sound system (through which the PIP audio will be played).

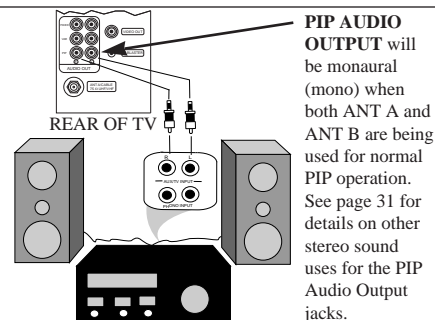



USING PIP WITH THE REMOTE CONTROL

By using the PIP buttons on the remote the PIP picture can be moved and swapped with the main screen. The main screen picture can also be frozen in the PIP window.

BEGIN

- 1 Press the **PIP ON/OFF** button to show the PIP picture.

PIP appears in a corner of TV screen. Press PIP ON/OFF again to remove PIP from the main screen.

- 2 Press the **PIP POSITION** button to move the PIP picture (from corner-to-corner on the TV screen.)

This feature allows you to move PIP and avoid blocking off any main screen action.

- 3 With PIP on the TV screen, press the **SWAP** button to swap the main screen picture with the PIP picture. See "Smart Help" note on this page.

- 4 Press **FREEZE** to hold the current MAIN screen picture in the PIP window (Main picture is still active).

If PIP is currently OFF, the PIP window will automatically appear.

Press FRZ repeatedly to update the frozen PIP with current pictures from the Main screen.


You cannot reposition a frozen PIP picture.

Press the PIP ON/OFF button to drop the frozen PIP picture from the screen.

- 5 Press the **PIP SIZE** button to change the size of the PIP window shown on the TV screen.

Press the PIP SIZE button again to see and compare the large and small size PIP windows.

You cannot change the size of a frozen PIP picture.

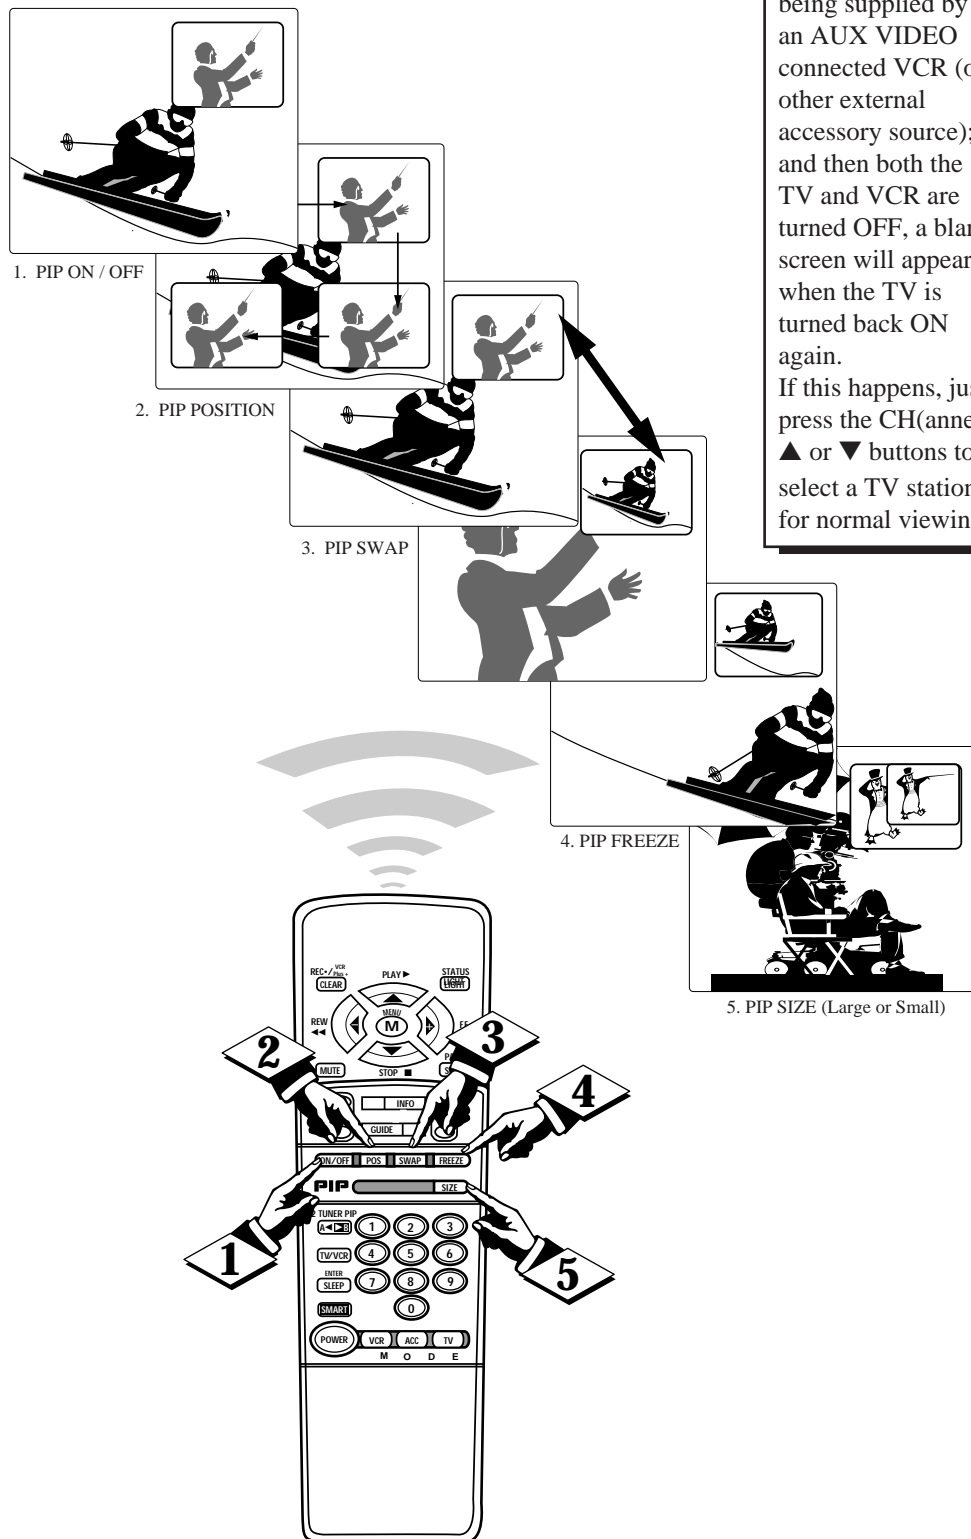

SMART HELP



Remember, if the TV's Main screen picture is being supplied by an AUX VIDEO connected VCR (or other external accessory source); and then both the TV and VCR are turned OFF, a blank screen will appear when the TV is turned back ON again.

If this happens, just press the CH(annel) ▲ or ▼ buttons to select a TV station for normal viewing.



PIP SOURCE

The picture for the PIP window can come through either the ANT(enna) A / B Inputs or the AUX Video Inputs (on the rear and side of the TV). PIP Picture Source simply tells the TV which one of these sources it is to show in the PIP window.

(BEGIN)

1 Select PIP SOURCE control.

With FEATURES MENU (4 of 5) on screen, move the RED highlight with the MENU (M) buttons. Then press the MENU button.

2 Press the MENU and MENU (M) buttons to highlight and select the desired (✓) PIP Picture Source.

ANT A or B- for a picture signal coming from either the ANT(enna) A or B Input plug on the TV.

Note: The remote control's button can also be used to quickly swap between the picture sources for the TV's Main screen and the PIP window.

AUX 1 VIDEO - for a picture signal coming from the AUX 1 VIDEO IN jack on the rear of the TV.

AUX 2 VIDEO- for a picture signal coming from the AUX 2 VIDEO IN jack on the rear of the TV.

SIDE VIDEO- for a picture signal coming from the SIDE VIDEO Input jack on the right side of the TV cabinet.

3 Press the STATUS button to clear the screen.










SMART HELP



Remember, the PIP window will be blank unless a signal is connected to the selected PIP Picture Source (ANT B, AUX VIDEO, SIDE VIDEO, etc.) on the set.

If you see the same picture on the main screen and in the PIP window, you may have the Main Screen and PIP window set to the same video input source.

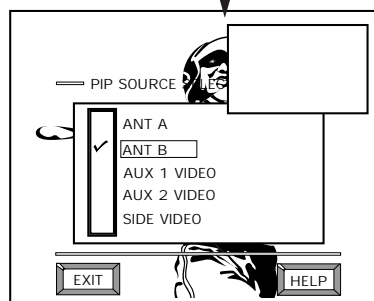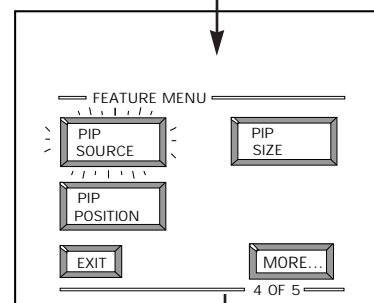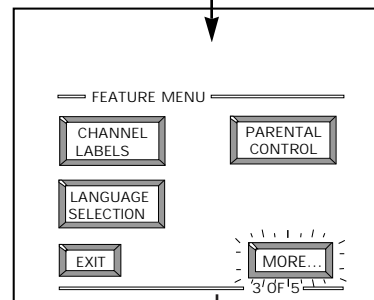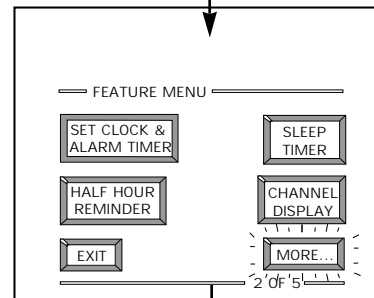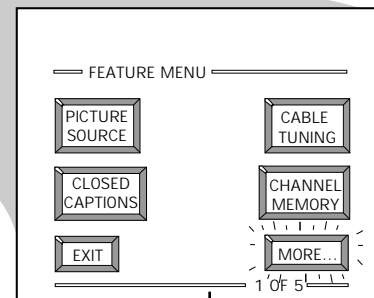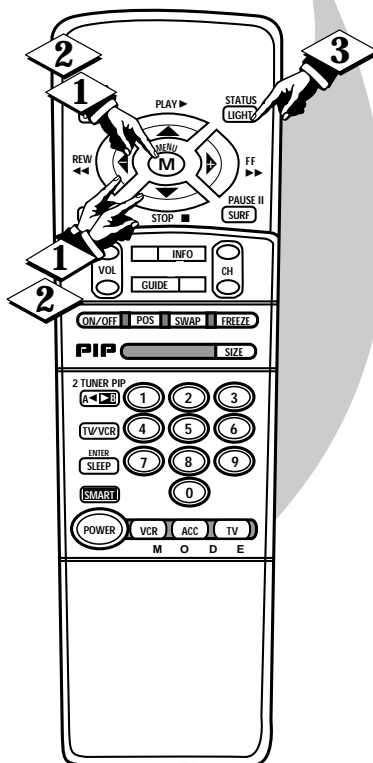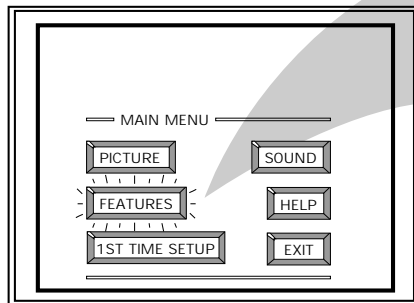

PIP COLOR / PIP TINT

The Picture-In-Picture (PIP) Color and Tint controls are used to make fine tune adjustments to the color settings for PIP (when it is shown on the TV screen).

BEGIN

1 Select PIP COLOR (or PIP TINT) control.

With FEATURES MENU (5 of 5) on screen, move the RED highlight with the MENU (M) and arrow buttons. Then press the MENU button.

2 Press the MENU \blacktriangle \blacktriangledown buttons to move the RED highlight. Press the MENU button to turn (✓) the PIP COLOR or TINT control ON.

The PIP automatically comes on to show the PIP window on the TV screen.


3 Press the (+) and (-) buttons to adjust the PIP for Color (or Tint) levels you prefer.

4 Press the STATUS button to clear the screen.



SMART HELP

Remember. Although there are separate COLOR and TINT controls for PIP, the adjustment levels for these controls depend on the TV's main picture. For example: If the main screen is showing a black and white picture, PIP would also be in black and white (even though its source is in color).

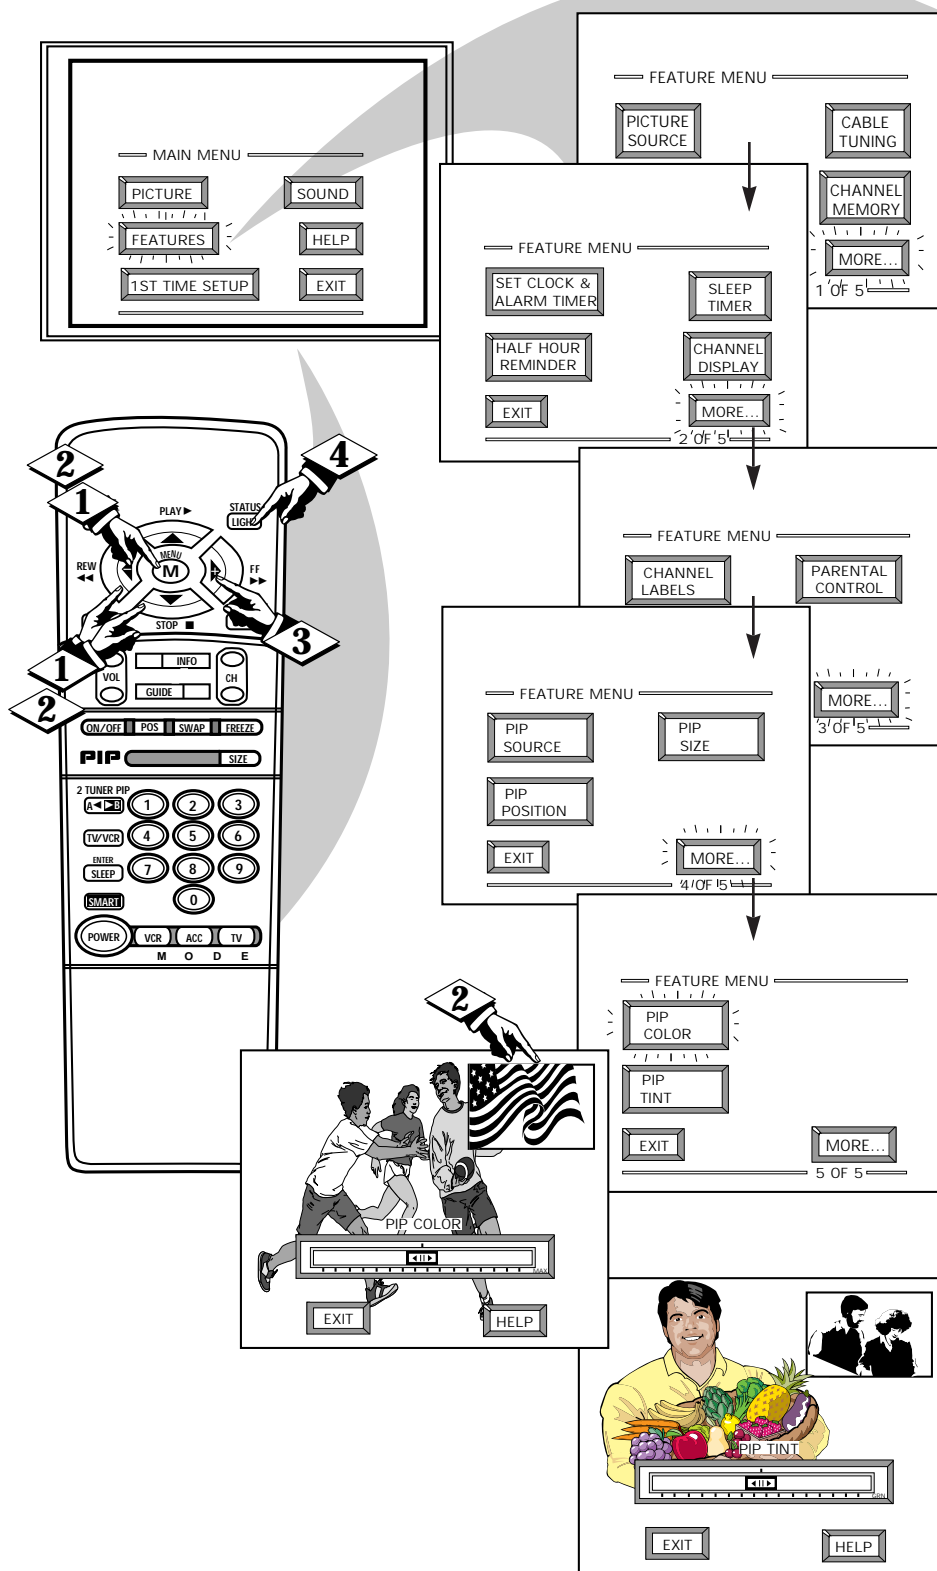



The following example is for an alternative PIP hookup using an external Cable Converter Box and a VCR (as the picture source for the PIP window).

BEGIN

1 First use an optional signal splitter and connect the original cable TV signal to both the CABLE IN on the Cable Converter and the ANTENNA A plug on the rear of the TV.

2 Connect the CABLE OUT on the Converter to the ANT. IN on the VCR.

3 Connect the VIDEO OUT jack on the VCR to the VIDEO IN jack on the TV.


Also connect the AUDIO OUT (R and L) jacks from the VCR to the AUDIO IN jacks on the TV.



SMART HELP




Remember to use the Cable TV Converter Box to select channels for PIP, the VCR must be set to the same channel as the channel selection switch on the rear of the Cable Converter (either channel 3 or 4).

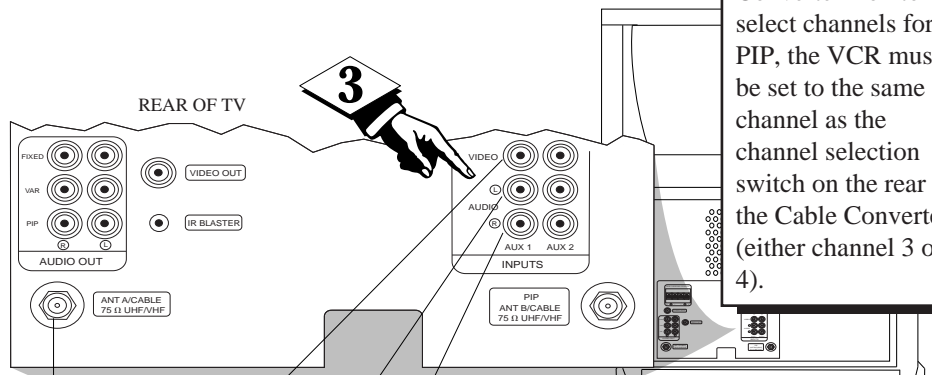


The ANTENNA A signal input supplies the TV's Main screen picture, and the AUX 1 VIDEO Input connection from the VCR serves as the picture source for PIP. Be sure to set the TV's PIP SOURCE SELECT control to the "AUX 1 VIDEO" mode in order to display the Audio/Video Input signals within the PIP window.


AUDIO VIDEO CABLES
(RCA Plug Cables - optional)

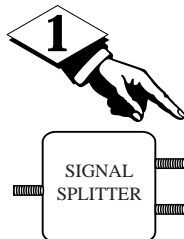

Contact the Parts Information Center 1 800 851-8885 to order any optional accessories

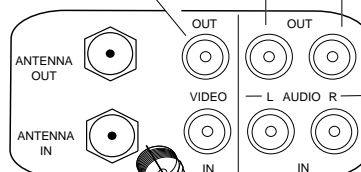

VCR

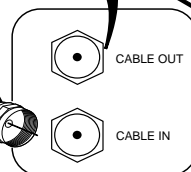


CABLE TV CONVERTER




The on screen **HELP** menu offers both *Operating Tips* and a list of *Glossary* definitions for different features on your TV. These items are given to provide you with more information and details on a select group of feature operations.





BEGIN

- 1 Select "**HELP**" on the TV's Main Menu.

Press the remote's Menu  buttons to move UP/DOWN and from SIDE-TO-SIDE within the list of on-screen features.

Press **MENU (M)** to select the highlighted "**HELP**" item.

- 2 Press the **MENU**  and then the **MENU (M)** buttons to select either the **OPERATING TIPS** or **GLOSSARY** item.

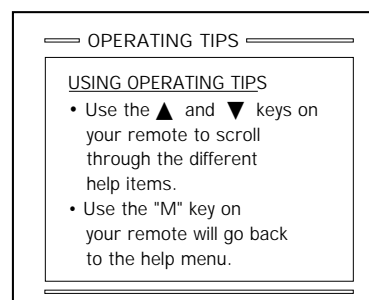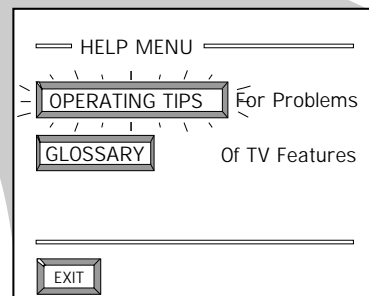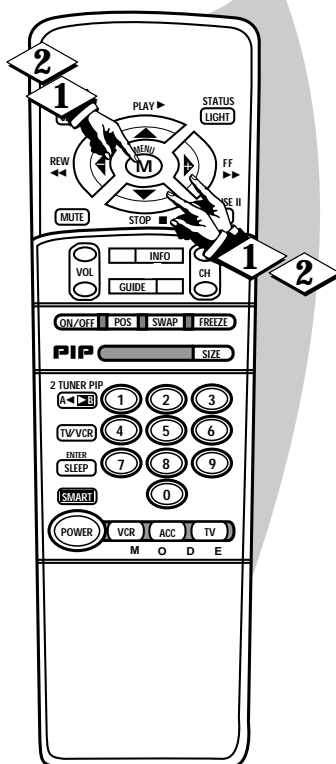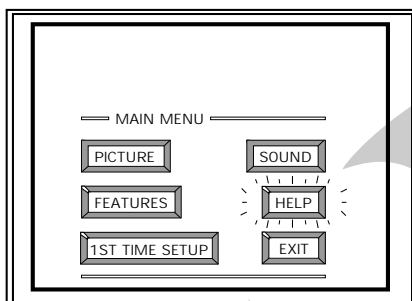

FOLLOW THE ON SCREEN DIRECTIONS TO VIEW OPERATING TIPS



Please make these simple checks before calling for service. These tips can save you time and money since charges for TV installation and adjustment of customer controls are not covered under your warranty.

No Power

- Check the TV power cord. Unplug the TV, wait 1 minute, then reinsert plug into outlet and push POWER button again.
- Check to be sure outlet is not on a wall switch.

No Picture

- Check antenna connections on the rear of the TV. Are they properly secured to the antenna plug on the TV?
- Check the CABLE TUNING control for correct position.
- Check PICTURE SOURCE control for correct position ANT A or B; AUX 1/2 VIDEO; AUX Y Pb Pr; or SIDE VIDEO position without a signal source will result in a blank screen.
- Check the CLOSED CAPTIONS control. Some TEXT modes could block the screen.

No Sound

- Check the VOLUME and MUTE buttons on the TV and remote.
- Check the TV SPEAKER NORMAL/OFF sound control for the correct position.
- If attempting auxiliary equipment hook-ups, check audio jack connections and that the auxiliary equipment is on and in the proper operating modes.

Remote Does Not Work

- Check VCR-ACC-TV "System" buttons on the remote. Press the remote's TV System button to send commands to the TV; VCR System to sent to VCR; etc.
- Check batteries. Replace with AA Heavy Duty (Zinc Chloride) or Alkaline batteries if necessary.
- Clean the remote and the remote sensor window on the TV.

TV Displays Wrong Channel or No Channels Above 13

- Repeat channel selection.
- Add desired channel numbers (ADD/DELETE CHANNELS control) into TV memory.
- Check CABLE TUNING control for correct position.

This TV is equipped with protective circuitry that shuts the TV off in case of moderate power surges. Should this occur turn the TV back on by pressing the POWER button once or twice, or unplug and then replug the power cord at the AC outlet. This feature is NOT designed to prevent damage due to high power surges such as those caused by lightning, which is not covered by your warranty.

Cleaning and Care

- To avoid possible shock hazard be sure the TV is unplugged from the electrical outlet before cleaning.
- When cleaning the TV screen take care not to scratch or damage the screen surface (avoid wearing jewelry or using anything abrasive- do not use household cleaners). Wipe the front screen with a clean cloth dampened with water. Use even, easy, vertical strokes when cleaning.
- Specially designed screen cleaning kits are also available which contain anti-static cleaners and cloths designed to get into the ridges of the TV screen. If interested, ask your dealer about an optional Projection TV Screen Cleaning Kit or call our toll-free Accessory Parts ordering number 1-800-851-8885.
- Gently wipe the cabinet surfaces with a clean cloth or sponge dampened in a solution of cool clear water and a mild soap or detergent. Use a clean dry cloth to dry the wiped surfaces.
- Occasionally vacuum the ventilation holes or slots in the cabinet back.
- Never use thinners, insecticide sprays, or other chemicals on or near the cabinet, as they might cause permanent marring of the cabinet finish.



Audio/Video Inputs * Located on the rear of the TV these connectors (RCA phono type plug) are used for the input of audio and video signals. Designed for use with VCRs (or other accessories) in order to receive higher picture resolution and offer sound connection options.

Coaxial Cable * A single solid antenna wire normally matched with a metal plug (F-type) end connector that screws (or pushes) directly onto a 75 Ohm input found on the Television or VCR.

Display * An on screen message or graphics that help the user operate and adjust TV feature controls. See On Screen Displays (OSD).

Identify * Method by which a remote control searches and finds an operating code for another product (such as a VCR or Cable Converter). Once the code has been "identified" then the TV remote can operate and send commands to the other product.

LED * Light Emitting Diode or indicator.

Menu * An on-screen listing of feature controls shown on the TV screen that are made available for user adjustments.

Multichannel Television Sound (MTS) * The broadcast standard that allows for stereo sound to be transmitted with the TV picture.

On Screen Displays (OSD) * Refers to the wording or messages generated by the TV to help the user with specific feature controls (color adjustment, programming, etc.).

Picture -In-Picture (PIP) * Term used when two pictures are shown on the TV screen at the same time. The smaller PIP picture is supplied by a VCR (or other tuner/video playback source). The PIP picture can also be moved and swapped with the TV's main screen picture.

Pre-Amplifier * The control center of a hi-fi system. Not only amplifies source inputs, but also allows for source selection, volume, tone, balance and all other controls that affect the sound.

Programming * The procedure of adding or deleting channel numbers into the TV's memory circuits. In this way the TV "remembers" only the locally available or desired channel numbers and skips over any unwanted channel numbers.

PTV * Projection Television (Rear and/or Front projection design systems are available.)

Remote Sensor Window * A window or opening found on the TV control panel through which infrared remote control command signals are received.

RF * Radio Frequency or modulated signal design used as the carrier for television broadcasts.

Second Audio Program (SAP) * Another or additional audio channel provided for in the Multichannel Television Sound (MTS) broadcast standard. A monaural soundtrack included within the recorded or video signal (usually containing a second language translation for the displayed programming.)

Status * Allows the user to quickly confirm what channel number is currently being viewed. Status can also be used to clear the TV of on-screen displays or information (rather than waiting for the displays to "time out" or automatically disappear from the screen).

Subwoofer * A speaker designed for audio playback of only the lowest-frequency notes (under 100 Hz.)

S-Video Input * Allows direct connection of high-resolution video sources, such as a Super VHS videocassette recorder, Laser Disc player, etc. Provides improved picture resolution, sharpness, and clarity.

Twin Lead Wire * The more commonly used name for the two strand 300 Ohm antenna wire used with many indoor and outdoor antenna systems. In many cases this type of antenna wire requires an additional adapter (or balun) in order to connect to the 75 Ohm Input terminals designed into the more recent Televisions and VCRs.

Variable Audio Output * An adjustable audio output which allows for volume variations at the source.




Accessories/Optional.....	31-37, 48, 53, *Q/U-1	Parental Guidelines	23
Add/Delete Channels	13-14, *Q/U-2	Picture-In-Picture (PIP).....	48-53, *Q/U-2
Audio Controls	27-32	PIP Audio Output jacks	31, 49
Audio/Video Input	33-37, 48, 53, *Q/U-2	Picture Source Control.....	10, 51
Automatic Programming	13, *Q/U-2	Precautions/Safety	2, 3, 55, *Q/U-1
Battery Installation	*Q/U-3	Programming Channels	13, *Q/U-2
Blocking Channels	19-20	Remote Control	38-47, 50, *Q/U-2, 3, 4
Cable TV Connections/Settings	12, 48, 53 *Q/U-1, 2	Remote with VCRs.....	42-47
Channel/Time Display.....	15, 16, 18, *Q/U-3	Requesting Service	55, 58-59, 60
Channel Label.....	25	RF Coaxial Cable	48, 53, *Q/U-1
Channel Memory.....	13-14, *Q/U-2	Reminder/Time and Channel.....	18
Channel/Time Reminder.....	18	Safety/Precautions	2, 3, 55, *Q/U-1
Clock Setting	15	Second Audio Program (SAP).....	28
Clock Timer	16	Sensor Remote.....	*Q/U-3
Closed Captioning	11	Sleep Timer.....	17
Color Controls	6, *Q/U-4	Smart Picture	38-39
Content Advisory.....	21	Smart Sound.....	40
Convergence	8	Smart Surf.....	41
Controls/TV	*Q/U-2, 3, 4	Surround Sound	32
Controls/Remote	38-47, 50, *Q/U-2, 3, 4	Speaker Terminals	32
Exit	*Q/U-4	Time/Channel Display	18, *Q/U-3
Features.....	5	Timer (Turn On)	16
First Time Set Up	*Q/U-2	Variable Audio Output	32
Help Menu	54, *Q/U-2, 4	VCR Button.....	33, 47, *Q/U-3
Inputs/Audio and Video	33-36, 48, 53	VCR/TV Connections	33-37, 48, 53, *Q/U-1
Language.....	26	Tips for Service	55, 58-59
Menu.....	*Q/U-2, 4	TV Speaker Control.....	31
Minus(-)/Plus (+) Buttons.....	*Q/U-3, 4	Volume Display	30
Movie Ratings.....	21	Warranty	60
Parental Control.....	19-24		

* Q/U indicates page number reference in the separate Quick Use Guide

Philips Consumer Electronics Company

Factory Service Center Locations

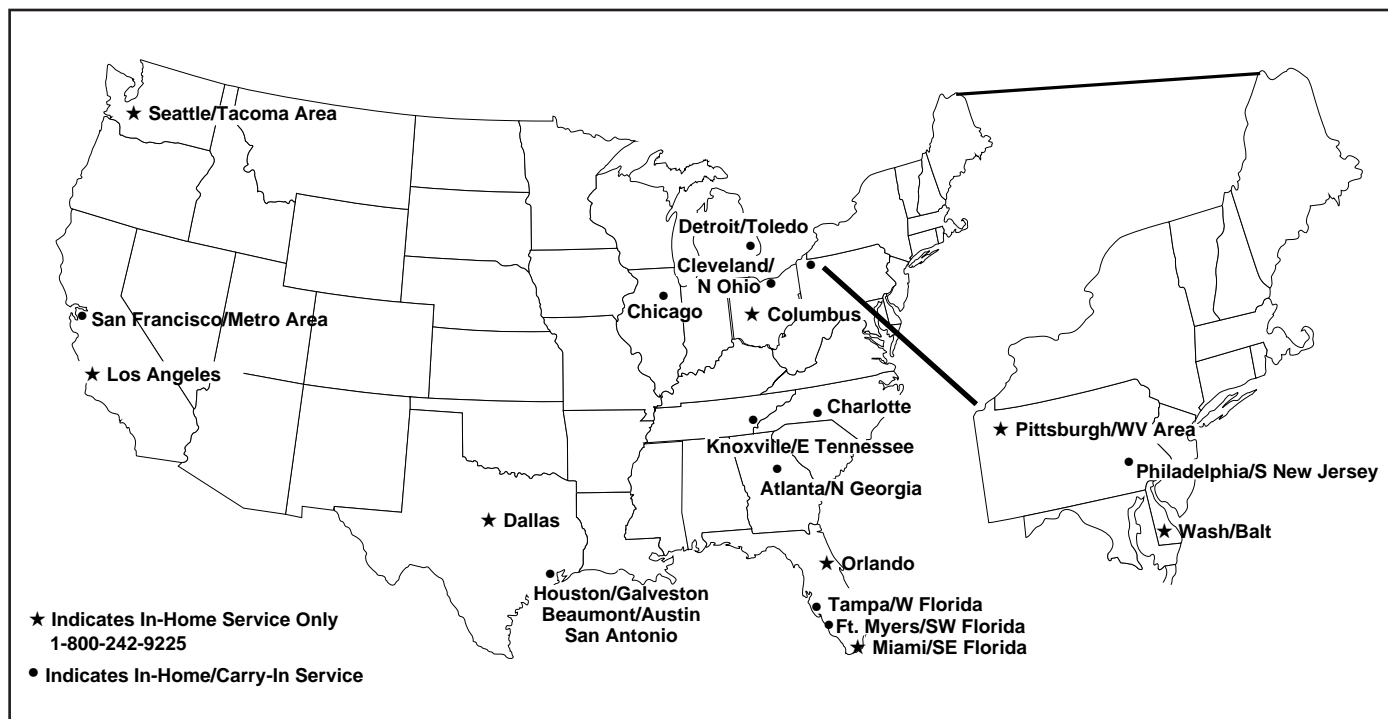

NOTE: If you reside in one of our Philips Factory Service Branch areas (see directory on back), you can contact the nearest Service Branch to obtain efficient and expedient repair for your product. If your product is In-Warranty, you should have proof-of-purchase to ensure No Charge Service. For Out-of-Warranty service, call the location nearest you.

NOTA: Si vous résidez dans une des régions desservies par une succursale de service après vente du fabricant Philips (voir liste ci-dessous), vous pourrez contacter la branche de service après vente la plus près de chez vous pour obtenir un service après vente rapide et efficace. Si le produit est sous garantie, il suffira de présenter une preuve d'achat pour bénéficier d'un service sans frais. Pour les produits non couverts par la garantie, contactez le centre le plus près de chez vous.

NOTA: Si Ud. reside en una de nuestras zonas para sucursales Philips de servicio al de fábrica (ver directorio más abajo), Ud. puede comunicarse con la sucursal de servicio más cercana para obtener una reparación oportuna y eficaz de su producto. Si su producto está todavía bajo garantía, Ud. debe presentar comprobante de compra para no ocasionar ningunos cargos por servicio. Para servicio después del vencimiento de la garantía, llame al lugar más cercano de los abajo indicados.

In Canada

How you can obtain efficient and expedient carry-in, mail-in, or in-home service for your product

Please contact Philips at
1-800-661-6162 (French speaking)
1-800-363-7278 (English speaking)

Au Canada

Comment obtenir le service après-vente pour les produits apportés ou envoyés par la poste à notre centre de service ou le service à domicile

Veuillez contacter philips à:
1-800-661-6162 (Francophone)
1-800-363-7278

En el Canadá

Cómo recibir servicio eficiente para su producto, en persona, por correo o a domicilio

Favor de comunicarse con Philips al:
1-800-661-6162 (francófono)
1-800-363-7278 (anglófono)

QUALITY SERVICE IS AS CLOSE AS YOUR TELEPHONE! SIMPLY LOOK OVER THE LIST BELOW FOR THE NUMBER OF A FACTORY SERVICE CENTER NEAR YOU. YOUR PRODUCT WILL RECEIVE EFFICIENT AND EXPEDIENT CARRY-IN, MAIL-IN, OR IN-HOME SERVICE, AND YOU WILL RECEIVE PEACE OF MIND, KNOWING YOUR PRODUCT IS BEING GIVEN THE EXPERT ATTENTION OF PHILIPS' FACTORY SERVICE. AND, IF THE PHONE NUMBER LISTED FOR YOUR AREA IS LONG DISTANCE, CALL 1-800-242-9225 FOR FACTORY SERVICE.

COMMENT OBTENIR NOTRE SERVICE APRÈS VENTE RAPIDE ET EFFICACE SOIT PAR COURRIER, À DOMICILE, OU EN SE PRÉSENTANT À UN CENTRE DE SERVICE PHILIPS. PLUS DE 600 CENTRES DE RÉCEPTION DE PRODUITS À RÉPARER À TRAVERS LE PAYS: CONTACTER LE CENTRE DE SERVICE AUX CONSOMMATEURS LE PLUS PROCHE POUR SAVOIR L'EMPLACEMENT DE CES DÉPÔTS DANS UN RAYON DE 50 À 75 MILES (80 KM À 120 KM) DU CENTRE DE SERVICE LOCAL.

CÓMO OBTENER UN SERVICIO OPORTUNO Y EFICIENTE POR CORREO, EN CASA O EN PERSONA PARA SU PRODUCTO A TRAVÉS DE UN CENTRO PHILIPS DE SERVICIO. MAS DE 600 SITIOS POR TODO EL PAIS PARA LA RECEPCION DE PRODUCTOS NECESITADOS DE REPARACIONES: COMUNICARSE CON EL CENTRO DE SERVICIO DE FABRICA MAS CERCANO PARA ESTOS LUGARES DENTRO DE UN RADIO DE 80 A 120 KM (50 A 75 MILLAS) DEL CENTRO DE SERVICIO LOCAL.

GEORGIA

Philips Factory Service of Georgia
200 N. Cobb Pkwy., Suite 120
Marietta, GA 30062
(770) 795-0085

FLORIDA

Philips Factory Service of Florida
1911 US Highway 301 North
Tampa, FL 33619
(813) 621-8181

WESTERN U.S.A.

Philips Factory Service Western Region
681 East Brokaw Rd.
San Jose, CA 95112
(408) 436-8566

TEXAS

Philips Factory Service of Texas
1110 N. Post Oak Rd., Suite 100
Houston, TX 77055
(713) 682-3990

CENTRAL U.S.A.

Philips Factory Service Central US
950 Keynote Circle
Brooklyn Heights, OH 44131
(216) 741-3334

MICHIGAN

Philips Factory Service of Michigan
25173 Dequindre
Madison Heights, MI 48071
(248) 544-2110

DALLAS AREA

Philips Factory Service of Dallas
415 N. Main Street, #107
Euless, TX 76040
(713) 682-3990

ILLINOIS

Philips Factory Service of Illinois
1279 W. Hamilton Pkwy.
Itasca, IL 60143
(630) 775-0990

TENNESSEE

Philips Factory Service of East Tennessee
6700 D Papermill Rd.
Knoxville, TN 37919
(423) 584-6614

MID-ATLANTIC

Philips Factory Service Mid-Atlantic
352 Dunks Ferry Rd.
Bensalem, PA 19020
(215) 638-7500

LIMITED WARRANTY

PROJECTION TELEVISION

One Year Free Labor

One Year Free Service on Parts

Two Years Free Service on Cathode Ray Tube Parts / 30 days Free Service on Projection TV Screen

This product can be repaired in-home.

WHO IS COVERED?

You must have proof of purchase to receive warranty service. A sales receipt or other document showing that you purchased the product is considered proof of purchase.

WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For one year thereafter (30 days for the projection TV screen), all parts will be repaired or replaced, and labor and transportation are free. From one to two years from the day of purchase, you pay for the replacement or repair of all parts except the cathode ray tube and the "Clear-Vu" lens, and for all labor and transportation charges. After two years from the day of purchase, you pay for the replacement or repair of all parts except the "Clear-Vu" lens (which is guaranteed against manufacturer's defects for the life of the product), and for all labor and transportation charges.

All parts, including repaired and replaced parts, are covered only for the original warranty period. When the warranty on the product expires, the warranty on all replaced and repaired parts also expires.

WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- a product used for commercial or institutional purposes.

WHERE IS SERVICE AVAILABLE?

Warranty service is available in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does not distribute the product, the local Philips service organization will attempt to provide service (although there may be a delay if the appropriate spare parts and technical manual(s) are not readily available).

MAKE SURE YOU KEEP...

Please keep your sales receipt or other document showing proof of purchase. Attach it to this owner's manual and keep both nearby. Also keep the original box and packing material in case you need to return your product.

BEFORE REQUESTING SERVICE...

Please check your owner's manual before requesting service. Adjustments of the controls discussed there may save you a service call.

TO GET WARRANTY SERVICE...

Repair must be performed by an authorized service center or a factory service center. *If you do not live near a factory service center, contact your dealer.* If your dealer is an authorized service center, he will arrange repair. If your dealer is not an authorized service center, he will direct you to the authorized service center engaged by him to service the products he sells.

(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

(In Canada, this warranty is given in lieu of all other warranties. No other warranties are expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. Philips is not liable under any circumstances for any direct, indirect, special, incidental or consequential damages, howsoever incurred, even if notified of the possibility of such damages.)

IF YOU HAVE QUESTIONS...

Please contact Philips at:

1-800-661-6162 (French Speaking)

1-800-363-7278 (English Speaking)

REMEMBER...

Please record the model and serial numbers found on the product below. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL # _____
SERIAL # _____



This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

Philips Service Company, P.O. Box 2976, Longview, Texas 75606, (903) 242-4800