

HW-C500
HW-C560S

AV Receiver System user manual

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service,
please register your product at
www.samsung.com/register



Safety information

SAFETY WARNINGS

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER(OR BACK). NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

WARNING

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.

CAUTION

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The Mains plug is used as a disconnect device and shall stay readily operable at any time.

This product satisfies FCC regulations when shielded cables and connectors are used to connect the unit to other equipment. To prevent electromagnetic interference with electric appliances, such as radios and televisions, use shielded cables and connectors for connections.

FCC NOTE (for U.S.A):

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution : FCC regulations state that any unauthorized changes or modifications to this equipment may void the user's authority to operate it.

IMPORTANT SAFETY INSTRUCTIONS

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth an uncontrolled environment.

This equipment should be installed and operated with minimum distance 7.9 inches between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Canadian Department of Communications Radio Interference Regulations

This digital apparatus (Wireless Internet Radio) does not exceed the Class B limits for radio-noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.



Read these operating instructions carefully before using the unit. Follow all the safety instructions listed below. Keep these operating instructions handy for future reference.

- 1) Read these instructions.
- 2) Keep these Instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachment/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.





Safety information

PRECAUTIONS

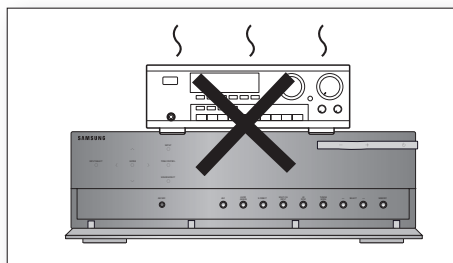
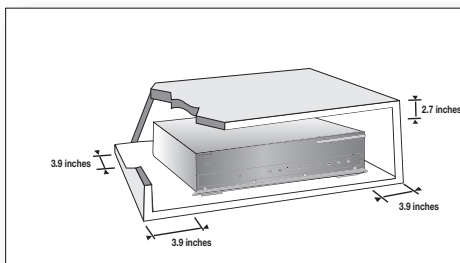


Ensure that the AC power supply in your house complies with the identification sticker located on the back of your player. Install your player horizontally, on a suitable base (furniture), with enough space around it for ventilation (3~4inches). Make sure the ventilation slots are not covered. Do not stack anything on top of the amplifier. In order to disconnect the player completely from the power supply, remove the AC plug from the wall outlet, especially when left unused for a long period of time.

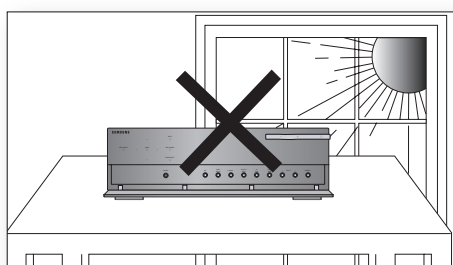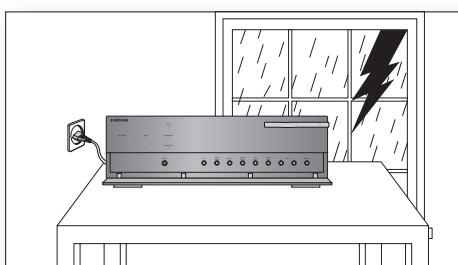

During thunderstorms, disconnect the AC plug from the wall outlet.
Voltage peaks due to lightning could damage the unit.

Do not expose the unit to direct sunlight or other heat sources.
This could lead to overheating and malfunction of the unit.

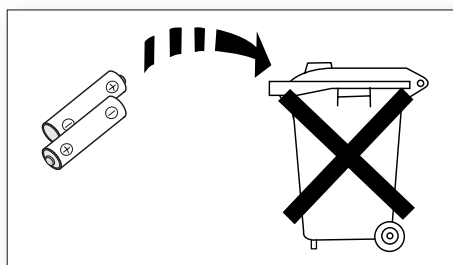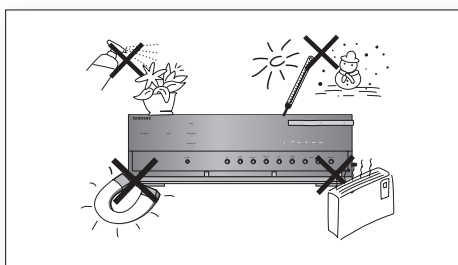

Protect the player from moisture (i.e. vases), and excess heat (e.g. fireplace) or equipment creating strong magnetic or electric fields (i.e. speakers...). Disconnect the power cable from the AC supply if the player malfunctions. Your player is not intended for industrial use.
Use of this product is for personal use only.
Condensation may occur if your player or disc have been stored in cold temperatures.
If transporting the player during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

The batteries used with this product contain chemicals that are harmful to the environment.
Do not dispose of batteries in the general household trash.

Features

Digital AV Receiver

This product is a pure digital AV receiver that performs digital signal processing to minimize signal distortion and loss.

Dolby Pro Logic II

DPL II processes any high quality stereo signal source into five separate full frequency channels.

DTS 96/24



DTS 96/24 encodes standard 16 bit/44.1 kHz sound to 24 bit/96kHz and applies it to a 5.1 CH sound track.

DTS (Digital Theater Systems)

DTS provides a discrete 5.1 CH digital audio signal for both music and movie contents and uses less compression than Dolby Digital for richer sound.

iPod



You can enjoy music files by connecting your iPod/iPhone to the AV Receiver with the supplied iPod dock.

SFE (Sound Field Effect) Using 32bit Audio Digital Signal Processing

Provides more realistic surround sound with normal stereo audio sources.

Anynet+ (HDMI-CEC) Function

Anynet+ is a function that can be used to operate this AV Receiver with a Samsung TV remote control, by connecting the receiver to a SAMSUNG TV using an HDMI Cable. (This function is available only in connection with Samsung TV and DVD player supporting Anynet+(HDMI-CEC).)

 
ACCESSORIES




Remote Control
(AH59-02305A)/
Batteries (AAA size)
(4301-000116)




FM antenna
(AH42-00017A)



User's manual
(AH68-02266R)

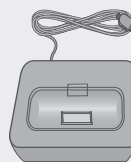

iPod Dock
(AH96-00051A)

 

ASC microphone
(AH30-00099A)

Contents

SAFETY INFORMATION

2

- 2 Safety Warnings
- 3 Important Safety Instructions
- 4 Precautions

FEATURES

5

- 5 Accessories

DESCRIPTION

8

- 8 Front Panel
- 10 Rear Panel
- 12 Display
- 13 Insert Remote Control Batteries
- 13 Operation Range of the Remote Control
- 14 Tour of the Remote Control

CONNECTIONS

16

- 16 Speaker Positioning
- 18 Connecting the Speakers
- 20 Connecting External Devices/Your TV via HDMI
- 21 HDMI Function
- 22 Connecting to your TV
- 23 Connecting a DVD or BD(Blu-ray) Player
- 24 Connecting a Cable, Satellite or Set-top Box
- 25 Connecting a CD Player
- 26 Connecting 5.1 Channel Devices
- 27 Connecting an iPod
- 28 Connecting the FM Antenna

BASIC FUNCTIONS OF YOUR AV RECEIVER

29

- 29 Before Using the AV Receiver
- 29 Audio Setup
- 30 Selecting Digital/Analog Input

SETUP

31

- 31 Setup Menu Tree
- 35 Setting the Speaker Size
- 36 Setting the Speaker Listening Distance
- 37 Setting the Speaker Level
- 38 Setting the Test Tone
- 39 Setting Dolby Pro Logic II Mode
- 39 Setting Dolby Pro Logic II
- 40 Setting Tone Control
- 41 AV SYNC
- 41 MP3 Enhancer
- 41 Smart Volume
- 42 ASC (Auto Sound Calibration) Setup
- 43 DRC Setup
- 43 HDMI Setup
- 43 Variable Set

OPERATION

44

- 44 Using the Surround Modes
- 45 Using the Subwoofer Selection Button
- 46 Listening to the Radio
- 47 Using an iPod
- 49 Convenient Functions
- 50 Software Upgrade

MISCELLANEOUS

51

- 51 Operating Your TV With the Remote Control
- 53 Operating your DVD or BD player with the remote control

TROUBLESHOOTING

54

- 54 Troubleshooting


APPENDIX

56

- 56 Specifications

Description

FRONT PANEL

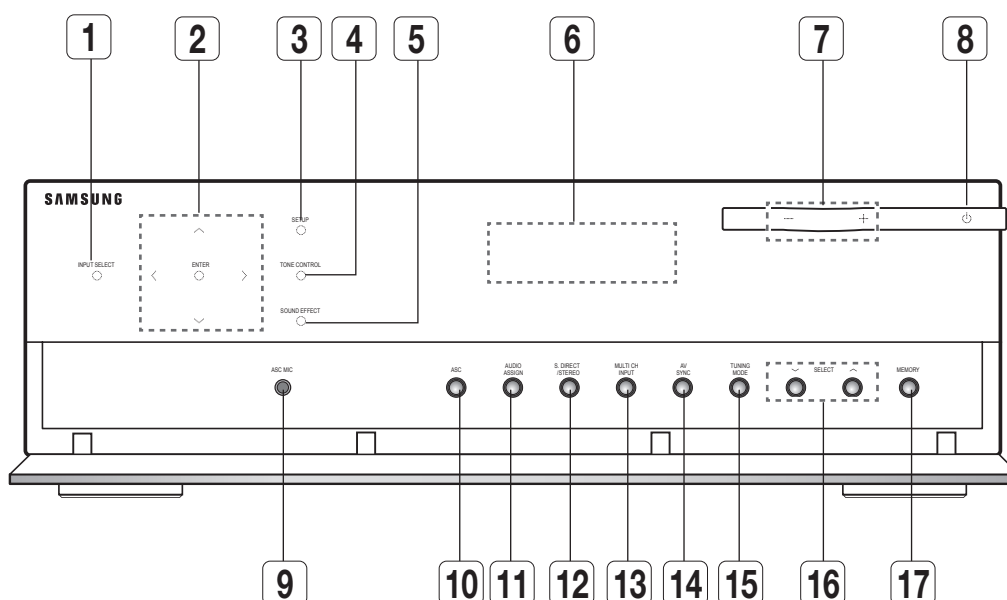


1	INPUT SELECT	Used to select a source. (FM → BD/DVD → SAT → TV → CD → AUX → 5.1 MULTI CH → IPOD AUDIO → IPOD VIDEO).
2	UP(▲), DOWN(▼), LEFT(◀), RIGHT(▶), ENTER	Used to move the cursor up, down, left or right and select an item in the SETUP menu. Also used to select detailed options in the SOUND EFFECT mode and to change the tone level.
3	SETUP	Displays the SETUP menu.
4	TONE CONTROL	Used to set the bass, treble level and tone to on/off.
5	SOUND EFFECT	Toggles to select a surround sound mode.
6	DISPLAY	Displays the speaker/audio input status, listening mode, etc
7	VOLUME CONTROL	Adjusts the volume level.
8	POWER	Turns the receiver on/off.
9	ASC MIC JACK	Used to connect the ASC MIC for setting up ASC (Auto Sound Calibration).

10	ASC BUTTON	Used to select the ASC(Auto Sound Calibration) mode.
11	AUDIO ASSIGN BUTTON	Toggles to select an input mode for the selected source.
12	S.DIRECT/STEREO BUTTON	Used to select the S.DIRECT or STEREO mode.
13	MULTI CH INPUT BUTTON	Used to select a connected 5.1 multi channel player.
14	AV SYNC BUTTON	Used to select the Audio Delay Mode.
15	TUNING MODE BUTTON	Used to select the Manual or Preset mode for FM radio.
16	SELECT BUTTON	Used to change the radio frequency.
17	MEMORY BUTTON	Used to set a preset radio frequency.


Description

REAR PANEL

< HW-C500 >

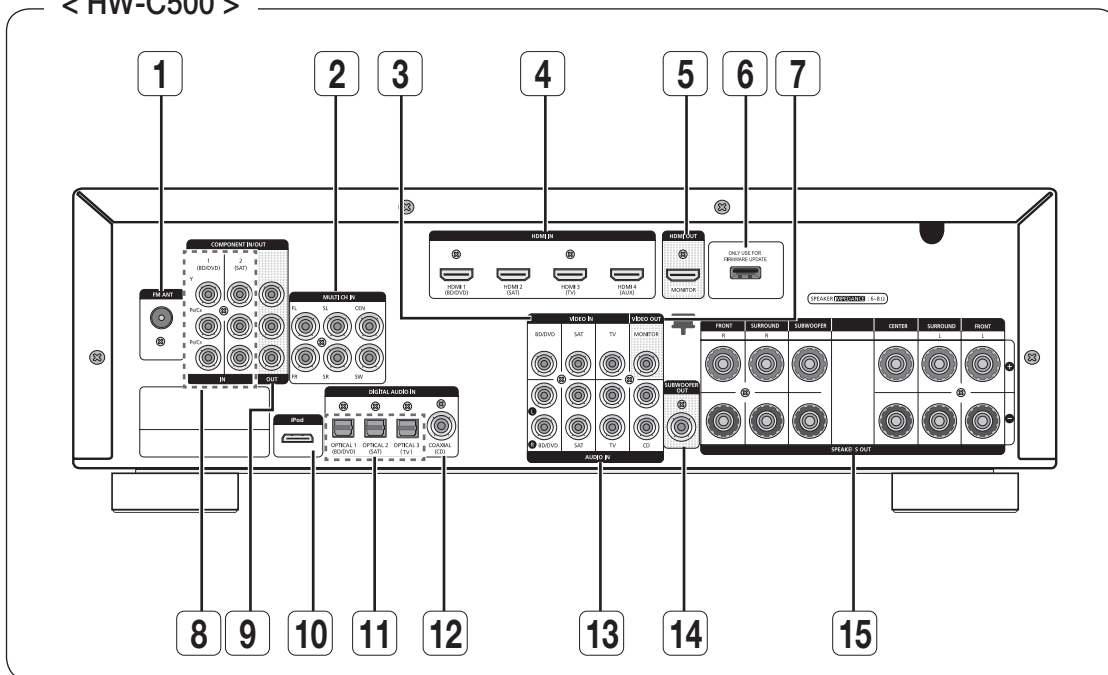

< HW-C560S >

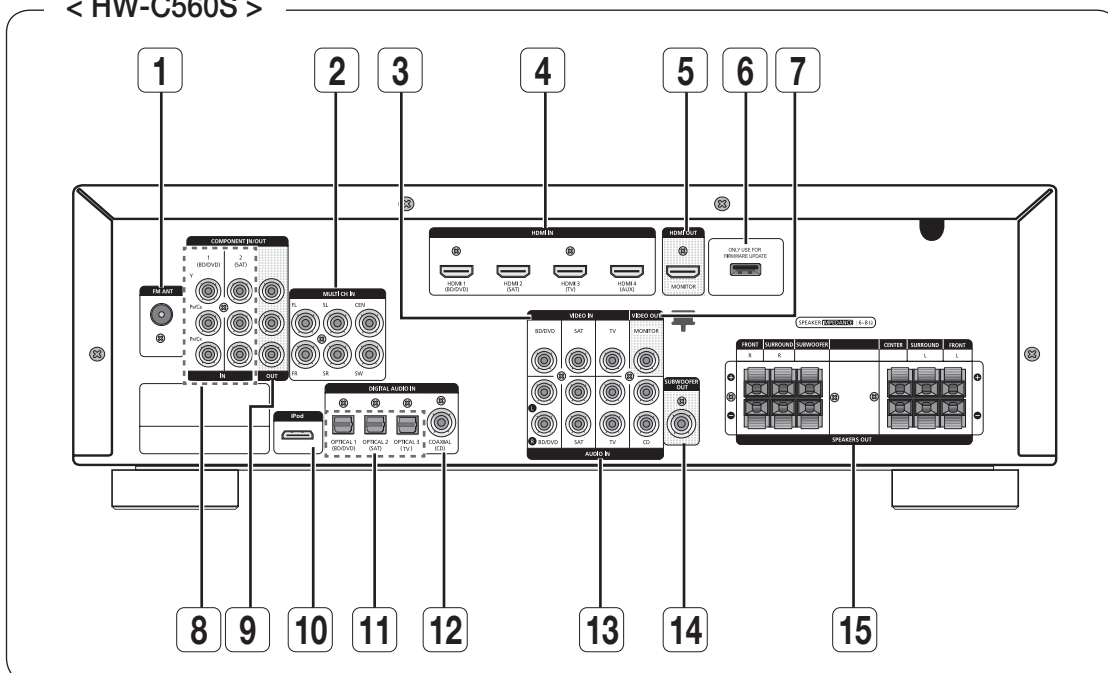


* All those pictures of the Rear panel are based on Model HW-C560S.

1	FM ANTENNA JACK	Connect the FM Antenna here.
2	MULTI CH IN JACKS	Receives the analog audio signal from an external player with a multi-channel port.
3	VIDEO IN JACKS	Receives the video signal from a video player (BD/DVD, SAT, TV).
4	HDMI IN JACKS	Receives digital video and audio signals simultaneously using an HDMI cable.
5	HDMI OUT JACK	Outputs digital video and audio signals simultaneously using an HDMI cable.
6	USB PORT	Can be only used for firmware upgrades.
7	VIDEO OUT JACK	Outputs the video signal to video devices (TV, Projector etc).
8	COMPONENT VIDEO IN JACKS	Receives the component video signal.
9	COMPONENT VIDEO OUT JACKS	Outputs the component video signal.
10	iPod JACK	Receives the audio/video signal from an iPod.
11	OPTICAL IN JACKS (DIGITAL AUDIO IN)	Receives the digital optical audio signal.
12	COAXIAL IN JACK (DIGITAL AUDIO IN)	Receives the digital coaxial audio signal.
13	AUDIO IN JACKS	Receives the audio signal from a video player (BD/DVD, SAT, TV, CD).
14	SUBWOOFER AUDIO OUT JACK	Connect the subwoofer.
15	SPEAKER OUT TERMINALS	Speaker connection terminals.

Description


DISPLAY

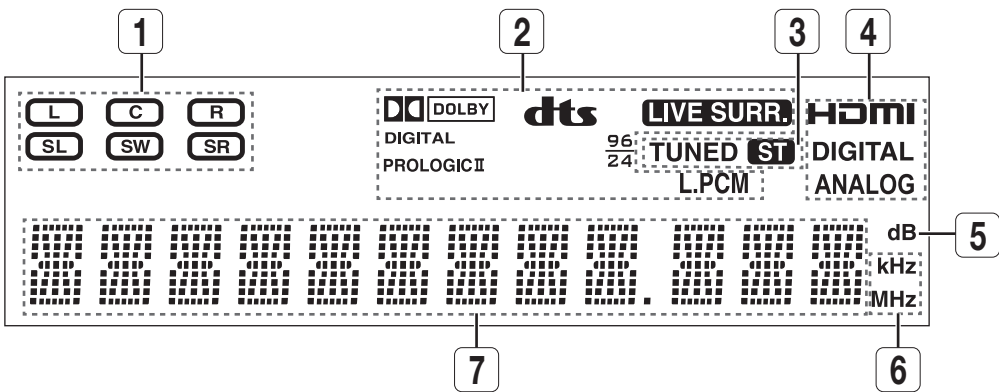

1	SPEAKER INDICATORS	Displays the connected speakers.
2	LISTENING MODE INDICATORS	Displays the current listening mode.
3	TUNING INDICATORS	Displays the status of the current radio broadcast.
4	AUDIO INPUT INDICATORS	Displays the audio input signal type of the currently connected external audio source.
5	SPEAKER LEVEL INDICATOR	Displays the speaker level.
6	RADIO FREQUENCY INDICATORS	Displays the current radio frequency range.
7	MESSAGE DISPLAY	Informs you of the status of the receiver.

INSERT REMOTE CONTROL BATTERIES

* Batteries (AAA size)

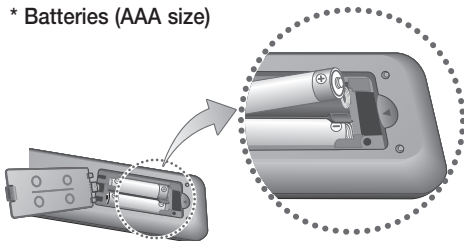


Follow these precautions to avoid leaking or cracking cells:

- Place batteries in the remote control so they match the polarity : (+) to (+) and (-) to (-).
- Assuming typical TV usage, the batteries last for about one year.
- Use the correct type of batteries. Batteries that look similar may differ in voltage.
- Always replace both batteries at the same time.
- Do not expose the batteries to heat or a flame.


OPERATION RANGE OF THE REMOTE CONTROL

The remote control can be used up to approximately 23 feet/7 meters in a straight line. It can also be operated at a horizontal angle of up to 30° from the remote control sensor.

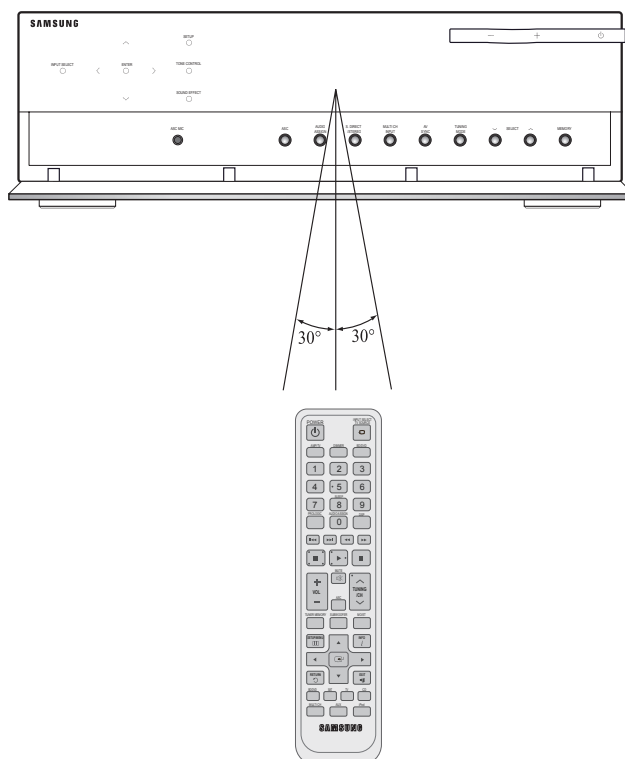

Description

TOUR OF THE REMOTE CONTROL

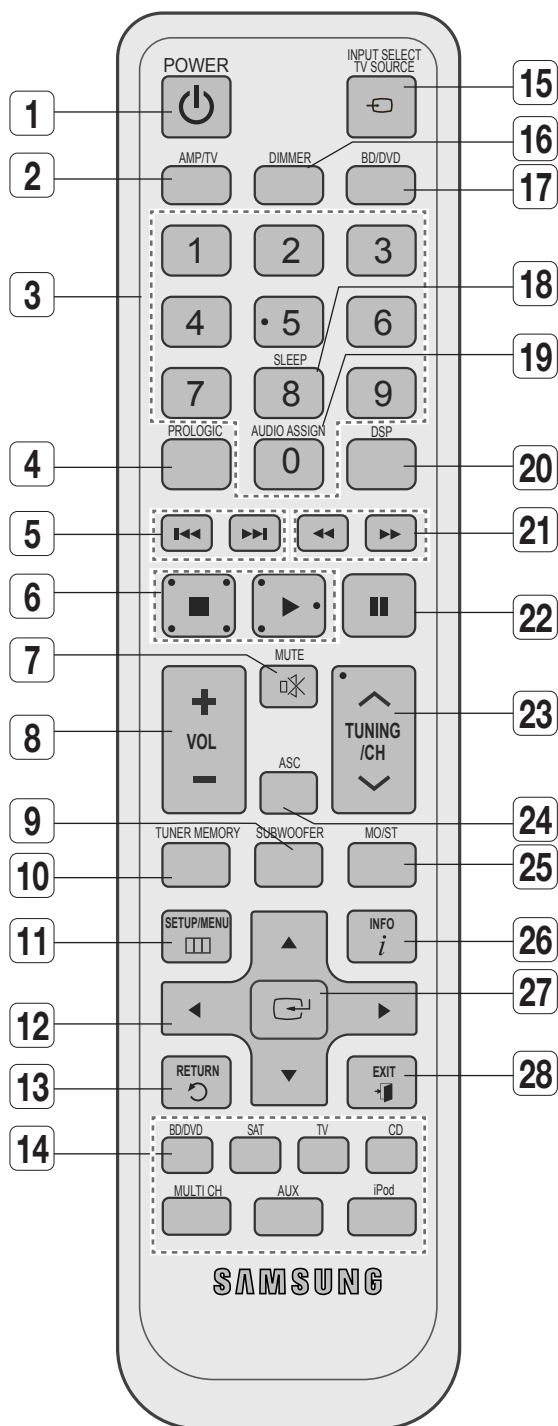

1	POWER BUTTON	Turns the receiver on/off.
2	AMP/TV BUTTON	Used to select the AMP/TV mode. - If you select the AMP mode, the button will flash orange. - If you select the TV mode, the button will flash green.
3	NUMBER BUTTONS	Used to select a TV channel.
4	PROLOGIC BUTTON	Select the desired Dolby Pro Logic II audio mode.
5	SKIP BUTTONS	Press to skip backwards or forwards on a connected DVD/BD player or iPod.
6	STOP/PLAY BUTTON	Press to stop/start playback on a connected DVD/BD player or iPod.
7	MUTE BUTTON	Mutes the sound of a connected device.
8	VOLUME CONTROL BUTTONS	Adjusts the volume of the selected device.
9	SUBWOOFER BUTTON	Used to select the Subwoofer.
10	TUNER MEMORY BUTTON	Used to set a preset radio frequency.
11	SETUP/MENU BUTTON	Displays the SETUP menu.
12	UP/DOWN/LEFT/RIGHT BUTTONS	Used to navigate the menus.
13	RETURN BUTTON	Used to return to the previous menu from the SETUP menu.
14	FUNCTION SELECTOR BUTTONS	Used to select an input source.
15	INPUT SELECT, TV SOURCE BUTTON	Toggles to find and select an input source. Press to select a connected TV's video source.
16	DIMMER BUTTON	Adjusts the brightness of the display.
17	BD/DVD BUTTON	Used to select the BD/DVD mode. - If you select the BD mode, the button will flash orange. - If you select the DVD mode, the button will flash green.
18	SLEEP BUTTON	Used to set the Sleep Timer.
19	AUDIO ASSIGN BUTTON	Toggles to select an input mode for the selected source.
20	DSP BUTTON	Used to select the SFE mode.
21	SEARCH BUTTONS	Press to search backwards or forwards.
22	PAUSE BUTTON	Pauses playback on a connected device.
23	TUNING/CHANNEL BUTTONS	Used to change the radio broadcasting frequency or TV channel.
24	ASC BUTTON	Used to set the Auto Sound Calibration function.
25	MO/ST BUTTON	Select MONO or STEREO for radio broadcasts.
26	INFO BUTTON	Display information on the connected device currently being used.
27	ENTER BUTTON	Used to select an item in the SETUP menu.
28	EXIT BUTTON	Exits the SETUP menu.


Connections

This section involves various methods of connecting the AV receiver to other external components.

Before moving or installing the product, be sure to turn off the power and disconnect the power cord.

SPEAKER POSITIONING

*** Speakers are provided with model HW-C560S only. Model HW-C500 does not come with speakers.**

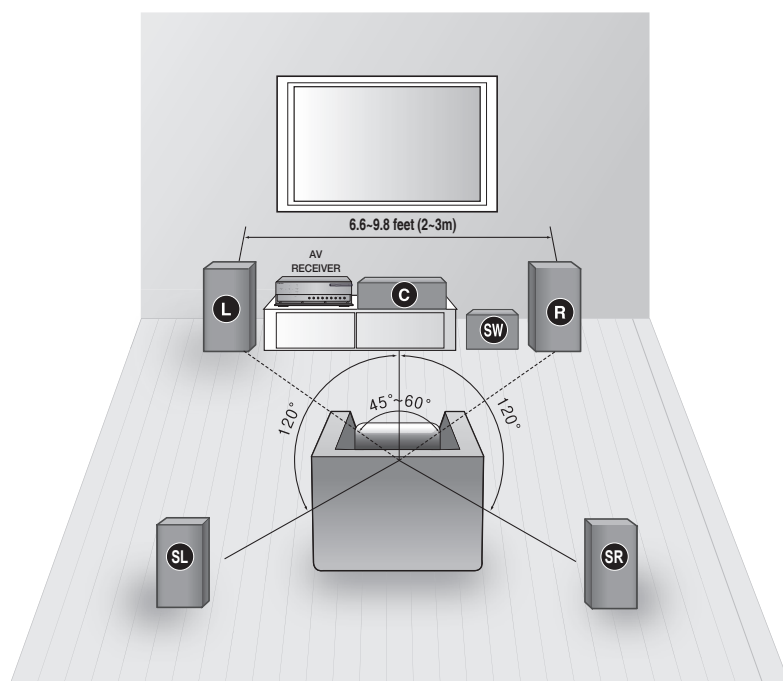

Position of AV Receiver

Place the AV Receiver on a dedicated stand or rack.

Subwoofer **SW**

The position of the subwoofer is not so critical. Place it anywhere you like.

Front Speakers **L R**

Place these speakers in front of your listening position, facing inwards (about 45°) toward you.

Place the speakers so that their tweeters will be at the same height as your ears.

Align the front face of the front speakers with the front face of the center speaker or place them slightly in front of the center speaker.

Center speaker **C**

It is best to install it at the same height as the front speakers.
You can also install it directly over or under the TV.

Surround Speakers **SL SR**

Place these speakers behind your listening position.
If there isn't enough room, place these speakers so they face each other.
Place them about 2 to 3 feet (60 to 90cm) above your ears, facing slightly downward.
Unlike the front and center speakers, the surround speakers are used to handle mainly sound effects and sound will not come from them all the time.



- When you attach the speakers to the wall, make sure to fasten them tightly so they do not fall off.

Speaker Configuration

For the best surround-sound experience, you should connect five speakers and a powered subwoofer.
The following table shows which channels you should use based on the number of speakers you have.


2 speakers	3 speakers	4 speakers	5 speakers
L	L	L	L
R	R	R	R
	C		C
		SL	SL
		SR	SR



- If you place a speaker near your TV set, screen color may be distorted because of the magnetic field generated by the speaker. If this occurs, place the speaker away from your TV set.

Connections


CONNECTING THE SPEAKERS (HW-C500)

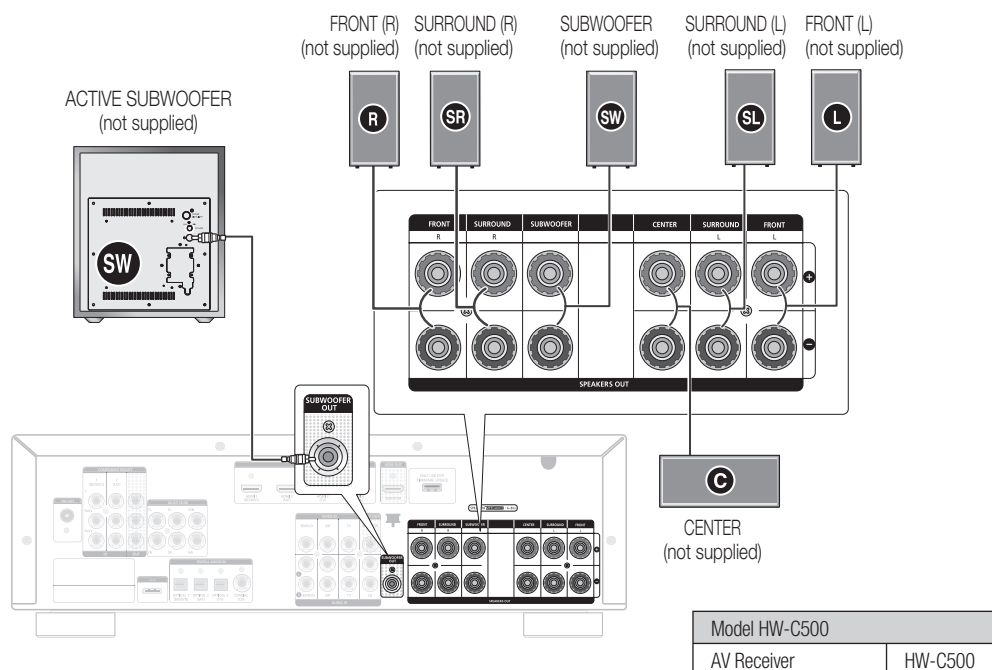

- Speakers are provided with model HW-C560S only. Model HW-C500 does not come with speakers. Contact a Samsung Electronics retailer for purchasing.

Connecting Speaker Wire


- Loosen the knob by turning counterclockwise.
- Insert the bare part of the wire into the hole in the side of each terminal.
- Tighten the knob by turning clockwise to secure the wire.

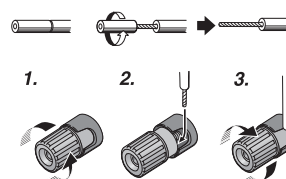


- Keep the subwoofer speaker out of reach of children to prevent them from inserting their hands or objects into the duct (hole).
- Never touch speaker terminals while the power is on. Doing so could result in electric shock.
- Make sure the polarities (+ and -) are correct.

Connecting the Speakers

- Press down the terminal tab on the back of the speaker.
- Insert the black wire into the black terminal (-) and the red wire into the red (+) terminal, and then release the tab.
- Connect the connecting plugs to the back of the AV Receiver.
 - Make sure the colors of the speaker terminals on the back of the AV receiver match the colors of the connecting plugs.

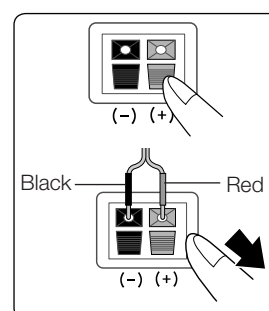

CONNECTING THE SPEAKERS (HW-C560S)

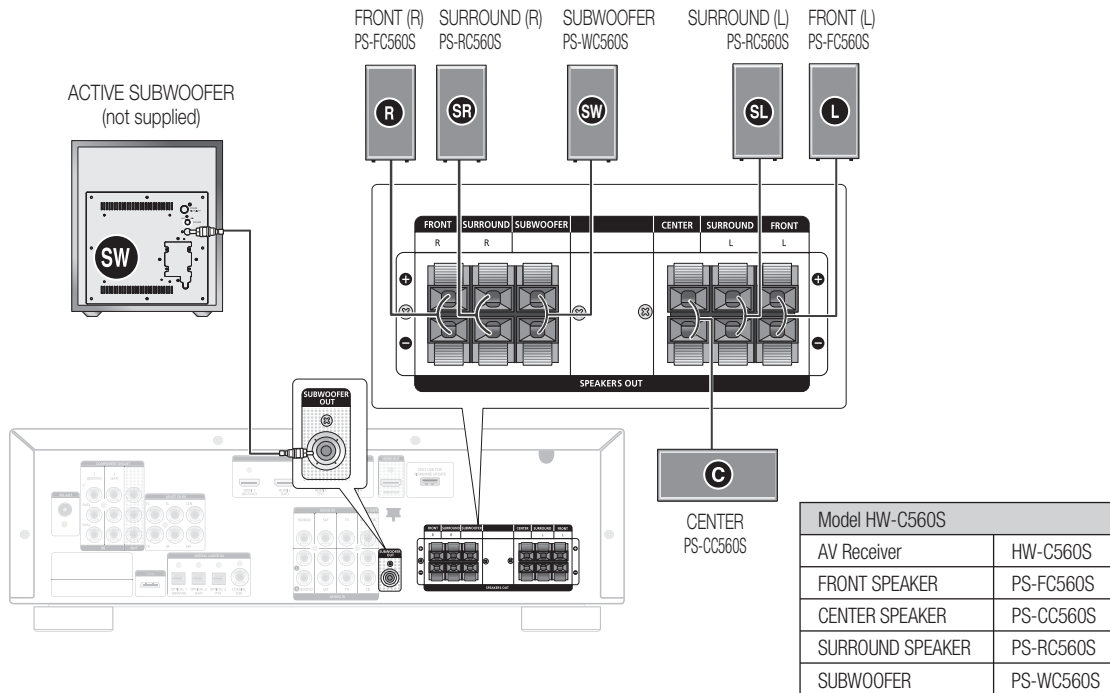



- The Active Subwoofer is sold separately. Contact a Samsung Electronics retailer for purchasing.

Connecting the Speakers

1. Press down the terminal tab on the back of the speaker.
2. Insert the black wire into the black terminal (-) and the red wire into the red (+) terminal, and then release the tab.
3. Press down the terminal tab on the back of the AV Receiver.
4. Insert the one wire into the terminal + and the other one into the terminal -.
 - Make sure the colors of the speaker terminals on the back of the AV receiver match the colors of the connecting plugs.



- Keep the subwoofer speaker out of reach of children to prevent them from inserting their hands or objects into the duct (hole).
- Never touch speaker terminals while the power is on. Doing so could result in electric shock.
- Make sure the polarities (+ and -) are correct.

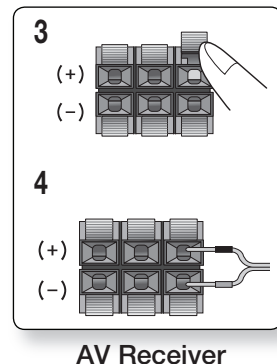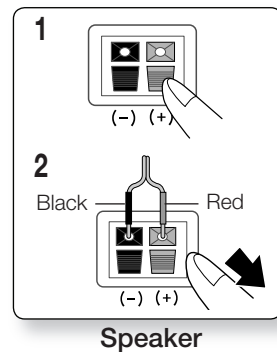


Connections

CONNECTING EXTERNAL DEVICES/YOUR TV VIA HDMI

HDMI is a digital standard interface for connection to such devices as a TV, projector, DVD player, Blu-ray player, set-top box and more.

HDMI removes any loss of signal from analog conversion, enabling you to enjoy video and audio sound quality as it was originally created in the digital source.

By connecting through the HDMI(High-Definition Multimedia Interface) interface, you can play back digital video and audio.

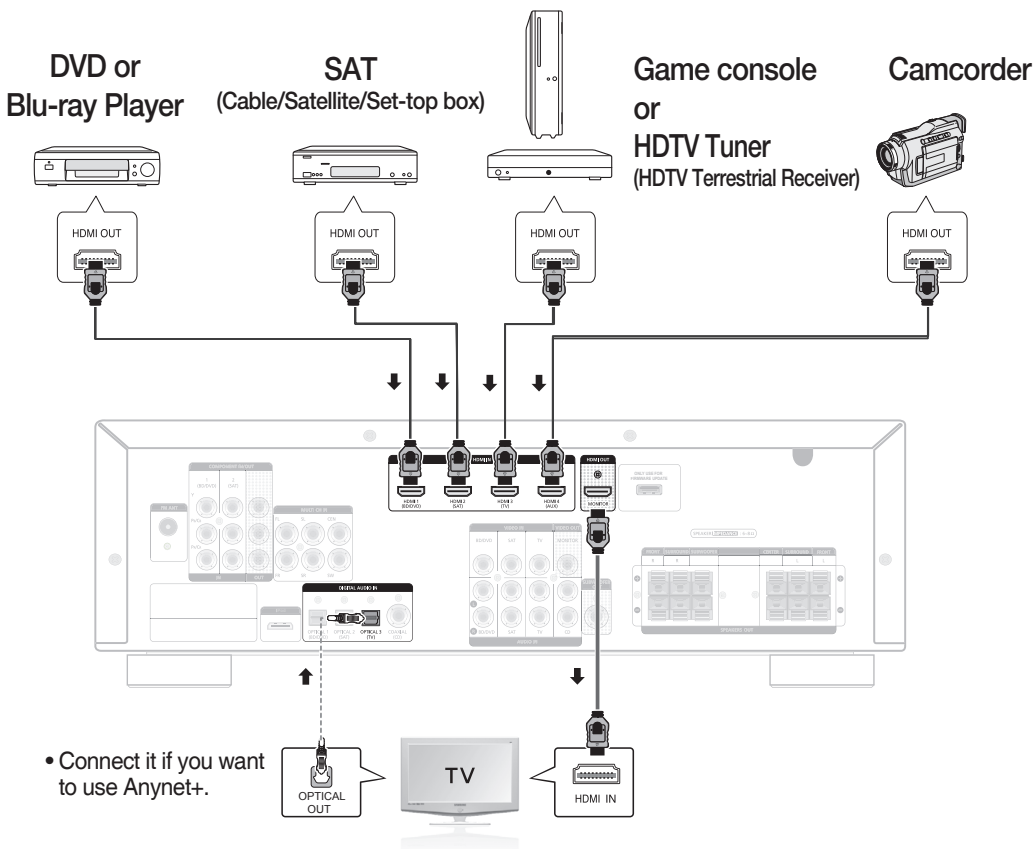

High-bandwidth Digital Content Protection System (HDCP) support

To play digital contents through the HDMI connection, both the connected external device and TV must support High-bandwidth Digital Content Protection System (HDCP). This product supports HDCP.

Compatibility with a TV Supporting HDMI	
A TV with an HDMI jack.	Video/Audio
A TV with a DVI-D jack (TV supporting HDCP)	Video
A TV with a DVI-D jack (TV not supporting HDCP)	-



- Audio from SACD discs will not be heard with this connection. To play a DVD disc whose copyright is protected by CPPM, use a player supporting CPPM.
- The quality of the audio output through the HDMI jack (sampling frequency and bit rate) may be limited by the performance of the connected device.
- Since HDMI connection supports both video and audio, you don't have to connect an additional audio cable.

HDMI FUNCTION

Using Anynet+(HDMI-CEC)

Anynet+ is a function that enables you to control other Samsung Devices with your Samsung TV's remote control. Anynet + can be used by connecting this AV Receiver to a SAMSUNG TV using an HDMI Cable. This is only available with SAMSUNG TVs and SAMSUNG AV Products that support Anynet+.

1. Connect the AV receiver to a Samsung TV with an HDMI cable. (See page 20)
2. Set the Anynet+ function on your TV.
(See the TV instructions manual for more information.)
 - You can operate the volume on the AV receiver by using the Volume buttons on the TV remote control.

To turn on Anynet+

1. Press the **SETUP/MENU** button.
 - Each time the button is pressed, the mode switches between **SETUP ENTER** and **SETUP OFF**.
2. Press the **ENTER** button to select **SETUP ENTER**.
3. Press the **▲ ▼** buttons to select **HDMI SETUP**, and then press the **ENTER** or **▶** button.
4. Press the **▲ ▼** buttons to select **HDMI ANYNET+**, and then press the **ENTER** or **▶** button.
5. Press the **▲ ▼** buttons to set **ANYNET+** to **ON**.

- To exit setup mode-


- Press the **SETUP/MENU** button.
SETUP OFF appears on the display and Setup Mode is exited.



- If you use an HDMI cable to connect a Samsung TV to your AV Receiver, you can operate the AV receiver using the TV's remote control. This function is available only in connection with Samsung TV and DVD player supporting Anynet +(HDMI-CEC).
- Please check your TV for the *Anynet+* logo. If your TV has an *Anynet+* logo, then it supports the Anynet+ function.
- When you are making Anynet+ connection, do not connect more than two AV receivers (Anynet+ installed). Otherwise, it can cause a malfunction.

Connections

CONNECTING TO YOUR TV

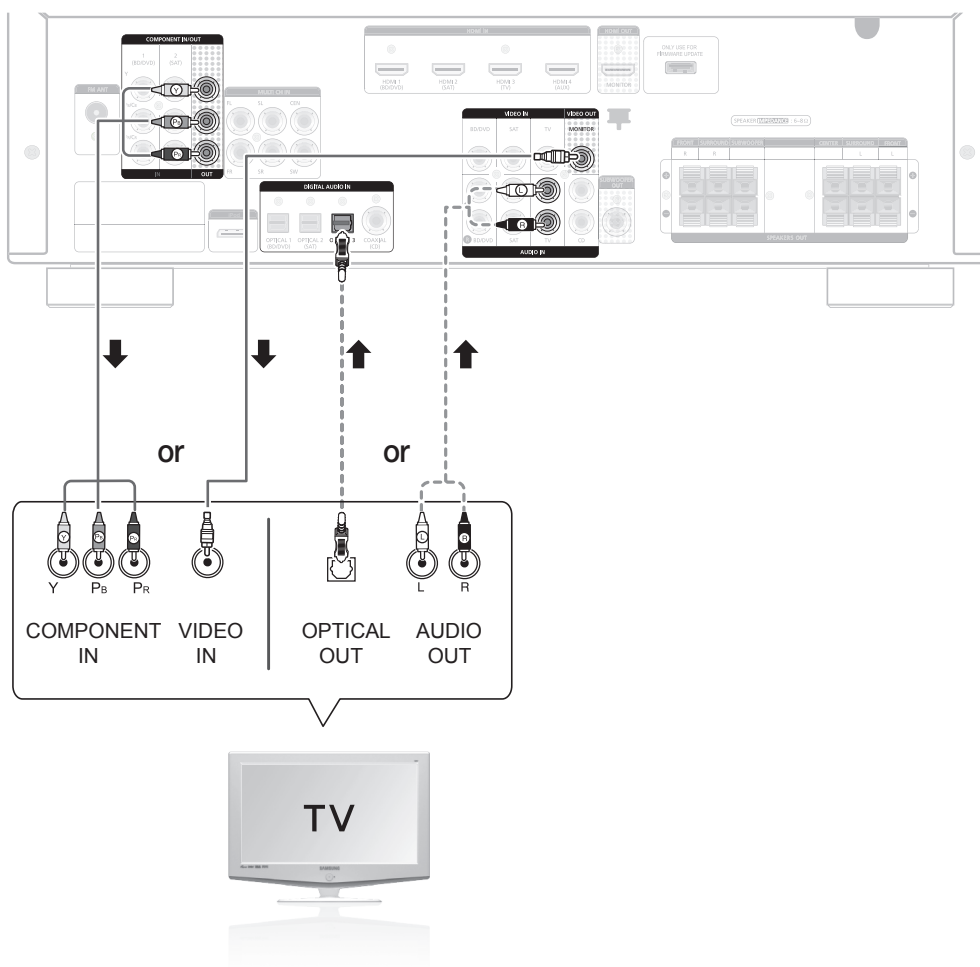

Video Connection

If your television is equipped with Component Video inputs, connect a Component video cable(not supplied) from the Component Video Output (Pr, Pb and Y) jacks on the back of your AV Receiver to the Component Video Input jacks on your TV.

OR

Connect the Video cable from the VIDEO OUT (MONITOR) jack on the back of your AV Receiver to the Video Input jack on your TV.


Audio Connection

Connect the Digital Input (OPTICAL 3) on your AV Receiver to the Digital Output of the TV.

OR

Connect AUDIO IN (TV) on your AV Receiver to the Audio Out of the TV.

CONNECTING A DVD OR BD(Blu-ray) PLAYER

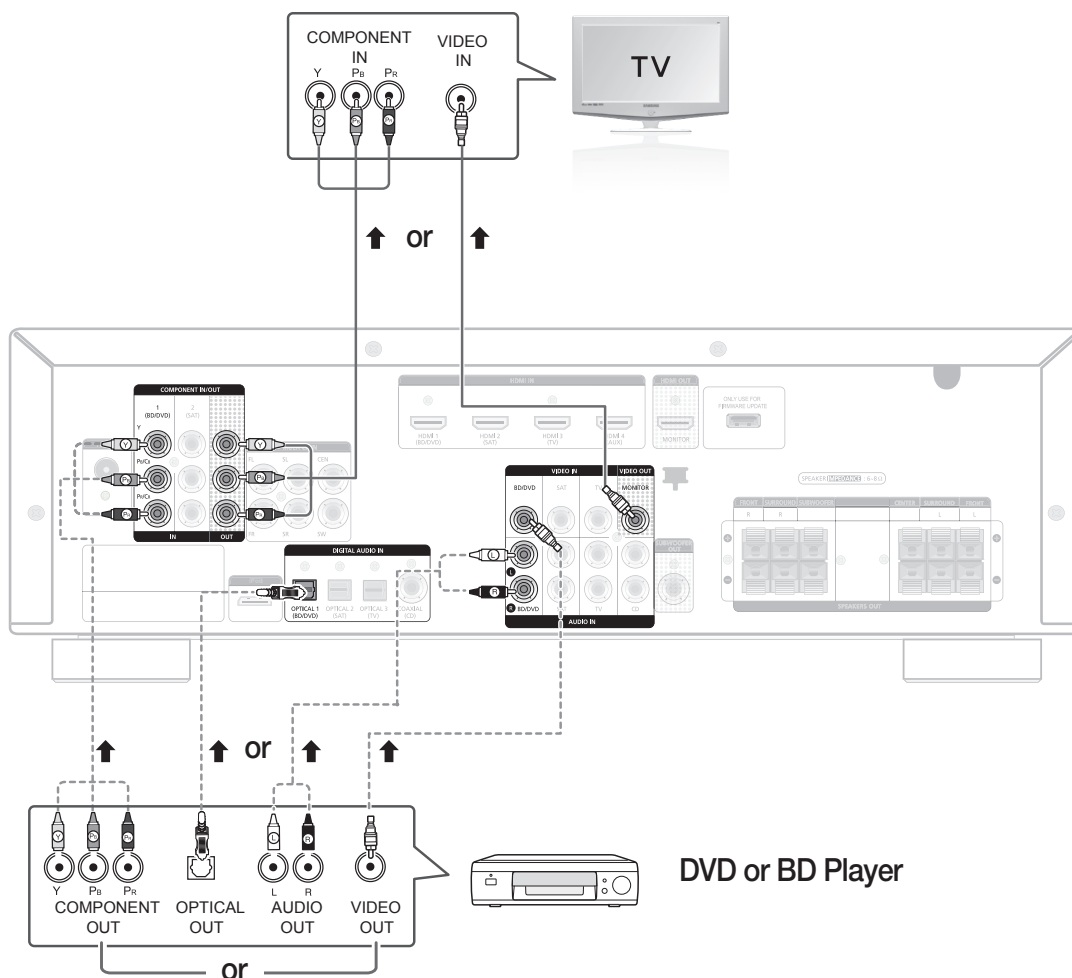

Video Connection

Connect a Component video cable(not supplied) from the COMPONENT IN (BD/DVD) (P_R, P_B and Y) jacks on the back of your AV Receiver to the Component Video Output jacks on your DVD/BD player.

OR

Connect a Video cable from the VIDEO IN (BD/DVD) jack on the back of your AV Receiver to the Video Output jack on your DVD/BD player.

Audio Connection


Connect the Digital Input (OPTICAL 1) on your AV Receiver to the Digital Output of the DVD/BD player.

OR

Connect AUDIO IN (BD/DVD) on your AV Receiver to the Audio Out of the DVD/BD player.

Connections

CONNECTING A CABLE, SATELLITE OR SET-TOP BOX

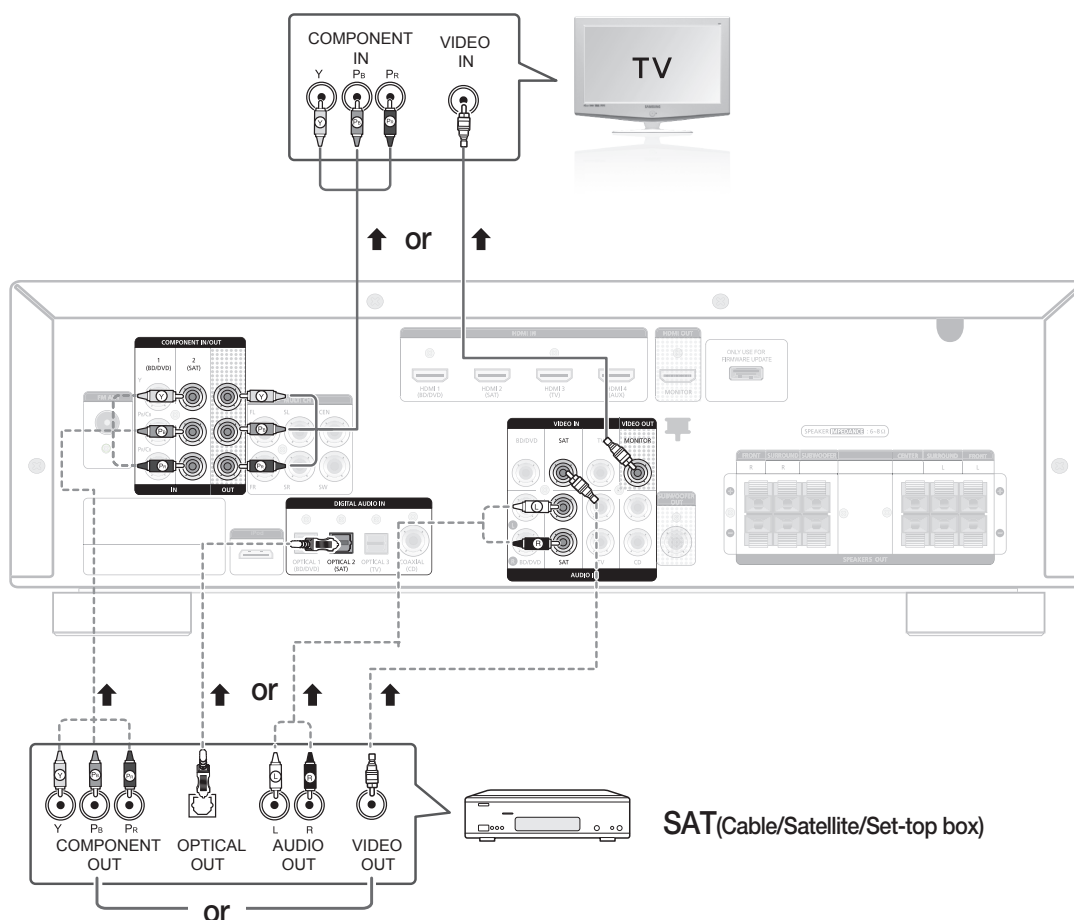

Video Connection

Connect a Component video cable(not supplied) from the COMPONENT IN (SAT) (P_R, P_B and Y) jacks on the back of your AV Receiver to the Component Video Output jacks on your SAT.

OR

Connect a Video cable from the VIDEO IN (SAT) jack on the back of your AV Receiver to the Video Output jack on your SAT.

Audio Connection

Connect the Digital Input (OPTICAL 2) on your AV Receiver to the Digital Output of the SAT.


OR

Connect AUDIO IN (SAT) on your AV Receiver to the Audio Out of the SAT.



- Disconnect the power plug from the outlet if you will not use this unit for a long period of time.
- If the cable/set-top box has only one audio output jack, connect it to either the right or left audio input jack of the main unit. Connect the audio cable's red plug to the red jack and white cable to the white jack.

CONNECTING A CD PLAYER

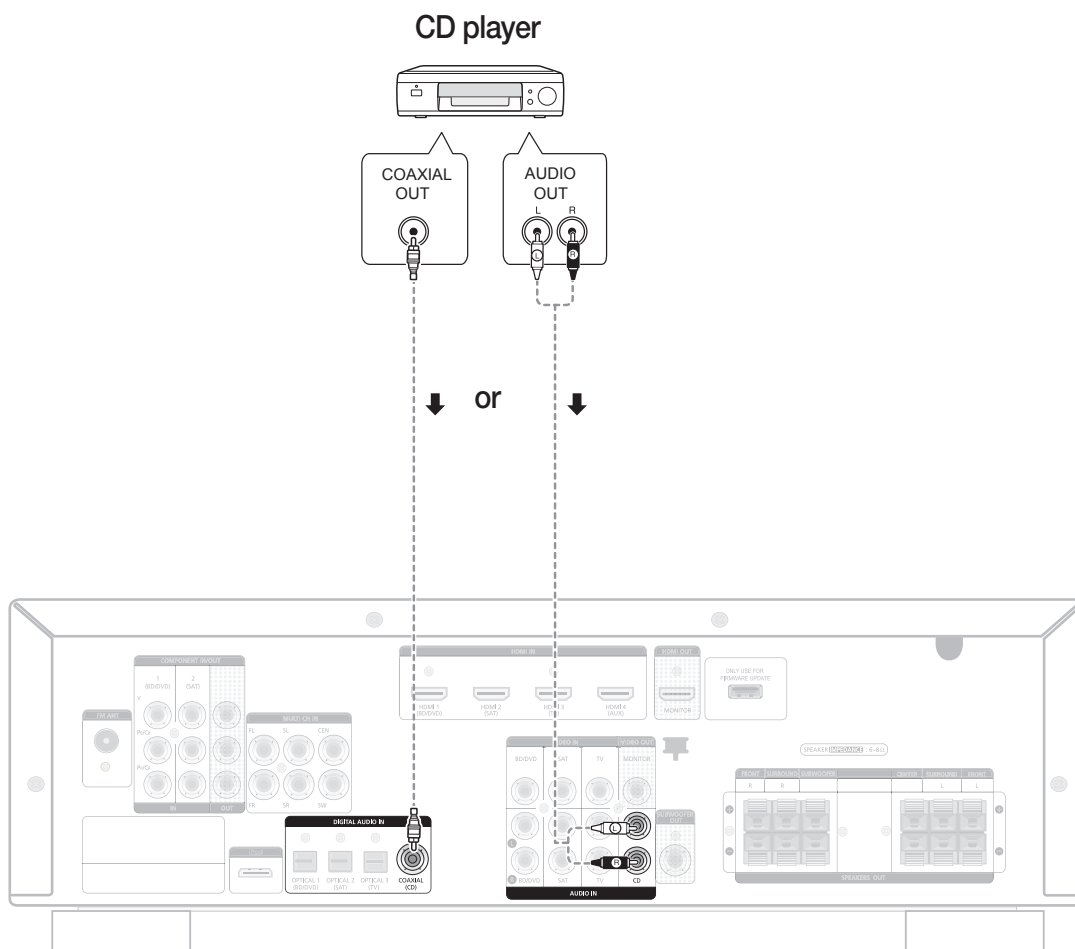

Audio Connection

Connect the Digital Input (COAXIAL) on your AV Receiver to the Digital Output of the CD Player.

OR

Connect AUDIO IN (CD) on your AV Receiver to the Audio Out of the CD player.




- If the CD player has only one audio output jack, connect it to either the right or left audio input jack of the main unit. Connect the audio cable's red plug to the red jack and white cable to the white jack.

Connections


CONNECTING 5.1 CHANNEL DEVICES

You can connect the AV receiver to a DVD player, SUPER AUDIO CD player or other device with 5.1 channel output.

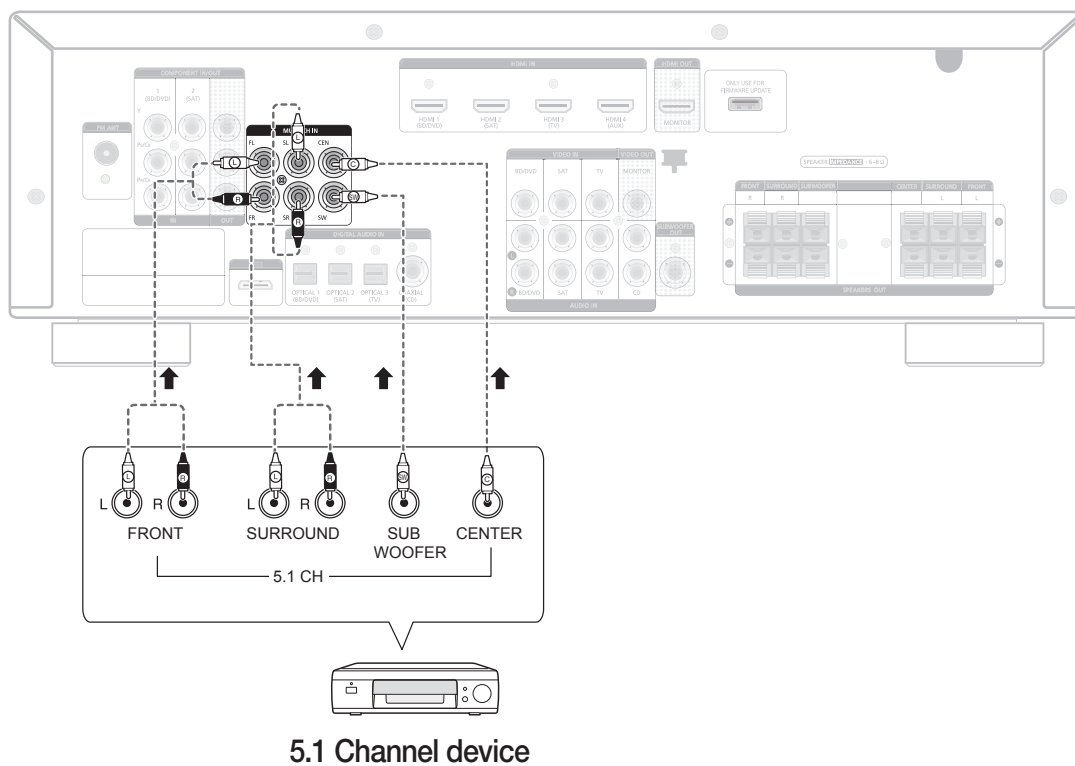

CONNECTING AN iPod

You can listen to audio from an iPod through the main unit. For iPod operation with your receiver, see this page and 47 ~ 48.

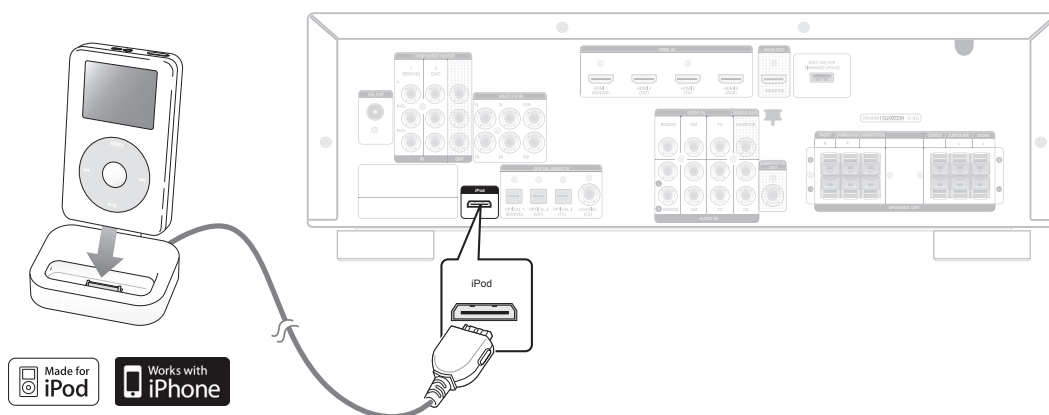

1. Connect the iPod dock connector to the iPod jack on your receiver.
2. Place the iPod in the Dock.
 - If you want to play a movie stored in your iPod player, you should set the player's **TV Out** option to **On** before inserting it into the dock. See page 48.
3. Press the **iPod** button on the remote control.
 - You can also use the **INPUT SELECT** button on the main unit.
The mode switches as follows :
FM → BD/DVD → SAT → TV → CD → AUX → 5.1 MULTI CH → IPOD AUDIO → IPOD VIDEO

Disconnecting an iPod

Follow the steps below to prevent damage to an iPod and data when disconnecting from your AV receiver.

1. Press the **INPUT SELECT** button on the main unit to switch to a mode other than **IPOD AUDIO** or **IPOD VIDEO**.

OR

1. Turn off the AV Receiver.
2. Disconnect the iPod player from the iPod dock, or remove the iPod dock connector from the AV receiver.



 













- You must have the VIDEO (Monitor) output connected to your TV to view iPod video. See page 23.
- Adjust the volume to a moderate level before you connect your iPod and AV Receiver.
- When the unit is powered on and you connect an iPod, the unit will charge your iPod's battery.
- Make sure to connect the dock connector so that the label "**SAMSUNG**" faces upward.
- "Made for iPod" means that an electronic accessory has been designed to connect specifically to an iPod and has been certified by the developer to meet Apple performance standards.
- "Works with iPhone" means that an electronic accessory has been designed to connect specifically to an iPhone and has been certified by the developer to meet Apple performance standards.

Connections

CONNECTING AN iPod (Continued)

iPod models that are compatible with HW-C500/HW-C560S

 iPod 1st+2nd generation 5GB 10GB 20GB	 iPod 5th generation (video) 30GB 60GB 80GB	 iPod 3rd generation 10GB 15GB 20GB 30GB 40GB
 iPod nano 2nd generation(aluminum) 2GB 4GB 8GB	 iPod mini 4GB 6GB	 iPod 4th generation 20GB 40GB
 iPod nano 3rd generation (video) 4GB 8GB	 iPod 4th generation (color display) 20GB 30GB 40GB 60GB	 iPod classic 80GB 120GB 160GB
 iPod touch 1st generation 4GB 16GB 32GB	 iPod nano 4th generation(video) 8GB 16GB	 iPod nano 1st generation 1GB 2GB 4GB
 iPod touch 2nd generation 8GB 16GB 32GB	 iPhone iPhone 3G iPhone 3GS	



- "Made for iPod" means that the dock has been designed to connect specifically for the iPod and has been certified by the developer to meet Apple performance standards.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.


iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

iPhone is a trademark of Apple Inc.

CONNECTING THE FM ANTENNA

1. Connect the FM antenna supplied to the FM ANTENNA terminal as a temporary measure.
2. Slowly move the antenna wire around until you find a location where reception is good, then fasten it to a wall or other rigid surface.

FM antenna (supplied)

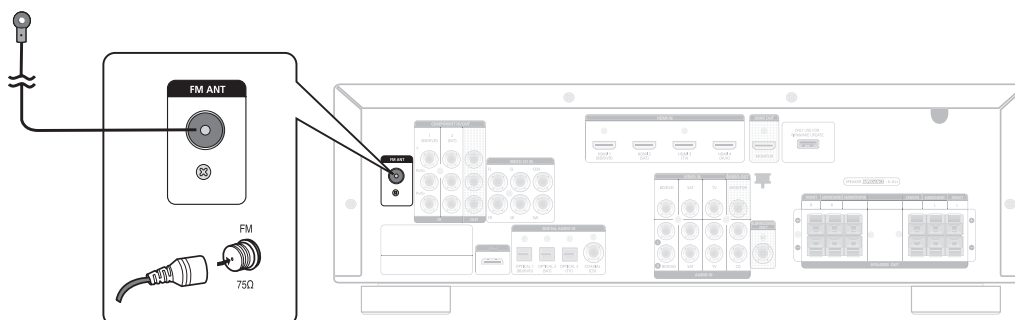

- Do not place the antenna cable close to the power cord. Keep it as far away as possible.
- If you experience poor FM reception, use an external antenna.

Basic functions of your AV Receiver

BEFORE USING THE AV RECEIVER

Turning On/Off

Connect the power plug to the outlet.

Press the **POWER** button on the main unit for 2 seconds.

- This unit will be turned on or set to Standby mode.
- You can also turn the unit on/off by pressing the **POWER** button on the remote control.

Remote control functions

You can operate your AMP (this AV receiver)/ TV and BD(Samsung only)/ DVD player with this remote control. See pages 51 ~ 53 for more details.

To select a function

Method 1

Press the **INPUT SELECT** button.

- Each time you press this button, **FM** → **BD/DVD** → **SAT** → **TV** → **CD** → **AUX** → **5.1 MULTI CH** → **IPOD AUDIO** → **IPOD VIDEO** will be selected in turn.

Method 2

Press the **TUNING/CH**, **BD/DVD**, **SAT**, **TV**, **CD**, **MULTI CH**, **AUX** or **iPod** button.


- You can directly select the desired function.

AUDIO SETUP

Selecting a source device and connection jack

Select the external devices you have connected to the receiver.

1. Press the **SETUP/MENU** button.
 - Each time the button is pressed, the mode switches between **SETUP ENTER** and **SETUP OFF**.
2. Press the **ENTER** button to select **SETUP ENTER**.
3. Press the **▲▼** buttons to select **AUDIO SETUP**, and then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select a desired jack.
 - The source device switches as follows; **BD/DVD**, **SAT**, **TV**, **CD**

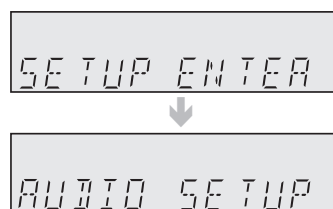

- To exit setup mode -

- Press the **SETUP/MENU** button.
SETUP OFF appears on the display and Setup Mode is exited.



- You can also use **SETUP**, **▲**, **▼**, **<**, **>**, **ENTER** on the front of your AV Receiver.

Basic functions of your AV Receiver

 
SELECTING DIGITAL/ANALOG INPUT

You can listen to sound in 2 channel analog , Dolby Digital or DTS using this unit.

1. Press the **INPUT SELECT** button to select a desired function (BD/DVD, SAT,TV, CD). See page 29.
2. Press the **AUDIO ASSIGN** button on the remote control to select the external device you have connected.
 - Each time you press this button, the input mode changes as follows:




• For BD/DVD function



• For SAT function



 • For TV function



• For CD function




- You can also change the input mode by pressing the **AUDIO ASSIGN** button on the front of your AV Receiver.
- You can enjoy Dolby Digital or DTS if you connect the digital audio output jack of an external audio component to the optical or coaxial digital audio input jack on the main unit.

Setup

For your convenience, you can set this AV receiver's features for the best use.


SETUP MENU TREE

Here's a quick look at how the setup menus are organized on your AV Receiver.

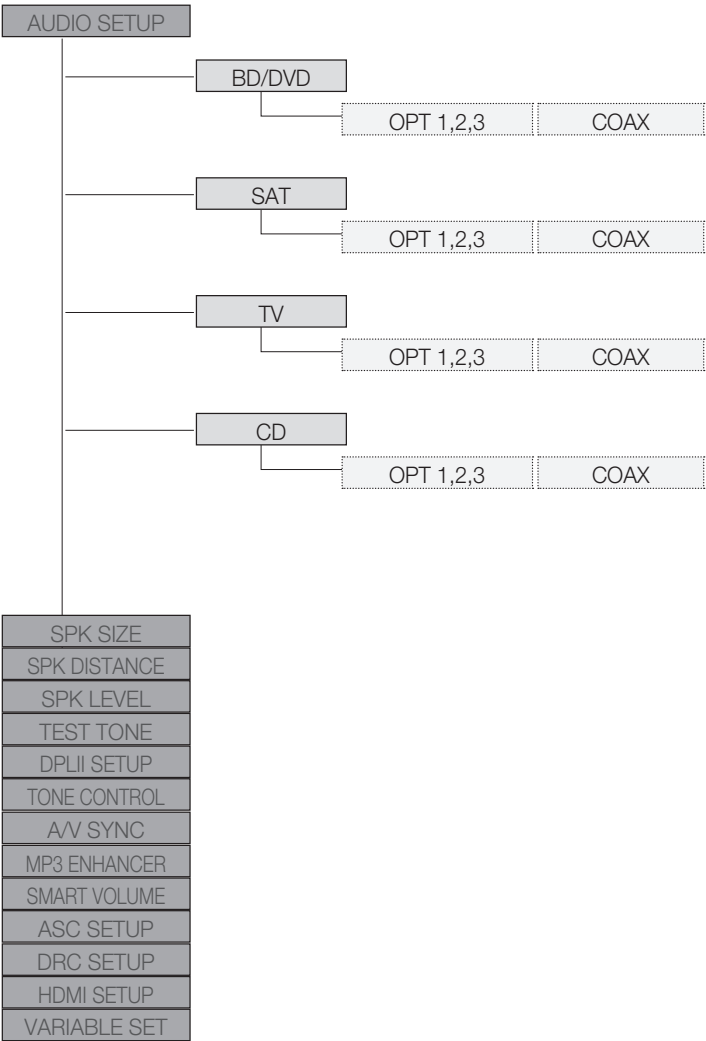


Setup


SETUP MENU TREE (Continued)

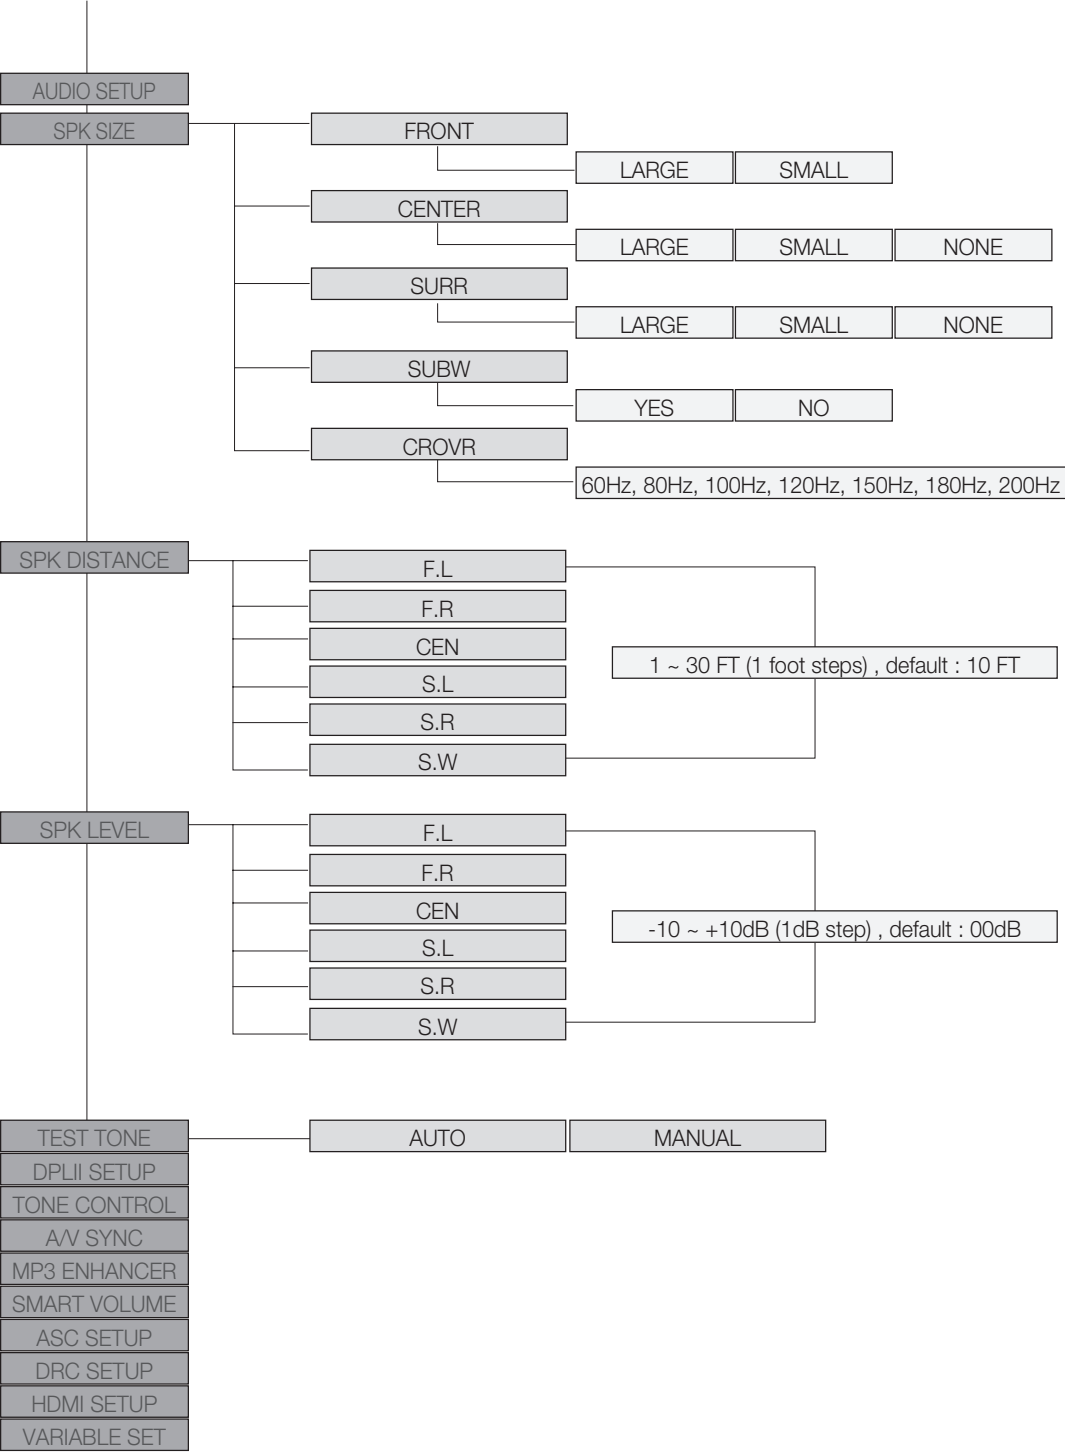

SETUP MENU TREE (Continued)

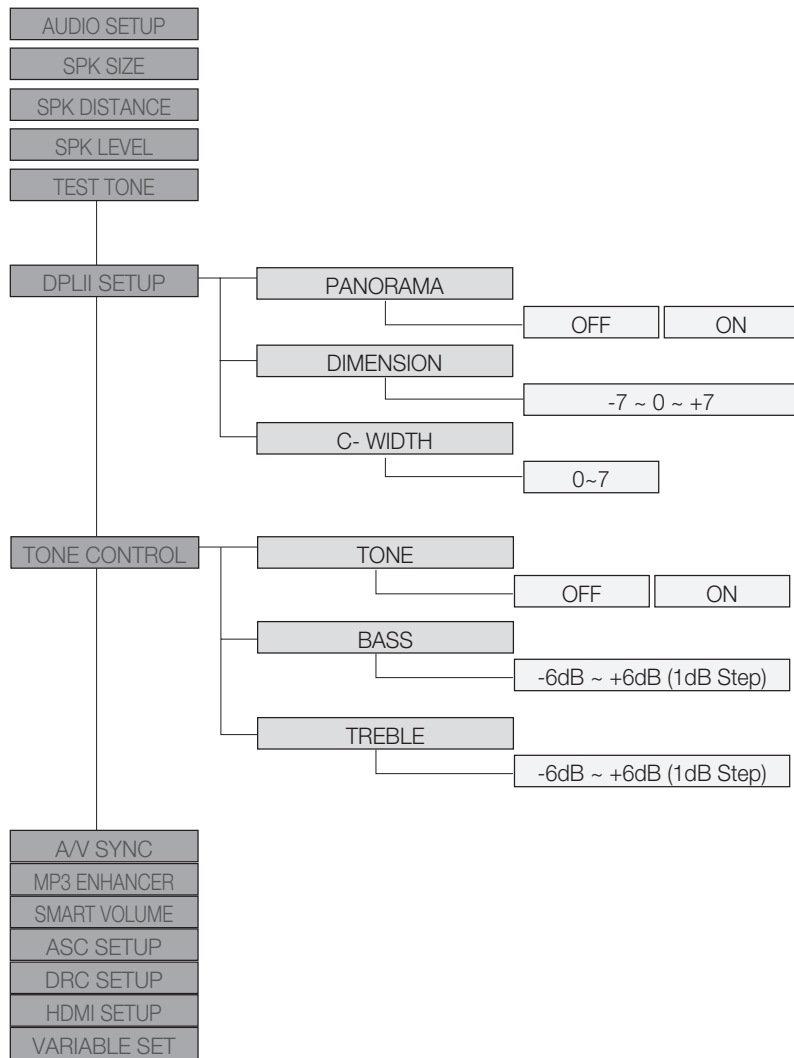


SETUP MENU TREE (Continued)

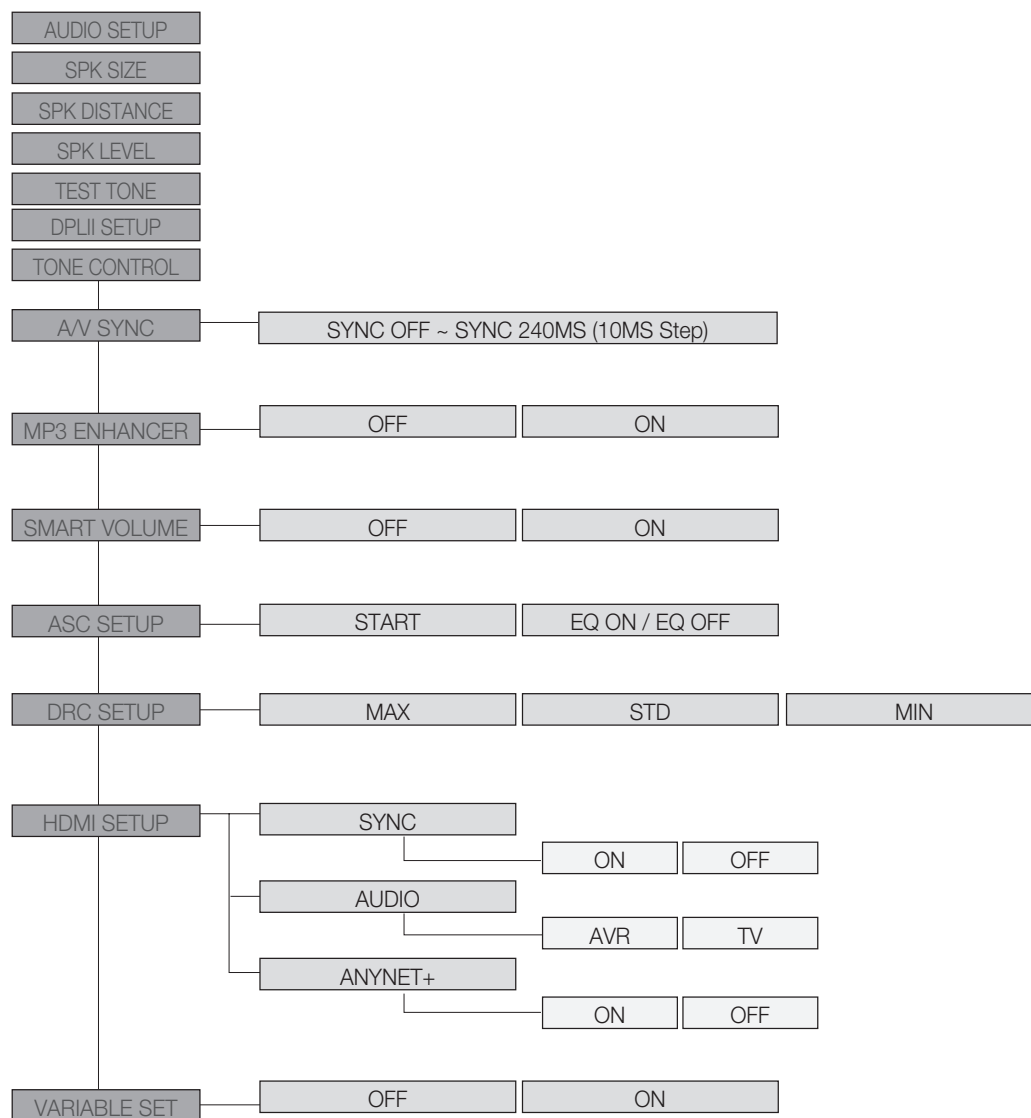

SETTING THE SPEAKER SIZE

Signal outputs and frequency response from the speaker will be adjusted according to your speaker configuration and whether certain speakers are used or not.

1. Press the **SETUP/MENU** button.
 - Each time the button is pressed, the mode switches between **SETUP ENTER** and **SETUP OFF**.
2. Press the **ENTER** button to select **SETUP ENTER**.
3. Press the **▲ ▼** buttons to select **SPK SIZE**, and then press the **ENTER** or **▶** button.
4. Press the **▲ ▼** buttons to select the speaker you want, and then press the **ENTER** or **▶** button.
 - Each time you press the **▲ ▼** buttons, **FRONT** → **CENTER** → **SURR** → **SUBW** → **CROVR** will be selected in turn.
5. Press the **▲ ▼** buttons to set the mode (**LARGE**, **SMALL** etc.) for the selected speaker.
6. Repeat steps 3-5 to set the mode for each speaker.

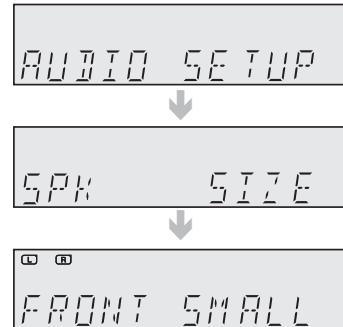

- To exit setup mode -

- Press the **SETUP/MENU** button.
SETUP OFF appears on the display and Setup Mode is exited.

Setting the Speaker

SPEAKER	Possible Settings	Default Setting
FRONT (Front)	LARGE, SMALL	SMALL
CENTER (Center)	LARGE, SMALL, NONE	SMALL
SURR (Surround)	LARGE, SMALL, NONE	SMALL
SUBW (Subwoofer)	YES, NO	YES
CROVR (Crossover Frequency)	60, 80, 100, 120, 150, 180, 200(Hz)	100Hz

- **LARGE** : Select when using large speakers. You can listen to full range sound.
- **SMALL** : Select this when using small speakers
- **NONE** : Select when no speaker is used
- **YES (subwoofer)** : Select when using the subwoofer speaker.
- **NO (subwoofer)** : Select when not using the subwoofer speaker.
- **CROVR** : Select the crossover frequency for the best bass response in your room.




- You can also use **SETUP**, **▲**, **▼**, **◀**, **▶**, **ENTER** on the front of your AV Receiver.
- When the Front speaker is only set to **LARGE**, you can select **LARGE** of other speakers.

Setup

SETTING THE SPEAKER LISTENING DISTANCE

If the speakers cannot be placed at equal distances from the listening position, you can adjust the delay time of the audio signals from the center and surround speakers.

1. Press the **SETUP/MENU** button.
 - Each time the button is pressed, the mode switches between **SETUP ENTER** and **SETUP OFF**.
2. Press the **ENTER** button to select **SETUP ENTER**.
3. Press the **▲▼** buttons to select **SPK DISTANCE**, and then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select the speaker you want, and then press the **ENTER** or **▶** button.
 - Each time you press the **▲▼** buttons, F.L → F.R → CEN → S.L → S.R → S.W will be selected in turn.
5. Press the **▲▼** buttons to set the Speaker Distance.
 - For the FRONT LEFT, FRONT RIGHT, CENTER, SURR. LEFT, SURR. RIGHT and SUBWOOFER Speakers, you can set the distance from the speaker to listening position between 1ft ~ 30ft (0.3~9.0m) in intervals of 1ft (0.3m).

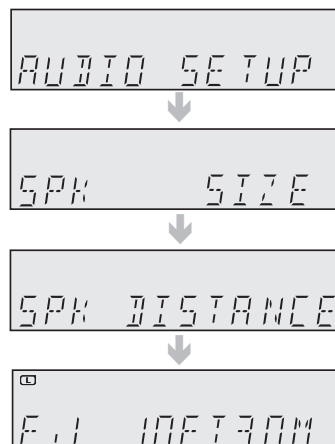

- To exit setup mode -

- Press the **SETUP/MENU** button.
SETUP OFF appears on the display and Setup Mode is exited.

- Setting Speaker Distance -

Set the distance from the speaker to listening position in intervals of 1ft(0.3m).

- | | |
|------------------------------------|-------------------------------------|
| • F.L (front left) : 1ft ~ 30ft | • CEN (center) : 1ft ~ 30ft |
| • F.R (front right) : 1ft ~ 30ft | • S.R (surround right) : 1ft ~ 30ft |
| • S.L (surround left) : 1ft ~ 30ft | • SW (subwoofer) : 1ft ~ 30ft |




- If the listening position is beyond the range of the speaker distance setup, set the speaker distance to the maximum.
- The distance range of the overall speaker system is determined based on the F.L(front left) speaker distance from the listening position.

SETTING THE SPEAKER LEVEL

You can set the balance and level of speakers.

1. Press the **SETUP/MENU** button.
 - Each time the button is pressed, the mode switches between **SETUP ENTER** and **SETUP OFF**.
2. Press the **ENTER** button to select **SETUP ENTER**.
3. Press the **▲▼** buttons to select **SPK LEVEL**, and then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select the speaker you want, and then press the **ENTER** or **▶** button.
 - Each time you press this button, F.L → F.R → CEN → S.L → S.R → S.W will be selected in turn.
5. Press the **▲▼** buttons to set the Speaker Level mode.
 - You can adjust it from -10 to +10dB in 1 step increments.
 - The sound gets quieter at -10dB and louder at +10dB.

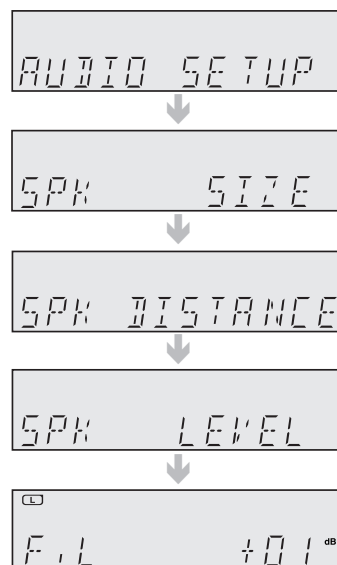

● SETUP

- To exit setup mode -

- Press the **SETUP/MENU** button.
SETUP OFF appears on the display and Setup Mode is exited.

- Setting Speaker Level -


- F.L (front left) : -10 ~ +10dB
- F.R (front right) : -10 ~ +10dB
- CEN (center) : -10 ~ +10dB
- S.L (surround left) : -10 ~ +10dB
- S.R (surround right) : -10 ~ +10dB
- S.W (subwoofer) : -10 ~ +10dB

Setup

SETTING THE TEST TONE

Use the test tone to check the speaker connection status or level.

1. Press the **SETUP/MENU** button.
 - Each time the button is pressed, the mode switches between **SETUP ENTER** and **SETUP OFF**.
2. Press the **ENTER** button to select **SETUP ENTER**.
3. Press the **▲▼** buttons to select **TEST TONE**, and then press the **ENTER** or **►** button.
4. Press the **▲▼** buttons to select the option you want, and then press the **ENTER** or **►** button.
 - **AUTO** : Test signal will be automatically output as follows; F.L → CEN → S.W → F.R → S.R → S.L.
 - During test tone output, press the **▲▼** buttons to adjust the speaker output level from -10 to +10 dB by 1 step.
 - **MANUAL** : Enables you to adjust the output level of the speaker manually.
 - 1) Press the **ENTER** button to select the speaker you want.
Each time you press the **ENTER** button, F.L → CEN → S.W → F.R → S.R → S.L will be selected in turn.
 - 2) Press the **▲▼** buttons to set the Test Tone mode you want.
You can adjust the speaker output level from -10 to +10dB by 1 step.
The sound gets quieter at -10dB and louder at +10dB.

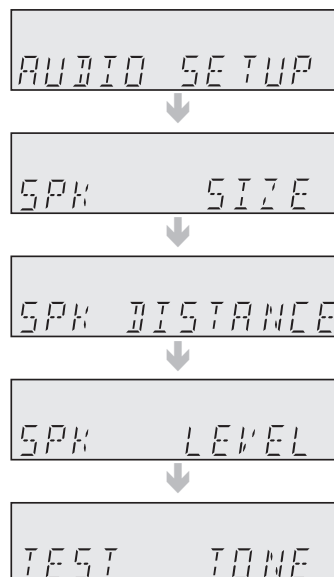

- Test Tone Output -

- | | |
|----------------------------------|--------------------------------------|
| • F.L (front left) : -10 ~ +10dB | • F.R (front right) : -10 ~ +10dB |
| • CEN (center) : -10 ~ +10dB | • S.R (surround right) : -10 ~ +10dB |
| • S.W (subwoofer) : -10 ~ +10dB | • S.L (surround left) : -10 ~ +10dB |

- To stop test tone -

- Press the **SETUP/MENU** button once.
SETUP OFF appears on the display and test tone stops.

SETTING DOLBY PRO LOGIC II MODE

This mode provides 5.1 channel sound from 2 channel sources.


Press the **PROLOGIC** button on the remote control.

- **MOVIE** : Adds realism to the movie soundtrack.
- **MUSIC** : Provides 5.1 channel surround sound for digital, analog or existing stereo sources.
- **GAME** : Enhances the excitement of the game's sound.
- **MATRIX** : You will hear 5.1 channel surround sound.
- **PL (Pro Logic)** : You will experience a surround effect with 5.1 channel surround sound.

SETTING DOLBY PRO LOGIC II

This function works only in Dolby Pro Logic II MUSIC mode.

1. Press the **SETUP/MENU** button.
 - Each time the button is pressed, the mode switches between **SETUP ENTER** and **SETUP OFF**.
2. Press the **ENTER** button to select **SETUP ENTER**.
3. Press the **▲▼** buttons to select **DPLII SETUP**, and then press the **ENTER** or **►** button.
4. Press the **▲▼** buttons to select the option you want, and then press the **ENTER** or **►** button.
 - **PANORAMA** : You can set it ON or OFF.
(This mode extends the front stereo image to include the surround speakers for an exciting "wraparound" effect with side wall imaging.)
 - **DIMENSION** : You can set from -7 to +7.
(Incrementally adjusts the sound field (DSP) from the front or surround.)
 - **C- WIDTH** : You can set from 0 to 7.
(This sets the width of the center sound image. The higher the setting, the less sound comes from the center speaker.)

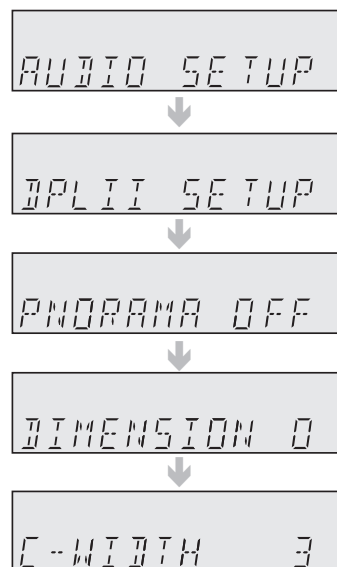

- PANORAMA, DIMENSION and CENTER WIDTH settings are enabled only if the mode is set to MUSIC.
- You cannot use Dolby Pro Logic II mode for multi channel signals such as Dolby Digital and DTS.
- Pro Logic works only for PCM audio signals with sampling frequencies of 32KHz, 44KHz or 48KHz.

Setup


SETTING TONE CONTROL

This will enable you to adjust the bass and treble level.

1. Press the **SETUP/MENU** button.
 - Each time the button is pressed, the mode switches between **SETUP ENTER** and **SETUP OFF**.
2. Press the **ENTER** button to select **SETUP ENTER**.
3. Press the **▲▼** buttons to select **TONE CONTROL**, and then press the **ENTER** or **►** button.
4. Press the **▲▼** buttons to select the option you want, and then press the **ENTER** or **►** button.
 - Each time you press this button, **TONE → BASS → TREBLE** will be selected in turn.
5. Press the **▲▼** buttons to set the Tone Control mode you want.
 - If it is set to the **TONE OFF**, Tone Control function will be disabled.
 - You can adjust it from -6 to +6dB by 1 step.
 - The sound gets quieter at -6dB and louder at +6dB.

- To exit setup mode -

- Press the **SETUP/MENU** button.
SETUP OFF appears on the display and Setup Mode is exited.

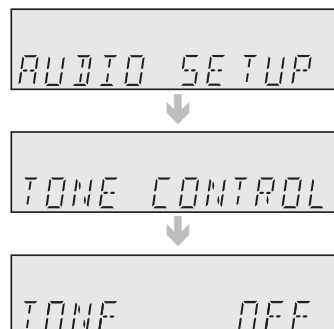

- The Tone Control function can be applied to all channels except for the subwoofer.

AV SYNC

Video may look slower than the audio if it is connected to a digital TV. If this occurs, adjust the audio delay time to match the video.


1. Press the **SETUP/MENU** button.
 - Each time the button is pressed, the mode switches between **SETUP ENTER** and **SETUP OFF**.
2. Press the **ENTER** button to select **SETUP ENTER**.
3. Press the **▲▼** buttons to select **AV SYNC**, and then press the **ENTER** or **►** button.
4. Press the **▲▼** buttons to set the AV Sync mode you want.
 - You can adjust it from OFF to 240MS in 10MS steps.



MP3 ENHANCER

This also helps enhance your sound experience (ex. mp3 music). Use this if you want to hear better sound from a low quality mp3 source.


1. Press the **SETUP/MENU** button.
 - Each time the button is pressed, the mode switches between **SETUP ENTER** and **SETUP OFF**.
2. Press the **ENTER** button to select **SETUP ENTER**.
3. Press the **▲▼** buttons to select **MP3 ENHANCER**, and then press the **ENTER** or **►** button.
4. Press the **▲▼** buttons to select **ON** or **OFF**.

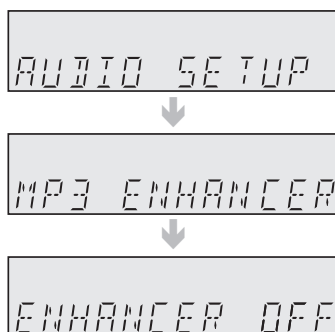

SMART VOLUME

This will regulate and stabilize the volume level against a drastic volume change when changing channels or during a scene transition.

1. Press the **SETUP/MENU** button.
 - Each time the button is pressed, the mode switches between **SETUP ENTER** and **SETUP OFF**.
2. Press the **ENTER** button to select **SETUP ENTER**.
3. Press the **▲▼** buttons to select **SMART VOLUME**, and then press the **ENTER** or **►** button.
4. Press the **▲▼** buttons to select **ON** or **OFF**.

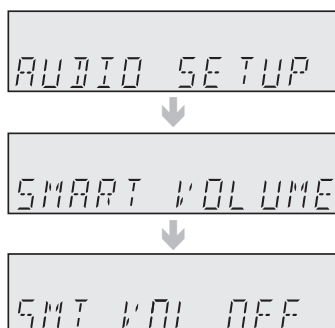

Setup

ASC (AUTO SOUND CALIBRATION) SETUP

By setting the ASC function just once when you relocate or install the unit, you can have the unit automatically recognize the distance between speakers, levels between channels, and frequency characteristics to create a 5.1-channel sound field optimized for your environment.

- Before Setting -

1. Plug the ASC microphone into the **ASC MIC** jack.
2. Place the ASC microphone at the listening position.
3. Press the **ASC** button on the front panel, and then press the **ENTER** button.

1. Press the **SETUP/MENU** button.
 - Each time the button is pressed, the mode switches between **SETUP**, **ENTER** and **SETUP OFF**.
2. Press the **ENTER** button to select **SETUP ENTER**.
3. Press the **▲▼** buttons to select **ASC SETUP**, and then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select **ASC START**, and then press the **ENTER** button.
 - To create the optimal 5.1 channel sound field, the selections are in the following sequence:
L → C → R → SR → SL → SW
 - **EQ ON** : The ASC(Auto Sound Calibration) EQ mode is set to on.
 - **EQ OFF**: The ASC(Auto Sound Calibration) EQ mode is set to off.
5. If you see a **ASC READY** message on the screen, press the **ENTER** button to apply the measurement value. And then unplug the ASC microphone.


AUDIO SETUP



ASC SETUP



ASC START

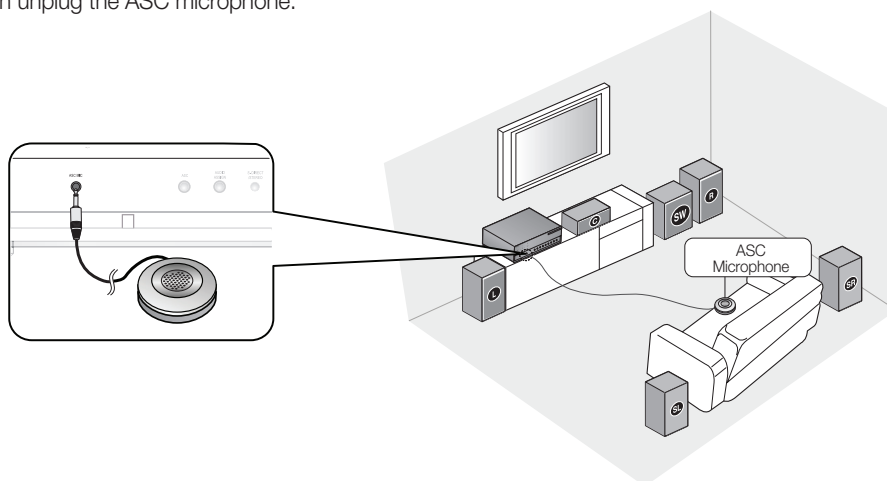

To cancel the ASC (Auto Sound Calibration) setup.

This will be automatically reverted if you press the **RETURN** button.

* If ASC error occurs, see "ASC Error List" on page 55.



- Setting the ASC function takes about 3 minutes.
- Because the volume level of the tone is fixed during the ASC setup, you cannot adjust the volume using the volume control.

- If the ASC microphone is disconnected during the ASC setup, the setup will be canceled.
- You can also press the **ASC** button on the remote control to use this function.

DRC SETUP

You can use this function to enjoy Dolby Digital sound when watching movies at low volume at night. DRC compresses the audio to make the loudest sounds quieter and the quietest sounds louder.

AUDIO SETUP



DRC SETUP

1. Press the **SETUP/MENU** button.
 - Each time the button is pressed, the mode switches between **SETUP ENTER** and **SETUP OFF**.
2. Press the **ENTER** button to select **SETUP ENTER**.
3. Press the **▲▼** buttons to select **DRC SETUP**, and then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to set the DRC Setup mode you want.
 - **STD** : Sets DRC effect to standard. • **MAX** : Sets DRC effect to maximum.
 - **MIN** : Sets DRC effect to minimum.

HDMI SETUP

Use this if you want to receive audio from HDMI connected external devices.

1. Press the **SETUP/MENU** button.
 - Each time the button is pressed, the mode switches between **SETUP ENTER** and **SETUP OFF**.
2. Press the **ENTER** button to select **SETUP ENTER**.
3. Press the **▲▼** buttons to select **HDMI SETUP**, and then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select the option you want, and then press the **ENTER** or **▶** button.
5. Press the **▲▼** buttons to set the HDMI Setup mode you want.
 - **HDMI AUDIO** : AVR(Audio Video Receiver), TV
 This preference determines whether audio received at the HDMI IN is output by the HDMI OUT.
 If you want to listen to audio from an HDMI connected external device through your HDMI connected TV's speakers, set it to TV. Otherwise, leave it on AVR to listen to audio from the A/V receiver.
 - AVR : HDMI audio is not output - TV : HDMI audio is output
 - **HDMI ANYNET+** : ON, OFF
 Anynet+ is a function that enables you to control other Samsung Devices with your Samsung TV's remote control.
 - ON : Anynet+ is enabled. - OFF : Anynet+ is disabled.
 - **HDMI SYNC** : ON, OFF
 The AV receiver can be set to automatically correct any delay between the video and the audio, based on the data from the connected TV.
 - ON : HDMI Sync is enabled. - OFF : HDMI Sync is disabled.



- HDMI Audio is enabled only if both the HDMI INPUT and HDMI OUT are connected properly and working normally.
- This function works only if your HDMI-compatible TV supports HDMI Sync.

VARIABLE SET (Low Power Consumption SETUP)

This function enhances electric power efficiency.

1. Press the **SETUP/MENU** button.
 - Each time the button is pressed, the mode switches between **SETUP ENTER** and **SETUP OFF**.
2. Press the **ENTER** button to select **SETUP ENTER**.
3. Press the **▲▼** buttons to select **VARIABLE SET**, and then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select **ON** or **OFF**.
 - **ON** : This is Samsung's electric power efficiency function, you can save about 30 % for power consumption.
 - **OFF** : Normal power efficiency function.



- This function is not available after the Tone Control, Speaker Level, SFE mode or ASC is changed from the factory setting.

Operation

USING THE SURROUND MODES

Using the SOUND EFFECT button on the front of the main unit

Selecting the SFE mode

1. Press the **SOUND EFFECT** button to select **SFE**.
 - Each time you press this button, **SFE → DPLII** will be selected in turn.
2. Press the **UP/DOWN** (**^**, **v**) button.
 - Each time you press the **UP/DOWN** (**^**, **v**) button, **STEREO → HALL 1 → HALL 2 → J.CLUB → CHURCH → ROCK → CLASSIC → LIVE → GAME → MOVIE → CONCERT → STADIUM** will be selected in turn.
 - You can also select the SFE mode by pressing the **DSP** button on the remote control.

Selecting the DPLII mode

1. Press the **SOUND EFFECT** button to select **DPLII**.
 - Each time you press this button, **SFE → DPLII** will be selected in turn.
2. Press the **UP/DOWN** (**^**, **v**) button.
 - Each time you press the **UP/DOWN** (**^**, **v**) button, **MUSIC → GAME → MATRIX → PL → MOVIE** will be selected in turn.
 - You can also select the DPLII mode by pressing the **PROLOGIC** button on the remote control.



- You cannot use Dolby Pro Logic II mode for multi channel signals such as Dolby Digital and DTS.
- Pro Logic works only for BITSTREAM audio signals with sampling frequencies of 32KHz, 44KHz or 48KHz.

Using the S.DIRECT/STEREO button on the front of the main unit

Press the **S.DIRECT/STEREO** button.

- Each time the button is pressed, the mode switches between the S. DIRECT mode and the STEREO mode.
- **S.DIRECT** : Outputs 2 CH PCM audio signal without any signal processing, providing higher audio quality. This is useful for obtaining the best sound from a connected CD player.
- **STEREO** : Outputs sound of the selected source in 2 CH stereo.

USING THE SURROUND MODES (Continued)

Surround Mode and Input Signal Chart

o = active, – = inactive

Surround Mode	Input Signal	Decoding	Output Channel				Display Information	
			L/R	C	SL SR	SUBW	Display Signal Format	Channel Status
DOLBY (MUSIC, GAME, MATRIX, PL, MOVIE)	Dolby D (5.1ch)	Dolby Digital 5.1	o	o	o	o	DIGITAL	L, C, R, SL, SR, SW
	Dolby D (2ch)	Pro Logic II	o	o	o	o	DIGITAL	L, C, R, SL, SR, SW
	Dolby D (2ch Surr)	Pro Logic II	o	o	o	o	DIGITAL	L, C, R, SL, SR, SW
	L.PCM (Audio)	Pro Logic II	o	o	o	o	L.PCM	L, C, R, SL, SR, SW
	Analog	Pro Logic II	o	o	o	o	Analog	L, C, R, SL, SR, SW
SFE	Dolby D (2ch)	DD+SFE	o	o	o	o	DIGITAL	L, C, R, SL, SR, SW
	Dolby D (2ch Surr)	DD+SFE	o	o	o	o	DIGITAL	L, C, R, SL, SR, SW
	L.PCM (Audio)	SFE	o	o	o	o	L.PCM	L, C, R, SL, SR, SW
	Analog	SFE	o	o	o	o	Analog	L, C, R, SL, SR, SW
STEREO	Dolby D (2ch)	Stereo	o	–	–	o	DIGITAL	L, R, SW
	Dolby D (2ch Surr)	Stereo	o	–	–	o	DIGITAL	L, R, SW
	L.PCM (Audio)	Stereo	o	–	–	o	L.PCM	L, R, SW
	L.PCM 96KHz	Stereo	o	–	–	o	L.PCM	L, R, SW
	Analog	Stereo	o	–	–	o	Analog	L, R, SW

- **L/R** : Front Speaker (Left/Right)
- **C** : Center Speaker
- **SL/SR** : Surround Speaker (Left/Right)
- **SW** : Subwoofer



- Channel status displays are dependent on the speaker configuration.
- SFE mode works with 2-ch signals.

USING THE SUBWOOFER SELECTION BUTTON

You can set the subwoofer to on/off.

Press the **SUBWOOFER** button.

Operation

LISTENING TO THE RADIO

You can listen to the radio by using either automatic or manual tuning.

1. Press the **INPUT SELECT** button to select **FM**.
2. Select a frequency (radio broadcast).
 - Preset tuning :
Press the **◀▶** buttons on the remote control to select the preset frequency.
 - Manual tuning 1 (Automatic tuning):
Press and hold the **TUNING/CH** (**▼**, **▲**) buttons on the remote control to automatically tune in a frequency.
 - Manual tuning 2 :
Press the **TUNING/CH** (**▼**, **▲**) buttons on the remote control to increase or decrease the frequency step by step.



■ You can also use the **SELECT** (**▼**, **▲**) buttons on the main unit to change the radio frequency.

To Listen in mono/stereo

Press the **MO/ST** button on the remote control.


- Each time you press this button, **STEREO** or **MONO** will be selected in turn.
- If you select **MONO** in an area with weak reception, it will help to reduce noise.
- This function works only with the remote control.

Presetting radio stations

You can preset up to 30 FM stations.

E.g.: Setting station FM 89.10 in preset 2.

1. Press the **INPUT SELECT** button to select **FM**.
2. Press the **TUNING/CH** (**▼**, **▲**) buttons on the remote control to select 89.10.
 - Refer to step 2 above to tune in automatically and manually.
3. Press the **MEMORY** button on the main unit.
 - You can also use the **TUNER MEMORY** button on the remote control.
 - Tuner number will blink on the display.
4. Press the **TUNING/CH** (**▼**, **▲**) buttons on the remote control to select preset 2.
 - You can select from presets 1 to 30.
5. Press the **MEMORY** button on the main unit.
 - Tuner number will disappear and station 89.10 will be saved in preset 2.
6. To preset other stations, repeat steps 2 to 5.

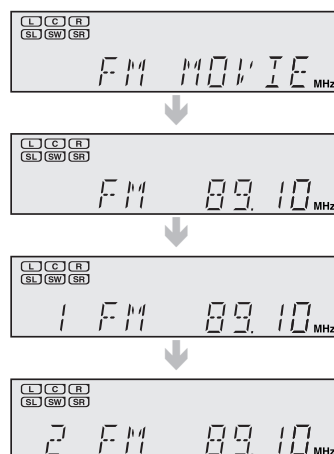

To Listen to Preset Station

- Press the **TUNING MODE** button to select **PRESET** and press the **SELECT** (**▼**, **▲**) buttons.


USING AN iPod

You can enjoy playback of your iPod using the supplied remote control.

Listening to Music (iPod audio function)

You can play music files stored in the iPod player by connecting it to the AV receiver.

1. Connect the iPod dock connector to the iPod jack on the AV Receiver.
2. Place the iPod in the dock.
 - Your iPod is automatically turned on.
3. Press the **INPUT SELECT** button on the remote control to select **IPOD AUDIO** mode.
4. Press the **PLAY** button on the remote control to play.
 - The AV receiver starts playing from the first track of the iPod player.
5. You can use the remote control to control simple playback functions such as the **PLAY**, **PAUSE**, **STOP**, **SKIP** (**⏮**, **⏭**) buttons.

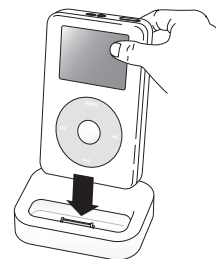

- See page 28 for compatible iPods.
Compatibility depends on the software version of your iPod.
- You can also select iPod by pressing the **iPod** button on the remote control.


Operation

USING AN iPod (Continued)


Watching a Movie (iPod Video function)

You can play video files stored in the iPod player on a TV by connecting it to the AV receiver.

1. Connect the iPod dock connector to the iPod jack on the AV receiver.
2. In the iPod screen, move to **Videos > Settings** and set the **TV Out** option to **On**.
3. Place the iPod in the dock.
4. Press the **INPUT SELECT** button on the remote control to select **IPOD VIDEO** mode.
5. Set the AV IN option of the TV connected to the AV receiver to **COMPOSITE**.

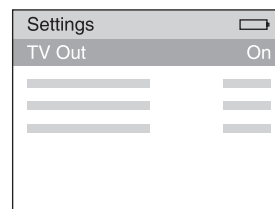


<iPod Screen>

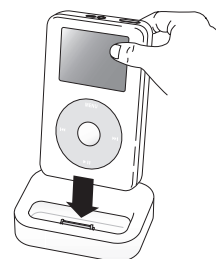

Follow the iPod onscreen guide through the following steps.

6. Press the **▲**, **▼** buttons on the remote control to select **Videos** and press the **ENTER** button.
7. Press the **▲**, **▼** buttons on the remote control to select **Movies** and press the **ENTER** button.
8. Press the **▲**, **▼** buttons to select the file to play and press the **ENTER** button.
 - The iPod's video files will be played on the TV screen.
9. You can use the remote control to control simple playback functions such as the **PLAY**, **PAUSE**, **STOP**, and **SKIP (◀◀, ▶▶)** buttons.
 - If you press the **PREV** button within 3 seconds after the playback, the player will stop playing and return to the list screen.
 - If you press the **PREV** button 3 seconds or later after the playback, the player will move to the start screen of the current file.
 - Press the **STOP** button to stop playing and return to the list screen.
 - Press the **RETURN** button to return to the previous menu.

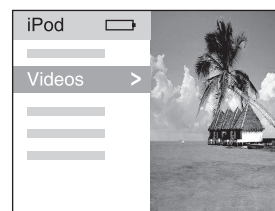

<iPod Screen>



- You must have the VIDEO (Monitor) output connected to your TV to view iPod video.
- See page 28 for compatible iPods. Compatibility depends on the software version of your iPod.
- When the current file is played to the end, the next file will not be played automatically. To play the next file, select a file to play in the list screen of the iPod player.
- No other screen than the playback one will appear on the TV screen. Check other screens on the iPod player.

CONVENIENT FUNCTIONS

Sleep timer function

You can set the time that this unit will shut itself off.

Press the **SLEEP** button.

- SLEEP : OFF → 15 → 30 → 45 → 60 → 90 → 120 M (MIN) will be selected in turn.



To check sleep timer

Press the **SLEEP** button.

- The remaining time before this unit will shut itself off is shown on the display.
- Pressing the button again changes the sleep time from what you set previously.

To cancel sleep timer

- Press the **SLEEP** button until **SLEEP OFF** appears on the display.

Mute function

This function is useful when answering a doorbell or telephone call.

Press the **MUTE** button.

- MUTE appears on the display.



To output sound again

Press the **MUTE** button again.

- MUTE will disappear and sound will output.

Adjust the display

You can adjust the brightness of the display.

Press the **DIMMER** button.

- Each time you press this button, the brightness changes as follows :
Dark → Bright.




- SLEEP, Mute and the Adjust Display functions can only be operated with the remote control.

Operation

Reset function

When the Power is on,

1. Press the **MUTE** button.
 - **MUTE** appears on the display.
2. Press the **9** button five times and then press the **ENTER** button.
 - **INITIAL : NO** appears on the display.
3. Press the **▲▼** buttons to select **YES**.
 - The unit will turn off after 5 seconds.

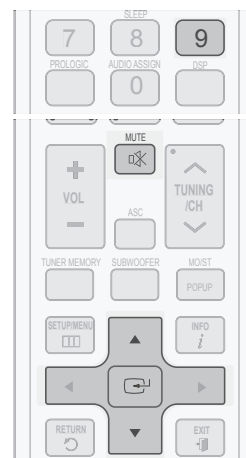

When the Power is Off,

1. Press and hold the **MEMORY** button on the front of your AV Receiver for longer than 5 seconds.
 - **POWER LED** will blink one time.



- Using the RESET function will erase all stored settings.
- Do not use this unless necessary.


SOFTWARE UPGRADE

Samsung may offer upgrades for AV Receiver's firmware in the future.

Please visit Samsung.com or contact the Samsung call center at 1-800-SAMSUNG (726-7864) to receive information about downloading upgrades and using a USB drive. Upgrades will be possible by connecting a USB drive to the USB port located on your AV Receiver.



- Insert a USB drive containing the firmware upgrade into the USB port on the back of the main unit.
- Please be careful to not disconnect the power or remove the USB drive while upgrades are being applied. The main unit will turn off automatically after completing the firmware upgrade. When software is upgraded, settings you have made will return to their default (factory) settings. We recommend you write down your settings so that you can easily reset them after the upgrade.
- If you failed software upgrade, it is strongly recommended whole USB data format to FAT16 and retry software upgrade.
- The NTFS USB File System can not be supported.
- Depending on the manufacturer, the USB may not be supported.

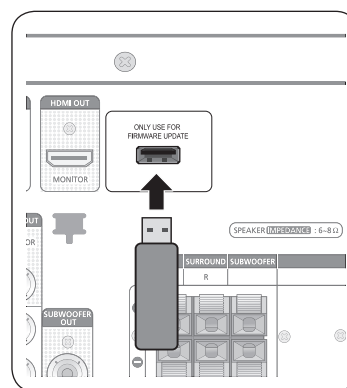

OPERATING YOUR TV WITH THE REMOTE CONTROL

1. Press the **POWER** button to turn on the TV.
2. Press the **AMP/TV** button to set the remote to TV mode.
3. Point the remote control toward the TV.
4. While holding down **POWER** button, enter the code corresponding to your brand of TV.
 - If there is more than one code listed for your TV in the table, enter one at a time to determine which code works.
 - If the code matches the TV's code, the TV will be turned off.
5. If TV is turned on or off when you press the **POWER** button of the remote control, the setting is completed.
 - You can use the TV POWER, VOLUME, CHANNEL, MENU and Numeric buttons (0~9).



- The remote control may not work on some brands of TVs. Also, some operations may not be possible depending on your brand of TV.
- The remote control will work with Samsung TVs by default.

Miscellaneous

OPERATING YOUR TV WITH THE REMOTE CONTROL (Continued)

TV Brand Code List

Brand	Code Number	Brand	Code Number	Brand	Code Number
Admiral (M.Wards)	056, 057, 058	Luxman	018	Sylvania	018, 040, 048, 054, 059, 060, 062
A Mark	001, 015	LXI (Sears)	019, 054, 056, 059, 060, 062, 063, 065, 071	Symphonic	061, 095, 096
Anam	001, 002, 003, 004, 005, 006, 007, 008, 009, 010, 011, 012, 013, 014	Magnavox	015, 017, 018, 048, 054, 059, 060, 062, 072, 089	Tatung	006
AOC	001, 018, 040, 048	Marantz	040, 054	Techwood	018
Bell & Howell (M.Wards)	057, 058, 081	Matsui	054	Teknika	003, 015, 018, 025
Brocsonic	059, 060	MGA	018, 040	TMK	018, 040
Candle	018	Mitsubishi/MGA	018, 040, 054, 059, 060, 075, 101	Toshiba	019, 057, 063, 071, 101, 107, 109, 110, 111, 113
Cetronic	003	MTC	018	Vidtech	018
Citizen	003, 018, 025	NEC	018, 019, 020, 040, 059, 060	Videch	059, 060, 069
CINEMA	097	Nikei	003	Wards	015, 017, 018, 040, 048, 054, 060, 064
Classic	003	Onking	003	Yamaha	018
Concerto	018	Onwa	003	York	040
Contec	046	Panasonic	006, 007, 008, 009, 054, 066, 067, 073, 074	Yupiteru	003
Coronado	015	Penney	018	Zenith	058, 079
Craig	003, 005, 061, 082, 083, 084	Philco	003, 015, 017, 018, 048, 054, 059, 062, 069, 090	Zonda	001
Croslex	062	Philips	015, 017, 018, 040, 048, 054, 062, 072, 112, 114, 117, 118	Dongyang	003, 054
Crown	003	Pioneer	063, 066, 080, 091	LOWE	054
CURTIS MATHES	059, 061, 063	Portland	015, 018, 059	FINLUX	054, 109, 114
CXC	003	Proton	040	YOKO	054
Daewoo	002, 003, 004, 015, 016, 017, 018, 019, 020, 021, 022, 023, 024, 025, 026, 027, 028, 029, 030, 032, 034, 035, 036, 040, 048, 059, 090, 099, 100	QUASAR	006, 066, 067	LOEWE OPTA	054, 114
Daytron	040	Radio Shack	017, 048, 056, 060, 061, 075	PHONOLA	054, 112, 114
Dynasty	003	RCA/Proscan	018, 059, 067, 076, 077, 078, 092, 093, 094	RADIOLA	054, 112
Emerson	003, 015, 040, 046, 059, 061, 064, 082, 083, 084, 085	Realistic	003, 019	SCHNEIDER	054
Fisher	019, 065, 103	Sampo	040	AKAI	103
Funai	003	Samsung	000, 015, 016, 017, 040, 043, 046, 047, 048, 049, 054, 059, 060, 098	GRUNDIG	108, 109, 113, 119, 120, 121
Futuretech	003	Sanyo	019, 061, 065, 101, 102, 103, 104	BLAUPUNKT	108
General Electric (GE)	006, 040, 056, 059, 066, 067, 068	Scott	003, 040, 060, 061	SIEMENS	108
Hall Mark	040	Sears	015, 018, 019	CGE	113
Hitachi	015, 018, 050, 059, 069	Sharp	015, 057, 064, 101, 105, 106, 115	IMPERIAL	113
Inkel	045	Signature 2000 (M.Wards)	057, 058	MIVAR	113
JC Penny	056, 059, 067, 086	Sony	050, 051, 052, 053, 055, 101	SABA	114
JVC	070	Soundesign	003, 040	BANG&OLUFSEN	114
KTV	059, 061, 087, 088	Spectricon	001	BRIONVEGA	114
KEC	003, 015, 040	SSS	018	FORMENTI	114
KMC	015			METZ	114
LG (Goldstar)	001, 015, 016, 017, 037, 038, 039, 040, 041, 042, 043, 044, 054, 086			WEGA	114
				RADIOMARELLI	114
				SINGER	114
				SINUDYNE	114
				TELEFUNKEN	116

OPERATING YOUR DVD OR BD PLAYER WITH THE REMOTE CONTROL

1. Press the **POWER** button to turn on the DVD (BD) player.
2. Press the **BD/DVD** button on the remote control to set the remote to DVD (BD) mode.
3. Point the remote control toward the DVD (BD).
4. While holding down **POWER** button, enter the code corresponding to your brand of DVD (BD).
 - If there is more than one code listed for your DVD (BD) in the table, enter one at a time to determine which code works.
 - If the code matches the DVD (BD)'s code, the DVD (BD) will be turned off.
5. If DVD is turned on or off when you press the **POWER** button of the remote controller, the setting is completed.
 - You can use DVD (BD) POWER, PLAY, PAUSE, STOP, SKIP, MENU and Numeric buttons (0~9).



- The remote control may not work on some brands of DVD.
Also, some operations may not be possible depending on your brand of DVD.
- The remote control will work with Samsung DVD (BD) by default.

DVD Brand Code List

Brand	Code Number	Brand	Code Number	Brand	Code Number
DENON	003, 032	ONKYO	004, 014	TOSHIBA	004, 018
DOONoon	019	OPTIMUS	011	YAMAHA	009, 033
DMTECH	017	PANASONIC	021	ZENITH	004, 024
FISHER	002	PROSCAN	006	TAEGWANG	026
GE	006	PHILIPS	004, 023	PS2	028
HARMAN/KARDON	012	PIONEER	007, 011, 022, 025	X-BOX	029
JVC	010, 013	RCA	006	APEX	030
KENWOOD	008	SAMSUNG	000, 027	Marantz	031
LG	001	SANYO	002		
MAGNAVOX	004	SONY	015, 020		
MITSUBISHI	005, 016	THETA DIGITAL	011		

BD player Brand Code List

Brand	Code Number
SAMSUNG	000, 001, 002, 003, 004



- The remote control will control Samsung BD players only.

Troubleshooting

Before requesting service, please check the following.

Symptom	Check	Remedy
The unit will not turn on.	<ul style="list-style-type: none"> Is the power cord plugged into the outlet? 	<ul style="list-style-type: none"> Connect the power plug to the outlet.
A function does not work when the button is pressed.	<ul style="list-style-type: none"> Is there static electricity in the air? 	<ul style="list-style-type: none"> Disconnect the power plug and connect it again.
Sound is not produced.	<ul style="list-style-type: none"> Are the speakers and external components connected properly? Is the Mute function on? Is the volume set to minimum? Is the Speaker Size set incorrectly to NONE? 	<ul style="list-style-type: none"> Connect them correctly. Press the MUTE button to cancel the function. Adjust the volume. Refer to pages 35 to select LARGE, SMALL or YES.
Picture does not appear on a TV when the function is selected.	<ul style="list-style-type: none"> Is the external component connected properly? 	<ul style="list-style-type: none"> Connect it correctly.
Remote controller does not work.	<ul style="list-style-type: none"> Are the batteries drained? Is the distance between remote control and main unit too great? 	<ul style="list-style-type: none"> Replace with new batteries. Operate at close distance.
The sound from the left/right channels is reversed.	<ul style="list-style-type: none"> Are the left/right speaker or left/right input/output cables connected properly? 	<ul style="list-style-type: none"> Check the left/right channel and connect it/them correctly.
Can't receive radio broadcasts.	<ul style="list-style-type: none"> Is FM antenna connected properly? 	<ul style="list-style-type: none"> Connect the antenna correctly. If the input strength of antenna signal is weak, install the FM antenna in a place with good reception.
There is no sound from surround speakers.	<ul style="list-style-type: none"> Are the surround speakers connected properly? Is SURR (surround) incorrectly set to NONE in the Speaker Size? Is surround mode set to stereo? 	<ul style="list-style-type: none"> Refer to pages 16 ~19 to connect them properly. Refer to page 35 to select LARGE or SMALL. Refer to pages 44 ~ 45 to select proper Surround Mode.
Can't select Dolby Pro Logic II mode.	<ul style="list-style-type: none"> Is the input signal selected properly? 	<ul style="list-style-type: none"> Only 2 channel signal can select Dolby Pro Logic II mode. (ex:Dolby Digital, PCM, 2 channel analog input signal.)

Symptom	Check	Remedy
There is no sound when playing a DTS encoded DVD.	<ul style="list-style-type: none"> Is Digital input selected? 	<ul style="list-style-type: none"> Check whether the DVD player is properly connected and refer to page 30 to select the digital input.

Product protection function

Heat protection

- The protection function will come on if the main unit or power transformer overheats.
- "PROTECTION" will appear in the display .

This function will come on :

- If speaker terminal is shorted
- If speaker cable is shorted

If there is no problem when you turn the unit on again after turning it off, PROTECTION mark will disappear on the display and the unit will work properly.



- If PROTECTION appears on the display, check whether the speaker terminal is shorted and then turn on the unit.

ASC Error List

Error No.	VFD Message	Action
E01	HP CONCT	Disconnect the headphones.
E02	NO MIC	Connect the microphone.
E03	NOISY	Take an appropriate action to reduce the surrounding noise.
E04	MIC LEVL	The speaker is too close to the microphone. Check the distance between speaker and microphone.
E05	NO FRONT	Check if the front speaker is connected properly.
E07	LEVL OVR	Check the position of each of speaker and microphone.
E08	DIST OVR	The distance between speaker and microphone exceeds the acceptable value. Check the location of microphone and each speaker.
E13	TIME OVR	Unplug the power cable and plug it back. Then, perform ASC again.
E14	CODE ERR	Unplug the power cable and plug it back. Then, perform ASC again.

Appendix

SPECIFICATIONS

GENERAL	Power supply		120V, 60 Hz
	Standby power consumption		0.9W
	Power consumption	Main unit	75W
	Weight		12.3 lbs
	Dimensions (W x H x D)		17.2 x 5.6 x 14.3 inches
	Operating temperature range		41°F~+95°F
	Operating humidity range		10%~75%
FM TUNER	Frequency response		87.5~108.0MHz
	Usable sensitivity		12dBf
	S/N ratio		MONO/STEREO 55/55dB
	Distortion		MONO/STEREO 0.3/0.8%
	Stereo separation		30dB
	Tuner output level		1kHz, 75kHz Dev
AMPLIFIER	Rated output		20Hz~20kHz/THD = 0.9%
	Front speaker(left+right)		6 Ω 100W/CH
	Center speaker		6 Ω 100W/CH
	Surround speaker(left+right)		6 Ω 100W/CH
	Subwoofer speaker		6 Ω 100W/CH
	Input sensitivity/impedance		450mV/47k Ω
	S/N ratio (analog input)		80dB
	Separation (1kHz)		60dB
FREQUENCY RESPONSE	Analog input		20Hz~20kHz(\pm 3dB)
	Digital input/96kHz PCM		20Hz ~44kHz(\pm 3dB)
HDMI	Input		Compatible 1080p
	Output		Compatible 1080p
VIDEO OUTPUT	TV format		NTSC/PAL
	Input level/impedance		1Vp-p/75 Ω
	Output level/impedance		1Vp-p/75 Ω
	Video frequency response		5Hz to 10kHz(-3dB)
	S/N ratio		60dB

* S/N Ratio, Distortion, Separation and Usable sensitivity are based on measurement using AES (Audio Engineering Society) guidelines.

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.
- Design and specifications are subject to change without prior notice.

SAMSUNG AV receiver

LIMITED WARRANTY TO ORIGINAL PURCHASER

This SAMSUNG brand product, as supplied and distributed by Samsung Electronics America, Inc. (SAMSUNG) and delivered new, in the original carton to the original consumer purchaser, is warranted by SAMSUNG against manufacturing defects in materials and workmanship for a limited warranty period of:

One (1) Year Parts and Labor*

(*90 days Parts and Labor for Commercial Use)

This limited warranty begins on the original date of purchase, and is valid only on products purchased and used in the United States. To receive warranty service, the purchaser must contact SAMSUNG for problem determination and service procedures. Warranty service can only be performed by a SAMSUNG authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to SAMSUNG or SAMSUNG's authorized service center. Transportation of the product to and from the service center is the responsibility of the purchaser.

SAMSUNG will repair or replace this product, at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above. All replaced parts and products become the property of SAMSUNG and must be returned to SAMSUNG. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer.

SAMSUNG's obligations with respect to software products distributed by SAMSUNG under the SAMSUNG brand name are set forth in the applicable end user license agreement. Non-SAMSUNG hardware and software products, if provided, are on an "AS IS" basis. Non-SAMSUNG manufacturers, suppliers, publishers, and service providers may provide their own warranties.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this product, and shall not apply to the following, including, but not limited to: damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, parts, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied and authorized by SAMSUNG, or which damage this product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; product removal or reinstallation; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems. SAMSUNG does not warrant uninterrupted or error-free operation of the product.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON SAMSUNG. SAMSUNG SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST SAMSUNG BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY SAMSUNG AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PURCHASER AND PURCHASER'S PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT SOLD BY SAMSUNG NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF SAMSUNG. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

To obtain warranty hardware service, please contact SAMSUNG at:

Samsung Electronics America, Inc.
105 Challenger Road Ridgely Park, NJ07660-0511
1-800-SAMSUNG(726-7864) and www.samsung.com

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Area	Contact Center ☎	Web Site
■ North America		
Canada	1-800-SAMSUNG (726-7864)	www.samsung.com
Mexico	01-800-SAMSUNG (726-7864)	www.samsung.com
U.S.A	1-800-SAMSUNG (726-7864)	www.samsung.com
■ Latin America		
Argentina	0800-333-3733	www.samsung.com
Brazil	0800-124-421 4004-0000	www.samsung.com
Chile	800-SAMSUNG (726-7864)	www.samsung.com
Nicaragua	00-1800-5077267	www.samsung.com
Honduras	800-7919267	www.samsung.com
Costa Rica	0-800-507-7267	www.samsung.com
Ecuador	1-800-10-7267	www.samsung.com
El Salvador	800-6225	www.samsung.com
Guatemala	1-800-299-0013	www.samsung.com
Jamaica	1-800-234-7267	www.samsung.com
Panama	800-7267	www.samsung.com
Puerto Rico	1-800-682-3180	www.samsung.com
Rep. Dominica	1-800-751-2676	www.samsung.com
Trinidad & Tobago	1-800-SAMSUNG (726-7864)	www.samsung.com
Venezuela	0-800-100-5303	www.samsung.com
Colombia	01-8000112112	www.samsung.com
■ Europe		
Austria	0810 - SAMSUNG (7267864, € 0.07/min)	www.samsung.com
Belgium	02-201-24-18	www.samsung.com/ be (Dutch) www.samsung.com/ be_fr (French)
Czech	800 - SAMSUNG (800-726786)	www.samsung.com
Denmark	70 70 19 70	www.samsung.com
Finland	030 - 6227 515	www.samsung.com
France	01 48 63 00 00	www.samsung.com
Germany	01805 - SAMSUNG (726-7864 € 0,14/Min)	www.samsung.com
Hungary	06-80-SAMSUNG (726-7864)	www.samsung.com
Italia	800-SAMSUNG (726-7864)	www.samsung.com
Luxemburg	261 03 710	www.samsung.com
Netherlands	0900-SAMSUNG (0900-7267864) (€ 0,10/Min)	www.samsung.com
Norway	815-56 480	www.samsung.com
Poland	0 801 1SAMSUNG (172678) 022-607-93-33	www.samsung.com
Portugal	80820-SAMSUNG (726-7864)	www.samsung.com
Slovakia	0800-SAMSUNG (726-7864)	www.samsung.com
Spain	902 - 1 - SAMSUNG (902 172 678)	www.samsung.com
Sweden	0771 726 7864 (SAMSUNG)	www.samsung.com
U.K	0845 SAMSUNG (7267864)	www.samsung.com
Eire	0818 717100	www.samsung.com

Area	Contact Center ☎	Web Site
Switzerland	0848 - SAMSUNG (7267864, CHF 0.08/min)	www.samsung.com/ch www.samsung.com/ ch_fr/ (French)
Lithuania	8-800-77777	www.samsung.com
Latvia	8000-7267	www.samsung.com
Estonia	800-7267	www.samsung.com
■ CIS		
Russia	8-800-555-55-55	www.samsung.com
Georgia	8-800-555-555	
Armenia	0-800-05-555	
Azerbaijan	088-55-55-555	
Kazakhstan	8-10-800-500-55-500	
Uzbekistan	8-10-800-500-55-500	www.samsung.com
Kyrgyzstan	00-800-500-55-500	www.samsung.com
Tadjikistan	8-10-800-500-55-500	www.samsung.com
Ukraine	0-800-502-000	www.samsung.ua www.samsung.com/ ua_ru
Belarus	810-800-500-55-500	
Moldova	00-800-500-55-500	
■ Asia Pacific		
Australia	1300 362 603	www.samsung.com
New Zealand	0800 SAMSUNG (0800 726 786)	www.samsung.com
China	400-810-5858 010-6475 1880	www.samsung.com
Hong Kong	(852) 3698-4698	www.samsung.com/ hk www.samsung.com/ hk_en/
India	3030 8282 1800 110011 1800 3000 8282 1800 266 8282	www.samsung.com
Indonesia	0800-112-8888 021-5699-7777	www.samsung.com
Japan	0120-327-527	www.samsung.com
Malaysia	1800-88-9999	www.samsung.com
Philippines	1-800-10-SAMSUNG (726-7864) 1-800-3-SAMSUNG (726-7864) 1-800-8-SAMSUNG (726-7864) 02-5805777	www.samsung.com
Singapore	1800-SAMSUNG (726-7864)	www.samsung.com
Thailand	1800-29-3232 02-689-3232	www.samsung.com
Taiwan	0800-329-999	www.samsung.com
Vietnam	1 800 588 889	www.samsung.com
■ Middle East & Africa		
Turkey	444 77 11	www.samsung.com
South Africa	0860-SAMSUNG (726-7864)	www.samsung.com
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com
Bahrain	8000-4726	
Jordan	800-22273	



QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT	WRITE
IN THE US	1-800-SAMSUNG (7267864)	www.samsung.com/us	Samsung Electronics America, Inc. 105 Challenger Road Ridgefield Park, NJ 07660-0511

Code No. AH68-02266R