


THOMSON

RT234L/M

EN

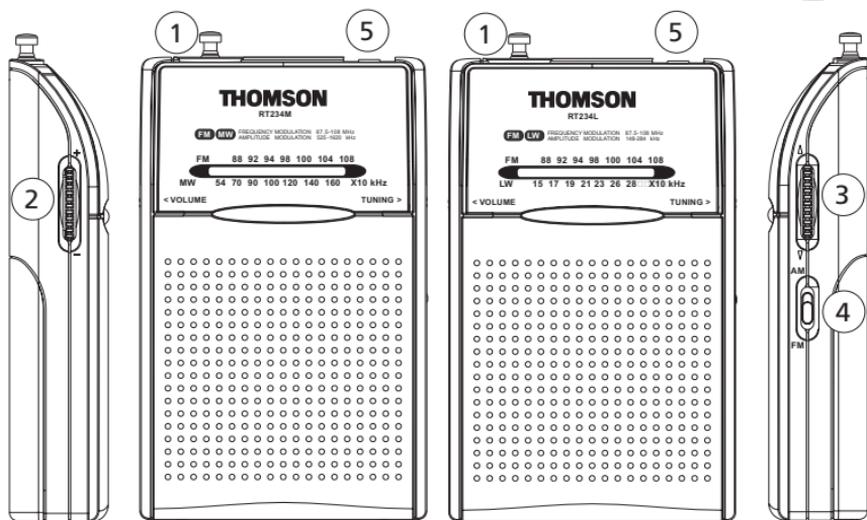

RT234M

RT234L

Safety Information

- Make sure that you keep your set away from water and high temperatures.
- Do not use your system immediately after transporting it from a cold place to a warm place, as condensation may cause the system to malfunction.
- Keep your unit away from humid areas and abnormally hot places.
- To prevent personal injury, do not reverse any batteries and do not mix battery types.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- The rating plate is located at the back cabinet of apparatus.



Please respect the environment. Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.

Power Supply

1. Remove the lid of the battery compartment by sliding it outward in the direction of the arrow.
2. Insert 2 UM4 / AAA / R3 batteries into the compartment.
3. Replace the lid.

General Controls

- (1) Telescopic antenna
- (2) Volume control / on / off
- (3) Tuning control
- (4) Band selector (FM/MW for RT234M, FM/LW for RT234L)
- (5) Earphone jack

Power on / off the unit

1. Scroll the volume knob upward to turn on the unit, you will hear a "click" sound.
2. Scroll the volume knob downward to turn off the unit, please make sure you hear a "click" sound.

Using the Radio

1. Turn on the radio by rotating the volume knob.
2. Use the band selector to select band (FM/MW for RT234M, FM/LW for RT234L).
3. Use the tuning control to tune to your desired radio station.
4. Adjust the volume level.

To enhance radio reception ability:
FM: Extend the telescopic antenna.
MW/LW: Rotate the unit horizontally for optimum reception.

Listening with earphone

Connect earphones to the earphones jack on the top of the unit.