 


Optical/Coaxial Digital Audio to Analog Audio Converter DX-SF110

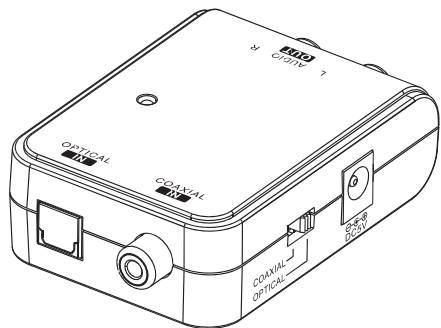

 
Package contents

- Optical/Coaxial Digital Audio to Analog Audio Converter
- Power adapter
- RCA cable
- *Quick Setup Guide*


Features

- Convert digital audio to analog audio signals
- Optical or Coaxial Digital input selectable. Perfect for connecting audio devices that only have digital audio outputs, to devices that only have analog audio inputs
- PCM stereo support

Top view

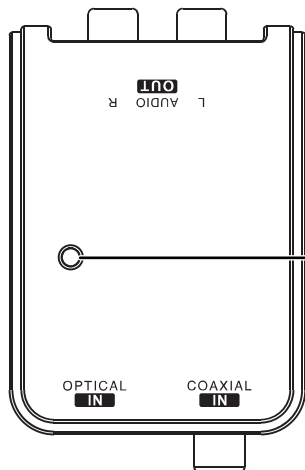

Side view

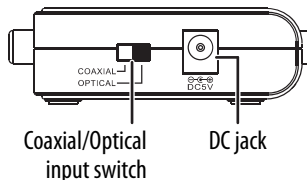 

LED indicator

 
Setting up your converter

Note: Before you install this device, turn off the audio and video devices that you will be connecting.

If your digital audio output device has both optical digital and coaxial digital connections, select the type of connection you prefer. If your output device only has one or the other, select the connection that works with your system. Go to the *Optical connection* or *Coaxial connection* section, whichever you select, or whichever is appropriate for your system.

Optical connection

- 1 Slide the selector switch on the side of the converter to **OPTICAL**.
Caution: A digital optical cable is fragile. DO NOT BEND THE CABLE.
- 2 Connect a digital optical cable to the **OPTICAL IN** port on the audio converter, then connect it to the OPTICAL OUT port on your audio or video device.
- 3 Connect a RCA stereo audio cable to the **AUDIO OUT (R and L)** jacks on the audio converter, then connect it to the AUDIO IN (R and L) jacks on your audio device.
- 4 Connect the cable from the power adapter to the DC jack of your audio converter, then plug the power adapter into an AC wall outlet.
- 5 Turn on the power to the connected devices and begin playback. If you are unable to hear the audio output from your stereo system, check the connections and settings to make sure that they are all correct.

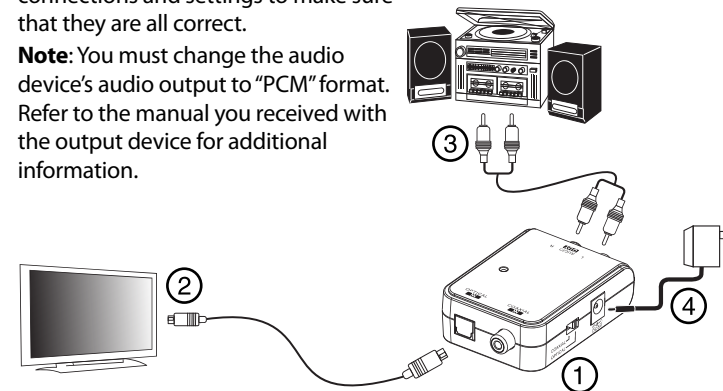


Note: You must change the audio device's audio output to "PCM" format. Refer to the manual you received with the output device for additional information.

Coaxial connection

- 1 Slide the selector switch on the side of the converter to **COAXIAL**.
- 2 Connect a coaxial digital cable to the **COAXIAL IN** port on the audio converter, then connect it to the DIGITAL OUT port on your audio or video device.
- 3 Connect a RCA stereo audio cable to the **AUDIO OUT (R and L)** jacks on the audio converter, then connect it to the AUDIO IN (R and L) jacks on your audio device.
- 4 Connect the cable from the power adapter to the DC jack of your audio converter, then plug the power adapter into an AC wall outlet.
- 5 Turn on the power to the connected devices and begin playback. If you are unable to hear the audio output from your stereo system, check the connections and settings to make sure that they are all correct.

 Note: You must change the audio device’s audio output to “PCM” format. Refer to the manual you received with the output device for additional information.

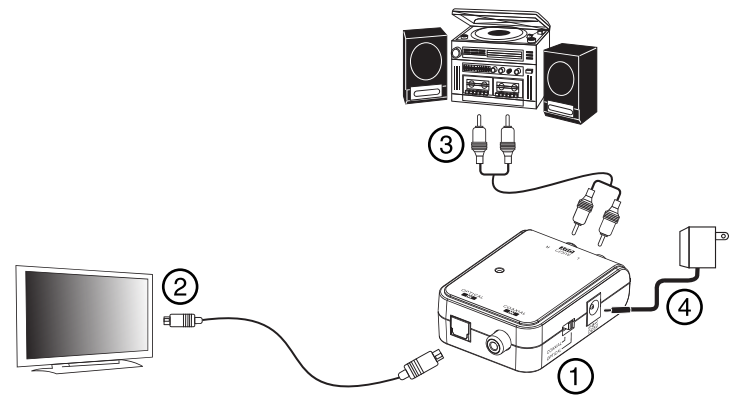

Specifications

Digital Audio Format Support LPCM 44KHz, 48KHz, 96KHz
 Power 5 VDC, 600 mA

Important safety information

- Indoor use only.
- There are no user serviceable parts. Do not open the housing.
- Do not use in a high humidity environment.
- Use the attached AC/DC adapter only.

One-year limited warranty

Visit www.dynexproducts.com for details.

Contact Dynex:

For customer service, please call 1-800-305-2204
www.dynexproducts.com

Distributed by Best Buy Purchasing, LLC
 7601 Penn Avenue South, Richfield, MN USA 55423-3645
 © 2012 BBY Solutions, Inc., All Rights Reserved. DYNEX is a trademark of BBY Solutions, Inc.
 Registered in some countries. All other products and brand names are trademarks of their respective owners.