

# Setting Up Your MX420 In Default Mode (Tel Priority Mode) Without An Answering Machine






### Connecting The Phone Lines






#### **Before**

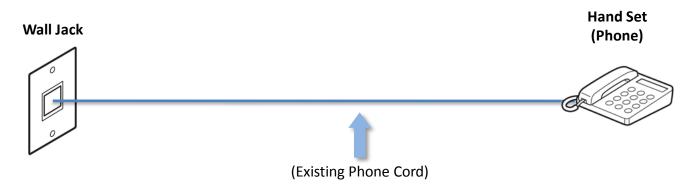


A C1 - --

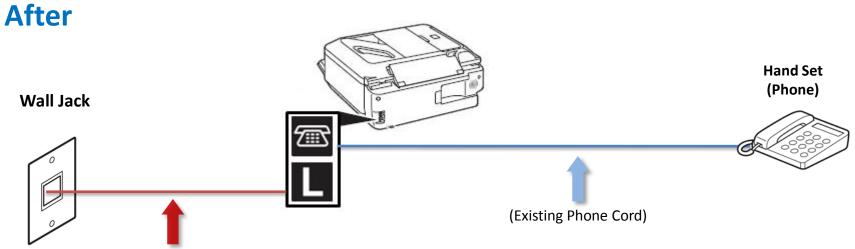

(Phone Cord included with Canon printer)




Plug the provided phone cord into the wall jack

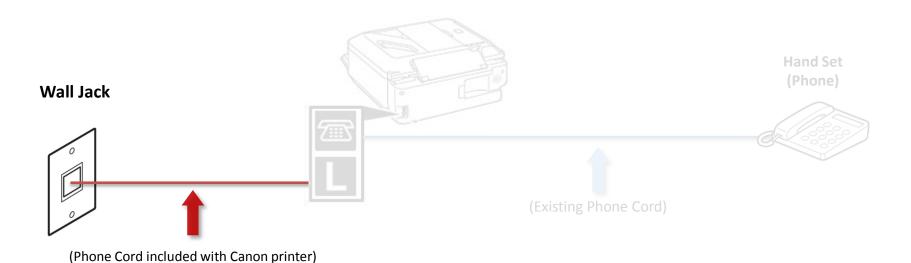




 Plug the provided phone cord into the "L" jack located on the rear of the multifunction

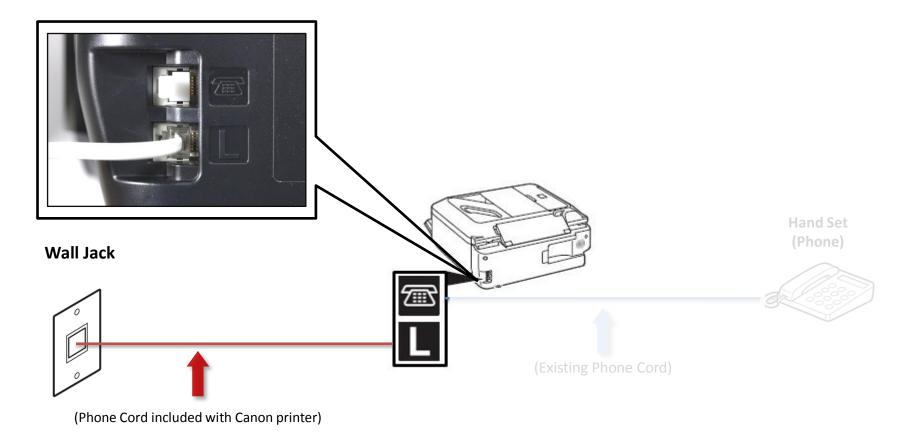




Remove the white plug (D) from the upper jack.

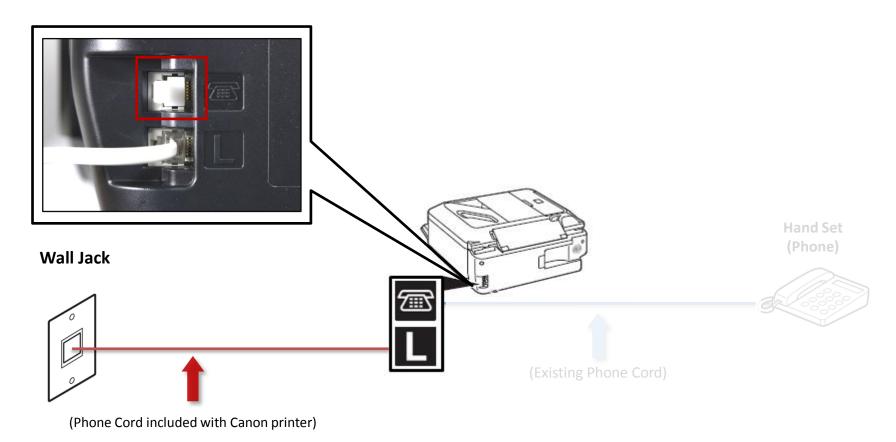




 Plug the second phone cord into the "telephone" jack located on the rear of the multifunction

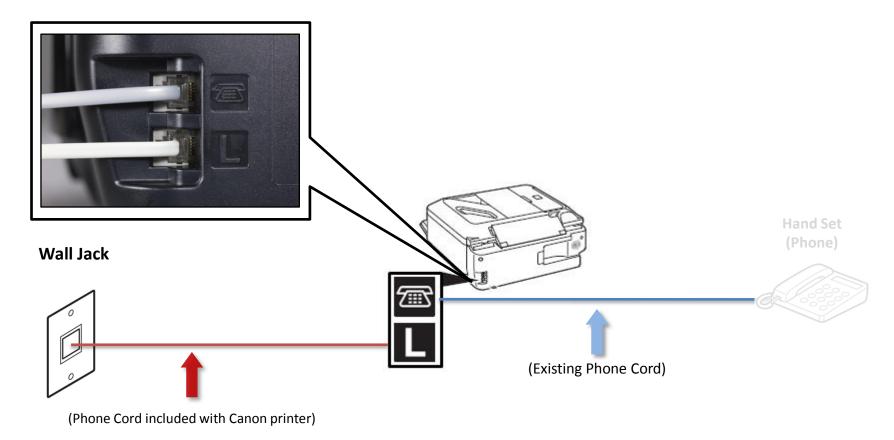



Plug the second phone cord into the phone

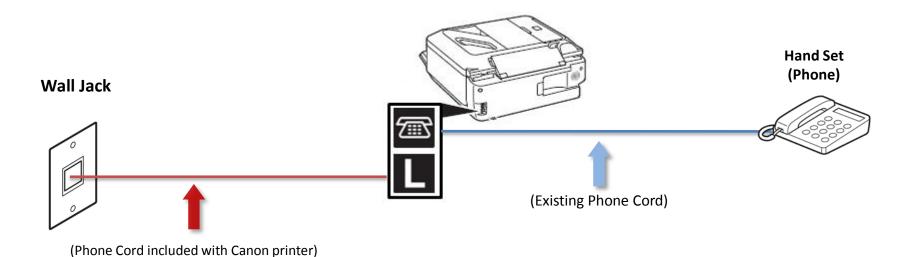








## Setting Up The Receive Mode





Turn on the MX420 by pressing the **ON** button.

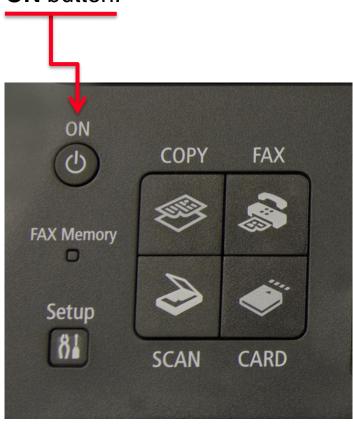

#### Step 2

Press the **FAX** button.





The fax standby screen will appear.

#### Step 4

Press the center **FUNCTION** button.







The Receive mode settings screen will appear.



#### Step 6

Use the **UP** or **DOWN** button to select "TEL priority mode".





Press the right **FUNCTION** button under the **Advanced** label



#### Step 8

Use the **UP** or **DOWN** button to select "User-friendly reception".





Ensure "User-friendly reception" is selected



#### Step 10

Press the OK button





The "User-friendly reception" screen will appear



#### Step 12

Use the **UP** or **DOWN** button to select "ON"





Ensure "ON" is selected



#### Step 14

Press the **OK** button





A confirmation screen will appear briefly



#### Step 16

You will return to the "Advanced" selection screen





#### Press the **BACK** button



#### Step 18

You will return to the "Receive mode setting" screen. Confirm that "Tel priority mode" is selected





Press the **OK** button

# Receive mode settings FAX only mode DRPD TEL priority mode Advanced

#### Step 20

You will return to the "Fax standby screen". The MX420 is ready to receive a fax





#### Receiving A Fax

#### To receive a fax:

- Pick up the handset on the phone connected to the MX420.
- Listen for fax tones.
- When the tones stop hang up the handset.
- The MX420 will receive the fax document.

**IMPORTANT**: In order to receive a fax, you must pick up the handset on a phone that is connected to the multifunction.



