

4260A UNIVERSAL BRIDGE

OPERATING AND SERVICE MANUAL

HEWLETT  PACKARD



CERTIFICATION

The Hewlett-Packard Company certifies that this instrument was thoroughly tested and inspected and found to meet its published specifications when it was shipped from the factory. The Hewlett-Packard Company further certifies that its calibration measurements are traceable to the U.S. National Bureau of Standards to the extent allowed by the Bureau's calibration facility.

WARRANTY AND ASSISTANCE

All Hewlett-Packard products are warranted against defects in materials and workmanship. This warranty applies for one year from the date of delivery, or, in the case of certain major components listed in the operating manual, for the specified period. We will repair or replace products which prove to be defective during the warranty period. No other warranty is expressed or implied. We are not liable for consequential damages.

For any assistance contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.



OPERATING AND SERVICE MANUAL

MODEL 4260A UNIVERSAL BRIDGE

SERIALS PREFIXED: 601-, 602-

This manual applies directly to standard Model 4260A Universal Bridges with serial prefix number 601- or 602-. See Table 7-1 in Section VII (Manual Changes and Options) for changes required to adapt this manual to older instruments.

Copyright HEWLETT-PACKARD COMPANY 1965
1501 PAGE MILL ROAD, PALO ALTO, CALIFORNIA, U.S.A.

MANUFACTURED BY YOKOGAWA, HEWLETT-PACKARD LIMITED, JAPAN

 


TABLE OF CONTENTS

Section	Page
I GENERAL INFORMATION	1-1
1-1. Description	1-1
1-4. Terminology	1-1
1-6. Instrument Identification	1-1
1-8. Applications	1-1
1-10. Specifications	1-1
1-12. Auxiliary Equipment Required	1-1
II INSTALLATION	2-1
2-1. Introduction	2-1
2-3. Unpacking and Inspection	2-1
2-5. Storage and Shipment	2-1
2-11. Operation from 115 or 230 Volts.	2-3
2-13. 3-Conductor Power Cable	2-3
III OPERATION	3-1
3-1. Introduction	3-1
3-3. Turn-On Procedure	3-1
3-5. Use of the DQ Vernier	3-1
3-7. Dc Resistance Measurements	3-1
3-8. Power Considerations	3-1
3-10. Measurements	3-1
3-16. Capacitance Measurements	3-3
3-17. Introduction	3-3
3-19. Residual Capacitance.	3-3
3-21. Cs and Cp Measurement Differences	3-4
3-23. Measurement Procedure	3-4
3-25. Voltage Across Unknown C	3-5
3-27. Influence of D in Cp Auto Measurement	3-5
3-29. Inductance Measurements.	3-5
3-30. Introduction	3-5
3-32. Residual Inductance	3-5
3-34. Ls and Lp Measurement Differences	3-5
3-36. Measurement Procedure	3-6
3-40. Influence of Q in Ls Auto Measurement	3-6
3-42. Special Measurements	3-6
3-43. 20 Hz to 20 kHz Measurements	3-6
3-46. Operation with External Generator.	3-7
3-48. Influence of Residual and Lead Impedances	3-8
3-50. D and Q Measurements	3-8
3-54. C Measurements with DC Bias	3-8
3-57. L Measurements with DC Bias	3-9
IV THEORY OF OPERATION	4-1
4-1. Introduction	4-1
4-3. Description	4-1
4-4. General	4-1
4-6. Block Diagram	4-1
4-9. Basic Bridge for Resistance Measurements	4-1
4-11. Basic Circuits for Capacitance Measurements	4-1
4-13. Basic Circuits for Inductance Measurements.	4-1
4-15. Range and Function Switch A100	4-1
4-18. Power Supply and 1 kHz Oscillator A200	4-3
4-20. Power Supply.	4-3
4-26. 1 kHz Oscillator.	4-3
4-28. Reference Voltage A300	4-3
4-29. Introduction	4-3
4-31. Reference Phase Circuits	4-3
4-34. Variable Phase Circuits	4-4
4-37. Phase Comparator	4-4
4-40. Miller Integrator	4-4
4-42. Switch	4-4

TABLE OF CONTENTS

IV	THEORY OF OPERATION (cont'd)	4-4
	4-44. Detector Assembly A400	4-4
	4-45. Introduction	4-4
	4-47. Error Signal Amplifier	4-4
	4-50. One-Shot Multivibrator	4-4
	4-53. Phase Detector	4-5
	4-57. Differential Amplifier and Miller Integrator	4-5
	4-59. Variable Resistance Circuit	4-5
	4-62. Differential Amplifier and Lamp Driver	4-5
	4-64. Chassis Assembly A500	4-6
	4-66. Decimal Point and Direction Indicator Lamp A600	4-6
V	MAINTENANCE	5-1
	5-1. Introduction	5-1
	5-3. Test Equipment	5-1
	5-5. Instrument Cover Removal	5-1
	5-7. Assembly Identification	5-1
	5-9. Performance Check	5-1
	5-11. Troubleshooting	5-5
	5-14. Repair	5-5
	5-15. Cover and Front Panel Removal	5-5
	5-17. Printed Circuit Component Replacement	5-5
	5-19. CRL Counter and R3 Replacement	5-5
	5-22. DQ Dial and R5 Replacement	5-5
	5-24. Adjustments	5-5
	5-29. Bridge Circuit Component Checks	5-8
	5-39. Operation Checks of Printed Circuit Assemblies	5-12
	5-41. Power Supply and 1 kHz Oscillator Assy A100	5-12
	5-44. Reference Voltage Assembly A300	5-12
	5-46. Detector Assembly A400	5-12
VI	REPLACEABLE PARTS	6-1
	6-1. Introduction	6-1
	6-2. Ordering Information	6-1
VII	MANUAL CHANGES AND OPTIONS	7-1
	7-1. Manual Changes	7-1
	7-3. Options	7-1
VIII	CIRCUIT DIAGRAMS	8-1
	8-1. Introduction	8-1

LIST OF TABLES

Table		
1-1.	Specifications	1-2
3-1.	Correction Terms for Residual Lead Errors	3-4
4-1.	Assembly Designations	4-1
5-1.	Performance Check Test Equipment	5-1
5-2.	Performance Checks	5-2
5-3.	Test Equipment Required for Troubleshooting	5-6
5-4.	Trouble Symptoms and Possible Causes	5-6
5-5.	Decimal Point and Units Indication Logic	5-8
5-6.	Test Equipment for Bridge Circuit Checks	5-9
6-1.	Reference Designation Index	6-3
6-2.	Replaceable Parts	6-11
6-3.	Manufacturer's Code List	6-15

LIST OF ILLUSTRATIONS

Figure	Page
1-1. Model 4260A and Accessory	1-0
2-1. Adapter Frame	2-1
2-2. Combining Case	2-2
3-1. Front and Rear Panel Controls, Indicators and Connectors ..	3-2
3-2. Capacitance and Inductance Errors in AUTO vs D & Q ..	3-5
3-3. Operation with External Generator	3-7
3-4. DQ Range vs Frequency	3-8
3-5. Dc Biased Capacitance Measurement	3-9
3-6. Dc Biased Inductance Measurement	3-9
4-1. Basic Bridge Circuits	4-2
4-2. CRL Light Control	4-5
5-1. Capacitance and D Accuracy Check	5-2
5-2. Internal Oscillator Check	5-4
5-3. Right and Left Side Internal Component Location	5-7
5-4. Error Signal Amplifier Phase and Gain Test Setup	5-8
5-5. Test Setup for Adjustments	5-11
5-6. Resistance Network for Checks	5-12
5-7. Top and Bottom Internal Component Location	5-13
6-1. Modular Cabinet Parts	6-2
8-1. Schematic Diagram Notes	8-2
8-2. Overall Block Diagram	8-3
8-3. Range and Function Switch A100, Decimal Point and Direction Light A600, Component Location and Schematic Diagram	8-5
8-4. Power Supply and 1 kHz Oscillator A200, Component Location and Schematic Diagram	8-7
8-5. Reference Voltage Assembly A300, Component Location and Schematic Diagram	8-9
8-6. Detector Assembly A400, Component Location and Schematic Diagram	8-11



MODEL 4260A

POWER CORD



Figure 1-1. Model 4260A and Accessory

02337-1

SECTION I

GENERAL INFORMATION

1-1. DESCRIPTION.

1-2. The YHP Model 4260A Universal Bridge (Figure 1-1) makes fast, easy measurements of resistance (R), capacitance (C), inductance (L), capacitor dissipation factor (D), or inductance quality factor (Q). The instrument includes five bridge circuits, selected by the FUNCTION switch, as well as the detector and 1 kHz oscillator necessary for dc and ac measurements. For measurements at frequencies other than 1 kHz, an external oscillator must be used.

1-3. Front panel controls select the measurement function and range, with R, L, and C values displayed with four-digit resolution on an in-line, digital counter. Q and D values are displayed on a dial with a red hairline indicating the measured value. The auto-balance circuit and an easy-to-read meter reduce the time required for measuring low Q or high D components. Correct decimal point location is automatic and direction lights indicate which way the CRL control should be rotated for the measurement.

1-4. TERMINOLOGY.

1-5. The definitions of the following terms apply as they are used throughout this manual.

- a. RESIDUAL (inductance or capacitance): distributed inductance or capacitance always present at UNKNOWN terminals.
- b. DISSIPATION FACTOR (D): loss factor for capacitors (equal to reciprocal of Q).
- c. QUALITY FACTOR (Q): figure of merit for inductors (equal to reciprocal of D).
- d. Cs: represents equivalent circuit of capacitor in series with resistor.
- e. Cp: represents equivalent circuit of capacitor in parallel with resistor.
- f. Ls: represents equivalent circuit of inductor in series with resistor.
- g. Lp: represents equivalent circuit of inductor in parallel with resistor.

h. AUTO NULL: eliminates DQ manual control; direction for null is automatically indicated for Cp and Ls measurements.

1-6. INSTRUMENT IDENTIFICATION.

1-7. Hewlett-Packard uses a two-section, eight-digit serial number (000-00000). The first three digits (serial prefix) identify a series of instruments; the last five digits identify a particular instrument in that series. If the serial prefix on the rear panel of your instrument does not agree with the serial prefix on the title page of this manual, there are differences between your instrument and the one described in this manual which are explained in the insert sheet supplied with the manual. If the insert sheet is missing, the information can be supplied by your nearest Hewlett-Packard field office (addresses are listed at the back of this manual).

1-8. APPLICATIONS.

1-9. The Model 4260A makes quick, easy measurements of R, L, C, D, or Q characteristics of passive electronic components. R, L, and C measurements are made with 3- or 4-digit resolution. With external null voltmeter, accurate measurements are possible for milliohms or megohms. The instrument is readily portable (accessory carrying handle, HP 11057A, can be easily attached without screws).

1-10. SPECIFICATIONS.

1-11. Table 1-1 lists all technical specifications for the Model 4260A Universal Bridge. Figure 3-4 shows DQ range versus frequency characteristics.

1-12. AUXILIARY EQUIPMENT REQUIRED.

1-13. External dc null millivoltmeter (such as the HP Model 413A) is recommended for accurate R measurements below 100 ohms and above 10 kilohms. External generator (such as HP Model 200 CD) with 2 volt output and 600 ohms output impedance is required for 20 Hz to 20 kHz measurements. External tuned null detector with 90 dB gain and input impedance greater than 10 kilohms or oscilloscope with 100 μ V/cm sensitivity is recommended for the measurement with external generator.

Table 1-1. Specifications

CAPACITANCE MEASUREMENT

CAPACITANCE

Range: 1 pF to 1000 μ F, in 7 ranges.

Accuracy:

$\pm(1\% + 1$ Digit), from 1 nF to 100 μ F.

$\pm(2\% + 1$ Digit), from 1 pF to 1000 μ F.

Residual capacitance ≈ 2 pF.

DISSIPATION FACTOR

Range:

LOW D - - - D (of series C): 0.001 to 0.12.

HIGH D - - - D (of parallel C): 0.05 to 50.

Accuracy:

LOW D - - - D (of series C): $\pm(5\% + 0.002)$ or

ONE DIAL DIVISION, whichever is greater.

HIGH D - - - 1/D (of parallel C): $\pm(5\% + 0.05)$ or ONE DIAL DIVISION of LOW Q dial,

whichever is greater.

(C greater than 100 pF.)

INDUCTANCE MEASUREMENT

INDUCTANCE

Range: 1 μ H to 1000 H, in 7 ranges.

Accuracy:

$\pm(1\% + 1$ Digit), from 1 mH to 100 H.

$\pm(2\% + 1$ Digit), from 1 μ H to 1000 H.

Residual inductance $\leq 1 \mu$ H.

QUALITY FACTOR

Range:

LOW Q - - - Q (of series L): 0.02 to 20.

HIGH Q - - - Q (of parallel L): 8 to 1000.

Accuracy:

LOW Q - - - Q (of series L): $\pm(5\% + 0.05)$ or ONE DIAL DIVISION, whichever is greater.

HIGH Q - - - 1/Q (of parallel L): $\pm(5\% + 0.002)$ or ONE DIAL DIVISION of LOW D dial,

whichever is greater.

(L greater than 100 μ H.)

RESISTANCE MEASUREMENT

RESISTANCE

Range: 10 milliohms to 10 megohms, in 7 ranges.

Accuracy:

$\pm(1\% + 1$ Digit), from 10 ohms to 1 megohm.

$\pm(2\% + 1$ Digit), from 10 milliohms to 10 ohms and 1 megohm to 10 megohms.

Residual resistance ≈ 3 milliohms.

Resistance measurements at DC only.

ELECTRONIC AUTO NULL

Eliminates need for DQ adjustments in parallel C and series L measurements at 1 kHz.

Accuracy (when D ≤ 1 , Q ≥ 1 and CL measurements are made in 3 and 4 figures) equals [normal operating condition $\pm 0.5\%$].

AUTOMATIC NULL DIRECTION INDICATOR

Direction of the CRL control rotation required for the bridge null is automatically indicated by the front panel indicator lights.

OSCILLATOR AND DETECTOR

INTERNAL OSCILLATOR: 1 kHz $\pm 2\%$, 100 mV rms $\pm 20\%$.

INTERNAL DC SUPPLY: Less than 40 volts at nominal AC line voltage.


INTERNAL DETECTOR: Tuned amplifier at 1 kHz; functions as a preamplifier for measurements with external generator.

EXTERNAL OSCILLATOR: 20 Hz to 20 kHz measurements of capacitance, inductance, dissipation factor and quality factor are possible with external oscillator (range will be a function of applied frequency).

GENERAL

POWER SUPPLY: 115 or 230 volts $\pm 10\%$, 50 or 60 Hz, approx. 7 watts.

DIMENSIONS:

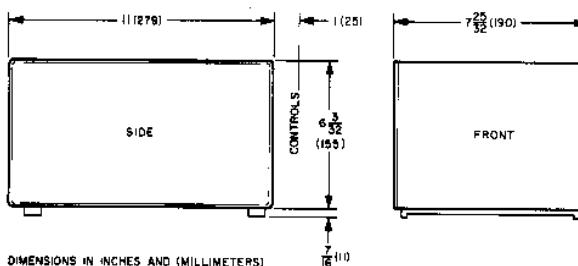

WEIGHT:

Net, 11 lbs. (5 kg).

Shipping, 15 lbs. (6.8 kg).

ACCESSORY SUPPLIED: 7 ft. power cable with NEMA plug.

EQUIPMENT AVAILABLE:

18-pin printed circuit extender board 5060-2041

15-pin printed circuit extender board 5060-0049

DC Null Voltmeter, HP Model 413A

20 Hz to 20 kHz Oscillator, HP Model 200CD

Oscilloscope, HP Model 140A

SECTION II

INSTALLATION

2-1. INTRODUCTION.

2-2. This section of the manual contains information for unpacking, inspection, repackaging, storage, and installation of the Model 4260A.

2-3. UNPACKING AND INSPECTION.

2-4. If the shipping carton is damaged, ask that the carrier's agent be present when the instrument is unpacked. Inspect the instrument for damage (scratches, dents, broken knobs, etc.). If the instrument is damaged or fails to meet specifications (Performance Check, Paragraph 5-9), notify the carrier and the nearest Hewlett-Packard field office (see list at back of this manual). Retain the shipping carton and the padding material for the carrier's inspection. The field office will arrange for the repair or replacement of your instrument without waiting for the claim against the carrier to be settled.

2-5. STORAGE AND SHIPMENT.

2-6. **PACKAGING.** To protect valuable electronic equipment during storage or shipment always use the best packaging methods available. Your Hewlett-Packard field office can provide packing material such as that used for original factory packaging. Contract packaging companies in many cities can provide dependable custom packaging on short notice. Here are two recommended packaging methods:

a. **RUBBERIZED HAIR.** Cover painted surfaces of instrument with protective wrapping paper. Pack instrument securely in strong corrugated container (350 lb/sq in. bursting test) with 2-inch rubberized hair pads placed along all surfaces of the instrument. Insert fillers between pads and container to ensure a snug fit. Mark the box "Delicate Instrument" and seal with strong tape or metal bands.

b. **EXCELSIOR.** Cover painted surfaces of instrument with protective wrapping paper. Pack instrument in strong corrugated container (350 lb/sq in. bursting test) with a layer of excelsior about 6 inches thick packed firmly against all surfaces of the instrument. Mark the box "Delicate Instrument" and seal with strong tape or metal bands.

2-7. **ENVIRONMENT.** Temperature during storage and shipment should be limited as follows:

- a. Minimum temperature -40°C (-40°F).
- b. Maximum temperature +75°C (+167°F).

2-8. The Model 4260A is equipped with plastic feet and tilt stand for bench operation as shipped from the factory. When the instrument is to be rack mounted, a combining case (Paragraph 2-9) or adapter frame (Paragraph 2-10) is required. These items are avail-

able through your Hewlett-Packard Sales/Service office. These two methods for rack mounting are outlined in the following paragraphs:

2-9. **COMBINING CASE.** The combining case (HP 1052A) shown in Figure 2-2 is a modular unit which accepts sub-module units such as the 1/2 module, Model 4260A. The combining case can be used as a bench instrument or it can be rack mounted. A rack mounting kit (HP No. 5060-0776) is supplied with the instrument. When only half the case is used, a blank filler panel (HP No. 5060-0794) is available to enclose the unused half.

2-10. **ADAPTER FRAME.** The adapter frame (HP No. 5060-0797) in Figure 2-1 is a rack frame that accepts any combination of sub-module units; it can only be rack mounted. Install instruments in the adapter frame as follows:

- a. Place adapter frame on edge of bench and stack sub-module units (steps 1 and 2) in frame. Place spacer clamp between units (step 3).
- b. Insert two end spacer clamps (step 4) and push units into frame.
- c. Insert screws on either side of frame (step 5) and tighten until units are tight in frame.
- d. The complete assembly is now ready for rack mounting.



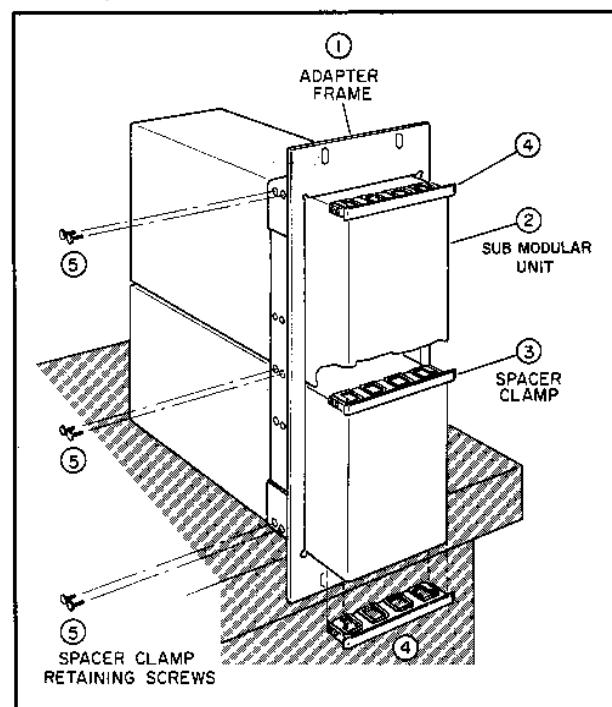



Figure 2-1. Adapter Frame

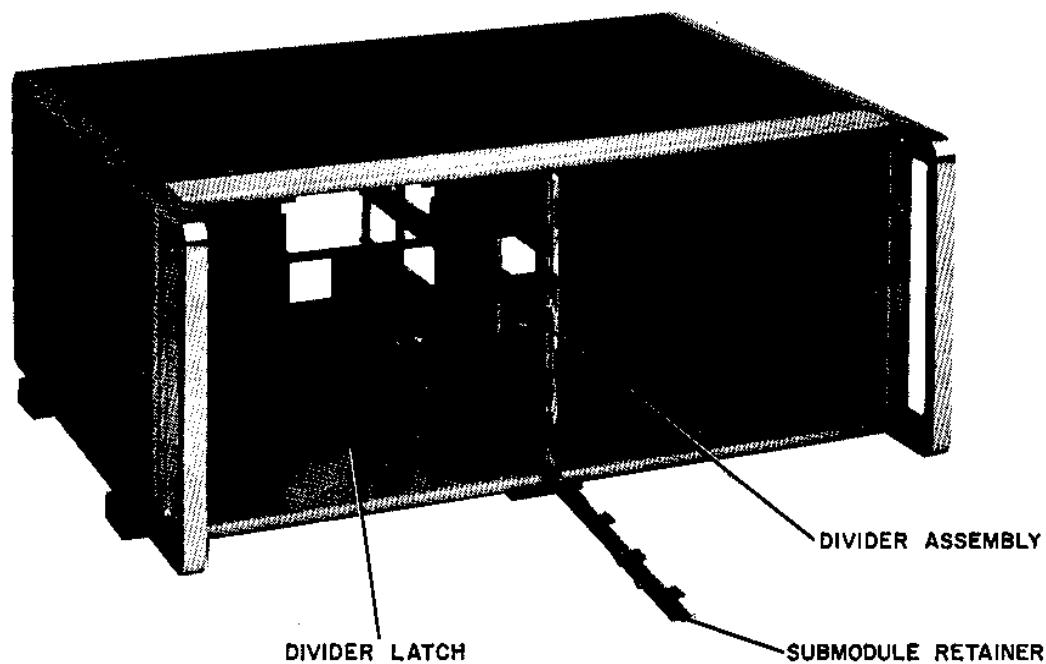


STEP ①
SLIDE TOP PART
TO LIMIT
STEP ②
SLIDE BOTTOM PART
TO LIMIT

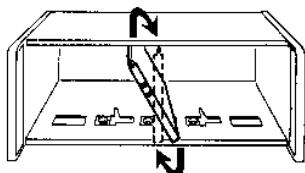


STEP ⑤
PUSH DOWN
TO RELEASE

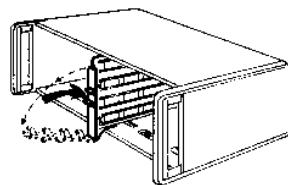


STEP ③
PUSH IN TO LIMIT

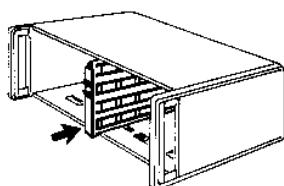

STEP ⑥
PLACE INSTRUMENT
INTO CASE

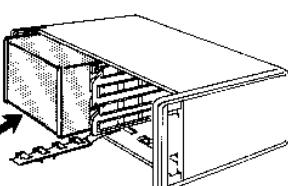

STEP ④
SLIDE OVER TO LIMIT

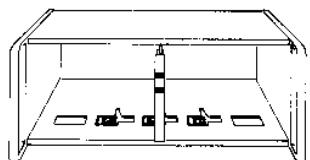

STEP ⑦
SET RETAINER BACK
INTO PLACE
STEP ⑧
PUSH UP TO LOCK

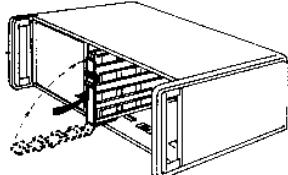


Figure 2-2. Combining Case

2-11. OPERATION FROM 115 OR 230 VOLTS.

2-12. The Model 4260A can be operated from either 115- or 230-volt ($\pm 10\%$) 50 to 60 Hz power lines. A slide switch on the rear panel permits quick conversion for operation from either voltage. Insert a narrow blade screwdriver in the switch slot and slide the switch to expose "115" marking for 115-volt operation or "230" marking for 230-volt operation. The instruments are supplied with a 0.1 ampere fuse for either 115- or 230-volt operation.

CAUTION

Do not change the 115/230 switch setting during operation.

2-13. 3-CONDUCTOR POWER CABLE.

2-14. The Model 4260A is equipped with detachable 3-wire power cable. Proceed as follows for installation:

a. Connect flat plug (3-conductor female connector) to AC line jack at rear of instrument.

b. Connect plug (2-blade male with round grounding pin) to 3-wire (grounded) power outlet. Exposed portions of instrument are grounded through the round pin on the plug for safety; when only the 2-blade outlet is available, use connector adapter (HP Stock No. 1251-0048), then connect short wire from side of adapter to ground.



SECTION III OPERATION

3-1. INTRODUCTION.

3-2. This section outlines operation of the Universal Bridge. An operating procedure is given for each measurement function. All front and rear controls, connectors, and indicators are briefly explained in Figure 3-1.

3-3. TURN-ON PROCEDURE.

3-4. Before applying power to the instrument, set controls as follows:

- a. Set FUNCTION control for type of measurement to be made and RANGE switch near mid-range.
- b. Set SENSITIVITY control near full counterclockwise to reduce meter sensitivity.
- c. Set CRL control to 1030.
- d. Set red VERNIER DQ knob full counterclockwise to CAL.
- e. Set rear-panel 115/230 volt switch to expose numbers which correspond to the line voltage used.
- f. Set rear-panel OSCILLATOR switch to INT 1 KC. Three rear shorting straps should be in place (see Paragraph 3-42 for special measurements).
- g. If meter pointer is not mechanically centered, center as follows:
 - (1) Turn instrument off. Wait 30 seconds for all capacitors to discharge.
 - (2) Remove two screws which hold top cover to rear panel and slide cover toward rear.
 - (3) Locate the black zero adjust screw at top center of meter. Rotate screw clockwise until meter pointer is to left of zero and begin moving right toward zero.
 - (4) Continue to rotate screw clockwise; stop when pointer is on zero. If the pointer overshoots zero, repeat steps (3) and (4).
 - (5) When pointer is exactly on zero, rotate screw approximately 15 degrees counterclockwise. This is enough to free the adjustment screw from the meter suspension. If pointer moves during the step, repeat steps (4) and (5).

h. Apply power to instrument by connecting ac power cord and setting LINE switch to ON. One of the decimal point lights in the CRL counter will light to indicate power is applied to the instrument. Allow 30 seconds for the instrument to stabilize. The 4260A is now ready to use. The following paragraphs outline procedures for standard R, L, and C measurements.

3-5. USE OF THE DQ VERNIER.

3-6. The DQ VERNIER control provides fine electrical adjusting during D or Q measurements. The DQ dial setting does not change as the DQ VERNIER is changed. For any setting of the DQ VERNIER, DQ dial accuracy is maintained as outlined in Specifications. The DQ vernier is useful for large D or small Q measurements. Using the DQ vernier for a bridge null prevents false nulls caused by lack of resolution with the DQ control. DQ VERNIER ranges are:

- 0 (CAL) to 0.001 in LOW D range
- 0 (CAL) to 0.016 (of 1/D) in HIGH D range
- 0 (CAL) to 0.016 in LOW Q range
- 0 (CAL) to 0.001 (of 1/Q) in HIGH Q range

3-7. DC RESISTANCE MEASUREMENTS.

3-8. POWER CONSIDERATIONS.


3-9. Power applied to the unknown resistor will vary depending upon the unknown value, the RANGE switch position, and the CRL control setting. Maximum open circuit voltage across the UNKNOWN terminals is 40 Vdc. Short-circuit current through the UNKNOWN terminals is 25 milliamperes maximum. Voltage across the unknown resistor can be measured with a high input impedance Voltmeter such as the HP 410C, 412A, or 413A (see Paragraph 3-15). Current through the unknown resistor can be measured with a clip-on milliammeter such as the HP 428B (see Paragraph 3-15).

3-10. MEASUREMENTS.

3-11. Resistance values between 100 ohms and 10 kilohms can be measured quickly with 1% accuracy by using only front-panel controls. For measurements of values between 10 megohms and 100 ohms or between 10 kilohms and 10 megohms, an external null meter such as the HP 413A is desirable for better sensitivity during the measurements. These two types of measurements are outlined as separate procedures in the following paragraphs.

3-12. 100 OHM to 10 K OHM MEASUREMENTS.

- a. Perform the turn-on procedure outlined in Paragraph 3-3.
- b. Set FUNCTION switch to R position.
- c. Connect the resistor to be measured to the UNKNOWN terminals.
- d. Set RANGE switch for meter indication near center and increase meter sensitivity by rotating SENSITIVITY control clockwise. If meter indication is right of center, turn CRL control ccw. If left, turn CRL control cw. Adjust CRL control for meter center indication while increasing SENSITIVITY control to maximum sensitivity (full cw).

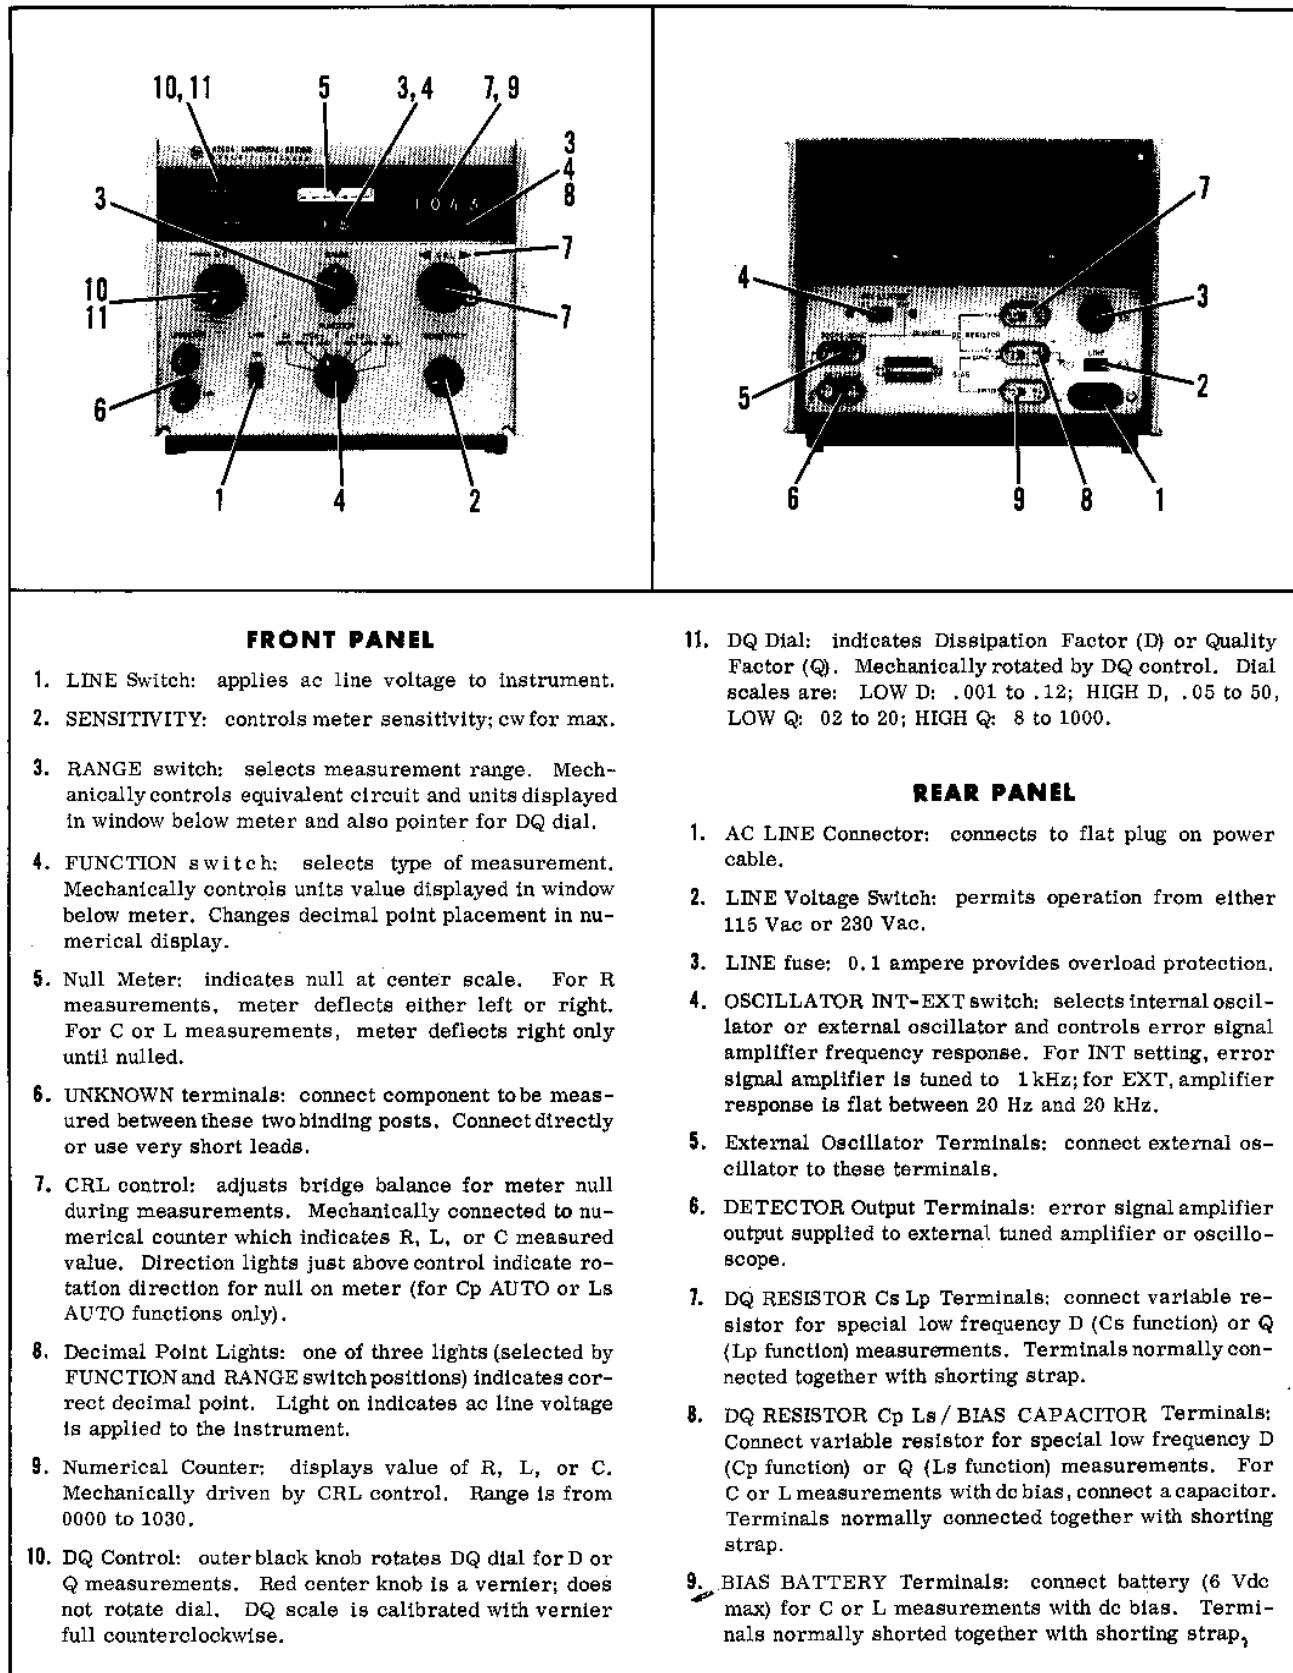

FRONT PANEL

1. LINE Switch: applies ac line voltage to instrument.
2. SENSITIVITY: controls meter sensitivity; cw for max.
3. RANGE switch: selects measurement range. Mechanically controls equivalent circuit and units displayed in window below meter and also pointer for DQ dial.
4. FUNCTION switch: selects type of measurement. Mechanically controls units value displayed in window below meter. Changes decimal point placement in numerical display.
5. Null Meter: indicates null at center scale. For R measurements, meter deflects either left or right. For C or L measurements, meter deflects right only until nulled.
6. UNKNOWN terminals: connect component to be measured between these two binding posts. Connect directly or use very short leads.
7. CRL control: adjusts bridge balance for meter null during measurements. Mechanically connected to numerical counter which indicates R, L, or C measured value. Direction lights just above control indicate rotation direction for null on meter (for Cp AUTO or Ls AUTO functions only).
8. Decimal Point Lights: one of three lights (selected by FUNCTION and RANGE switch positions) indicates correct decimal point. Light on indicates ac line voltage is applied to the instrument.
9. Numerical Counter: displays value of R, L, or C. Mechanically driven by CRL control. Range is from 0000 to 1030.
10. DQ Control: outer black knob rotates DQ dial for D or Q measurements. Red center knob is a vernier; does not rotate dial. DQ scale is calibrated with vernier full counterclockwise.

11. DQ Dial: indicates Dissipation Factor (D) or Quality Factor (Q). Mechanically rotated by DQ control. Dial scales are: LOW D: .001 to .12; HIGH D, .05 to 50, LOW Q: 02 to 20; HIGH Q: 8 to 1000.

REAR PANEL

1. AC LINE Connector: connects to flat plug on power cable.
2. LINE Voltage Switch: permits operation from either 115 Vac or 230 Vac.
3. LINE fuse: 0.1 ampere provides overload protection.
4. OSCILLATOR INT-EXT switch: selects internal oscillator or external oscillator and controls error signal amplifier frequency response. For INT setting, error signal amplifier is tuned to 1 kHz; for EXT, amplifier response is flat between 20 Hz and 20 kHz.
5. External Oscillator Terminals: connect external oscillator to these terminals.
6. DETECTOR Output Terminals: error signal amplifier output supplied to external tuned amplifier or oscilloscope.
7. DQ RESISTOR Cs Lp Terminals: connect variable resistor for special low frequency D (Cs function) or Q (Lp function) measurements. Terminals normally connected together with shorting strap.
8. DQ RESISTOR Cp Ls / BIAS CAPACITOR Terminals: Connect variable resistor for special low frequency D (Cp function) or Q (Ls function) measurements. For C or L measurements with dc bias, connect a capacitor. Terminals normally connected together with shorting strap.
9. BIAS BATTERY Terminals: connect battery (6 Vdc max) for C or L measurements with dc bias. Terminals normally shorted together with shorting strap,

Figure 3-1. Front and Rear Panel Controls, Indicators and Connectors

- a. Read measured resistance value on CRL counter. (Observe decimal point location and units displayed in window below meter.)

Note

For maximum resolution, final CRL counter display should be greater than 0100.

3-13. MILLIOHMS AND MEGOHMS MEASUREMENTS. For measurements between 10 milliohms and 100 ohms or between 10 kilohms and 10 megohms, a sensitive dc null voltmeter such as the HP 413A should be used. Refer to Paragraph 3-15 for voltage and current measurements for the unknown R. Connect the null voltmeter and make resistance measurements as follows:

- a. Remove the shorting strap on the voltmeter rear panel ground terminals to avoid ground loops.
- b. Perform the turn-on procedure outlined in Paragraph 3-3.
- c. Connect the voltmeter input ground or low terminal to the rear-panel detector ground terminal on the Universal Bridge. Connect UNKNOWN LOW terminal to the other Voltmeter input terminal.
- d. Set FUNCTION switch to R.
- e. Connect the resistor to be measured to the UNKNOWN terminals.
- f. Set RANGE switch for meter indication near the center and increase meter sensitivity by rotating SENSITIVITY control clockwise. If meter indication is right of center, turn CRL control ccw. If left, turn CRL control cw. Adjust CRL control for meter center indication while increasing SENSITIVITY control to maximum sensitivity (full cw).
- g. Read measured resistance value on CRL counter. (Observe decimal point location and units displayed in window below meter.)

CAUTION FOR LOW RESISTANCE MEASUREMENTS

For best connection to the bridge, leads should be inserted into the binding posts, and the binding posts should be screwed tightly to reduce contact resistance. Short heavy leads can be used. Lead resistance should be measured with the free ends connected together. Subtract the lead resistance from the bridge reading.

3-14. The fastest procedure for R measurements is as follows:

- a. Set FUNCTION switch to R position.
- b. Connect the resistor to the UNKNOWN terminals.
- c. Turn CRL control cw to 1030.
- d. Increase SENSITIVITY for deflection (right or left) on the null meter.

e. Rotate the RANGE switch until the meter pointer passes the null. If meter deflection is right, perform step f. If meter deflection is left, turn RANGE switch one step cw. Adjust SENSITIVITY control for right deflection.

f. Turn CRL control ccw to obtain a null on the meter; set SENSITIVITY control full cw, adjust for the null with CRL control.

g. Read the final resistance on CRL counter along with the units display.

3-15. VOLTAGE AND CURRENT FOR UNKNOWN R. When voltage and current values for the unknown are to be measured, a dc voltmeter such as the HP 413A should be used with a current meter such as the HP 428B clip-on milliammeter. Make voltage and current measurements as follows:

- a. Make the resistance measurements as outlined in Paragraph 3-12 or 3-13 and leave the Model 4260A set up for the null.
- b. Remove the shorting strap on the voltmeter rear panel ground terminals to avoid ground loops.
- c. Connect the voltmeter input ground or low terminal to the rear-panel detector ground terminal on the Universal Bridge. Connect the UNKNOWN high terminal to the other voltmeter input terminal.
- d. Read voltage across the unknown R on the voltmeter.
- e. For current through the unknown R, clip the milliammeter probe to one of the unknown leads and read unknown current.

3-16. CAPACITANCE MEASUREMENTS.

3-17. INTRODUCTION.

3-18. Capacitance measurements are normally made at a frequency of 1 kHz from the internal oscillator. For C measurements at frequencies between 20 Hz and 20 kHz, an external oscillator can be connected, as outlined in Paragraph 3-42, Special Measurements. Direction lights indicate the correct rotation direction for Cp AUTO measurements. The measured C value is displayed on the CRL counter with correct decimal point location, units and equivalent circuit also displayed. Dissipation factor (D) can be measured after the bridge is balanced for the capacitance measurement. The measured D value is displayed on the DQ dial.

3-19. RESIDUAL CAPACITANCE.

3-20. The residual capacitance of the UNKNOWN terminals can be measured with nothing connected to these terminals. Its value is typically 2 pf or less. When small capacitance measurements are made, this residual capacitance should be subtracted from the measured value. If external leads are used to connect the unknown, the residual capacitance measurement should include the lead capacitance. Errors caused by residual and lead capacitances are listed in Table 3-1.

Table 3-1. Correction Terms for Residual Lead Errors
(Add to Measured Value as Indicated)

Measured Quantity	Series Resistance R_o	Series Inductance L_o	Parallel Capacitance C_o
C_s	No error	$-4\pi^2 f^2 L_o C_x^2$	$-C_o (1 - D_x^2)$
D of C_s	$-2\pi f R_o C_x$	$-4\pi^2 f^2 L_o C_x D_x$	$+D_x (1 + D_x^2) C_o / C_x$
C_p	$+4\pi f R_o C_x^2 D_x$	$-4\pi^2 f^2 L_o C_x^2 (1 - D_x^2)$	$-C_o$
D of C_p	$-2\pi f R_o C_x (1 + D_x^2)$	$-4\pi^2 f^2 L_o C_x D_x (1 + D_x^2)$	$+D_x C_o / C_x$
R	$-R_o$	No error	No error
L_s	No error	$-L_o$	$-4\pi^2 f^2 C_o L_x (1 - \frac{1}{Q_x^2})$
Q of L_s	$+ Q_x^2 \frac{R_o}{2\pi f L_x}$	$-\frac{L_o}{L_x} Q_x$	$+4\pi^2 f^2 C_o L_x^2 (Q_x + \frac{1}{Q_x})$
L_p	$-\frac{R_o}{\pi f Q_x}$	$-L_o (1 - \frac{1}{Q_x^2})$	$-4\pi^2 f^2 C_o L_x^2$
Q of L_p	$+\frac{R_o}{2\pi f L_x} (1 + Q_x^2)$	$-\frac{L_o}{L_x} (Q_x + \frac{1}{Q_x})$	$+4\pi^2 f^2 C_o L_x Q_x$
where f is frequency C_x is unknown capacitance D_x is unknown D L_x is unknown inductance Q_x is unknown Q			

3-21. C_s AND C_p MEASUREMENT DIFFERENCES.

3-22. The measured value of capacitance depends on whether a series or parallel equivalent circuit is used for the measurement. The relationship between a series capacitance (C_s) circuit and a parallel capacitance (C_p) circuit is as follows: $C_s = (1 + D^2) C_p$, where D is the measured D value. The difference between C_s and C_p is large when D is greater than 0.1 but C_s is within 1% of C_p if D is 0.1 or less.

3-23. MEASUREMENT PROCEDURE.

- Perform the turn-on procedure outlined in Paragraph 3-3.
- Check to insure that the 3 DQ RESISTOR and BIAS terminal pairs on the rear panel are shorted with their respective shorting straps.
- Rotate the SENSITIVITY control full ccw.
- Set FUNCTION switch to C_p AUTO position.
- Connect the capacitor to be measured to the UNKNOWN terminals.

f. If the right direction indicator is lit, rotate CRL control clockwise. If the left direction indicator is lit, rotate CRL control counterclockwise. Rotate SENSITIVITY control clockwise to give near full scale meter deflection.

g. If the CRL control is fully cw and the right direction indicator remains lit, turn RANGE switch ccw until left direction indicator lights. Adjust CRL control for meter null and rotate SENSITIVITY control cw as null is approached.

h. When null (bridge balance) is achieved below 0100 on the CRL indicator, set RANGE switch to the next position cw and rotate CRL control for null indication. (This is possible for all measurements above 100 pf.) Capacitance is indicated on the CRL counter.

i. To measure D for the unknown capacitor, set FUNCTION switch to C_p HIGH D position.

j. Adjust DQ control for minimum meter indication. (The CRL control can be adjusted slightly for best null.)

k. When a null indication is impossible in the C_p HIGH D position, set FUNCTION switch to C_s LOW D.

Adjust DQ control for minimum meter indication. The D of the unknown capacitor is read from the D scale indicated by the red pointer in the DQ window.

3-24. The fastest procedure for C measurements is as follows:

- a. Set FUNCTION switch to Cp AUTO position.
- b. Connect capacitor to unknown terminals.
- c. Turn the CRL control cw to 1030.
- d. Rotate RANGE switch until a crossover point of the indicator lights is obtained. (Left indicator lights instead of right one and vice versa.) If you cannot obtain a crossover, see step e note.
- e. If left indicator lights, adjust SENSITIVITY control for a right deflection of the null meter pointer. If the right indicator lights, turn RANGE switch one step ccw and adjust SENSITIVITY control for a right deflection of the null meter pointer. Note: if the right indicator stays lit regardless of the RANGE switch position, the unknown value of the capacitor must be beyond the highest range of the bridge ($> 1000 \mu F$). If the left indicator stays lit regardless of the RANGE switch position, the unknown value of the capacitor must be below 1000 pF.
- f. Rotate the CRL control ccw until a crossover of the indicator lights is obtained.
- g. Set SENSITIVITY full cw and adjust for null with CRL control.
- h. Read final capacitor value on the CRL counter and units display.

3-25. VOLTAGE ACROSS UNKNOWN C.

3-26. When voltage across the unknown C is to be measured, a vacuum tube voltmeter such as an HP 400D, 400H, or 400L should be used. The procedure is as follows:

- a. Make the capacitance measurement as outlined in Paragraph 3-23, and leave the instrument set up at null.
- b. Isolate the Voltmeter from power line ground by using a two-prong power cord adapter and leaving the adapter pigtail lead disconnected from ground.
- c. Connect the Voltmeter input ground terminal to the 4260A rear panel detector ground terminal.
- d. Connect the other voltmeter input terminal to the 4260A UNKNOWN terminal (not the LOW terminal). Read the voltage across the unknown C on the voltmeter.

3-27. INFLUENCE OF D IN Cp AUTO MEASUREMENT.

3-28. The accuracy that is specified for Cp AUTO measurement is obtained when D is less than 1. When D is greater than 1, accuracy of Cp AUTO measure-

ment is reduced due to the reactance of the variable resistance circuit of the AUTO null. Typical data is shown in Figure 3-2.

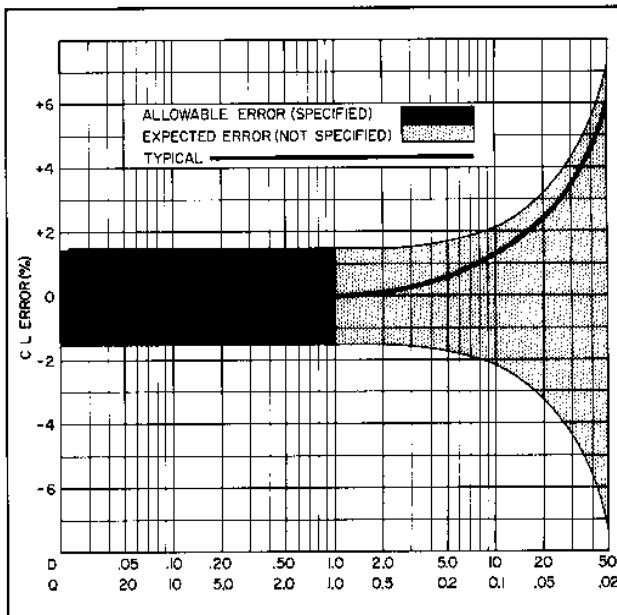


Figure 3-2. Capacitance and Inductance Errors in AUTO vs D & Q

3-29. INDUCTANCE MEASUREMENTS.

3-30. INTRODUCTION.

3-31. Inductance measurements are normally made at frequency of 1 kHz from the internal oscillator. For L measurements at frequencies between 20 Hz and 20 kHz, an external oscillator can be connected, as outlined in Paragraph 3-42, Special Measurements. Direction lights indicate the correct rotation direction for Ls AUTO measurements. The measured L value is displayed on the CRL counter with correct decimal point location, units, and equivalent circuit also displayed. Quality factor (Q) can be measured after the bridge is balanced for the inductance measurement. The measured Q value is displayed on the DQ dial.

3-32. RESIDUAL INDUCTANCE.

3-33. Residual inductance of the UNKNOWN terminals can be measured with heavy short wire connected to these terminals. Its value is typically $1 \mu H$ or less. When small inductance measurements are made, this residual inductance should be subtracted from the measured value. If external leads are used to connect the unknown, the residual inductance measurement should include the lead inductance. Errors caused by residual and lead inductances are listed in Table 3-1.

3-34. Ls AND Lp MEASUREMENT DIFFERENCES.

3-35. The measured value of inductance depends on whether a series or parallel equivalent circuit is used for the measurement. The relationship between a series inductance (Ls) circuit and a parallel inductance (Lp) circuit is as follows:

$$L_s = \frac{1}{1 + \frac{1}{Q^2}} L_p,$$

where Q is the measured Q value. The difference between L_s and L_p is large when Q is smaller than 10, but L_s is within 1% of L_p if Q is 10 or greater.

3-36. MEASUREMENT PROCEDURE.

a. Perform the turn-on procedure outlined in Paragraph 3-3.

b. Check to insure that the 3 DQ RESISTOR and BIAS terminal pairs on the rear panel are shorted with their respective shorting straps.

c. Rotate the SENSITIVITY control full ccw.

d. Set FUNCTION switch to L_s AUTO position.

e. Connect the inductor to be measured to the UNKNOWN terminals.

f. If the right direction indicator is lit, rotate CRL control clockwise. If the left direction indicator is lit, rotate CRL control counterclockwise. Rotate SENSITIVITY control clockwise to give near full scale meter deflection.

g. If the CRL control is fully cw and the right direction indicator remains lit, turn RANGE switch cw until left direction indicator lights. Adjust CRL control for meter null and rotate SENSITIVITY control cw as null is approached.

h. When null (bridge balance) is achieved below 0100 on the CRL counter, set RANGE switch to next position ccw and rotate CRL control for null indication. (This is possible for all measurements above $100 \mu H$.) Inductance value is indicated on the CRL counter.

i. To measure Q for the unknown inductor, set the FUNCTION switch to L_s LOW Q position.

j. Adjust DQ control for minimum meter indication. (The CRL control can be adjusted slightly for best null.)

k. When a null indication is impossible in the L_s LOW Q position, set FUNCTION switch to L_p HIGH Q. Adjust DQ control for minimum meter indication. The Q of the unknown indicator is read from the Q scale indicated by the red pointer in the DQ window.

3-37. The fastest procedure for L measurements is as follows:

a. Set FUNCTION switch to L_s AUTO position.

b. Connect inductor to unknown terminals.

c. Turn CRL control cw to 1030.

d. Rotate RANGE switch until a crossover point of the indicator lights is obtained. (Left indicator lights instead of right one and vice versa.) If you cannot obtain a crossover, see step e note.

e. If the left indicator lights, adjust SENSITIVITY control for right deflection of the null meter pointer. If the right indicator lights, turn RANGE switch one step cw and adjust SENSITIVITY control for right deflection of the null meter pointer. Note: if the right indicator stays lit regardless of the RANGE position, the unknown value of the inductor must be beyond the highest range of the bridge ($> 1000 \mu H$). If the left indicator stays lit regardless of the RANGE position, the unknown value of the inductor must be below 1000 microhenries.

f. Rotate CRL control ccw until a crossover of the indicator lights is obtained.

g. Set SENSITIVITY full cw and adjust for null with the CRL control.

h. Read final inductor value on the CRL counter and units display.

3-38. VOLTAGE ACROSS UNKNOWN L.

3-39. When voltage across the unknown L is to be measured, a vacuum tube voltmeter such as an HP 400D, 400H, or 400L should be used along with a capacitive voltage divider (HP 11041A). The procedure is as follows:

a. Make the inductance measurement as outlined in Paragraph 3-36, and leave the instrument set up at null.

b. Isolate the Voltmeter from power line ground by using a two-prong power cord adapter and leaving the adapter pigtail lead disconnected from ground.

c. Connect the Voltmeter divider ground lead to the 4260A rear panel detector ground terminal.

d. Connect the Voltmeter divider probe to the UNKNOWN terminal (not the LOW terminal). Read the voltage across the unknown L on the Voltmeter.

3-40. INFLUENCE OF Q IN L_s AUTO MEASUREMENT.

3-41. The accuracy specified for L_s AUTO measurement is obtained when Q is more than 1. When Q is smaller than 1, accuracy of the L_s AUTO measurement is reduced due to the reactance of the variable resistance circuit of the AUTO NULL. Typical data is shown in Figure 3-2.

3-42. SPECIAL MEASUREMENTS.

3-43. 20 Hz TO 20 kHz MEASUREMENTS.

3-44. Since the 4260A internal oscillator frequency is fixed at 1 kHz, an external generator must be connected for measurements at frequencies between 20 Hz and 20 kHz. For such measurements, an audio oscillator with 600 ohms output impedance (HP 208A, 204B, or 200CD) and a voltmeter (HP 403B or 400D, 400H, 400L) are recommended.

3-45. If the presence of a non-linear unknown causes appreciable distortion in the 4260A detector, the best null indication may not give the correct value for the

asured unknown. Also, if electromagnetic or static induction from the ac line or other source affects the unknown, a satisfactory null indication will be difficult. In these cases, a tuned null detector or selective amplifier with 90 dB gain and input impedance above 10K ohms is recommended.

Note

The electronic auto null circuit and direction indicator lights do not operate for measurements with an external oscillator.

3-46. OPERATION WITH EXTERNAL GENERATOR**CAUTION**

DO NOT APPLY MORE THAN 2 VOLTS RMS AT THE EXT. OSCILLATOR TERMINALS.

3-47. For impedance measurements at frequencies other than 1 kHz (between 20 Hz and 20 kHz), connect the external oscillator and associated equipment as shown in Figure 3-3 and proceed.

a. Check to insure that the DQ RESISTOR Cs Lp and Cp Ls terminals and BIAS terminals on the instrument rear panel are shorted by their shorting straps.

b. Set external oscillator output voltage to minimum and connect to EXT. OSCILLATOR terminals (see Figure 3-3).

c. For the most accurate and sensitive measurements, a tuned null detector such as the HP 302A is recommended. However, an oscilloscope with 100 microvolt/cm such as the HP 140A with 1400A plug-in can be used. Connect the 4260A UNKNOWN LOW terminal to the null detector high input terminal. Connect the detector low or ground terminal to the 4260A rear-panel detector ground terminal.

Note

Bridge null can be obtained using a tuned null detector with less than 90 dB gain connected to the DETECTOR terminals. (The DETECTOR terminals are connected to the output of the internal pre-amplifier.) For most accurate and sensitive measurements, the method shown in Figure 3-3 is recommended.

d. Set the 4260A INT-EXT OSCILLATOR switch to EXT.

e. Set the FUNCTION switch to Cs LOW D or Cp HIGH D for capacitance measurements, or to Ls LOW Q or Lp HIGH Q for inductance measurements.

f. Connect the unknown component to the UNKNOWN terminals.

g. Adjust the SENSITIVITY control for near full scale deflection and set RANGE switch for minimum on meter.

h. Adjust CRL and DQ controls for minimum meter indication. SENSITIVITY control can be adjusted cw as bridge balance is approached.

i. Read capacitance or inductance of the unknown on the CRL counter. Correct decimal point, units, and equivalent circuit are also displayed. The D or Q of the unknown is computed as follows:

For LOW D (D of series C): $D_f = \frac{D_r(f)}{1 \text{ kHz}}$ where D_f is

the D value at applied frequency f (kHz), D_r is the D reading on the D scale.

For HIGH D (D of parallel C): $D_f = D_r \left(\frac{1 \text{ kHz}}{f} \right)$.

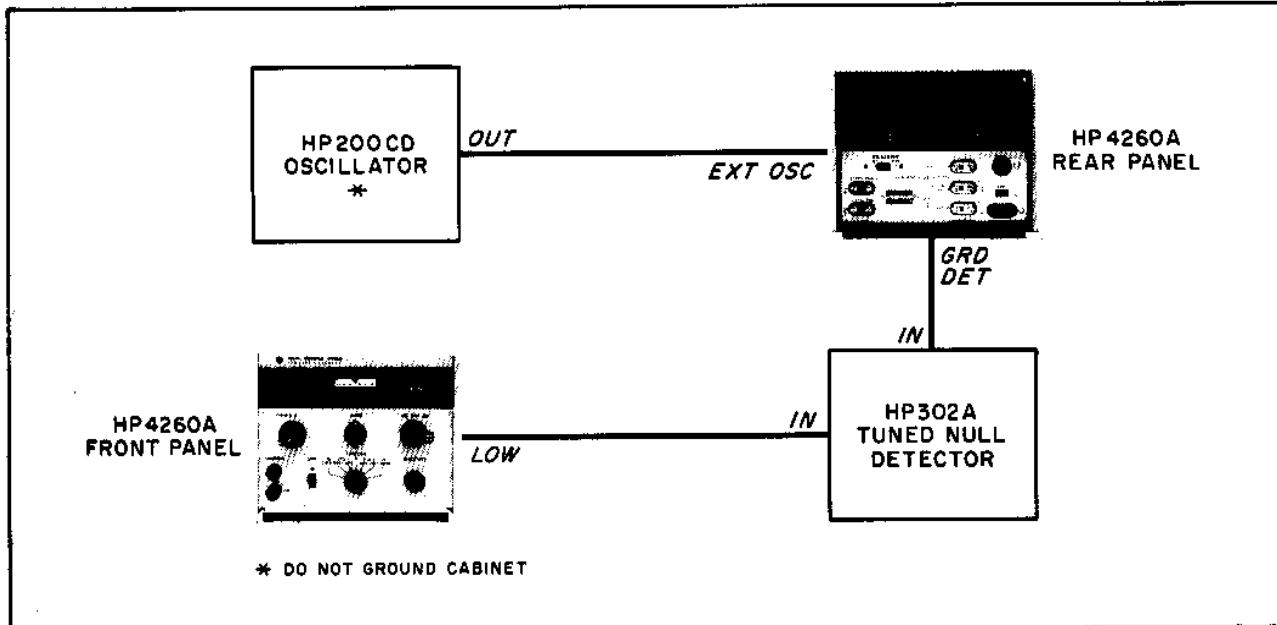


Figure 3-3. Operation with External Generator

Section III
Paragraphs 3-48 to 3-55

Model 4260A

For LOW Q (Q of series L): $Q_f = Q_r \frac{f}{1 \text{ kHz}}$
where Q_f is the Q value at applied frequency f (kHz) and Q_r is the Q reading on the Q scale.

For HIGH Q (Q of parallel L): $Q_f = Q_r \frac{1}{f}$.

3-48. INFLUENCE OF RESIDUAL AND LEAD IMPEDANCES.

3-49. At frequencies above 1 kHz, errors resulting from residual bridge impedances and lead impedances become significant. Table 3-1 lists the correction terms for these errors.

3-50. D AND Q MEASUREMENTS.

3-51. GENERAL. Measured D or Q values are a function of the frequency applied during measurement. Figure 3-4 illustrates the possible values of D or Q for minimum error at various frequencies. D or Q values which fall in the overlap area of Figure 3-4 can be measured with the FUNCTION switch set for any D or Q measurement except AUTO. However, below 650 Hz there is a group of D or Q values (shaded area of Figure 3-4) which can be measured by adding an external DQ resistor. This DQ resistor addition is outlined in the following paragraph.

3-52. EXTENDING THE D AND Q RANGES. An external resistor added at the instrument rear-panel DQ RESISTOR terminals will extend the D and Q ranges. To avoid error, C_p HIGH D and L_s LOW Q should not be extended below a value of 0.1 at the frequency of measurement. The DQ resistor should be added as follows:

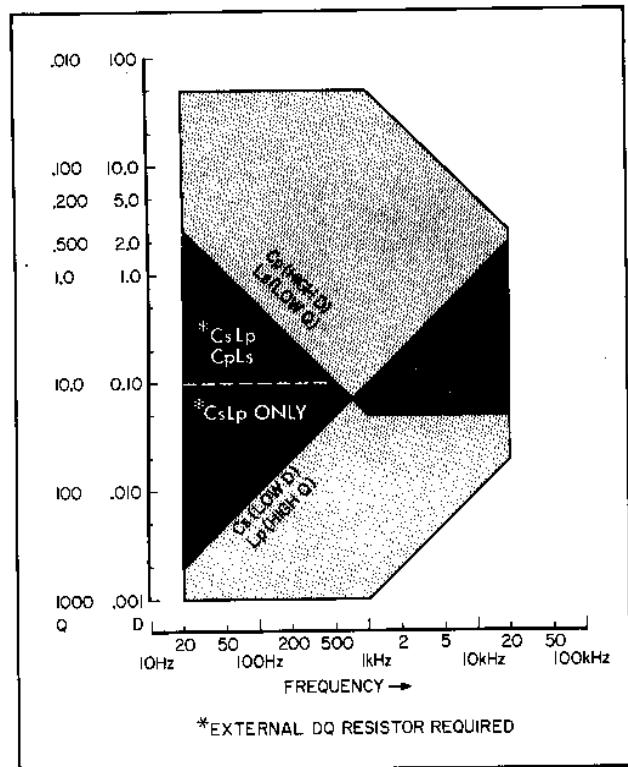


Figure 3-4. DQ Range vs Frequency

a. For C_s LOW D or L_p HIGH Q measurements, remove the shorting strap from the rear-panel DQ RESISTOR C_s L_p terminals.

b. The external resistor should be selected as follows:

- 1) maximum current: 6 milliamperes, resistance range: 0 to 300K ohms.
- 2) use a metal film or carbon film resistor.

Note

The resistance of the external resistor used can be measured with the 4260A after the D or Q measurement is completed.

c. Connect the external resistor to the DQ resistor terminals from which the shorting strap was removed in step a.

d. With the external DQ resistor and oscillator connected, balance the bridge with the RANGE switch, CRL, and DQ controls. Read the value of the unknown from the CRL counter and decimal point, units, and equivalent circuit as displayed.

3-53. The D or Q or the unknown is given as follows: for LOW D (D of C_s), $D_f = (1.256R + D_r) f$ where D_f is the D value at applied frequency f (kHz); D_r is the D reading on the D scale; and R is the external resistor value in K ohms. For HIGH D (D of C_p),

$$D_f = \frac{1}{(1.256 R + \frac{1}{D_r}) f}$$

For LOW Q (Q of L_s), $Q_f = (1.256 R + Q_r) f$; where Q_f is the Q value at applied frequency f (kHz); Q_r is the Q reading on the Q scale; and R is the external resistor value in K ohms. For HIGH Q (Q of L_p),

$$Q_f = \frac{1}{(1.256 R + \frac{1}{Q_r}) f}$$

3-54. C MEASUREMENTS WITH DC BIAS.

3-55. GENERAL. A dc bias voltage (6 vdc maximum) can be applied to capacitors such as electrolytic types during the C measurement. Figure 3-5 schematically illustrates the dc bias application. Operating procedure for dc-biased measurements is described below and pictorially shown in Figure 3-5. The following equipment will be required:

1. 6 Vdc battery or dry cell.
2. electrolytic capacitor (aluminum or tantalum) designated C_y 6 Vdcw, more than $100 \mu F$ at 1 kHz or more than $(100 \text{ kHz}/f) \mu F$.
3. dc voltmeter, VTVM not required.
4. electrolytic capacitor (aluminum or tantalum) designated (C_L) 6 Vdcw, more than $(20D_x^2) \mu F$ for less than 1% error measurements. D_x is the D value of the unknown.

02337-2
04860-A-22

With the FUNCTION switch set to Cp HIGH D, the capacitance of C_L required depends upon the unknown D and desired accuracy. The error introduced by C_L is:

$$\text{measured } C = C_x \left(1 - \frac{C_t}{C_L} D_x^2 \right) \text{ and}$$

$$\text{measured } D = D_x \left(1 + \frac{C_t}{C_L} D_x^2 \right),$$

where $C_t = 0.2 \mu\text{F}$ and C_x or D_x is the correct C or D value of the unknown.

3-56. PROCEDURE.

a. Connect the measurement setup as shown in Figure 3-5. All instrument cabinets except 4260A must be isolated from power line ground.

b. Connect the unknown C to the UNKNOWN terminals.

CAUTION

The LOW UNKNOWN terminal is at dc positive potential. DO NOT APPLY A DC BIAS VOLTAGE GREATER THAN 6 VDC OR A DC BIAS CURRENT GREATER THAN 10 MILLIAMPERES.

c. Set FUNCTION switch to Cp AUTO position for measurements with the internal 1 kHz generator. Adjust RANGE switch and CRL control for bridge balance (meter null). Read the measured C value on the CRL counter.

3-57. L MEASUREMENTS WITH DC BIAS.

3-58. GENERAL. A dc bias voltage (6 Vdc maximum) can be applied to an unknown inductor during the L

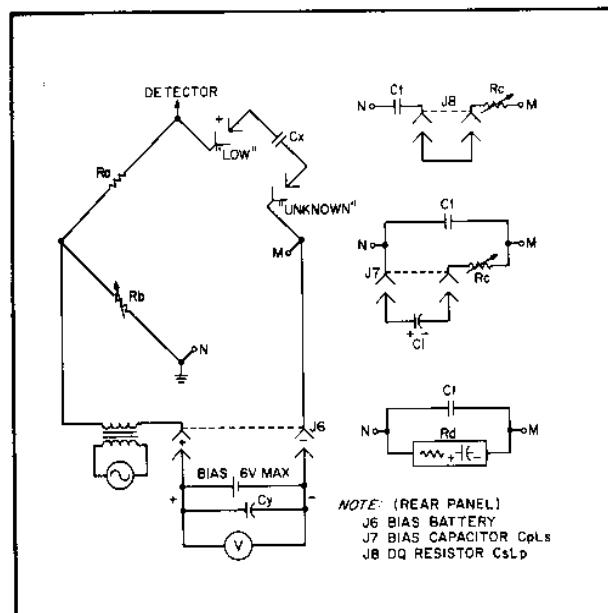


Figure 3-5. Dc Biased Capacitance Measurement

measurement. Figure 3-6 schematically illustrates the dc bias application. Operating procedure for dc-biased measurements is described below and pictorially shown in Figure 3-6. The following equipment will be required:

1. 6 Vdc battery or dry cell.
2. electrolytic capacitor (designated C_y), aluminum or tantalum, 6 Vdcw, more than $100 \mu\text{F}$ at 1 kHz or more than $(100 \text{ kHz}/f) \mu\text{F}$.
3. dc milliammeter, VTVM not recommended, or clip-on milliammeter HP 428B.
4. electrolytic capacitor (designated C_L), aluminum or tantalum, 6 vdcw, more than $(20/Q_x^2) \mu\text{F}$ for less than 1% error measurements. Q_x is the Q of the unknown L.

With the FUNCTION switch set to Lp HIGH Q, the capacitance of C_L depends upon the unknown Q and desired accuracy. The error introduced by C_L is:

$$\text{measured } L = L_x \left(1 - \frac{C_t}{C_L Q_x^2} \right)$$

$$\text{measured } Q = Q_x \left(1 - \frac{C_t}{C_L Q_x^2} \right), \text{ where } L_x \text{ or } Q_x \text{ is}$$

the correct L or Q value of the unknown.

3-59. PROCEDURE.

a. Connect the measurement setup as shown in Figure 3-6. Ground only the 4260A cabinet to power line ground.

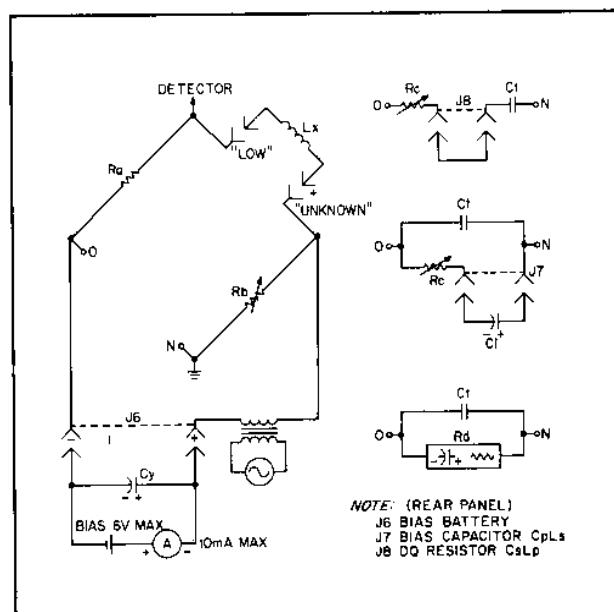


Figure 3-6. Dc Biased Inductance Measurement

b. Connect the unknown L to the UNKNOWN terminals.

CAUTION

DO NOT APPLY A DC BIAS VOLTAGE
GREATER THAN 6 VDC OR A DC BIAS
CURRENT GREATER THAN 10 MA.

c. Set FUNCTION switch to L_s AUTO position for measurements with the internal 1 kHz generator. Adjust RANGE switch and CRL control for bridge balance (meter null). Read the measured L value on the CRL counter.

3-60. RESISTANCE MEASUREMENT AT 1 kHz.

3-61. To make AC resistance measurement at 1 kHz refer to Figure 3-1, and perform the following steps:

a. Remove shorting strap across DQ RESISTOR (CsLp) terminals on rear panel.

b. Connect accurate 500 ohm metal film resistor ($\pm 1\%$ or less) between right CsLp terminal and CpLs terminal immediately below. DO NOT REMOVE STRAP ON CpLs TERMINAL.

c. Set DQ knobs full counter clockwise.

d. Set FUNCTION switch to L_p HIGH Q.

e. Make measurement using RANGE switch and CRL dial.

f. Multiply inductance reading in Henries by 10,000 to convert to ohms. For example, 1 millihenry is 10 ohms.

SECTION IV

THEORY OF OPERATION

4-1. INTRODUCTION.

4-2. This section includes circuit operation details for the Universal Bridge. A general description of operation is given first, with details of the various circuits following. Each assembly in the instrument is discussed in the order of its assembly designation (A100, A200, etc.) as listed in Table 4-1.

Table 4-1. Assembly Designations

A100 Range and Function Switch	04260-7021
A200 Power Supply and 1 kHz Oscillator	04260-7022
A300 Reference Voltage	04260-7023
A400 Detector	04260-7024
A600 Decimal Point and Direction Indicator	04260-7026

4-3. DESCRIPTION.

4-4. GENERAL.

4-5. For capacitance and inductance measurements with the FUNCTION switch set to Cp AUTO or Ls AUTO, a 1 kHz signal drives the bridge and balance is achieved by selecting the proper range and adjusting only the CRL control. This is possible because a voltage-controlled resistor is substituted for one resistor in the bridge circuit. Thus, simultaneous adjustment of more than one control is eliminated.

4-6. BLOCK DIAGRAM.

4-7. Figure 8-2 illustrates the bridge and auto null circuits. The auto null circuits are used when the FUNCTION switch is set to Cp AUTO or Ls AUTO position. As seen in Figure 8-2, the phase detector receives two signals: 1) an error voltage from the detector amplifier which is proportional to bridge unbalance, and 2) a reference voltage derived from the 1 kHz signal source. The phase detector output voltage is therefore proportional to bridge unbalance. This proportional voltage is applied through a dc amplifier to the voltage-controlled resistor circuit. This controlled value is the resistance of the one arm of the bridge. As the CRL control is rotated to achieve bridge balance, the voltage-controlled resistor value electronically follows the CRL control. Thus, when bridge balance is achieved, no error voltage is present and the null meter indicates zero.

4-8. In generating the reference signal input to the phase detector, two voltages are applied to the reference phase comparator. The comparator voltage output has a phase relationship, θ , with respect to the driving signal. The phase multiplier translates this relationship to 2θ , since 2θ is the most effec-

tive angle for maximum sensitivity in the circuit. This 2θ information is applied to the reference voltage generator and a 1 kHz square wave results which is displaced in phase by 2θ from the driving voltage. The generated 2θ reference signal is then applied to the phase detector for comparison with the bridge error voltage.

4-9. BASIC BRIDGE FOR RESISTANCE MEASUREMENTS.

4-10. Figure 4-1A shows the basic bridge circuit used to measure resistance. A four-arm bridge circuit is formed by resistors Ra, Rx, Rs, and Rb. Rx is the fixed unknown R to be measured; Ra is determined by the value of Rx; Rs is a fixed value; and Rb is variable to adjust for bridge balance. In actual use, the Model 4260A bridge circuit is adjusted for a null indication on the meter with the CRL control and the unknown resistance is read directly from the display with correct units and decimal point placement.

4-11. BASIC CIRCUITS FOR CAPACITANCE MEASUREMENTS.

4-12. Figure 4-1B illustrates the basic bridge circuit for parallel capacitance (Cp HIGH D) measurements at 1 kHz. Figure 4-1C illustrates a basic bridge circuit for series capacitance (Cs LOW D) measurements. For parallel capacitance measurements with the FUNCTION control set to Cp AUTO, the basic bridge circuit is shown in Figure 4-1D.

4-13. BASIC CIRCUITS FOR INDUCTANCE MEASUREMENTS.

4-14. Figure 4-1E illustrates the basic bridge circuit for series inductance (LOW Q) measurements at 1 kHz. Figure 4-1F illustrates the basic bridge circuit for parallel inductance (HIGH Q) measurements at 1 kHz. For series inductance measurements with the FUNCTION switch set to Ls AUTO, the basic bridge circuit is shown in Figure 4-1G.

4-15. RANGE AND FUNCTION SWITCH A100.

(Schematic Diagram, Figure 8-3)

4-16. Assembly A100 consists of RANGE switch S101, FUNCTION switch S102, and a printed circuit board for lead and component connections. The RANGE and FUNCTION switches route signals in the instrument for proper operation. RANGE switch S101 selects the resistor which forms one arm of the bridge circuit for balancing during a measurement. The selected resistor correctly attenuates the applied signal. Capacitors C101 through C105 provide frequency compensation for certain ranges when ac voltages are applied during L or C measurements.

<p>A</p> <p>Dc Resistance R $R_x = RaRb/Rs$</p>	<p>A dc voltage from battery BT1 is applied between bridge points 0 and P. Variable resistors Ra and Rb are adjusted for a zero or null reading on the indicator. With a null condition, voltage drops across bridge arms XP and YP are equal and the bridge is said to be balanced. Thus, the value of unknown Rx can be determined from the basic relationship: $\frac{R_x}{Ra} = \frac{R_b}{R_s}$, or $R_x = RaRb/Rs$.</p>
<p>B</p> <p>Parallel Capacitance Cp (HIGH D: 0.05 to 50 at 1 kHz) $C_x = Ct Rb/Ra$ $Dx = \frac{1}{2\pi f C_x R_x} = \frac{1}{2\pi f C_t R_c}$ $f = \text{frequency}$</p>	<p>This circuit is similar to the basic R circuit, but note that capacitor Ct is inserted in parallel with Rc (DQ control). Rx, in parallel with unknown capacitor Cx, represents the inherent resistance of any capacitor. A 1 kHz signal replaces the dc voltage used in R measurements. The relationships for this equivalent bridge circuit are given in B.</p>
<p>C</p> <p>Series Capacitance Cs (LOW D: 0.001~0.12 at 1 kHz) $C_x = Ct Rb/Ra$ $Dx = 2\pi f C_x R_x = 2\pi f C_t R_c$ $f = \text{frequency}$</p>	<p>In this mode, Ct is in series with Rc (DQ control) and loss resistance Rx is in series with unknown capacitor Cx.</p>
<p>D</p> <p>Parallel Capacitance Cp AUTO $C_x = Ct Rb/Ra$</p>	<p>This circuit is similar to the circuit of B except that Rc is replaced by Rd. Rd represents a voltage-adjustable resistor which electronically adjusts this bridge arm resistance and eliminates the need for simultaneous bridge adjustment with more than one control. Thus, with the Model 4260A, the capacitance measurement can be made quickly with only the CRL control.</p>
<p>E</p> <p>Series Inductance Ls (LOW Q: 0.02 to 20 at 1 kHz) $L_x = Ct Ra Rb$ $Q_x = 2\pi f L_x, R_x = 2\pi f C_t R_c$ $f = \text{frequency}$</p>	<p>Unknown inductance Lx has a series resistor Rx which represents the resistance of the coil windings and loss of inductor.</p>
<p>F</p> <p>Parallel Inductance Lp (HIGH Q: 8 ~ 1000 at 1 kHz) $L_x = Ct Ra Rb$ $Q_x = \frac{R_x}{2\pi f L_x} = \frac{1}{2\pi f C_t R_c}$ $f = \text{frequency}$</p>	<p>This circuit is similar to the series inductance equivalent circuit, except that loss resistance Rx is in parallel with Lx and Ct is in series with Rc (DQ control).</p>
<p>G</p> <p>Series Inductance Ls AUTO $L_x = Ct Ra Rb$</p>	<p>This circuit is similar to E except that Rc is replaced by Rd. Rd represents a voltage-adjustable resistor which electronically adjusts this bridge arm resistance and eliminates the need for simultaneous bridge adjustments with more than one control. Thus, with the Model 4260A, the inductance measurement can be made quickly with only the CRL control.</p>

Figure 4-1. Basic Bridge Circuits

4-17. FUNCTION switch S102 routes signals to and from various functional circuits in the instrument. When set to R position, 40 Vdc is routed through S102 and RANGE switch S101 to the unknown R. For L measurements, the bridge arm connections to the DQ and CRL controls are reversed from that for C measurements. This technique maintains the same phase relationship for the bridge error signal and the reference voltage for the AUTO null circuit. The CRL direction indicator lights are also energized for Cp AUTO or Ls AUTO position of the FUNCTION switch. R110 and R111 are fixed bridge resistors selected by FUNCTION switch S102.

4-18. POWER SUPPLY AND 1 kHz OSCILLATOR A200.

(Schematic Diagram, Figure 8-4)

4-19. Assembly A200 includes four power supply sections which generate operating dc voltages and also a 1 kHz oscillator circuit. The +13 Vdc and -12 Vdc outputs are regulated and the +40 Vdc and +110 Vdc outputs are not. The oscillator circuit generates the 1 kHz signal for driving the instrument bridge circuit during L or C measurements.

4-20. POWER SUPPLY.

4-21. PRIMARY POWER. As shown in the schematic of Figure 8-4 , either 115 Vac or 230 Vac is applied through fuse F1 and LINE switch S1 to T1 primary. Rear-panel 115/230 switch S2 connects T1 primaries in parallel for 115 Vac operation or in series for 230 Vac operation.

4-22. +13 VDC SUPPLY. The regulated +13 Vdc supply consists of full-wave rectifier CR201, CR202 whose output is smoothed by C201, regulated by Q201, Q202, Q203, and further filtered by C203. Breakdown diode CR203 provides a 12.7 volt reference at Q203 emitter. Output voltage variations are sensed at Q203 base, amplified, and supplied to driver Q202 base. Q202 then controls regulator Q201 to oppose the output voltage change. Resistor R204 across Q201 collector-emitter provides protection for Q201 when the +13 Vdc output is overloaded.

4-23. -12 VDC SUPPLY. The regulated -12 Vdc supply consists of half-wave rectifier CR204 whose output is smoothed by C204, regulated by Q204, and further filtered by C205. Breakdown diode CR205 provides a 12.7 volt reference at Q204 base. When the output voltage starts to change, this change is sensed by regulator Q204 which changes its dynamic resistance to oppose the voltage change.

4-24. +40 VDC SUPPLY. The unregulated +40 Vdc supply consists of half-wave rectifier CR206 whose output is filtered by the RC combination of R207 and C206. Series resistor R207 limits the output voltage to the UNKNOWN terminals during R measurements.

4-25. +110 VDC SUPPLY. The unregulated +110 Vdc supply consists of half-wave rectifier CR207 whose output is filtered by C207. This +110 Vdc is supplied via pin P, FUNCTION switch S102, and RANGE switch S101 to the decimal point and direction indicator neons.

4-26. 1 kHz OSCILLATOR.

4-27. Transistors Q205, Q206, and associated components form a 1 kHz oscillator circuit. Emitter follower Q207 provides the buffered 1 kHz output to transformer T2 to drive the bridge circuit for L and C measurements. The oscillator is an RC type with positive feedback from Q206 collector to Q205 base to maintain oscillations. Operating frequency is primarily determined by C209, C210, R208, R209, and R210. Variable resistor R210 permits frequency adjustment. R213 is the output level control. Plus 13 Vdc is supplied from pin D via OSCILLATOR INT-EXT switch S3 to pin U. Thus, the oscillator circuit is energized only when S3 is set to INT. Capacitors C208 and C214 filter 1 kHz from the +13 Vdc line.

4-28. REFERENCE VOLTAGE ASSEMBLY A300.

(Schematic Diagram, Figure 8-5)

4-29. INTRODUCTION.

4-30. The circuits of assembly A300 receive the 1 kHz signal from bridge transformer T2 and generate a negative output pulse. The duration of this pulse is equal to twice the phase angle (θ) between the bridge driving signal from T2 and the 1 kHz signal across one arm of the bridge circuit. This 2θ pulse duration thus represents a phase relationship in part of the bridge circuit and is used to detect the error signal component in phase with the reference voltage of the phase detector. Detector output drives the voltage-controlled resistor automatically for bridge balance. This automatic action occurs when the FUNCTION switch is set to Cp AUTO or Ls AUTO. The 2θ relationship is used because it provides maximum null resolution and stability for the loop circuit.

4-31. REFERENCE PHASE CIRCUITS.

4-32. The reference phase circuits reconstruct the bridge driving signal from T2 and compose a 1 kHz square wave which is in phase with this driving source. This reference square wave is applied to the phase comparator. The reference phase circuits include high-impedance amplifier No. 1 (Q305, Q306), differential amplifier (Q303, Q304), and limiting amplifier Q307.

4-33. The 1 kHz signal from T2(4) and switch assembly A100 is applied at A300(9). From pin 9 the signal is ac coupled through C307 to Q306 base. Q306 and Q305 amplify the signal current and apply it to differential amplifier transistor Q304. Capacitor C305 is selected to provide positive feedback to Q306. This compensates input capacitance of the amplifier and stray capacitance of CRL resistor R3. The other input to the differential amplifier is from Q301 emitter, which is the other signal from the bridge circuit. Thus the differentially summed output at Q303 collector is a reconstructed sine wave in phase with the bridge driving signal. From Q303 collector, the sine wave is ac coupled through C309 to Q307 base. Diodes CR301, CR302 limit peaks, so the output from Q307 collector is a squared wave. This squared wave is ac coupled through C317 to the phase comparator circuit.

4-34. VARIABLE PHASE CIRCUITS.

4-35. The variable phase circuits receive an ac voltage from one arm of the bridge circuit and supply a square wave which is out of phase with the bridge driving signal at T2. The variable phase circuits include high-impedance amplifier No. 2 (Q301, Q302) and limiting amplifiers Q308 and Q309.

4-36. The 1 kHz signal from T2(3) and switch assembly A100 is applied at A300(7). From pin 7 the signal is ac coupled through C301 to Q301 base. Q301 and Q302 amplify the signal and supply it to limiter amplifier Q308. (From Q301 emitter, the signal is also supplied to Q303 base in the reference phase circuit.) Diodes CR303, CR304 limit signal peaks, so Q309 input is a clipped sine wave. Limiting amplifier Q309 and diodes CR305, CR306 further limit peaks, so Q309 output is a square wave. This square wave is the second input to the phase comparator circuit.

4-37. PHASE COMPARATOR.

4-38. Phase comparator Q310, Q311 receives two square wave inputs: 1) one from the reference phase circuits which is in phase with the bridge driving signal, and 2) a second from the variable phase circuits which has a phase relationship θ with the bridge driving signal. The phase comparator output at Q311 collector is a negative pulse whose duration is equal to phase angle θ .

4-39. The phase comparator acts as an AND gate; that is, when the variable-phase square wave input at Q310 base is positive-going and the reference square wave at Q311 base is negative-going, a negative pulse results at Q311 collector. This negative pulse is θ wide; that is, its duration is equal to the phase difference between the two phase comparator inputs.

4-40. MILLER INTEGRATOR.

4-41. The Miller integrator circuit receives the negative pulse from the phase comparator and generates a positive "A" shaped waveform. The duration of the "A" shaped pulse is twice that of the input negative pulse. C318 is the integrating capacitor.

4-42. SWITCH.

4-43. Transistor switch Q313 makes a square wave from the "A" shaped input pulse. The square wave output duration is equal to the input pulse duration. Q313 is normally off. When the input pulse starts, Q313 saturates and remains on until the input pulse returns to its base line value. The switched output is supplied at pin 15 to drive the one-shot multivibrator on detector assembly A400.

4-44. DETECTOR ASSEMBLY A400.

(Schematic Diagram, Figure 8-6)

4-45. INTRODUCTION.

4-46. Assembly A400 circuits receive the bridge unbalance information and the 2θ pulse from reference voltage assembly A300. These inputs are used to automatically adjust a variable resistance circuit

which replaces a resistance in one arm of the bridge for Cp AUTO or Ls AUTO functions. In addition, these inputs are used to control the direction indicator lights. The right or left direction light is on, depending on which way the CRL control must be rotated to balance the bridge. Detector circuits include the error signal amplifier, phase detector, one-shot multivibrator, differential amplifier, Miller integrator, variable resistance circuit, and CRL direction light control.

4-47. ERROR SIGNAL AMPLIFIER.

4-48. This 80 dB amplifier includes transistors Q401 through Q405 and associated components. Input at pin 1 is a 1 kHz sine wave (if internal oscillator is used; otherwise frequency of external oscillator) whose amplitude represents the amount of bridge unbalance (error signal). Sine wave outputs from Q404 drive part of the phase detector and also the meter circuit. An output from Q405 emitter (phase-shifted 90° leading) drives that part of the phase detector which controls the direction indicator light circuit. Thus, when an unknown L or C is connected across the UNKNOWN terminals, the bridge circuit is unbalanced and an error signal results. This causes a meter reading, a direction light to be on, and also controlled value for the variable resistance.

4-49. The error signal is applied at pin 1 and amplified by Q401, Q402, and Q403. Diodes CR402 through CR405 provide limiting at Q402 to obtain logarithmic amplifier characteristics. Also, when oscillator switch S3 is set to INT (pins 6 and 7 shorted), negative feedback occurs from Q404 emitter to Q403 base through a twin T filter. The T filter provides minimum negative feedback at 1 kHz, which peaks the amplifier at this frequency and it effectively becomes a tuned amplifier with overall loop gain maximum. Breakdown diode CR401 in Q403 emitter establishes the dc operating point for this transistor. Q404 is an emitter follower which supplies the amplified error signal to part of the phase detector. Phase-shifting network R420 and C412 cause the output voltage waveform at Q405 emitter to lead the error signal by 90°. Diodes CR406 through CR409 are a full-wave rectifier to provide a dc for the meter which is proportional to bridge unbalance.

4-50. ONE SHOT MULTIVIBRATOR.

4-51. The one-shot multivibrator (OS MV) receives the negative pulse via pin 12 from switching amplifier Q313 and generates 1 kHz square waves. Complementary square waves from both collectors of the OS MV are applied to phase detector diodes CR412 and CR413.

4-52. The quiescent state of the OS MV is Q406 off, Q407 on. RC combination C416, C417, R425 differentiates the positive-going trailing edge of the negative input pulse. The resulting positive pulse at Q406 base turns this transistor on. RC combination R428, C418 determines how long the Q407 off, Q406 on condition exists. Diodes CR410, CR411 provide a speed-up action for the OS MV when it changes states so that the square wave edges are sharpened.

4-53. PHASE DETECTOR.

4-54. The phase detector circuit receives square waves from the OS MV and sine wave from the error signal amplifier. A varying dc output results at R435, R436 junction which is proportional to bridge unbalance. The phase detector is actually two phase detecting circuits: one for the variable resistance circuit, and a second for the CRL direction light control circuit.

4-55. The error signal sine wave from Q404 emitter is applied through C411 to CR412, CR413 junction. The complementary square waves from the OS MV are applied through R433 and R434 to the other ends of these diodes. When Q406 collector is positive (+4.4 volts), and Q407 collector is zero, diodes CR412 and CR413 conduct. Error signal amplifier output voltage appears at R435, R436 junction without attenuation. When Q406 collector voltage is zero and Q407 collector is +4.4 volts, CR412 and CR413 are cut off; error signal amplifier output voltage does not appear at R435, R436 and this junction is the same voltage level as the average voltage level of +2.2 volts. The voltage level at R430, R431 junction is the average level of +2.2 volts. Thus the differential output between R435, R436 junction and R430, R431 junction is the synchronized rectified output of the error signal. This output is supplied to Q408 for proportional control of the variable resistance circuit.

4-56. Operation of the CR414, CR415 light control section of the phase detector is similar, except that the error signal sine wave is phase-shifted 90° ahead by R420, C412, Q405 combination. When the bridge is unbalanced with the CRL counter too low, an error signal is applied and the dc output to the light control differential amplifier is more positive. With the CRL counter too high, output is less positive.

4-57. DIFFERENTIAL AMPLIFIER AND MILLER INTEGRATOR.

4-58. This circuit uses the phase detector output to control the variable resistance circuit. The Miller integrator provides stability for the overall feedback loop near null or bridge balance when most sensitivity is required. The differential amplifier output at Q408 collector is a dc level which changes with the phase detector input at Q408 base. Integrator circuit Q410 and C420 amplifies Q408 output and stabilizes control of the variable resistance circuit. Near null or bridge balance point, noise and random variations are minimized by the integrator circuit.

4-59. VARIABLE RESISTANCE CIRCUIT.

4-60. The variable resistance circuit includes +6 Vdc regulator Q415, phase splitter Q411, and emitter followers Q412, Q413, Q414. Diodes CR419, CR420 are the heart of the variable resistance circuit, with their bias state controlling their resistance. In Cp or Ls AUTO position, this controlled resistance becomes the R value which replaces the DQ control in one arm of the bridge (see Block Diagram, Figure 8-2).

4-61. Phase splitter Q411 conduction controls CR419, CR420 bias through emitter followers Q412, Q413, and Q414. When Q411 base voltage decreases, current through R446 and R447 decreases; base voltage levels of Q412 and Q413 increase, and the forward current through CR419, CR420 increases. This causes the effective resistance of the diodes to become smaller. When Q411 input voltage causes Q411 to be cut off, current begins to flow through CR416, CR417, and CR418; base voltage level of Q412 and Q413 cannot increase. At this time, diodes CR419, CR420 have the minimum resistance for the bridge arm. When Q411 base voltage increases, Q411 turns on and Q411 collector to emitter voltage becomes small. Diodes CR419, CR420 are cut off and their effective resistance becomes several hundred megohms. Thus, the variable resistance circuit changes its resistance as controlled by bridge balance information from the phase detector.

4-62. DIFFERENTIAL AMPLIFIER AND LAMP DRIVER.

4-63. This circuit uses information from the phase detector circuit (Paragraph 4-56) to light the correct CRL direction lamp. Figure 4-2 is a simplified diagram of the light control circuit. The error dc level at Q416 base is added with the reference level at Q417 base by the differential amplifier to give a resulting dc level at driver Q418 base. When the CRL control is set too low for bridge balance, Q416 is turned on; this causes Q418 to be off with its collector voltage rising to near -110 volts, and right CRL light V602 is energized through R456. With the CRL control too high, Q416 is off, Q418 is on, and left CRL light V601 is energized through R457, Q418, and R455.

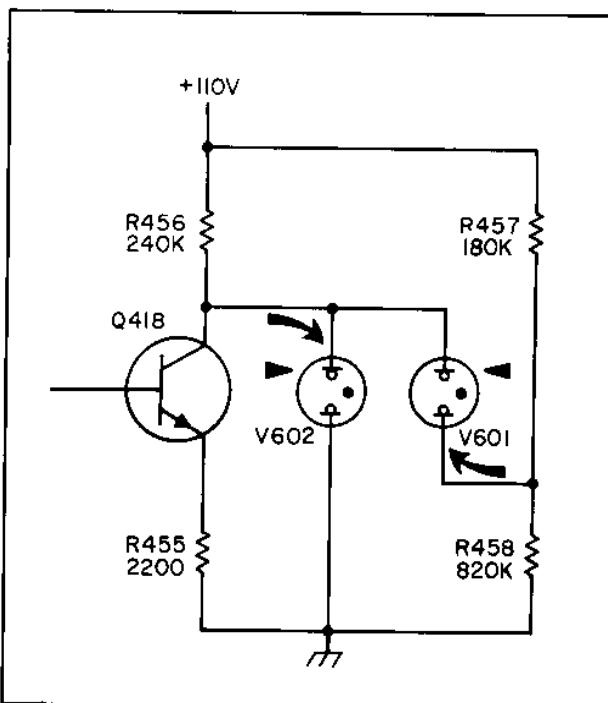


Figure 4-2. CRL Light Control

4-64. CHASSIS ASSEMBLY A500.

4-65. Chassis assembly A500 consists of the main mounting plate (top deck and rear panel) and those parts that are permanently riveted on it. These parts are identified as: J1, ac power input jack; J2, 18-pin connector for printed circuit assembly A200; J3, 15-pin connector for printed circuit assembly A300; J4, 15-pin connector for printed circuit assembly A400; and S2, 115/230 volt ac power slide switch.

4-66. DECIMAL POINT AND DIRECTION INDICATOR LAMP A600.

(Schematic Diagram, Figure 8-3)

4-67. This assembly includes decimal point neons V603, V604, V605, series resistor R601 and CRL direction neons V601, V602. Decimal point lights are controlled by the position of the RANGE and FUNCTION switches. CRL direction light control is explained in Paragraph 4-63.

SECTION V

MAINTENANCE

5-1. INTRODUCTION.

5-2. This section provides maintenance and adjustment information for the Model 4260A. The section contains four areas of information as follows:

- a. performance checks are included in Table 5-2 to verify operation of instrument circuits;
- b. troubleshooting and repair information is intended to aid systematic troubleshooting and repair;
- c. adjustment procedures are given in the order recommended for use; these adjustments include checks of critical components in the bridge circuit and also selection procedures for factory-selected components;
- d. operation checks of printed circuit assemblies.

5-3. TEST EQUIPMENT.

5-4. Recommended test equipment for performing the checks and adjustments outlined in this section is listed in tabular form with the procedure to be performed. Test instruments other than those listed can be used if their specifications equal or exceed the listed characteristics.

5-5. INSTRUMENT COVER REMOVAL.

5-6. To remove top or bottom cover, remove two screws at rear of cover, slide cover toward rear of instrument, and lift cover off. Slide covers are removed by taking out four screws in each cover and lifting cover off.

WARNING

115 or 230 volt ac terminals are exposed when bottom or side covers are removed. Exercise caution during troubleshooting, adjustments, or repair. To avoid damage, disconnect power during adjustment or repair.

5-7. ASSEMBLY IDENTIFICATION.

5-8. Table 4-1 lists the assemblies in the Universal Bridge. Assemblies are identified by assembly number: for example, A200.

5-9. PERFORMANCE CHECK.

5-10. Performance checks outlined in Table 5-2 can be used as an operating check for the instrument. These checks can also be used:

- a. as part of an incoming inspection check of instrument specifications;
- b. periodically, for instruments used in systems where reliability is of utmost importance;
- c. as part of a troubleshooting procedure to locate operation problems, and
- d. after any repairs or adjustments, before returning instrument to regular service.

Table 5-1. Performance Check
Test Equipment

Recommended Unit	Model or Part Number
C: $1 \mu\text{F} \pm 0.2\%$, sil mica	YHP CS-1
C: $0.1 \mu\text{F} \pm 0.2\%$, sil mica	YHP CS-0.1
C: $0.01 \mu\text{F} \pm 0.2\%$, sil mica	YHP CS-0.01
C: $1000 \text{ pF} \pm 0.2\%$, air	YHP CS-1000A
C: $100 \text{ pF} \pm 0.2\%$, air	YHP CS-100A
C: $10 \text{ pF} \pm 2.5\%$, 500 WV, cer	0160-0488
C: $1 \text{ pF} \pm 10\%$, 500 WV, mica	0150-0029
L: $1 \text{ mH} \pm 0.5\%$	YHP SI-1
L: $10 \text{ mH} \pm 0.2\%$	YHP SI-10
L: $100 \text{ mH} \pm 0.2\%$	YHP SI-100
These resistors can be used for resistance (R) and dissipation factor (D) checks. One per cent resistors are used with capacitors for D checks and 1/2% (or better) are used for resistance checks.	
carb flm, 10 M, 1/4% 1W	0780-0025
met flm, 1 M 1/2%, 1/2W	0757-0017
met flm, 99K, 1/2%, 1/2 W	0757-0010
carb flm, 29.9K 1%, 1/2W	0727-0185
carb flm, 15K 1%, 1/2W	0727-0168
met flm, 10K 1/2%, 1/4W	0698-4203
ww 7.5K 1/4%, 1/8W	0811-0046
met flm, 5K 1/4%, 1/8W	0698-3237
carb flm, 3K, 1%, 1/2W	0727-0124
ww, 2K, 1/2%, 1/2W	0811-0285
carb flm, 1.5K, 1%, 1/2W	0727-0110
carb flm, 1K, 1/2%, 1/2W	0727-0451
carb flm, 300 Ω , 1%, 1/2W	0727-0065
met flm, 150 Ω , 1%, 1/8W	0757-0284
met flm, 100 Ω , 1/4%, 1/2W	0757-1012
carb flm, 33 Ω , 1%, 1/2W	0727-0965
carb flm, 30 Ω , 1%, 1/2W	0727-0991
ww, 9 ohms, 1/2%, 1/2W	0811-0294
carb flm, 7.5 Ω , 1%, 1/2W	0727-0705
ww, 1.1 Ω , 1/2%, 1/2W	0811-0284
DC Null Voltmeter Range: 1 mV to 300 Vrms Input R: 1 megohm	HP 413A
AC Voltmeter Range: 1 mV to 10 V Input Impedance: 1 megohm	HP 403B
Electronic Counter Sensitivity: 50 mV Freq: Dc to 100 kHz Display: 4 digits minimum	HP 5245L with HP 5261A Plug-In

Table 5-2. Performance Checks

1. CAPACITANCE MEASUREMENT.

C Range: 1 pF to 1000 μ F; C Accuracy: $\pm(1\% + 1 \text{ digit})$, 1 nF to 100 μ F
 D Range: 0.001 to 0.12 for LOW D; 0.05 to 50 for HIGH D
 D Accuracy: LOW D --D: $\pm(5\% + 0.002)$ or 1 dial division, whichever is greater
 HIGH D --1/D: $\pm(5\% + 0.05)$ or 1 dial division of LOW Q dial,
 whichever is greater.

- a. Connect equipment as shown in Figure 5-1.

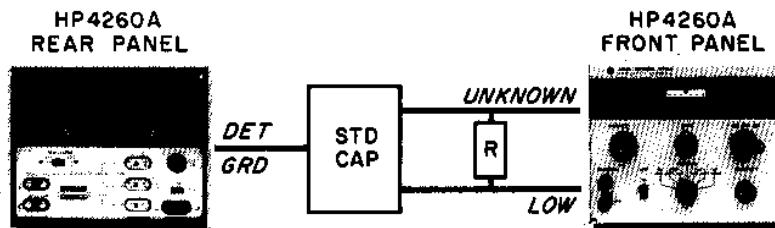


Figure 5-1. Capacitance and D Accuracy Check

- b. For this check, locate the following components:

Standard Capacitor	Connect Resistor for Standard D	Function	C Readings	D Readings	C Readings in Cp-AUTO
1 μ F	-	Cs	0989 - 1011 nF	less than 0.002	0984 - 1016 nF
0.1 μ F	-	Cs	098.9 - 101.1 nF	less than 0.002	098.4 - 101.6 nF
0.1 μ F	series 7.5 Ω	Cs	098.9 - 101.1 nF	0.0024 - 0.007	098.4 - 101.6 nF
0.1 μ F	series 30 Ω	Cs	098.9 - 101.1 nF	0.0159 - 0.022	098.4 - 101.6 nF
0.1 μ F	series 150 Ω	Cs	098.9 - 101.1 nF	0.088 - 0.099	097.5 - 100.7 nF
0.1 μ F	parallel 30K Ω	Cp	098.9 - 101.1 nF	0.056 - 0.05	098.4 - 101.6 nF
0.1 μ F	parallel 15K Ω	Cp	098.9 - 101.1 nF	0.112 - 0.1	098.4 - 101.6 nF
0.1 μ F	parallel 3K Ω	Cp	098.9 - 101.1 nF	0.575 - 0.49	098.4 - 101.6 nF
0.1 μ F	parallel 1.5 K	Cp	098.9 - 101.1 nF	1.2 - 0.95	098.4 - 101.6 nF
0.1 μ F	parallel 300 Ω	Cp	098.9 - 101.1 nF	10 - 4	-
0.1 μ F	parallel 33 Ω	Cp	098.9 - 101.1 nF	more than 20	-
0.01 μ F	-	Cs	09.89 - 10.11 nF	less than 0.002	09.84 - 10.16 nF
1000 pF	-	Cs	0979 - 1021 pF	less than 0.002	0974 - 1026 pF
100 pF	-	Cs	0097 - 0103 pF*	less than 0.002	0097 - 0103 pF*
10 pF	-	Cs	0009 - 0011 pF*	-	0009 - 0011 pF*
1 pF	-	Cs	0000 - 0002 pF*	-	0000 - 0002 pF*

*For calibration, subtract residual capacitance from measured value.

- c. Set FUNCTION switch to Cp AUTO.
 d. Connect 1 μ F standard capacitor to UNKNOWN terminals.
 e. Set CRL counter to 1000. Set RANGE switch on nF range to light right decimal point light.

Table 5-2. Performance Checks (cont'd)

f. Rotate CRL control for meter null at center and observe that CRL direction lights change at null position.												
g. Set FUNCTION switch to Cs LOW D and adjust DQ dial for meter null. (Slight adjustment of CRL control may give best null.) Read the measured C and D values. These values should be within the values listed above for the standard capacitors.												
h. Repeat the procedure for the other standard capacitors listed and connect resistors as indicated.												
2. INDUCTANCE MEASUREMENT												
L Range: 1 μ H to 1000 H L Accuracy: $\pm(1\% + 1 \text{ digit})$ from 1 mH to 100 H												
a. For this check, locate the following inductors:												
<table> <thead> <tr> <th>Standard Inductor</th> <th>L Readings in Ls-Low Q</th> <th>L Readings in Ls - AUTO</th> </tr> </thead> <tbody> <tr> <td>1 mH</td> <td>0979 - 1021 μH</td> <td>0974 - 1026 μH</td> </tr> <tr> <td>10 mH</td> <td>09.89 - 10.11 mH</td> <td>09.84 - 10.16 mH</td> </tr> <tr> <td>100 mH</td> <td>098.9 - 101.1 mH</td> <td>098.4 - 101.6 mH</td> </tr> </tbody> </table>	Standard Inductor	L Readings in Ls-Low Q	L Readings in Ls - AUTO	1 mH	0979 - 1021 μ H	0974 - 1026 μ H	10 mH	09.89 - 10.11 mH	09.84 - 10.16 mH	100 mH	098.9 - 101.1 mH	098.4 - 101.6 mH
Standard Inductor	L Readings in Ls-Low Q	L Readings in Ls - AUTO										
1 mH	0979 - 1021 μ H	0974 - 1026 μ H										
10 mH	09.89 - 10.11 mH	09.84 - 10.16 mH										
100 mH	098.9 - 101.1 mH	098.4 - 101.6 mH										
Note: Lp: L readings in Lp-High Q should be as follows: $L_p = L_s (1 + 1/Q^2)$ where Ls = L readings in Ls-Low Q Q = Q readings in Ls-Low Q or Lp-High Q												
b. Set FUNCTION switch to Ls AUTO.												
c. Connect 1 mH standard inductor to UNKNOWN terminals.												
d. Set CRL counter to 1000. Set RANGE switch on μ H range to light right decimal point light.												
e. Rotate CRL control for meter null at center and observe that CRL direction lights change at null position.												
f. Set FUNCTION switch to Lp LOW D or Ls HIGH D and adjust DQ dial for meter null. (Slight adjustment of CRL control may give best null.) Read the measured L and Q values. These values should be within the values listed above for the standard inductors.												
g. Repeat the procedure for the other standard inductors listed.												
3. DC RESISTANCE MEASUREMENT.												
Range: 10 milliohms to 10 megohms Accuracy: $\pm(1\% + 1 \text{ digit})$ from 10 ohms to 1 megohm $\pm(2\% + 1 \text{ digit})$ from 10 milliohms to 10 ohms and 1 megohm to 10 megohms Residual Resistance: approximately 3 milliohms or less												
a. Use an external voltmeter such as the HP 413A DC Null Voltmeter for maximum resolution of the bridge balance point. Remove the shorting strap on the Voltmeter rear panel to isolate the Voltmeter from power line ground. Connect the Voltmeter low or ground input terminal to the 4260A rear-panel DETECTOR ground terminal. Connect the other Voltmeter input terminal to the UNKNOWN LOW terminal on the 4260A.												
b. Set the FUNCTION switch to R.												
c. Set RANGE switch full cw.												
d. Rotate CRL control to 1000.												
e. Connect 10 megohm standard resistor to UNKNOWN terminals.												
f. Adjust CRL control for null on voltmeter and increase SENSITIVITY control cw for maximum resolution. Read measured R value from CRL counter and decimal point displayed.												
g. Repeat the procedure for the other standard resistors.												

Table 5-2. Performance Checks (cont'd)

h. Remove resistor from UNKNOWN terminals. With a short, heavy piece of wire, short UNKNOWN terminals. Set RANGE switch full ccw. Measure residual resistance by adjusting CRL control for null indication on Voltmeter. Residual resistance should be less than 1 digit.

Standard Resistors	Model 4260A Readings
Resistor, $10\text{ M}\Omega \pm 0.5\%$, $1/4\text{W}$, metal film	09.79 - $10.21\text{ M}\Omega$
Resistor, $1\text{ M}\Omega \pm 0.5\%$, $1/4\text{W}$, metal film	0989 - $1011\text{ K}\Omega$
Resistor, $100\text{K}\Omega \pm 0.5\%$, $1/4\text{W}$, metal film	098.9 - $101.1\text{ K}\Omega$
Resistor, $10\text{K}\Omega \pm 0.5\%$, $1/4\text{W}$, metal film or WW	09.89 - $10.11\text{ K}\Omega$
Resistor, $7.5\text{K}\Omega \pm 0.5\%$, $1/4\text{W}$, metal film or WW	07.42 - $07.58\text{ K}\Omega$
Resistor, $5\text{K}\Omega \pm 0.5\%$, $1/4\text{W}$, metal film or WW	04.94 - $05.06\text{ K}\Omega$
Resistor, $2\text{K}\Omega \pm 0.5\%$, $1/4\text{W}$, metal film or WW	01.97 - $02.03\text{ K}\Omega$
Resistor, $1\text{K}\Omega \pm 0.5\%$, $1/4\text{W}$, metal film or WW	0989 - 1011Ω
Resistor, $100\Omega \pm 0.5\%$, $1/4\text{W}$, WW	098.9 - 101.1Ω
Resistor, $10\Omega \pm 0.5\%$, $1/4\text{W}$, WW	09.79 - 10.21Ω
Resistor, $1\Omega \pm 0.5\%$, $1/4\text{W}$, WW	00.97 - 01.03Ω

i. To measure the maximum dc voltage at the UNKNOWN terminals for R measurements, connect only a Voltmeter to these terminals.

j. Set FUNCTION to R, RANGE full ccw, and rotate CRL to 1030.

k. Voltmeter should indicate between 30 and 40 Vdc for 115 or 230 volts ac power.

4. INTERNAL OSCILLATOR: Frequency: $1\text{ kHz} \pm 2\%$
Voltage: $100\text{ mV rms} \pm 20\%$

- Connect equipment as shown in Figure 5-2.
- Set FUNCTION switch to Ls LOW Q position.
- Rotate CRL control to 1030.
- Rotate DQ control full ccw.
- Read frequency displayed on counter and voltage indicated on voltmeter. Counter should display between 980 Hz and 1020 Hz and meter should indicate between 80 and 120 millivolts rms.

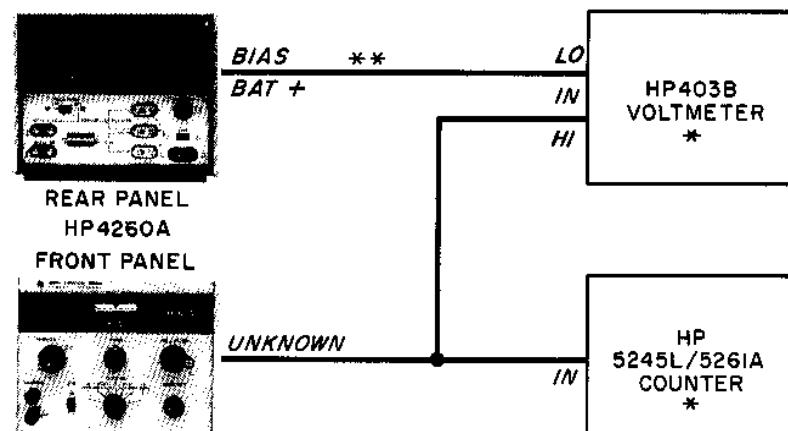



Figure 5-2. Internal Oscillator Check

Hewlett-Packard Model 4260A
Instrument Serial No. _____

Tests Performed by _____
Date _____

PERFORMANCE CHECK TEST CARD

Description	Check
1. Capacitance Measurement	Accuracy $\pm (1\% + 1 \text{ digit})$ <input type="checkbox"/> LOW D $\pm (5\% + 0.002)$ <input type="checkbox"/> HIGH D $\pm (5\% + 0.05)$ <input type="checkbox"/>
2. Inductance Measurement	Accuracy $\pm (1\% + 1 \text{ digit})$ <input type="checkbox"/>
3. Dc Resistance Measurement	Accuracy 10 ohms to 1 megohm $\pm (1\% + 1 \text{ digit})$ <input type="checkbox"/> Accuracy 10 milliohms to 10 megohms $\pm (2\% + 1 \text{ digit})$ <input type="checkbox"/>
4. Internal Oscillator	Frequency 980 Hz <input type="checkbox"/> 1020 Hz Voltage 80 mV rms <input type="checkbox"/> 120 mV rms

 

5-11. TROUBLESHOOTING.

5-12. The best approach to isolating trouble is to first ensure that the trouble is not a result of conditions external to the 4260A; then obtain all possible information from the controls and indicators and logically apply this information to locate the defective unit or component. Figure 3-1 (Controls and Indicators, front panel, Controls and Connectors, rear panel), and component location figures and schematic diagrams can be used to understand operation and locate parts. Table 5-3 lists test equipment required for troubleshooting. Table 5-4 (Troubleshooting) lists possible trouble symptoms and checks for their cause. Table 5-5 shows decimal point and units indication logic. Troubleshooting of printed circuit assemblies is simplified if a suspected assembly is replaced with an operating assembly. Printed circuit operation checks are outlined in Paragraphs 5-39 through 5-51.

5-13. As a general check procedure, the following questions are a guide for isolating trouble:

- a. Are external instruments operating and connected correctly?
- b. Is the unknown component connected correctly?
- c. Are rear-panel shorting straps in place?

5-14. REPAIR.**5-15. COVER AND FRONT PANEL REMOVAL.**

5-16. Instrument covers are removed by taking out screws in each cover. To remove front panel, remove all front-panel knobs and side covers. In Figure 5-3 locate the four screws "A" which hold the side frames; loosen these screws. Carefully pull front panel towards front while holding side frames apart to release panel. Loosen deck side screws also.

5-17. PRINTED CIRCUIT COMPONENT REPLACEMENT.

5-18. To replace components on printed circuit boards, the following procedure is recommended:

- a. Clip leads of defective component and remove.
- b. With toothpick and soldering iron, clean component mounting holes.
- c. Insert replacement component leads into holes. Use heat and solder sparingly and solder leads in place.
- d. Refer to Paragraphs 5-39 through 5-51 for operation checks of printed circuit assemblies.

5-19. CRL COUNTER AND R3 REPLACEMENT.

5-20. CRL COUNTER. To remove this counter, remove two screws "B" in Figure 5-3 and lift out counter. Refer to Paragraph 5-27 (CRL ADJUSTMENTS) before installing counter.

5-21. CRL RESISTOR R3. For R3 replacement, remove CRL knob and four screws "C" in Figure 5-3.

Install replacement R3. Adjustment is required; refer to Paragraph 5-27 (CRL ADJUSTMENTS).

5-22. DQ DIAL AND R5 REPLACEMENT.

5-23. The DQ dial and resistor R5 are installed as a calibrated unit and therefore not separately replaceable. Contact the nearest Hewlett-Packard Sales/Service Office for service assistance (see lists at the back of this manual).

5-24. ADJUSTMENTS.

5-25. 1 kHz OSCILLATOR LEVEL & FREQUENCY. With 4260A top cover removed, connect oscilloscope and electronic counter to pin T of J2. Adjust R213 for level between 4.5 and 6.7 volts peak-to-peak, with positive peak clipped not more than 100 microseconds. Adjust frequency with R210 for 995 to 1005 Hz. Repeat level and frequency adjustments until both are within these values.

5-26. ERROR SIGNAL PHASE AND GAIN. To check phase and gain of the error signal amplifier on detector assembly A400, the test setup of Figure 5-4 is required.

- a. Disconnect the shielded cable from pin 1 of J4.
- b. Connect the equipment as shown in Figure 5-4.
- c. Set 4260A LINE switch to ON.
- d. Adjust the oscillator output voltage to 1 volt peak-to-peak on the oscilloscope. Set oscillator frequency to 1000 Hz, ± 1 Hz.
- e. Alternately adjust R415 and R417 so that oscillator output voltage and J4 pin 7 voltage are in phase and J4 pin 7 voltage level is between 0.9 and 1.1 volt peak-to-peak.
- f. Turn off 4260A LINE switch and disconnect equipment. Connect shielded cable to J4 pin 1. This completes the adjustment.

5-27. CRL COUNTER ADJUSTMENT.

- a. Remove power cable from the 4260A to unground the instrument.
- b. Disconnect shielded cable from CRL resistor R3.
- c. Set CRL counter to 0001.
- d. Loosen screws "B" in Figure 5-3 and separate counter gear from gear train.
- e. With a 1% meter or another 4260A with external null meter, adjust resistance of R3 to be 5.0 ohms.
- f. Set CRL counter to 0001 and engage counter with gear train.
- g. Tighten screws loosened in step d and check to ensure that CRL control operates gear train easily without slippage. If too stiff, loosen screws and readjust.
- h. Connect shielded cable to R3. This completes the adjustment.

Table 5-3. Test Equipment Required for Troubleshooting

Item	Description	HP Model
Dc Voltmeter	Range: 1 mV to 300 Vdc Input R: 1 megohm	413A
Oscillator	Frequency: 20 Hz to 20 kHz Output Level: 2 volts rms max.	200CD
Oscilloscope	Vertical Sensitivity: 50 mV/cm	175A with 1780A Horizontal and 1750B Dual Trace Vert. Ampl. Plug-ins.
Standard Components	See Table 5-1, Performance Check Test Equipment	

Table 5-4. Trouble Symptoms and Possible Causes

Symptom	Normal Operation	Possible Cause	Check
No lamps light	One of the decimal point indicator lamps should light when the 4260A is turned on.	Fuse blown Defective lamps +110V supply Switch contacts	Fuse Lamps Power supply - CR207 S101, S102
No meter deflection for R measurements	Meter should deflect either right or left when S102 set to R position.	Defective meter circuit 40V dc supply Switch contacts Bridge circuit	Meter, CR1, CR2 Power supply - CR206 S101, S102 R3, R110
No meter deflection for C & L measurements	Meter should deflect right when S102 set to Cs, Cp, Cp AUTO, Ls AUTO, Ls or Lp position.	1 kHz oscillator Error signal amplifier Switch contacts Bridge circuit	Oscillator - Q205 to Q207 Amplifier - Q401 to Q405 S101, S102, S3 C1, R3 to R5
Noisy null or no bridge null obtained for R measurements	Bridge null should be obtained when S102 is set to R position	Switch contacts Bridge circuit	S101, S102 R3, R101 to R110 C101 to C105
Noisy null or no bridge null obtained for C and L measurements (without AUTO)	Bridge null should be obtained when S102 set to Cs, Cp, Ls or Lp position.	Switch contacts Bridge circuit Error signal amplifier oscillation High impedance amplifier oscillation	S101, S102, S3 C1, R3 to R5, R101 to R109, R111, C101 to C105 Amplifier - Q401 to Q405 Amplifier - Q301, Q302, Q305, Q306
Noisy null or no bridge null obtained for C AUTO and L AUTO measurements	Bridge null should be obtained when S102 set to Cp AUTO or Ls AUTO position.	Switch contacts Auto null circuits	S102 Check voltages and waveforms to determine faulty circuit
Abnormal operation on direction indicator. Auto null obtained properly.	Direction indicator light should shift from left to right or from right to left in the vicinity of bridge null.	Switch contacts Neon lamp driver Differential amplifier Phase detector Error signal amplifier	S103, S3 Q418 Q416, Q417 CR414, CR415 Q405
Display out of specifications (not AUTO measurements)	CRL and DQ readings within specifications.	Switch contacts Bridge circuit Low impedance of high impedance amplifier	S101, S102 R3 to R6, R101 to R111, C1 to C4, C101 to C105 Amplifier - Q301, Q302 Amplifier - Q305, Q306
Display in AUTO measurements out of specifications	CL readings in AUTO measurements within specifications.	Variable resistance circuit.	Q411 to Q414, CR416 to CR420, C421, L401

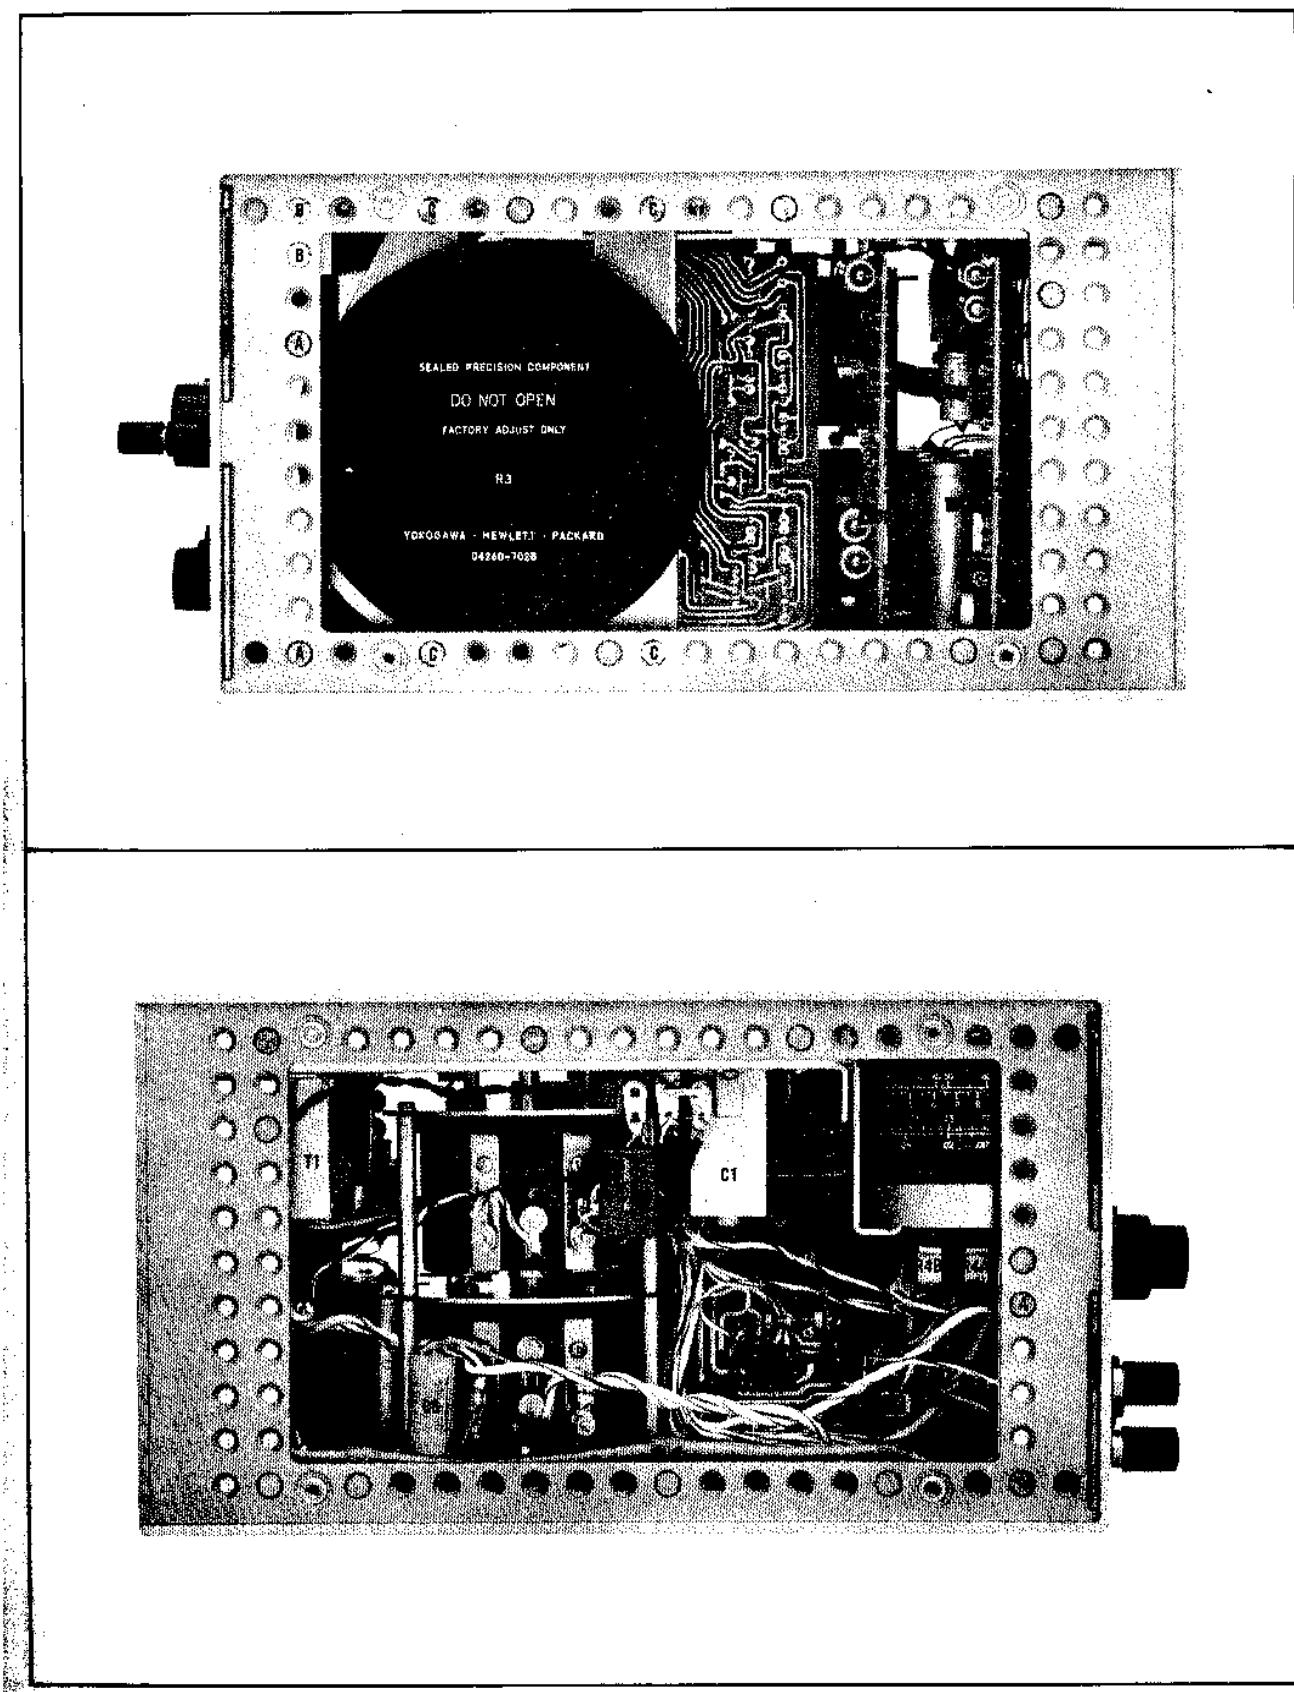


Figure 5-3. Right and Left Side Internal Component Location

Table 5-5. Decimal Point and Units Indication Logic

Function S102	Cs LOW D (ccw)	Cp HIGH D	Cp AUTO	R	Ls AUTO	Ls LOW Q	Lp HIGH Q (cw)					
Range S101												
	Decimal Lights		Units	Decimal Lights	Units	Decimal Lights	Units					
1 (ccw)	OFF	OFF	ON	μF	ON	OFF	OFF	Ω	OFF	OFF	ON	μH
2	OFF	ON	OFF	μF	OFF	ON	OFF	Ω	ON	OFF	OFF	mH
3	ON	OFF	OFF	μF	OFF	OFF	ON	Ω	OFF	ON	OFF	mH
4	OFF	OFF	ON	nF	ON	OFF	OFF	k Ω	OFF	OFF	ON	mH
5	OFF	ON	OFF	nF	OFF	ON	OFF	k Ω	ON	OFF	OFF	H
6	ON	OFF	OFF	nF	OFF	OFF	ON	k Ω	OFF	ON	OFF	H
7 (cw)	OFF	OFF	ON	pF	ON	OFF	OFF	M Ω	OFF	OFF	ON	H

5-28. DQ DIAL MECHANICAL ZERO.

- With instrument power off and top cover removed, rotate DQ control full ccw.
- Loosen two allen drive setscrews on R5 pulley.
- Rotate DQ control ccw until the black line on the right off-scale end of DQ dial aligns with red index line on front panel window. Dual wire-wound resistor R5A, B should also be full ccw.
- Tighten two setscrews. This completes the adjustment.

5-29. BRIDGE CIRCUIT COMPONENT CHECKS.

5-30. INTRODUCTION. The procedures in Paragraphs 5-31 through 5-38 outline checks and adjustments for the components in the bridge circuit. These include fixed 0.2 μF capacitor C1, compensating capacitor C305, CRL resistor R3, trimmers C103, C104, C3, and accuracy of resistors in the RANGE switch. The test equipment setup is shown in Figure 5-5. These checks and adjustments should be performed in the order listed when a comprehensive overall instrument checkout is desired. Test equipment for these checks is listed in Table 5-6.

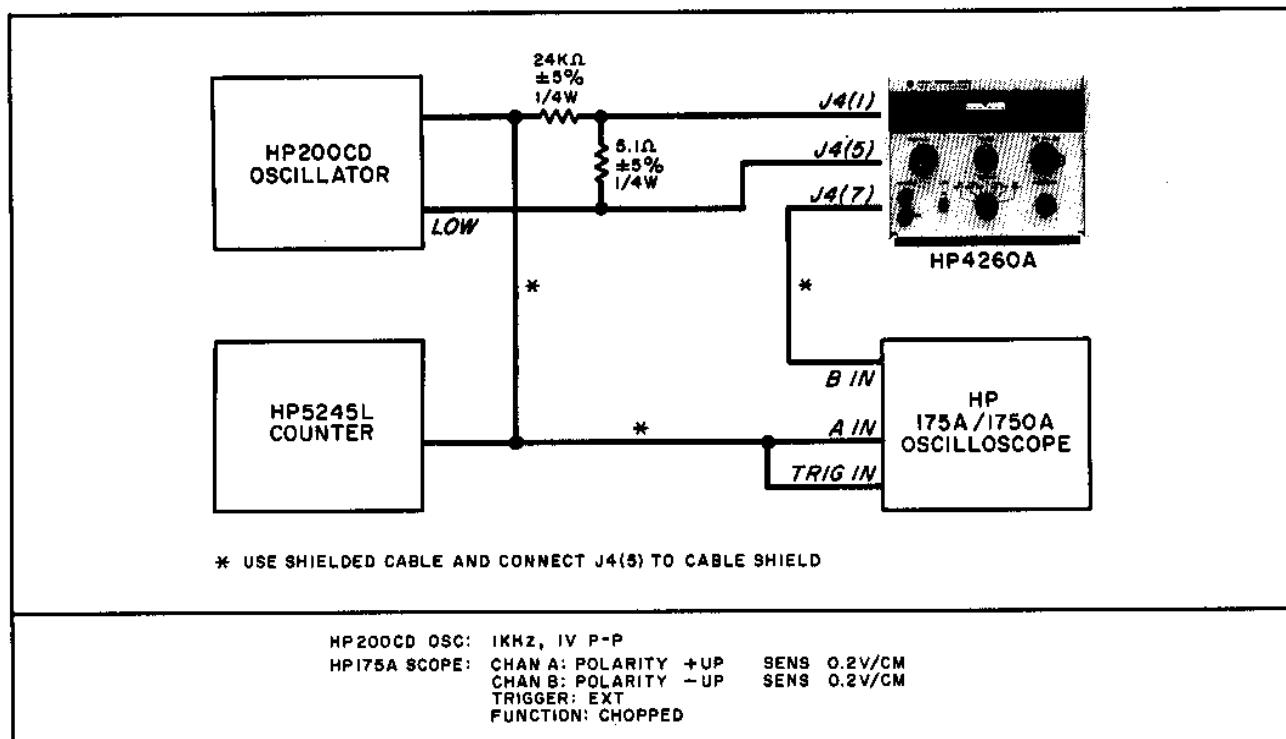


Figure 5-4. Error Signal Amplifier Phase and Gain Test Setup

Table 5-6. Test Equipment for Bridge Circuit Checks.

ITEM	DESCRIPTION	MODEL OR PART NO.
Oscillator	Frequency: 20 Hz to 20 kHz Output Level: 2 volts rms	200CD
Oscilloscope	Vertical Sensitivity: 100 μ v/cm	140 A with 1400A Diff. Ampl. plug in
Standard C	0.1 microfarad, $\pm 0.1\%$	YHP CS-0.1
Silvered Mica C	0.01 microfarad, $\pm 0.2\%$	YHP CS-0.01
Silvered Mica C	1000 picofarads, $\pm 1\%$	YHP CS-1000A
Standard L	1 millihenry, $\pm 0.1\%$	General Radio 1482-E
Resistance Bridge	Range: 10 ohms to 10K ohms Accuracy: $\pm 1\%$	HP 4260A
Resistors	fxd, comp, 16 ohms, $\pm 5\%$, 1/2 W fxd, comp, 16K ohms, $\pm 5\%$, 1/4 W fxd, comp, 33 ohms, $\pm 5\%$, 1/4 W fxd, comp, 160K ohms, $\pm 5\%$, 1/4 W fxd, comp, 330 ohms, $\pm 5\%$, 1/4 W fxd, comp, 1.6 Meg, $\pm 5\%$, 1/4 W fxd, comp, 3.3K ohms, $\pm 5\%$, 1/4 W Met film, 15.9K ohms, $\pm 0.5\%$; use 14K ohms, $\pm 0.25\%$ and 1.91K ohms, $\pm 1\%$	0686-1605 0683-1635 0683-3305 0683-1645 0683-3315 0683-1655 0683-3325 0698-3371 0698-4631

5-31. C1 CHECK. To check fixed bridge capacitor C1, connect the instruments as shown in Figure 5-5.

a. Connect a standard 0.1 μ F capacitor such as the YHP Model CS-0.1 and a 16 ohm 5% 1/4 watt resistor (HP #0686-1605) in series across the UNKNOWN terminals. The guard terminal of the standard capacitor should be connected to the rear-panel ground terminal of the DETECTOR jack.

b. Set FUNCTION switch to Cs LOW D.

c. Set RANGE switch to display XXX.X nF.

d. Set rear-panel INT-EXT switch to EXT and set oscillator to 1 kHz.

e. Balance the bridge and read the measured C value. C value should be: standard value $\pm 0.3\%$; for example 099.7 to 100.3 nF.

5-32. C305 SELECTION. Capacitor C305 compensates for amplifier stray input capacity and the capacity of the CRL control. The procedure for selecting the correct value for C305 is as follows:

a. Connect the test setup as shown in Figure 5-5.

b. Connect a standard capacitor such as the YHP Model CS-0.1 μ F and a 16K ohm $\pm 5\%$ 1/4 watt resistor in parallel to the UNKNOWN terminals.

c. Set FUNCTION switch to Cp HIGH D.

d. Set RANGE switch for XXX.X nF display.

e. Set rear-panel INT-EXT switch to EXT and set oscillator to 1 kHz.

f. Balance the bridge and read measured C value. Measured C = _____ nF.

g. Disconnect the parallel 16Kohms resistor from the UNKNOWN terminals. Connect a 33 ohms 5% 1/4 watt resistor in parallel with the standard capacitor.

h. Change oscillator frequency to 20 kHz.

i. Balance the bridge and read measured C value. Measured C = _____ nF.

j. Calculate the difference between 1 kHz value and 20 kHz value (steps f and i). Difference should be within ± 0.2 nF. If not within this tolerance, change value of C305 and repeat.

5-33. CRL RESISTANCE (R3) AT 500 OHMS. For maximum accuracy during measurements, CRL resistor R3 should introduce no errors. C305 selection provides high frequency compensation at the high resistance end of R3. The R3 check at 500 ohms is an additional check to ensure that R3 resistance is correct.

a. Connect test equipment setup as shown in Figure 5-5.

b. Connect the 0.01 μ F silvered mica capacitor with a 160K ohms $\pm 5\%$ 1/4 watt resistor in parallel to the UNKNOWN terminals.

c. Set FUNCTION switch to Cp HIGH D.

- d. Set RANGE switch for XXX, X nF display.
- e. Set INT-EXT switch on rear panel to EXT.
- f. Set Oscillator frequency to 1 kHz.
- g. Balance the bridge and read the measured C value. Measured C = _____. nF.
- h. Disconnect parallel 160K resistor and connect a 330 ohm $\pm 5\%$ 1/4 watt resistor in parallel with the standard silvered mica capacitor.
- i. Change oscillator frequency to 20 kHz.
- j. Balance the bridge and read measured C value. Measured C = _____. nF. Capacitance difference between values obtained in steps g and j should be within a half digit on the CRL counter.

5-34. C103 CHECK AND ADJUSTMENT. Trimmer capacitor C103 is inside switch assembly A100. The adjustment can be done through the access hole in the switch assembly.

- a. Connect test equipment as shown in Figure 5-5.
- b. Connect the 0.01 μ F silvered mica capacitor with a parallel 160K ohms $\pm 5\%$ 1/4 watt resistor to the UNKNOWN terminals.
- c. Set FUNCTION switch to Cp HIGH D.
- d. Set RANGE switch for XX, XX nF display.
- e. Set oscillator INT-EXT switch to EXT, and adjust oscillator frequency to 1 kHz.
- f. Balance the bridge and read measured C value. Measured C = _____. nF.
- g. Disconnect the 160K ohms resistor and connect a 330 ohms $\pm 5\%$ 1/4 watt resistor in parallel with the silvered mica capacitor.
- h. Change oscillator frequency to 20 kHz.

i. Balance the bridge and read measured C value. Measured C = _____. nF. Difference between C values of steps f and i should be made minimum by adjusting C103.

j. Adjust C103 slightly and repeat procedure. C103 adjustment is correct when difference between the two measured C values is minimum.

5-35. C104 CHECK AND ADJUSTMENT. Trimmer capacitor C104 is inside switch assembly A100. The adjustment can be done through the access hole in the switch assembly.

- a. Connect test equipment setup as shown in Figure 5-5.
- b. Connect the 1000 pF silvered mica capacitor with a 1.6 megohm $\pm 5\%$ 1/4 watt resistor in parallel to the UNKNOWN terminals.

- c. Set FUNCTION switch to Cp HIGH D.
- d. Set RANGE switch for XXXX, pF display.
- e. Set oscillator INT-EXT switch to EXT, and set oscillator frequency to 1000 Hz.
- f. Balance the bridge and read measured C value. Measured C = _____. pF.
- g. Disconnect the 1.6 megohm resistor and connect a 3300 ohm $\pm 5\%$ 1/4 watt resistor in parallel with the 1000 pF capacitor.
- h. Change oscillator frequency to 20 kHz.

i. Balance the bridge and read measured C value. Measured C = _____. pF. Difference between C values for steps f and i should be made minimum by adjusting C104.

j. Adjust C104 slightly and repeat procedure. Adjustment is correct when difference between the two measured C values is minimum. This completes C104 adjustment.

5-36. C3 ADJUSTMENT. Trimmer capacitor C3 is adjusted to compensate for transformer T2 capacitance. The procedure is as follows:

- a. Connect test equipment setup as shown in Figure 5-5.
- b. Connect the 0.01 μ F $\pm 0.2\%$ with a parallel 15.9 K ohms $\pm 0.5\%$ 1/4 watt resistor to the UNKNOWN terminals.
- c. Set FUNCTION switch to Cp HIGH D.
- d. Set RANGE switch for XX, XX nF display.
- e. Set oscillator INT-EXT switch to EXT.
- f. Set oscillator frequency to 1000 Hz ± 5 Hz.
- g. Balance the bridge and read measured D value. D reading should be 1 ± 0.05 .
- h. Remove ac power from the 4260A.
- i. Remove shorting strap across Cp Ls DQ RESISTOR terminals on rear panel. With another 4260A measure the dc resistance between the ungrounded Cp Ls DQ RESISTOR terminal and the white-black lead end of C1.
- j. Adjust DQ control so that the second 4260A measures 812 ohms. Disconnect measuring 4260A and connect shorting strap across Cp Ls DQ RESISTOR terminals.
- k. Apply ac power to 4260A.
- l. Without moving DQ control, balance the bridge by adjusting CRL control and C3. Adjustment is correct when bridge null is obtained.

5-37. FIRST RANGE CHECK (FULL CCW). The following procedure checks 1 ohm resistor R101 inside the RANGE switch.

- a. Connect test setup as shown in Figure 5-5.
 - b. Connect a standard 1 mH inductor such as a General Radio 1482E. The inductor high terminal is connected to the unmarked UNKNOWN terminal and the inductor low and guard terminals should be connected to the UNKNOWN LOW terminal. The inductor case should be isolated from ground.
 - c. Set FUNCTION switch to Ls LOW Q.
 - d. Set RANGE switch for XXXX. μ H .
 - e. Set oscillator INT-EXT switch to EXT and set oscillator frequency to 1 kHz.
 - f. Balance the bridge and read the measured L value. Measured L value = _____. μ H.
 - g. Install a 330 ohm \pm 5% 1/4 watt resistor in series between the inductor high terminal and the unmarked UNKNOWN.
 - h. Set oscillator frequency to 20 kHz.
 - i. Balance the bridge and read measured L value. Measured L value = _____. μ H. Inductance difference between L values obtained in steps f and i should be within \pm 0005 μ H. If not within 0005, measure the resistance between UNKNOWN LOW terminal and terminal 40 (see Page 8-4) as follows:
- 1) Remove instrument top, bottom, and right side covers. Remove two screws in printed circuit hold-down cover and lift off.

- 2) Remove all three printed circuit assemblies.
- 3) Set FUNCTION switch to Lp LOW Q.
- 4) Remove shorting strap from BIAS BATTERY terminals.
- 5) Measure the dc resistance between UNKNOWN LOW terminal and terminal 40 (Page 8-4). If this value is 1 ohm \pm 0.5%, select C101 for L difference readings within 0005 as discussed in step i. If the R value is not 1 ohm \pm 0.5%, check contacts of S101 and S102.

5-38. SECOND RANGE CHECK. The following procedure checks 10 ohm resistor R102 inside RANGE switch A100.

- a. Connect test setup as shown in Figure 5-5.
- b. Connect a standard 1 mH inductor such as a General Radio 1482E. The inductor high terminal is connected to the unmarked UNKNOWN terminal and the inductor low and guard terminals should be connected to the UNKNOWN LOW terminal. The inductor case should be isolated from ground.
- c. Set FUNCTION switch to Ls LOW Q.
- d. Set RANGE switch for XX. XX mH display.
- e. Set oscillator INT-EXT switch to EXT and adjust oscillator frequency to 1 kHz.
- f. Balance the bridge and read the measured L value. Measured L value = _____. mH.
- g. Disconnect the standard inductor from the UNKNOWN unmarked terminal and connect a 330 ohm 5% 1/4 watt resistor in series.

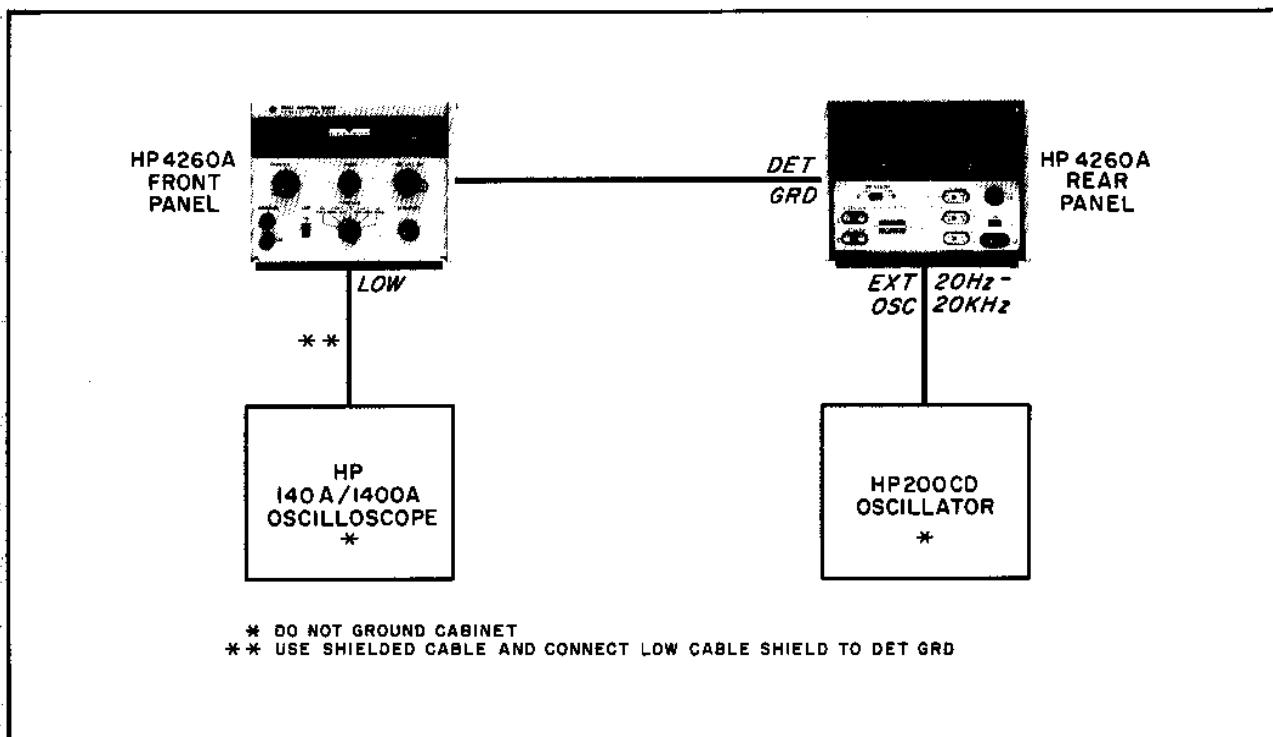


Figure 5-5. Test Setup for Adjustments


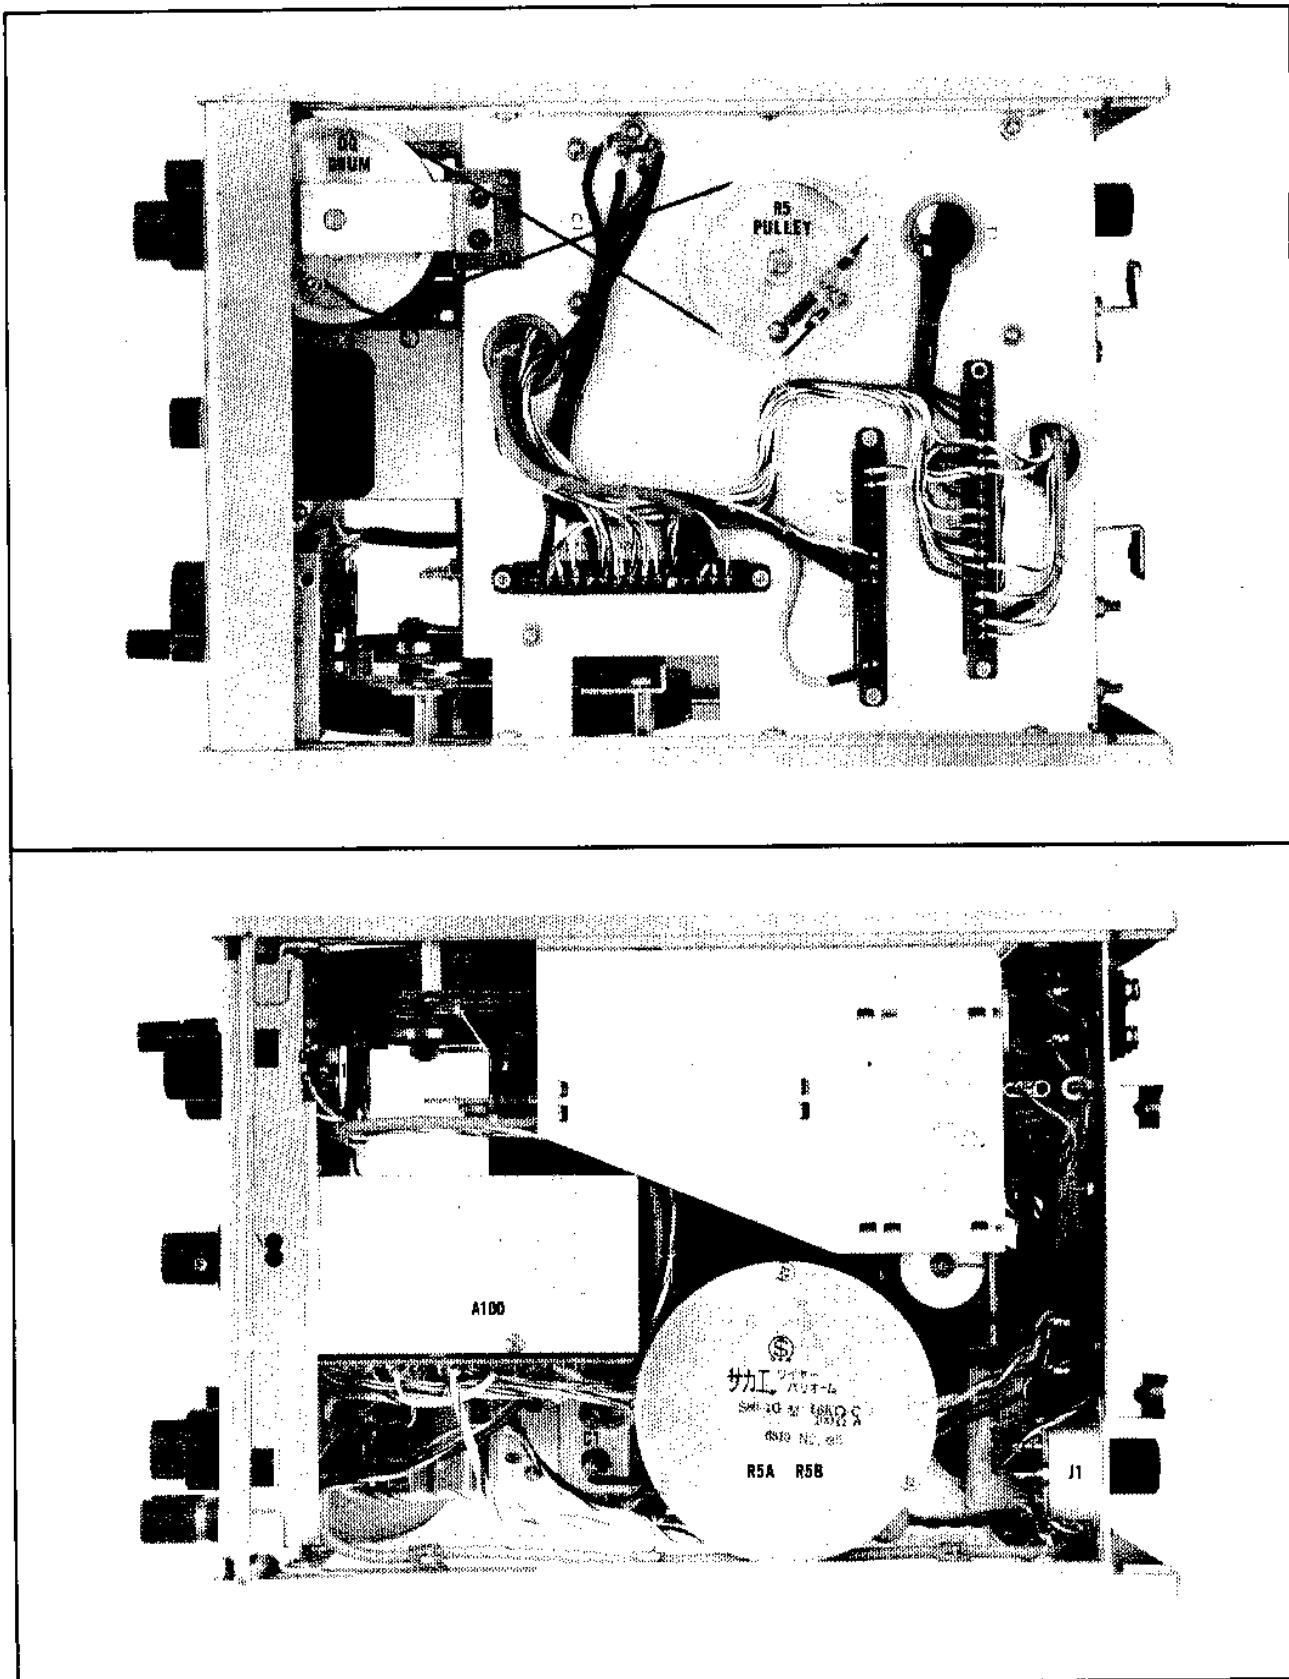


Figure 5-7. Top and Bottom Internal Component Location

 

SECTION VI

REPLACEABLE PARTS

6-1. INTRODUCTION.

6-2. This section contains information for ordering replacement parts. Table 6-1 lists parts in alphabetical order of their reference designators and indicates the description and HP stock number of each part, together with any applicable notes. Table 6-2 lists parts in alpha-numerical order of their HP stock number and provides the following information on each part;

- a. Description of the part (see list of abbreviations below).
- b. Typical manufacturer of the part in a five-digit code; see list of manufacturers in Table 6-3.
- c. Manufacturer's part number.
- d. Total quantity used in the instrument (TQ column).

6-3. Miscellaneous parts are listed at the end of Table 6-1.

6-4. ORDERING INFORMATION.

6-5. To obtain replacement parts, address order or inquiry to your local Hewlett-Packard Field Office (see lists at rear of this manual for addresses). Identify parts by their Hewlett-Packard stock numbers.

6-6. To obtain a part that is not listed, include:


- a. Instrument model number.
- b. Instrument serial number.
- c. Description of the part.
- d. Function and location of the part.

REFERENCE DESIGNATORS

A	= assembly	E	= misc electronic part	P	= plug	V	= vacuum, tube, neon bulb, photocell, etc.
B	= motor	F	= fuse	Q	= transistor	VR	= voltage regulator
BT	= battery	FL	= filter	R	= resistor	W	= cable
C	= capacitor	J	= jack	RT	= thermistor	X	= socket
CP	= coupler	K	= relay	S	= switch	Y	= crystal
CR	= diode	L	= inductor	T	= transformer		
DL	= delay line	M	= meter	TB	= terminal board		
DS	= device signaling (lamp)	MP	= mechanical part	TP	= test point		

ABBREVIATIONS

A	= amperes	H	= henries	NPN	= negative-positive-negative	RMS	= root-mean square
A.F.C.	= automatic frequency control	HEX	= hexagonal	NRFR	= not recommended for field replacement	RWV	= reverse working voltage
AMPL	= amplifier	HG	= mercury	NSR	= not separately replaceable	S-B	= slow-blow
B.F.O.	= beat frequency oscillator	IF	= intermediate freq	OBD	= order by description	SCR	= screw
BE CU	= beryllium copper	IMP	= impregnated	OH	= oval head	SE	= selenium
BK	= binder head	INCD	= incandescent	OX	= oxide	SECT	= section(s)
BP	= bandpass	INCL	= include(s)	PPF	<u>picofarads = 10</u>	SEMICON	= semiconductor
BRS	= brass	INS	= insulation(ed)			SI	= silicon
BWO	= backward wave oscillator	INT	= internal			SIL	= silver
CCW	= counter-clockwise	K	= kilo = 1000	PH BRZ	= phosphor bronze	SL	= slide
CER	= ceramic	LH	= left hand	P	= peak	SPG	= spring
CMO	= cabinet mount only	LIN	= linear taper	PC	= printed circuit	SPL	= special
COEF	= coefficient	LK WASH	= lock washer	PIV	= peak inverse voltage	SST	= stainless steel
COM	= common	LOG	= logarithmic taper	PNP	= positive-negative-positive	SR	= split ring
COMP	= composition	LPF	= low pass filter	PH BRZ	<u>phosphor bronze</u>	STL	= steel
COMPL	= complete	M	= milli = 10 ⁻³	PHL	= Phillip	TA	= tantalum
CONN	= connector	MEG	= meg = 10 ⁶	PIV	= peak inverse voltage	TD	= time delay
CP	= cadmium plate	MET FLM	= metal film	POLY	<u>polystyrene</u>	TGL	= toggle
CRT	= cathode-ray tube	MET OX	= metallic oxide	PORC	= porcelain	THD	= thread
CW	= clockwise	MFR	= manufacturer	POS	= position(s)	TI	= titanium
DEPC	= deposited carbon	MINAT	= miniature	POT	= potentiometer	TOL	= tolerance
DR	= drive	MOM	= momentary	PP	= peak-to-peak	TRIM	= trimmer
ELECT	= electrolytic	MTG	= mounting	PT	= point	TWT	= traveling wave tube
ENCAP	= encapsulated	MY	= "mylar"	PWV	= peak working voltage	U	= micro = 10 ⁻⁶
EXT	= external	N	= nano (10 ⁻⁹)			VAR	= variable
F	= farads	N/C	= normally closed			VDCW	= dc working volts
FH	= flat head	NE	= neon			W/	= with
FIL H	= fillister head	NI PL	= nickel plate	RECT	= rectifier	W	= watts
FIXD	= fixed	N/O	= normally open	RF	= radio frequency	WIV	= working inverse voltage
GE	= germanium	NPO	= negative positive zero (zero temperature coefficient)	RH	= round head or right hand	WW	= wirewound
GL	= glass			RMO	= rack mount only	W/O	= without
GRD	= ground(ed)						

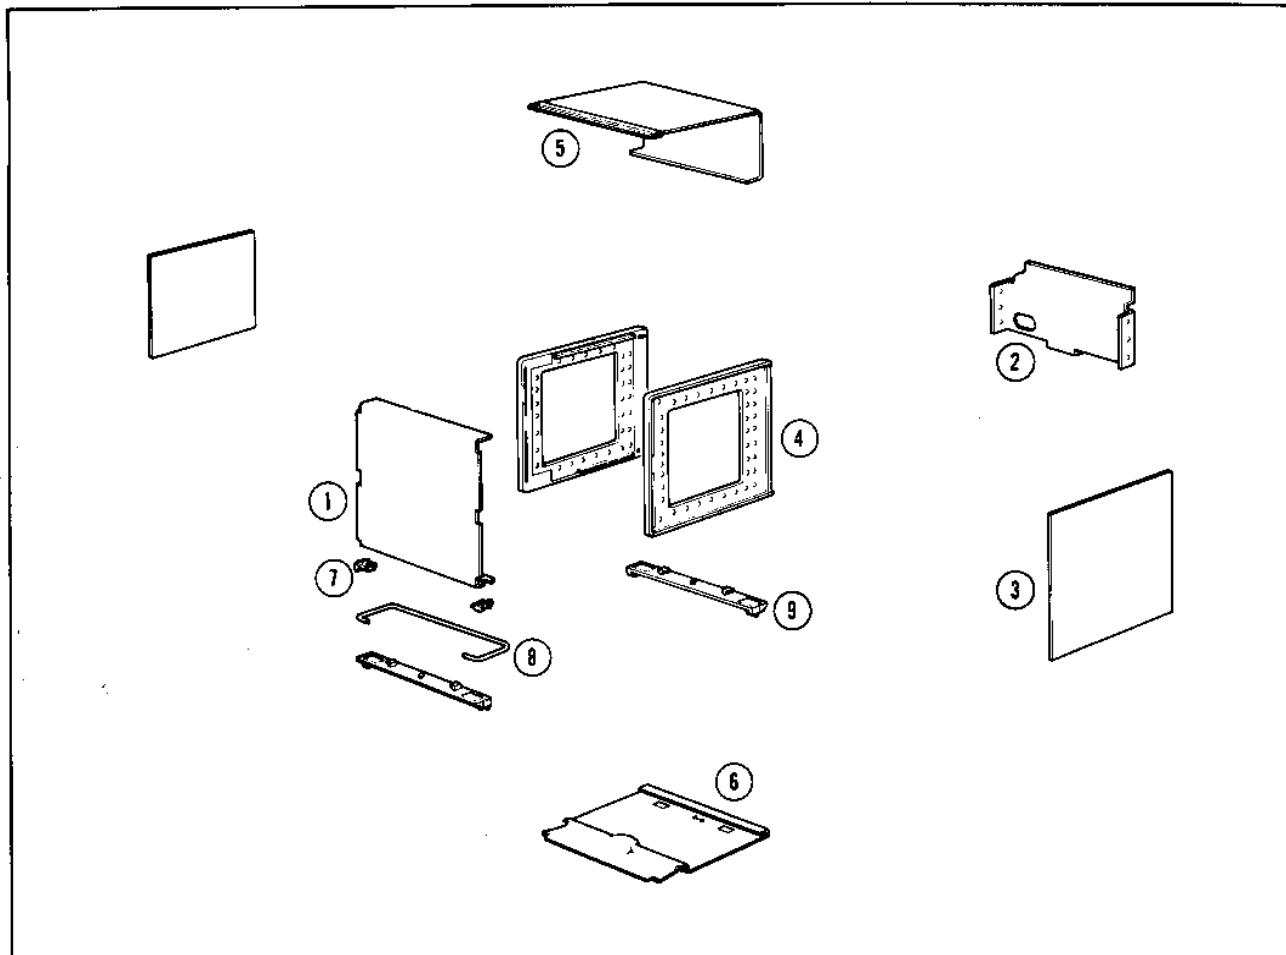

ITEM NO.	DESCRIPTION	HP STOCK NO.	QTY
1	Front Panel	04260-1040	1
2	Rear Panel W/deck	04260-7025	1
3	Side Cover	5000-0703	2
4	Side Frame	5060-0703	2
5	Top Cover	5060-0718	1
6	Bottom Cover	5000-0717	1
7	Hinge	5040-0700	2
8	Tilt Stand	1490-0032	1
9	Foot Assembly	5060-0728	2

Figure 6-1. Modular Cabinet Parts

Table 6-1. Reference Designation Index

Reference Designation	Stock No.	Description #	Note
A100	04260-7021	ASSY: RANGE AND FUNCTION SWITCH	
C101	0160-1548	C:FXD MY 0.22 UF 10% 100VDCW FACTORY SELECTED PART; TYPICAL VALUE GIVEN	
C102	0160-1161	C:FXD PAPER 2000 PF 10% 600VDCW FACTORY SELECTED PART; TYPICAL VALUE GIVEN	
C103	0121-0039	C:VAR CER 8-50PF 350VDCW FACTORY SELECTED PART; TYPICAL VALUE GIVEN	
C104	0121-0039	C:VAR CER 8-50PF 350VDCW	
C105	0160-1045	C:FXD CER 4 PF/0.25 PF 500VDCW FACTORY SELECTED PART; TYPICAL VALUE GIVEN	
R101	04260-8604	R:FXD WW 0.986 OHM 0.3%	
		FACTORY SELECTED PART; TYPICAL VALUE GIVEN	
R102	04255-8604	R:FXD WW 10 OHM 0.1%	
R103	0698-1381	R:FXD MET FLM 100 OHM 0.1% 1/2W	
R104	0698-1380	R:FXD MET FLM 1K OHM 0.1% 1/2W	
R105	0698-1268	R:FXD MET FLM 10K OHM 0.1% 1/2W	
R106	0698-1376	R:FXD MET FLM 97K OHM 0.1% 1/4W	
R107	0698-1375	R:FXD MET FLM 3K OHM 1% 1/4W	
R108	0698-1377	R:FXD MET FLM 970K OHM 0.1% 1/4W	
R109	0698-1374	R:FXD MET FLM 30K OHM 1% 1/4W	
R110	0698-1400	R:FXD MET FLM 500 OHM 0.1% 1/2W	
R111	0698-4142	R:FXD MET FLM 15.8 OHM 1% 1/4W	
S101	04260-7021	SWITCH ROTARY FOR RANGE, FUNCTION PART OF S101	
A200	04260-8702	ASSY: POWER SUPPLY AND 1KHZ OSC	
C201	0180-0967	C:FXD ELECT 500 UF 25VDCW	
C202	0180-0756	C:FXD ELECT 20 UF 15VDCW	
C203	0180-0756	C:FXD ELECT 20 UF 15VDCW	
C204	0180-0965	C:FXD ELECT 200 UF 25VDCW	
C205	0180-0756	C:FXD ELECT 20 UF 15VDCW	
C206	0180-0964	C:FXD ELECT 100 UF 50VDCW	
C207	0180-0981	C:FXD ELECT 22 UF 160VDCW	
C208	0180-1029	C:FXD TANT 1 UF 20% 15VDCW	
C209	0160-1544	C:FXD MY 4700 PF 5% 50VDCW	
C210	0160-1544	C:FXD MY 4700 PF 5% 50VDCW	
C211	0180-1026	C:FXD TANT 47 UF 20% 6VDCW	
C212	0180-1029	C:FXD TANT 1 UF 20% 15VDCW	
C213	0180-0756	C:FXD ELECT 20 UF 15VDCW	
C214	0180-0756	C:FXD ELECT 20 UF 15VDCW	
CR201	1901-0045	SEMICON DEVICE: DIODE SILICON	
CR202	1901-0045	SEMICON DEVICE: DIODE SILICON	
CR203	1902-0031	DIODE: BREAKDOWN 12.7V 5% 400 MW	
CR204	1901-0045	SEMICON DEVICE: DIODE SILICON	
CR205	1902-0031	DIODE: BREAKDOWN 12.7V 5% 400 MW	
CR206	1901-0026	DIODE: SILICON 200 PIV 0.5 AMP	
CR207	1901-0028	DIODE: SILICON 400 PIV 0.5 AMP	
Q201	1854-0003	TRANSISTOR: NPN SILICON	
	1205-0033	HEAT DISSIPATOR FOR Q201	

See list of abbreviations in introduction to this section

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	Stock No.	Description #	Note
Q202	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q203	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q204	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q205	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q206	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q207	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
R201	0684-2721	R:FXD COMP 2700 OHM 10% 1/4W	
R202	0684-2721	R:FXD COMP 2700 OHM 10% 1/4W	
R203	0684-6821	R:FXD COMP 6800 OHM 10% 1/4W	
R204	0683-6815	R:FXD COMP 680 OHM 5% 1/4W	
R205	0684-4721	R:FXD COMP 4700 OHM 10% 1/4W	
R206	0684-2231	R:FXD COMP 22K OHM 10% 1/4W	
R207	0690-1821	R:FXD COMP 1800 OHM 10% 1W	
R208	0757-0960	R:FXD MET FLM 33K OHM 2% 1/8W	
R209	0757-0959	R:FXD MET FLM 30K OHM 2% 1/8W	
R210	2100-1776	R:VAR WW 10K OHM 10% LIN 1/2W	
R211	0757-0941	R:FXD MET FLM 5.1K OHM 2% 1/8W	
R212	0757-0926	R:FXD MET FLM 1.2K OHM 2% 1/8W	
R213	2100-1777	R:VAR WW 20K OHM 10% LIN 1/2W	
R214	0684-2741	R:FXD COMP 270K OHM 10% 1/4W	
R215	0757-0930	R:FXD MET FLM 1.8K OHM 2% 1/8W	
R216	0684-6831	R:FXD COMP 68K OHM 10% 1/4W	
R217	0683-2025	R:FXD COMP 2000 OHM 5% 1/4W	
R218	0683-5635	R:FXD COMP 56K OHM 5% 1/4W	
R219	0683-1235	R:FXD COMP 12K OHM 5% 1/4W	
R220	0683-8215	R:FXD COMP 620 OHM 5% 1/4W	
A300	04260-8703	ASSY:REFERENCE VOLTAGE	
C301	0180-0962	C:FXD TANT 1 UF 20% 35VDCW	
C302	0180-0773	C:FXD ELECT 50 UF 15VDCW	
C303	0180-1026	C:FXD TANT 47 UF 20% 6VDCW	
C304	0160-1271	C:FXD MY 0.01 UF 5% 50VDCW	
C305	0160-1039	C:FXD CER 25 PF 10% 500VDCW	FACTORY SELECTED PART; TYPICAL VALUE GIVEN
C306	0180-1026	C:FXD TANT 47 UF 20% 6VDCW	
C307	0180-0978	C:FXD TANT 1 UF +75-15% 50VDCW	
C308	0180-0773	C:FXD ELECT 50 UF 15VDCW	
C309	0180-1029	C:FXD TANT 1 UF 20% 15VDCW	
C310	0180-1029	C:FXD TANT 1 UF 20% 15VDCW	
C311	0180-0945	C:FXD ELECT 50 UF 6VDCW	
C312	0180-1029	C:FXD TANT 1 UF 20% 15VDCW	
C313	0180-1029	C:FXD TANT 1 UF 20% 15VDCW	
C314	0180-0945	C:FXD ELECT 50 UF 6VDCW	
C315	0180-1029	C:FXD TANT 1 UF 20% 15VDCW	
C316	0180-1029	C:FXD TANT 1 UF 20% 15VDCW	
C317	0180-1029	C:FXD TANT 1 UF 20% 15VDCW	
C318	0160-1543	C:FXD MY 2200 PF 5% 50VDCW	
C319	0180-0945	C:FXD ELECT 50 UF 6VDCW	
CR301	1901-6040	DIODE:SILICON 30 MA AT 1V 30 PIV	
CR302	1901-0040	DIODE:SILICON 30 MA AT 1V 30 PIV	

See list of abbreviations in Introduction to this section

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	Stock No.	Description #	Note
CR303	1901-0040	DIODE:SILICON 30 MA AT 1V 30 PIV	
CR304	1901-0040	DIODE:SILICON 30 MA AT 1V 30 PIV	
CR305	1901-0040	DIODE:SILICON 30 MA AT 1V 30 PIV	
CR306	1901-0040	DIODE:SILICON 30 MA AT 1V 30 PIV	
CR307	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
CR308	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
Q301	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q302	1853-0010	TRANSISTOR:SILICON PNP	
Q303	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q304	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q305	1853-0010	TRANSISTOR:SILICON PNP	
Q306	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q307	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q308	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q309	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q310	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q311	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q312	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q313	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
R301	0684-1231	RIFXD COMP 12K OHM 10% 1/4W	
R302	0683-7515	RIFXD COMP 750 OHM 5% 1/4W	
R303	0757-0968	RIFXD MET FLM 68K OHM 2% 1/8W	
R304	0684-4731	RIFXD COMP 47K OHM 10% 1/4W	
R305	0757-0951	RIFXD MET FLM 13K OHM 2% 1/8W	
R306	0683-5625	RIFXD COMP 5600 OHM 5% 1/4W	
R307	0683-1225	RIFXD COMP 1200 OHM 5% 1/4W	
R308	0683-5625	RIFXD COMP 5600 OHM 5% 1/4W	
R309	0683-2035	RIFXD COMP 20K OHM 5% 1/4W	
R310	0757-0928	RIFXD MET FLM 1.5K OHM 2% 1/8W	
R311	0757-0928	RIFXD MET FLM 1.5K OHM 2% 1/8W	
R312	0683-5135	RIFXD COMP 51K OHM 5% 1/4W	
R313	0757-0926	RIFXD MET FLM 1.2K OHM 2% 1/8W	
R314	0683-5625	RIFXD COMP 5600 OHM 5% 1/4W	
R315	0757-0926	RIFXD MET FLM 1.2K OHM 2% 1/8W	
R316	0684-4731	RIFXD COMP 47K OHM 10% 1/4W	
R317	0757-0951	RIFXD MET FLM 13K OHM 2% 1/8W	
R318	0683-7515	RIFXD COMP 750 OHM 5% 1/4W	
R319	0757-0968	RIFXD MET FLM 68K OHM 2% 1/8W	
R320	0684-1231	RIFXD COMP 12K OHM 10% 1/4W	
R321	0684-2231	RIFXD COMP 22K OHM 10% 1/4W	
R322	0684-6821	RIFXD COMP 6800 OHM 10% 1/4W	
R323	0684-6821	RIFXD COMP 6800 OHM 10% 1/4W	
R324	0684-2721	RIFXD COMP 2700 OHM 10% 1/4W	
R325	0684-8221	RIFXD COMP 8200 OHM 10% 1/4W	
R326	0684-1031	RIFXD COMP 10K OHM 10% 1/4W	
R327	0684-1521	RIFXD COMP 1500 OHM 10% 1/4W	
R328	0684-2741	RIFXD COMP 270K OHM 10% 1/4W	
R329	0684-6821	RIFXD COMP 6800 OHM 10% 1/4W	
R330	0684-2721	RIFXD COMP 2700 OHM 10% 1/4W	
R331	0684-5621	RIFXD COMP 5.6K OHM 10% 1/4W	

See list of abbreviations in introduction to this section

Table 6-1, Reference Designation Index (Cont'd)

Reference Designation	Stock No.	Description #	Note
R332	0683-1225	R:FXD COMP 1200 OHM 5% 1/4W	
R333	0684-4721	R:FXD COMP 4700 OHM 10% 1/4W	
R334	0683-5625	R:FXD COMP 5600 OHM 5% 1/4W	
R335	0683-8225	R:FXD COMP 8200 OHM 5% 1/4W	
R336	0683-6825	R:FXD COMP 6800 OHM 5% 1/4W	
R337	0684-4721	R:FXD COMP 4700 OHM 10% 1/4W	
R338	0683-3025	R:FXD COMP 3000 OHM 5% 1/4W	
R339	0683-3625	R:FXD COMP 3600 OHM 5% 1/4W	
R340	0683-2425	R:FXD COMP 2400 OHM 5% 1/4W	
R341	0683-1335	R:FXD COMP 13K OHM 5% 1/4W	
R342	0683-1235	R:FXD COMP 12K OHM 5% 1/4W	
R343	0683-3015	R:FXD COMP 300 OHM 5% 1/4W	
R344	0683-5635	R:FXD COMP 56K OHM 5% 1/4W	
R345	0684-4721	R:FXD COMP 4700 OHM 10% 1/4W	
A400	04260-7024	ASSY:DETECTOR	
C401	0180-0708	C:FXD ELECT 3 UF 15VDCW	
C402	0160-1271	C:FXD MY 0.01 UF 5% 50VDCW	
C403	0160-1542	C:FXD MY 1500 PF 10% 50VDCW	
C404	0180-1032	C:FXD TANT 10 UF 20% 15VDCW	
C405	0160-1271	C:FXD MY 0.01 UF 5% 50VDCW	
C406	0160-1545	C:FXD MY 0.022 UF 5% 50VDCW	
C407	0160-1271	C:FXD MY 0.01 UF 5% 50VDCW	
C408	0180-1029	C:FXD TANT 1 UF 20% 15VDCW	
C409	0180-0756	C:FXD ELECT 20 UF 15VDCW	
C410	0180-0756	C:FXD ELECT 20 UF 15VDCW	
C411	0180-0756	C:FXD ELECT 20 UF 15VDCW	
C412	0160-1271	C:FXD MY 0.01 UF 5% 50VDCW	
C413	0180-0756	C:FXD ELECT 20 UF 15VDCW	
C414	0180-0756	C:FXD ELECT 20 UF 15VDCW	
C415	0180-0756	C:FXD ELECT 20 UF 15VDCW	
C416	0140-0204	C:FXD MICA 47PF 5% NPO 500VDCW	
C417	0140-0194	C:FXD MICA 110 PF 5% 300 VDCW	
C418	0160-1544	C:FXD MY 4700 PF 5% 50VDCW	
C419	0180-0945	C:FXD ELECT 50 UF 6VDCW	
C420	0180-1032	C:FXD TANT 10 UF 20% 15VDCW	
C421	0180-0966	C:FXD TANT 220 UF 10% 10VDCW	
C422	0180-1025	C:FXD TANT 22 UF 20% 6VDCW	
CR401	1902-0037	SEMICON DEVICE:DIODE	
CR402	1901-0040	DIODE:SILICON 30 MA AT 1V 30 PIV	
CR403	1901-0040	DIODE:SILICON 30 MA AT 1V 30 PIV	
CR404	1901-0040	DIODE:SILICON 30 MA AT 1V 30 PIV	
CR405	1901-0040	DIODE:SILICON 30 MA AT 1V 30 PIV	
CR406	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
CR407	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
CR408	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
CR409	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
CR410	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
CR411	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
CR412	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	

See list of abbreviations in introduction to this section

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	Stock No.	Description #	Note
CR413	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
CR414	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
CR415	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
CR416	1901-0040	DIODE:SILICON 30 MA AT 1V 30 PIV	
CR417	1901-0040	DIODE:SILICON 30 MA AT 1V 30 PIV	
CR418	1901-0040	DIODE:SILICON 30 MA AT 1V 30 PIV	
CR419	1901-0040	DIODE:SILICON 30 MA AT 1V 30 PIV	
CR420	1901-0040	DIODE:SILICON 30 MA AT 1V 30 PIV	
CR421	1902-0057	SEMICON DEVICE:DIODE SILICON	
L401	9100-0729	INDUCTOR:FXD 100 UH 10%	
Q401	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q402	1853-0010	TRANSISTOR:SILICON PNP	
Q403	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q404	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q405	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q406	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q407	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q408	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q409	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q410	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q411	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q412	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q413	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q414	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q415	1854-0003	TRANSISTOR:NPN SILICON	
Q416	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q417	1854-0071	TRANSISTOR:SILICON NPN 2N3391	
Q418	1854-0022	TRANSISTOR:NPN SILICON	
R401	0683-1855	R:FXD COMP 1.8 MEGOHM 5% 1/4W	
R402	0683-2735	R:FXD COMP 27K OHM 5% 1/4W	
R403	0683-1235	R:FXD COMP 12K OHM 5% 1/4W	
R404	0683-4715	R:FXD COMP 470 OHM 5% 1/4W	
R405	0684-2231	R:FXD COMP 22K OHM 10% 1/4W	
R406	0684-1041	R:FXD COMP 100K OHM 10% 1/4W	
R407	0684-8221	R:FXD COMP 8200 OHM 10% 1/4W	
R408	0684-1531	R:FXD COMP 15K OHM 10% 1/4W	
R409	0683-1045	R:FXD COMP 100K OHM 5% 1/4W	
R410	0683-3045	R:FXD COMP 300K OHM 5% 1/4W	
R411	0684-1031	R:FXD COMP 10K OHM 10% 1/4W	
R412	0684-8221	R:FXD COMP 8200 OHM 10% 1/4W	
R413	0757-0952	R:FXD MET FLM 15K OHM 2% 1/8W	
R414	0757-0955	R:FXD MET FLM 20K OHM 2% 1/8W	
R415	0683-5635	R:FXD COMP 56K OHM 5% 1/4W FACTORY SELECTED PART;TYPICAL VALUE GIVEN	
R416	0757-0947	R:FXD MET FLM 9.1K OHM 2% 1/8W	
R417	0683-1045	R:FXD COMP 100K OHM 5% 1/4W FACTORY SELECTED PART;TYPICAL VALUE GIVEN	
R418	0683-2715	R:FXD COMP 270 OHM 5% 1/4W	
R419	0683-3315	R:FXD COMP 330 OHM 5% 1/4W	

See list of abbreviations in Introduction to this section

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	Stock No.	Description #	Note
R420	0757-0953	RIFXD MET FLM 16K OHM 2% 1/8W	
R421	0683-1225	RIFXD COMP 1200 OHM 5% 1/4W	
R422	0683-1225	RIFXD COMP 1200 OHM 5% 1/4W	
R423	0684-2721	RIFXD COMP 2700 OHM 10% 1/4W	
R424	0684-2741	RIFXD COMP 270K OHM 10% 1/4W	
R425	0684-1041	RIFXD COMP 100K OHM 10% 1/4W	
R426	0757-0947	RIFXD MET FLM 9.1K OHM 2% 1/8W	
R427	0757-0947	RIFXD MET FLM 9.1K OHM 2% 1/8W	
R428	0683-3645	RIFXD COMP 360K OHM 5% 1/4W	
R429	0683-2745	RIFXD COMP 270K OHM 5% 1/4W	
R430	0757-0935	RIFXD MET FLM 3.8K OHM 2% 1/8W	
R431	0757-0935	RIFXD MET FLM 3.0K OHM 2% 1/8W	
R432	0684-1521	RIFXD COMP 1500 OHM 10% 1/4W	
R433	0757-0960	RIFXD MET FLM 33K OHM 2% 1/8W	
R434	0757-0960	RIFXD MET FLM 33K OHM 2% 1/8W	
R435	0757-0939	RIFXD MET FLM 4.3K OHM 2% 1/8W	
R436	0757-0939	RIFXD MET FLM 4.3K OHM 2% 1/8W	
R437	0684-1521	RIFXD COMP 1500 OHM 10% 1/4W	
R438	0757-0960	RIFXD MET FLM 33K OHM 2% 1/8W	
R439	0757-0960	RIFXD MET FLM 33K OHM 2% 1/8W	
R440	0757-0939	RIFXD MET FLM 4.3K OHM 2% 1/8W	
R441	0757-0939	RIFXD MET FLM 4.3K OHM 2% 1/8W	
R442	0684-1041	RIFXD COMP 100K OHM 10% 1/4W	*
R443	0683-6835	RIFXD COMP 68K OHM 5% 1/4W	
R444	0684-6821	RIFXD COMP 6800 OHM 10% 1/4W	
R445	0684-1041	RIFXD COMP 100K OHM 10% 1/4W	
R446	0683-6215	RIFXD COMP 620 OHM 5% 1/4W	
R447	0683-6215	RIFXD COMP 620 OHM 5% 1/4W	
R448	0683-6215	RIFXD COMP 620 OHM 5% 1/4W	
R449	0683-6815	RIFXD COMP 680 OHM 5% 1/4W	
R450	0683-1215	RIFXD COMP 120 OHM 5% 1/4W	
R451	0684-2721	RIFXD COMP 2700 OHM 10% 1/4W	
R452	0684-1041	RIFXD COMP 100K OHM 10% 1/4W	
R453	0683-6835	RIFXD COMP 68K OHM 5% 1/4W	
R454	0683-5625	RIFXD COMP 5600 OHM 5% 1/4W	
R455	0683-2225	RIFXD COMP 2.2K OHM 5% 1/4W FACTORY SELECTED PART; TYPICAL VALUE GIVEN	
R456	0683-2445	RIFXD COMP 240K OHM 5% 1/4W	
R457	0683-1845	RIFXD COMP 180K OHM 5% 1/4W	
R458	0683-8245	RIFXD COMP 820K OHM 5% 1/4W	
A500	04260-7025	CHASSIS ASSY, INCL: S2+J1 - J4 115/230V ONLY	
		* FACTORY SELECTED PART, TYPICAL VALUE GIVEN	

See list of abbreviations in introduction to this section

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	Stock No.	Description #	Note
A600	04260-7026	ASSY:DECIMAL POINT AND DIRECTION IND	
R601	0687-1541	RIFXD COMP 150K OHM 10% 1/2W	
V601	2140-0018	LAMPIGLOW 1/10W	
V602	2140-0018	LAMPIGLOW 1/10W	
V603	2140-0018	LAMPIGLOW 1/10W	
V604	2140-0018	LAMPIGLOW 1/10W	
V605	2140-0018	LAMPIGLOW 1/10W	
C1	0160-1540	CIFXD MICA 0.2 UF 0.2%	
C2	0160-1515	CIFXD MICA 2200 PF 10% 500VDCW FACTORY SELECTED PART;TYPICAL VALUE GIVEN	
C3	0121-0205	CIVAR CER 5 PF 250VDCW	
C4	0160-1031	CIFXD CER 10 PF 10% 500VDCW FACTORY SELECTED PART;TYPICAL VALUE GIVEN	
C5	0160-1510	CIFXD MICA 1200 PF 10% 500VDCW	*
C6	0160-1227	CIFXD METAL PAPER .05 UF 10% 250VDCW	*
CR1	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
CR2	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
F1	2110-0110	FUSE:CARTRIDGE SLO-BLO 0.1A	
J1	1251-0148	CONNECTOR:POWER 3 PIN MALE	
J2	1251-0141	CONNECTOR:18-CONTACT	
J3	1251-0135	CONNECTOR:PRINTED CIRCUIT 15 CONTACTS	
J4	1251-0135	CONNECTOR:PRINTED CIRCUIT 15 CONTACTS	
J5		CONNECTOR:INCLUDES:	
J6	1510-0011 04260-5021 04260-5022 04260-5028	BINDING POST:BLACK(2 USED) INSULATOR:2 EACH INSULATOR:2 EACH CONNECTOR:FOR BIAS BATTERY	
J7	04260-1049 04260-5028	SHORTING BAR FOR J6 CONNECTOR:FOR EXT RESISTOR CP,LS AND BIAS CAPACITOR	
J8	04260-1049 04260-5028	SHORTING BAR FOR J7 CONNECTOR:FOR EXT RESISTOR,CS,LP	
J9	04260-1049 04260-5028	SHORTING BAR FOR J8 CONNECTOR:FOR EXT OSCILLATOR	
J10	04260-5028	CONNECTOR:FOR DETECTOR	
M1	1120-0734	METER:50 UA	
R1	2100-1172	RIVAR DEPC 5K OHM 10% 0.3W	
R2	0684-1521	RIFXD COMP 1500 OHM 10% 1/4W	
R3	04260-7028	RIVAR WW 5K OHM	
R4	2100-1171	RIVAR WW 10/4 OHM 10% 1.2W	
R5	04260-7031	RIVAR WW 16K OHM +100 OHM REPLACE ONLY WITH DQ DIAL	
		* FACTORY SELECTED PART;TYPICAL VALUE GIVEN	

See list of abbreviations in Introduction to this section

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	Stock No.	Description #	Note
R6	0698-1373	R:FXD DEPC 1 OHM 5% 1/2W	
R7	0684-1041	R:FXD COMP 100K OHM 10% 1/4W	
S1	3101-0206	SWITCH:SLIDE(LINE ON)	
S2	3101-0033	SWITCH:SLIDE DPDT(115/230V)	
S3	3101-0244	SWITCH:SLIDE(INT-EXT OSC)	
T1	04260-8602	TRANSFORMER:POWER	
T2	04260-8603	TRANSFORMER:OSC	
W1	8120-0078	CABLE ASSY:POWER CORD	
XFI	1400-0084	HOLDER:FUSE POST TYPE 3AG	
		MISCELLANEOUS	
	04260-1039	BRACKET	
	04260-1041	BRACKET:COUNTER	
	1410-0033	BUSHING FOR CRL CONTROL	
	04260-8542	CABLE:DIAL	
	1140-0030	COUNTER:CRL	
	04260-7027	GEAR ASSY:CRL COUNTER DRIVE	
	04260-5030	INDEX	
	0370-0050	KNOB FOR CRL CONTROL	
	0370-0275	KNOB FOR CRL CONTROL	
	0370-0272	KNOB:DQ CONTROL	
	0370-0267	KNOB:DQ VERNIER	
	0370-0077	KNOB:FUNCTION	
	0370-0077	KNOB:RANGE	
	0370-0256	KNOB:SENSITIVITY	
	04260-5024	LENS:FINDER	
	04260-5099	PULLEY FOR R5	
	04260-8541	SPRING:DIAL CABLE	
	04260-5027	WINDOW GLASS	
		ITEMS BELOW FOR 100 VAC OR 200 VAC ONLY	
	1251-0048	ADAPTER:PLUG (100/200V ONLY)	
	04260-7032	CHASSIS ASSY:INCL S2,J1-J4	
	04260-1038	FRONT PANEL	
	7120-0445	NAMEPLATE:100/200V	
	04260-9990	OPERATING AND SERVICE MANUAL (100/200 VAC ONLY)	

See list of abbreviations in introduction to this section

Table 6-2. Replaceable Parts

Stock No.	Description #	Mfr.	Mfr. Part No.	TQ
0121-0039	C:VAR CER 8-50PF 350VDCW	28480	0121-0039	2
0121-0205	C:VAR CER 5 PF 250VDCW	28480	0121-0205	1
0140-0194	C:FXD MICA 110 PF 5% 300 VDCW	04062	RDM15F111J3C	1
0140-0204	C:FXD MICA 47PF 5% NPO 500VDCW	04062	RDM15E470JSC	1
0160-1031	C:FXD CER 10 PF 10% 500VDCW	28480	0160-1031	1
0160-1039	C:FXD CER 25 PF 10% 500VDCW	28480	0160-1039	1
0160-1045	C:FXD CER 4 PF/0.25 PF 500VDCW	28480	0160-1045	1
0160-1161	C:FXD PAPER 2000 PF 10% 600VDCW	28480	0160-1161	1
0160-1227	C:FXD METAL PAPER .05 UF 10% 250VDCW	28480	0160-1227	1
0160-1271	C:FXD MY 0.01 UF 5% 50VDCW	28480	0160-1271	
0160-1510	C:FXD MICA 1200 PF 10% 500VDCW	28480	0160-1510	1
0160-1515	C:FXD MICA 2200 PF 10% 500VDCW	28480	0160-1515	1
0160-1540	C:FXD MICA 0.2 UF 0.2%	28480	0160-1540	1
0160-1542	C:FXD MY 1500 PF 10% 50VDCW	28480	0160-1542	1
0160-1543	C:FXD MY 2200 PF 5% 50VDCW	28480	0160-1543	1
0160-1544	C:FXD MY 4700 PF 5% 50VDCW	28480	0160-1544	3
0160-1545	C:FXD MY 0.022 UF 5% 50VDCW	28480	0160-1545	1
0160-1548	C:FXD MY 0.22 UF 10% 100VDCW	28480	0160-1548	1
0180-0708	C:FXD ELECT 3 UF 15VDCW	28480	0180-0708	1
0180-0756	C:FXD ELECT 20 UF 15VDCW	28480	0180-0756	11
0180-0773	C:FXD ELECT 50 UF 15VDCW	28480	0180-0773	2
0180-0945	C:FXD ELECT 50 UF 6VDCW	28480	0180-0945	4
0180-0962	C:FXD TANT 1 UF 20% 35VDCW	28480	0180-0962	1
0180-0964	C:FXD ELECT 100 UE 50VDCW	28480	0180-0964	1
0180-0965	C:FXD ELECT 200 UF 25VDCW	28480	0180-0965	1
0180-0966	C:FXD TANT 220 UF 10% 10VDCW	28480	0180-0966	1
0180-0967	C:FXD ELECT 500 UF 25VDCW	28480	0180-0967	1
0180-0978	C:FXD TANT 1 UF +75-15% 50VDCW	28480	0180-0978	1
0180-0981	C:FXD ELECT 22 UF 160VDCW	28480	0180-0981	1
0180-1025	C:FXD TANT 22 UF 20% 6VDCW	28480	0180-1025	1
0180-1026	C:FXD TANT 47 UF 20% 6VDCW	28480	0180-1026	3
0180-1029	C:FXD TANT 1 UF 20% 15VDCW	28480	0180-1029	10
0180-1032	C:FXD TANT 10 UF 20% 15VDCW	28480	0180-1032	2
0370-0050	KNOB FOR CRL CONTROL	28480	0370-0050	1
0370-0077	KNOB FUNCTION	28480	0370-0077	2
0370-0256	KNOB SENSITIVITY	28480	0370-0256	1
0370-0267	KNOB:DQ VERNIER	28480	0370-0267	1
0370-0272	KNOB:DQ CONTROL	28480	0370-0272	1
0370-0275	KNOB FOR CRL CONTROL	28480	0370-0275	1
0683-1045	R:FXD COMP 100K OHM 5% 1/4W	01121	CB 1045	2
0683-1215	R:FXD COMP 120 OHM 5% 1/4W	01121	CB 1215	1
0683-1225	R:FXD COMP 1200 OHM 5% 1/4W	01121	CB 1225	4
0683-1235	R:FXD COMP 12K OHM 5% 1/4W	01121	CB 1235	3
0683-1335	R:FXD COMP 13K OHM 5% 1/4W	01121	CB 1335	1
0683-1845	R:FXD COMP 180K OHM 5% 1/4W	01121	CB 1845	1
0683-1855	R:FXD COMP 1.8 MEGOHM 5% 1/4W	01121	CB 1855	1
0683-2025	R:FXD COMP 2000 OHM 5% 1/4W	01121	CB 2025	1
0683-2035	R:FXD COMP 20K OHM 5% 1/4W	01121	CB 2035	1
0683-2225	R:FXD COMP 2.2K OHM 5% 1/4W	01121	CB 2225	1
0683-2425	R:FXD COMP 2400 OHM 5% 1/4W	01121	CB 2425	1
0683-2445	R:FXD COMP 240K OHM 5% 1/4W	01121	CB 2445	1

See list of abbreviations in Introduction to this section

Table 6-2. Replaceable Parts (Cont'd)

Stock No.	Description #	Mfr.	Mfr. Part No.	TQ
0683-2715	RIFXD COMP 270 OHM 5% 1/4W	01121	CB 2715	1
0683-2735	RIFXD COMP 27K OHM 5% 1/4W	01121	CB 2735	1
0683-2745	RIFXD COMP 270K OHM 5% 1/4W	01121	CB 2745	1
0683-3015	RIFXD COMP 300 OHM 5% 1/4W	01121	CB 3015	1
0683-3025	RIFXD COMP 3000 OHM 5% 1/4W	01121	CB 3025	1
0683-3045	RIFXD COMP 300K OHM 5% 1/4W	01121	CB 3045	1
0683-3315	RIFXD COMP 330 OHM 5% 1/4W	01121	CB 3315	1
0683-3625	RIFXD COMP 3600 OHM 5% 1/4W	01121	CB 3625	1
0683-3645	RIFXD COMP 360K OHM 5% 1/4W	28480	0683-3645	1
0683-4715	RIFXD COMP 470 OHM 5% 1/4W	01121	CB 4715	1
0683-5135	RIFXD COMP 51K OHM 5% 1/4W	01121	CB 5135	1
0683-5625	RIFXD COMP 5600 OHM 5% 1/4W	01121	CB 5625	5
0683-5635	RIFXD COMP 56K OHM 5% 1/4W	01121	CB 5635	3
0683-6215	RIFXD COMP 620 OHM 5% 1/4W	01121	CB 6215	3
0683-6815	RIFXD COMP 680 OHM 5% 1/4W	01121	CB 6815	2
0683-6825	RIFXD COMP 6800 OHM 5% 1/4W	01121	CB 6825	1
0683-6835	RIFXD COMP 68K OHM 5% 1/4W	01121	CB 6835	2
0683-7515	RIFXD COMP 750 OHM 5% 1/4W	01121	CB 7515	2
0683-8215	RIFXD COMP 820 OHM 5% 1/4W	01121	CB 8215	1
0683-8225	RIFXD COMP 8200 OHM 5% 1/4W	01121	CB 8225	1
0683-8245	RIFXD COMP 820K OHM 5% 1/4W	01121	CB 8245	1
0684-1031	RIFXD COMP 10K OHM 10% 1/4W	01121	CB-1031	2
0684-1041	RIFXD COMP 100K OHM 10% 1/4W	01121	CB 1041	6
0684-1231	RIFXD COMP 12K OHM 10% 1/4W	28480	0684-1231	2
0684-1521	RIFXD COMP 1500 OHM 10% 1/4W	28480	0684-1521	4
0684-1531	RIFXD COMP 15K OHM 10% 1/4W	01121	CB 1531	1
0684-2231	RIFXD COMP 22K OHM 10% 1/4W	01121	CB 2231	3
0684-2721	RIFXD COMP 2700 OHM 10% 1/4W	01121	CB 2721	6
0684-2741	RIFXD COMP 270K OHM 10% 1/4W	01121	CB 2741	3
0684-4721	RIFXD COMP 4700 OHM 10% 1/4W	01121	CB 4721	4
0684-4731	RIFXD COMP 47K OHM 10% 1/4W	01121	CB 4731	2
0684-5621	RIFXD COMP 5.6K OHM 10% 1/4W	01121	CB 5621	1
0684-6821	RIFXD COMP 6800 OHM 10% 1/4W	01121	CB 6821	5
0684-6831	RIFXD COMP 68K OHM 10% 1/4W	28480	0684-6831	1
0684-8221	RIFXD COMP 8200 OHM 10% 1/4W	01121	CB 8221	3
0697-1541	RIFXD COMP 150K OHM 10% 1/2W	01121	EB 1541	1
0690-1821	RIFXD COMP 1800 OHM 10% 1W	01121	GB 1821	1
0698-1268	RIFXD MET FLM 10K OHM 0.1% 1/2W	28480	0698-1268	1
0698-1373	RIFXD DEPC 1 OHM 5% 1/2W	28480	0698-1373	1
0698-1374	RIFXD MET FLM 30K OHM 1% 1/4W	28480	0698-1374	1
0698-1375	RIFXD MET FLM 3K OHM 1% 1/4W	28480	0698-1375	1
0698-1376	RIFXD MET FLM 97K OHM 0.1% 1/4W	28480	0698-1376	1
0698-1377	RIFXD MET FLM 970K OHM 0.1% 1/4W	28480	0698-1377	1
0698-1380	RIFXD MET FLM 1K OHM 0.1% 1/2W	28480	0698-1380	1
0698-1381	RIFXD MET FLM 100 OHM 0.1% 1/2W	28480	0698-1381	1
0698-1400	RIFXD MET FLM 500 OHM 0.1% 1/2W	28480	0698-1400	1
0698-4142	RIFXD MET FLM 15.8 OHM 1% 1/4W	28480	0698-4142	1
0757-0926	RIFXD MET FLM 1.2K OHM 2% 1/8W	28480	0757-0926	3
0757-0928	RIFXD MET FLM 1.5K OHM 2% 1/8W	28480	0757-0928	2
0757-0930	RIFXD MET FLM 1.8K OHM 2% 1/8W	28480	0757-0930	1
0757-0935	RIFXD MET FLM 3.0K OHM 2% 1/8W	28480	0757-0935	2
0757-0939	RIFXD MET FLM 4.3K OHM 2% 1/8W	28480	0757-0939	4
0757-0941	RIFXD MET FLM 5.1K OHM 2% 1/8W	28480	0757-0941	1

See list of abbreviations in introduction to this section

Table 6-2. Replaceable Parts (Cont'd)

Stock No.	Description #	Mfr.	Mfr. Part No.	TQ
0757-0947	RIFXD MET FLM 9.1K OHM 2% 1/8W	28480	0757-0947	3
0757-0951	RIFXD MET FLM 13K OHM 2% 1/8W	28480	0757-0951	2
0757-0952	RIFXD MET FLM 15K OHM 2% 1/8W	28480	0757-0952	1
0757-0953	RIFXD MET FLM 16K OHM 2% 1/8W	28480	0757-0953	1
0757-0955	RIFXD MET FLM 20K OHM 2% 1/8W	28480	0757-0955	1
0757-0959	RIFXD MET FLM 30K OHM 2% 1/8W	28480	0757-0959	1
0757-0960	RIFXD MET FLM 33K OHM 2% 1/8W	28480	0757-0960	5
0757-0968	RIFXD MET FLM 68K OHM 2% 1/8W	28480	0757-0968	2
1120-0734	METER:50 UA	28480	1120-0734	1
1140-0030	COUNTER:CRL	28480	1140-0030	1
1205-0033	HEAT DISSIPATOR FOR Q201	28480	1205-0033	1
1251-0048	ADAPTER:PLUG (100/200V ONLY)	28480	1251-0048	1
1251-0135	CONNECTOR:PRINTED CIRCUIT 15 CONTACTS	95354	SD-615UR	2
1251-0141	CONNECTOR:18-CONTACT	28480	1251-0141	1
1251-0148	CONNECTOR:POWER 3 PIN MALE	60427	H-1061-2	1
1400-0084	HOLDER:FUSE POST TYPE 3AG	75915	342014	1
1410-0033	BUSHING FOR CRL CONTROL	28480	1410-0033	1
1510-0011	BINDING POST:BLACK	28480	1510-0011	1
1853-0010	TRANSISTOR:SILICON PNP	28480	1853-0010	3
1854-0003	TRANSISTOR:NPN SILICON	28480	1854-0003	2
1854-0022	TRANSISTOR:SILICON	28480	1854-0022	1
1854-0071	TRANSISTOR:SILICON NPN 2N3391	89473	16A792	32
1901-0026	DIODE:SILICON 200 PIV 0.5 AMP	28480	1901-0026	1
1901-0028	DIODE:SILICON 400 PIV 0.5 AMP	28480	1901-0028	1
1901-0040	DIODE:SILICON 30 MA AT 1V 30 PIV	28480	1901-0040	15
1901-0045	SEMICON DEVICE:DIODE SILICON	28480	1901-0045	3
1902-0031	DIODE:BREAKDOWN 12.7V 5% 400 MW	28480	1902-0031	2
1902-0037	SEMICON DEVICE:DIODE	28480	1902-0037	1
1902-0057	SEMICON DEVICE:DIODE SILICON	28480	1902-0057	1
1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	28480	1910-0016	14
2100-1171	RIVAR WW 10/4 OHM 10% 1.2W	28480	2100-1171	1
2100-1172	RIVAR DEPC 5K OHM 10% 0.3W	28480	2100-1172	1
2100-1776	RIVAR WW 10K OHM 10% LIN 1/2W	28480	2100-1776	1
2100-1777	RIVAR WW 20K OHM 10% LIN 1/2W	28480	2100-1777	1
2110-0110	FUSE:CARTRIDGE SLO-BLO 0.1A	28480	2110-0110	1
2140-0018	LAMP:GLOW 1/10W	24455	NE 2E1	5
3101-0033	SWITCH:SLIDE DPDT(115/230V)	79727	6510 C	1
3101-0206	SWITCH:SLIDE(LINE ON)	28480	3101-0206	1
3101-0244	SWITCH:SLIDE(INT-EXT OSC)	28480	3101-0244	1
7120-0445	NAMEPLATE:100/200V	28480	7120-0445	1
8120-0078	CABLE ASSY:POWER CORD	28480	8120-0078	1
9100-0729	INDUCTOR:IFXD 100 UH 10%	28480	9100-0729	1
04255-8604	RIFXD WW 10 OHM 0.1%	28480	04255-8604	1
04260-1039	BRACKET	28480	04260-1039	1
04260-1038	FRONT PANEL	28480	04260-1038	1
04260-1049	SHORTING BAR FOR J6	28480	04260-1049	3
04260-1041	BRACKET:COUNTER	28480	04260-1041	1

See list of abbreviations in Introduction to this section

Table 6-2. Replaceable Parts (Cont'd)

Stock No.	Description #	Mfr.	Mfr. Part No.	TQ
04260-5021	INSULATOR:2 EACH	28480	04260-5021	2
04260-5022	INSULATOR:2 EACH	28480	04260-5022	2
04260-5028	CONNECTOR:FOR BIAS BATTERY	28480	04260-5028	5
04260-5024	LENS:FINDER	28480	04260-5024	1
04260-5027	WINDOW GLASS	28480	04260-5027	1
04260-5030	INDEX	28480	04260-5030	1
04260-5099	PULLEY FOR R5	28480	04260-5099	1
04260-7021	ASSY: RANGE AND FUNCTION SWITCH	28480	04260-7021	2
04260-7024	ASSY:DETECTOR	28480	04260-7024	1
04260-7025	CHASSIS ASSY:INCL:S2,J1-J4	28480	04260-7025	1
04260-7026	ASSY:DECIMAL POINT AND DIRECTION IND	28480	04260-7026	1
04260-7028	RIVAR WW 5K OHM	28480	04260-7028	1
04260-7027	GEAR ASSY:ICRL COUNTER DRIVE	28480	04260-7027	1
04260-7031	RIVAR WW 16K OHM +100 OHM	28480	04260-7031	1
04260-7032	CHASSIS ASSY:INCL S2,J1-J4	28480	04260-7032	1
04260-8542	CABLE:DIAL	28480	04260-8542	1
04260-8541	SPRING:DIAL CABLE	28480	04260-8541	1
04260-8602	TRANSFORMER:POWER	28480	04260-8602	1
04260-8603	TRANSFORMER:OSC	28480	04260-8603	1
04260-8604	R:FXD WW 0.986 OHM 0.3%	28480	04260-8604	1
04260-8702	ASSY:POWER SUPPLY AND 1KHZ OSC	28480	04260-8702	1
04260-8703	ASSY:REFERENCE VOLTAGE	28480	04260-8703	1

See list of abbreviations in Introduction to this section

Table 6-3. Manufacturer's Code List

The following code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1 (Name to Code) and H4-2 (Code to Name) and their latest supplements. The date of revision and the date of the supplements used appear at the bottom of each page. Alphabetical codes have been arbitrarily assigned to suppliers not appearing in the H4 handbooks.

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
00000 U.S.A. Common	Any supplier of U.S.		07137 Transistor Electronics Corp.	Minneapolis, Minn.		20183 General Atomics Corp.	Philadelphia, Pa.		72825 Hugh H. Eby Inc.	Philadelphia, Pa.	
00136 McCoy Electronics	Mount Holly Springs, Pa.		07138 Westinghouse Electric Corp.	Elmira, N.Y.		21226 Executone, Inc.	New York, N.Y.		72926 Gudeman Co.	Chicago, Ill.	
03221 Sage Electronics Corp.	Rochester, N.Y.		07149 Fimohm Corp.	New York, N.Y.		21520 Fansteel Metallurgical Corp.	No. Chicago, Ill.		72946 Robert M. Hadley Co.	Los Angeles, Calif.	
00334 Humidif	Colton, Calif.		07233 Cinch-Graphic Co.	City of Industry, Calif.		21335 The Fairlin Bearing Co.	New Britain, Conn.		72956 Erie Technological Products, Inc.	Erie, Pa.	
00373 Garlock Inc.,	Camden, N.J.		07261 Avnet Corp.	Los Angeles, Calif.		24455 G.E. Lamp Division	Nela Park, Cleveland, Ohio		73061 Hansen Mfg. Co., Inc.	Princeton, Ind.	
03656 Aerovox Corp.	New Bedford, Mass.		07283 Fairchild Camera & Inst. Corp.	Mountain View, Calif.		24655 General Radio Co.	West Concord, Mass.		73076 H.M. Harper Co.	Chicago, Ill.	
00779 Aerop. Inc.	Harrisburg, Pa.		07322 Minnesota Rubber Co.	Minneapolis, Minn.		26355 Gries Reproduct. Corp.	New Rochelle, N.Y.		73138 Helicot Div. of Beckman Inst., Inc.	Fullerton, Calif.	
00781 Aircraft Radio Corp.	Bonita, N.J.		07387 The Bittchei Corp.	Los Angeles, Calif.		26462 Gribet File Co. of America, Inc.			73293 Hughes Products Division of		
00813 Northern Engineering Laboratories, Inc.	Burlington, Wis.		07700 Technical Wire Products Inc.	Craford, N.J.		28992 Hamilton Watch Co.	Carlstadt, N.J.		73445 Hughes Aircraft Co., Div. of North		
00853 Sangamo Electric Co.,	Pickens, S.C.		07910 Continental Device Corp.	Hawthorne, Calif.		28482 Hewlett-Packard Co.	Lancaster, Pa.		73446 American Phillips Co., Inc.	Hicksville, N.Y.	
00866 Gee Engineering Co.	Los Angeles, Calif.		07932 Raytheon Mfg. Co.	Mountain View, Calif.		33173 G.E. Retrieving Tube Dept.	Owensboro, Ky.		73505 Bradley Semiconductor Corp.	Hamden, Conn.	
00891 Carl E. Holmes Corp.	Los Angeles, Calif.		07986 Shockley Semi-Conductor Laboratories	Palo Alto, Calif.		35434 Lactron Inc.	Chicago, Ill.		73559 Carling Electric, Inc.	Hartford, Conn.	
01121 Allen Bradley Co.	Milwaukee, Wis.		07989 Bantec Radio Corp.	Rockaway, N.J.		36196 Stanwyck Co. Products Ltd.			73626 George K. Garrett Co., Div.		
01255 Litton Industries, Inc.	Beverly Hills, Calif.		08145 U.S. Engineering Co.	Los Angeles, Calif.		37942 P.R. Mallory & Co., Inc.	Indianapolis, Ind.		73734 Federal Screw Products Inc.	Philadelphia, Pa.	
01281 TRW Semiconductors, Inc.	La Canada, Calif.		08289 Bilm, Delbert, Co.	Panama, Calif.		37943 Mechanical Industries Prod. Co.	Akron, Ohio		73743 Fischer Special Mfg. Co.	Chicago, Ill.	
01295 Texas Instruments, Inc.			08356 Burgess Battery Co.			40920 Miniature Precision Bearings, Inc.	Keene, N.H.		73793 The General Industries Co.	Cincinnati, Ohio	
01349 The Alliance Mfg. Co.	Alliance, Ohio		08564 The Bristol Co.	Niagara Falls, Ontario, Canada		42190 Mufer Co.	Chicago, Ill.		73784 Gosher Stamping & Tool Co.	Elyria, Ohio	
01589 Pacific Relays, Inc.	Van Nuys, Calif.		08717 Sloan Company	Watertown, Conn.		43990 C.A. Morgan Co.	Englewood, Colo.		73895 JFD Electronics Corp.	Brooklyn, N.Y.	
01910 Amerock Corp.	Rockford, Ill.		08718 ITT Cannon Electric Inc.	Phoenix, Ariz.		46655 Ohmite Mfg. Co.	Suite 100, Skokie, Ill.		73905 Jennings Radio Mfg. Corp.	San Jose, Calif.	
01951 Pulse Engineering Co.	Santa Clara, Calif.		08736 ITT Cannon Electric Inc.	Phoenix, Ariz.		47904 Polaroid Corp.	Cambridge, Mass.		74276 Signalite Inc.	Neptune, N.J.	
02214 Ferroxcube Corp. of America	Saugus, N.Y.		08956 Electro Assemblies, Inc.	Chicago, Ill.		48620 Precision Thermometer & Inst. Co.			74455 J.H. Wins, and Sons	Winchester, Mass.	
02226 Cole Rubber and Plastics Inc.	Palo Alto, Calif.		09059 Malloy Battery Co.	Canada, Ltd.		49556 Raytheon Company	Southampton, Pa.		74661 Industrial Condenser Corp.	Chicago, Ill.	
02660 Amphenol-Borg Electronics Corp.	Chicago, Ill.		09126 Babcock Relays Div.	Costa Mesa, Calif.		50190 Roway Contoller Co.	Lexington, Mass.		74688 R.F. Products Division of Amphenol-		
02735 Radio Materials Corp.	Materials Div.		09134 Taxco Capacitor Co.	Houston, Texas		52983 Sanborn Co.	Westminster, Md.		74698 Borg Electronics Corp.	Dobury, Conn.	
02771 Voculine Co. of America, Inc.	Somerville, N.J.		09145 Atchon Electronics	Sun Valley, Calif.		54294 Shaltrops Mfg. Co.	Waltham, Mass.		74707 E.F. Johnson Co.	Waseca, Minn.	
02777 Hopkins Engineering Co.	San Fernando, Calif.		09155 Electro Assemblies, Inc.	Chicago, Ill.		55026 Simpson Electric Co.	Selma, N.C.		75042 International Resistance Co.	Philadelphia, Pa.	
03508 G.E. Semiconductor Prod. Dept.	Syracuse, N.Y.		09165 Malloy Battery Co.	Canada, Ltd.		55893 Sonotone Corp.	Chicago, Ill.		75378 James Knight Co.	Sandwich, Ill.	
03705 Apex Machine & Tool Co.	Dayton, Ohio		09173 CTS of Beane, Inc.	Berne, Ind.		55938 Raytheon Co. Commercial Apparatus & Systems Div.	So. Norwalk, Conn.		75382 Kulka Electric Corporation	Mt. Vernon, N.Y.	
03793 Eldena Corp.	Compton, Calif.		10214 General Transistor Western Corp.	Los Angeles, Calif.		56137 Spaulding Fibre Co., Inc.	Towanda, N.Y.		75813 Lenz Electric Mfg. Co.	Chicago, Ill.	
03817 Transition Electric Corp.	Wakefield, Mass.		10411 Ti-Tal, Inc.	Berkeley, Calif.		56208 Sprague Electric Co.	North Adams, Mass.		75815 Littlefuse, Inc.	Des Plaines, Ill.	
03882 Pyrofilm Resistor Co., Inc.	Cedar Knolls, N.J.		10464 Catergundun Co.	Niagara Falls, N.Y.		56346 Telex Inc.	St. Paul, Minn.		76005 Loud Mfg. Co.	Erie, Pa.	
03954 Singer Co., Diehl Div.			10465 CTS of Beane, Inc.	Berne, Ind.		56421 Thomas & Betts Co.	Elizabeth, N.J.		76210 C.W. Marwedel	San Francisco, Calif.	
04009 Arrow, Hart, and Hegeman Elect. Co.	Somerville, N.J.		10473 Chicago Telephone of California, Inc.	So. Pasadena, Calif.		56733 Union Switch and Signal, Div. of	Bluffton, Ohio		76433 General Instrument Corp.	Newark, N.J.	
04013 Taurus Corp.	Lambertville, N.J.		10742 Bay State Electronics Corp.	Waltham, Mass.		61755 Westinghouse Air Brake Co.	Pittsburgh, Pa.		76435 Micromat Div.	Newark, N.J.	
04062 Elemento Products Co.	New York, N.Y.		10743 Microwave Electronics Corp.	Palo Alto, Calif.		62119 Universal Electric Co.	Ossawa, Mich.		76487 James Hillen Mfg. Co., Inc.	Malden, Mass.	
04222 H-0 Division of Aerovox	Myrtle Beach, S.C.		10744 Duncan Electronics Inc.	Costa Mesa, Calif.		63743 Westen Electric Co., Inc.	New York, N.Y.		76493 J.W. Miller Co.	Los Angeles, Calif.	
04354 Precision Paper Tube Co.	Chicago, Ill.		10745 General Instrument Corp.	Semiconductor Div.		65092 Weston Inst. Div. of Daystrom, Inc.			76530 Monadnock Mills	San Leandro, Calif.	
04404 Dynec Division of Hewlett-Packard Co.	Palo Alto, Calif.		10746 Imperia Electron. Inc.	Buena Park, Calif.		66295 Wittek Mfg. Co.	Newark, N.J.		76545 Mueller Electric Co.	Cleveland, Ohio	
04551 Sylvania Electric Products, Inc.	Microwave Device Div. Mountain View, Calif.		10747 Malibis, Inc.	Palo Alto, Calif.		66346 Revere Wollanek Div. Munc. Mining & Mfg. Co.	Clifford, N.J.		76564 Oak Manufacturing Co.	Crystal Lake, Ill.	
04713 Motorola, Inc., Semiconductor Prod. Div.	Phoenix, Arizona		10748 Philadelphia Handels Co.	Camden, N.J.		70276 Allen Mfg. Co.	St. Paul, Minn.		77068 The Bendo Corp.	Bando Pacific Div.	
04732 Fotron Co., Inc.	Western Div. Culver City, Calif.		10749 Charostal Mfg. Co.	Dover, N.H.		70308 Allen Mfg. Co.	Harford, Conn.		77075 Pacific Metal Co.	No. Hollywood, Calif.	
04773 Automatic Electric Co.	Northlake, Ill.		10750 Nippon Electric Co., Ltd.	Tokyo, Japan		70318 Allmetall Screw Product Co. Inc.			77221 Phastpan Instrument and Electronic Co.	South Pasadena, Calif.	
04796 Sequoyah Wire Co.	Redwood City, Calif.		10751 Meter Electronics Corp.	Clark, N.J.		70485 Atlantic Indus. Rubber Works, Inc.	Garden City, N.Y.		77252 Philadelphia Steel and Wire Corp.	Philadelphia, Pa.	
04821 Precision Coil Spring Co.	El Monte, Calif.		10752 Orlon Div. Thomas A. Edison Ind.	Kansas City, Kansas		70563 Amperite Co., Inc.	Union City, N.J.		77342 American Machine & Foundry Co.	Philadelphia, Pa.	
04870 P.M. Motor Company	Westchester, Ill.		10753 Connell Dubois Electric Corp.	Newark, N.J.		70803 Belged Mfg. Co.	Chicago, Ill.		77630 Poler & Brumfield Div.	Princeton, Ind.	
05066 Twentieth Century Plastics, Inc.	Los Angeles, Calif.		10754 Webster Electronics Co.	San Jose, Calif.		70998 Bird Electronic Corp.	Cleveland, Ohio		77631 General Instrument Corp., Rectifier Div.	Condon, N.J.	
05227 Westinghouse Electric Corp., Sem-Conductor Dept.	Youngwood, Pa.		10755 Adjustable Bushing Co.	Hollywood, Calif.		71002 Bimba Radin Co.	New York, N.Y.		77764 Resistance Products Co.	Brooklyn, N.Y.	
05347 Ultrtronics, Inc.	San Mateo, Calif.		10756 Midland-Wright Div. of Pacific Industries, Inc.	Kansas City, Kansas		71041 Boston Gear Works Div. of Murray Co. of Texas	Quincy, Mass.		77969 Rubbercraft Corp. of Calif.	Toronto, Calif.	
05593 Imitron Engineering Co.	Sunnyvale, Calif.		10757 Sam-Tech	Newbury Park, Calif.		71218 Bud Radio, Inc.	Willoughby, Ohio		78109 Shapenek Division of Illinois Tool Works	Elgin, Ill.	
05616 Cosmo Plastic			10758 McCallister Corp.	Santa Monica, Calif.		71265 Cambic Fastener Corp.	Paramus, N.J.		78283 Signal Indicator Corp.	New York, N.Y.	
05626 G.E. Electrical Spec. Co.	Cleveland, Ohio		10759 McFarland Corp.	Long Island City, N.Y.		71313 Cardwell Condenser Corp.	Lindenhurst, Ill., N.Y.		78290 Stethers-Dunn Inc.	Pittman, N.J.	
05624 Barber Colman Co.	Rockford, Ill.		10760 McFerran Corp.	Long Island City, N.Y.		71400 Busmann Mfg. Div. of McGraw-Edison Co.	St. Louis, Mo.		78452 Thompson-Biemer & Co.	Chicago, Ill.	
05728 Tiffen Optical Co.	Roslyn Heights, Long Island, N.Y.		10761 Microtron Electronics	Garden City, Long Island, N.Y.		71438 Caliche Condenser Corp.	Chicago, Ill.		78471 Tilley Mfg. Co.	San Francisco, Calif.	
05729 Metre-Tel Corp.	Plainview, N.Y.		10762 Twentieth Century Coil Spring Co.	Santa Clara, Calif.		71447 Calif. Spring Co., Inc.	Pico-River, Calif.		78488 Stackpole Carb Co.	St. Marys, Pa.	
05783 Stewart Engineering Co.	Santa Cruz, Calif.		10763 Avelan Div.	Mt. View, Calif.		71450 CTS Corp.	Elkhart, Ind.		78493 Standard Thentec Corp.	Waltham, Mass.	
05820 Wavefield Engineering Inc.	Wakefield, Mass.		10764 Deltac Div. Thomas A. Edison Ind.	Long Island City, N.Y.		71466 ITT Cannon Electric Inc.	Los Angeles, Calif.		78533 Timexman Products, Inc.	Cleveland, Ohio	
06004 The Bassick Co.	Bridgewater, Conn.		10765 Spice Pine Mica Co.	Spice Pine, N.C.		71471 Cinema Engineering Co.	Burbank, Calif.		78730 Transformer Engineers	San Gabriel, Calif.	
06175 Bausch and Lomb Optical Co.	Rochester, N.Y.		10766 Computer Diode Corp.	Lodi, N.J.		71482 D.P. Clave & Co.	Chicago, Ill.		78947 Ucrite Co.	Newtown, Mass.	
06402 E.T.A. Products Co. of America	Chicago, Ill.		10767 Ideal Prod. Meter Co., Inc.	De Jui Meter Div.		71491 Genesee Valley Co.	Howard B. Jones Div.		79136 Waldes Kohinoor Inc.	Long Island City, N.Y.	
06475 Resinol Devices Inc.	Burbank, Calif.		10768 Delco Radio Div. of G.M. Corp.	Kokomo, Ind.		71500 Genesee Valley Co.	Midland, Mich.		79142 Veedar Root, Inc.	Hartford, Conn.	
06640 Antran Electronic Hardware Co., Inc.	New Rochelle, N.Y.		10769 Thermometrics Inc.	Canoga Park, Calif.		71501 Genesee Valley Co.	West Orange, N.J.		79251 Wenco Mfg. Co.	Chicago, Ill.	
06655 Beede Electrical Instrument Co., Inc.	Penacook, N.H.		10770 Trade Company	Mountain View, Calif.		71502 Genesee Valley Co.	Chicago, Ill.		79277 Continental-Wirt Electronics Corp.	Philadelphia, Pa.	
06666 General Devices Co., Inc.	Indianapolis, Ind.		10771 Ty-Ca Mfg. Co., Inc.	Holliston, Mass.		71503 Genesee Valley Co.	Midland, Mich.		79363 Zierick Mfg. Corp.	New Rochelle, N.Y.	
06751 Nuclear Corp. of America	Phoenix, Ariz.		10772 Radio Industries	Des Plaines, Ill.		71504 Genesee Valley Co.	Chicago, Ill.		80031 Neko Division of Sessions Clock Co.	Morristown, N.J.	
06812 Tarrington Mfg. Co., West Div.	Van Nuys, Calif.		10773 Curtis Instrument, Inc.	Mt. Kisco, N.Y.		71505 Genesee Valley Co.	Midland, Mich.		80120 Schnitter Alloy Products Co.	Elizabeth, N.J.	
06850 Etel-McCullough Inc.	San Carlos, Calif.		10774 E.I. DuPont and Co., Inc.	Wilmington, Del.		71506 Genesee Valley Co.	Chicago, Ill.		80130 Time Telephone Equipment	New York, N.Y.	
07383 Kelvin Electric Co.	Van Nuys, Calif.		10775 The Bendix Corp.	Eclipse-Pioneer Div.		71507 Genesee Valley Co.	Midland, Mich.		80131 Electronic Industries Association, Any brand		
07715 Corning Glass Works			10776 Thomas A. Edison Industries, Div. of McGraw-Edson Co.	Teterboro, N.J.		71508 Genesee Valley Co.	Chicago, Ill.		80486 Tube meeting EIA standards-Washington, D.C.		
07726 Electronic Components Dept.	Bradford, Pa.		10777 Electra Mfg. Co.	Independence, Kansas		71509 Genesee Valley Co.	Chicago, Ill.		80262 Unijax Switch, Div. Maxon Electronics Corp.	Wallingford, Conn.	
07761 Digitron Co.	Pasadena, Calif.		10778 Drake Mfg. Co.			71510 Genesee Valley Co.	Chicago, Ill.		80223 United Transformer Corp.	New York, N.Y.	
			10779 Electra Mfg. Co.			71511 Genesee Valley Co.	Chicago, Ill.		80248 Oxford Electric Corp.	Chicago, Ill.	
			10780 Indiana General Corp., Electronics Div.			71512 Genesee Valley Co.	Chicago, Ill.		80294 Bowes Laboratories, Inc.	Riverside, Calif.	
			10781 Electra Mfg. Co.			71513 Genesee Valley Co.	Chicago, Ill.		80413 Robertshaw Controls Co.	Hilliard, Ohio	
			10782 Electra Mfg. Co.			71514 Genesee Valley Co.	Chicago, Ill.		80485 Al! Star Products Inc.	Delaware, Ohio	
			10783 Electra Mfg. Co.			71515 Genesee Valley Co.	Chicago, Ill.		80509 Avery Adhesive Label Corp.	Monrovia, Calif.	

Table 6-3. Manufacturer's Code List (cont'd)

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
B0583	Hammarlund Co., Inc.	New York, N.Y.	83821	Loyd Scruggs Co.	Festus, Mo.	93369	Robbins and Myers, Inc.	New York, N.Y.	98731	General Mills Inc., Electronics Div.	Minneapolis, Minn.
8C640	Stevens, Arnold, Co., Inc.	Boston, Mass.	84171	Aico Electronics Inc.	Great Neck, N.Y.	93410	Stevens Mfg. Co., Inc.	Wansfield, Ohio	98821	North Hills Electronics, Inc.	Otay Mesa, N.Y.
8IC30	International Instruments Inc.	Orange, Conn.	84398	A.J. Giesner Co., Inc.	San Francisco, Calif.	93788	Howard J. Smith Inc.	Port Monmouth, N.J.	98825	Semiconductor Div. of Clevite Corp.	Waltham, Mass.
81073	Grayhill Co.	LaGrange, Ill.	84401	TRW Capacitor Div.	Ogallala, Neb.	93929	G.V. Controls	Livington, N.J.	98978	International Electronic Research Corp.	Burbank, Calif.
8IC95	Triad Transformer Corp.	Venice, Calif.	84970	Sarkes Tarzian, Inc.	Bloomington, Ind.	94347	General Cable Corp.	Bayonne, N.J.	99109	Columbia Technical Corp.	New York, N.Y.
81112	Winchester Electronics Co., Inc.	Norwalk, Calif.	85454	Boonton Molding Company	Boonton, N.J.	94144	Raytheon Co., Comp. Div., Ind. Comp. Operations	Quincy, Mass.	96313	Yarcan Associates	Palo Alto, Calif.
81349	Military Specification		85471	A.B. Boyd Co.	San Francisco, Calif.	94148	Scientific Electronics Products, Inc.	Loveland, Colo.	95615	Marshall Ind. Elect. Products Div.	
81425	Wilko Products, Inc.	Cleveland, Ohio	85474	R.M. Brachanente & Co.	San Francisco, Calif.	94154	Tung-Sol Electric, Inc.	Newark, N.J.	98707	Control Switch Division, Controls Co. of America	San Marino, Calif.
81483	International Rectifier Corp.	El Segundo, Calif.	85560	Koiled Koids, Inc.	HAMDEN, Conn.	94197	Curtiss-Wright Corp., Electronics Div.	East Paterson, N.J.	99802	Deleven Electronics Corp.	El Segundo, Calif.
81511	The Alpax Products Co.	Cambridge, Mass.	85591	Skinless Rubber Co.	Chicago, Ill.	94222	South Chester Corp.	Chester, Pa.	99848	Wilco Corporation	East Aurora, N.Y.
81853	Barry Controls, Div. Barry Wright Corp.	Watertown, Mass.	86197	Clifton Precision Products Co., Inc.	Clifton Heights, Pa.	94310	Tiv-Ohm Products	Memphis Components Div.	99934	Renbrand, Inc.	Boston, Mass.
82C42	Carlei Precision Electric Co.	Skokie, Ill.	86579	Precision Rubber Products Corp.	Dayton, Ohio	94336	Philco Corporation (Lanerdale Division)	Harrison, N.J.	99942	Hoffman Electronics Corp., Semiconductor Div.	El Monte, Calif.
82C47	Spalis Faraday Inc., Cooper Hewitt Electro Div.	Hackensack, N.J.	86684	Radio Corp. of America, Electronic Comp. & Devices Div.	Harrison, N.J.	94338	Wire Cloth Products, Inc.	Landale, Pa.	99957	Technology Instrument Corp., of Calif.	Newbury Park, Calif.
82142	Jeffers Electronics Division of Speer Carbon Co.	Du Bois, Pa.	87216	Philco Corporation (Lanerdale Division)	Landale, Pa.	94743	Western Fibrous Glass Products Co.	San Francisco, Calif.			
82170	Fairchild Camera & Inst. Corp., Defense Prod. Division	Clifton, N.J.	87664	Van Waler & Rogers Inc.	San Francisco, Calif.	95023	George A. Philbrick Researchers, Inc.	Boston, Mass.			
82209	Maguire Industries, Inc.	Greenwich, Conn.	8793C	Tower Mfg. Corp.	Providence, R.I.	95236	Allis Products Corp.	Miami, Fla.			
82219	Sylvania Electric Prod. Inc., Electronic Tube Division	Emporia, Pa.	88140	Cutter-Hammer, Inc.	Lincoln, N.H.	95238	Continental Connector Corp.	Woodside, N.Y.			
82376	Astron Division, Renwall Industries Inc.	East Newark, N.J.	88220	Gould-National Batteries, Inc.	St. Paul, Minn.	95263	Leecell Mfg. Co., Inc.	Long Island, N.Y.			
82389	Switchcraft, Inc.	Chicago, Ill.	88421	Federal Telephone & Radio Corp.	Clifton, N.J.	95264	Leeco Electronics, Inc.	Burbank, Calif.			
82647	Metals & Controls Inc., Spencer Products	Attleboro, Mass.	88698	General Mills, Inc.	Buffalo, N.Y.	95265	National Coil Co.	Sheridan, Wyo.			
82768	Philips-Advance Control Co.	Joliet, Ill.	89231	Graybar Electric Co.	Oakland, Calif.	95275	Vitramon, Inc.	Bridgeport, Conn.			
82866	Research Products Corp.	Madison, Wis.	89473	General Electric Distributing Corp.	Schenectady, N.Y.	95341	Gordis Corp.	Bloomfield, N.J.			
82877	Rotron Mfg. Co., Inc.	Woodstock, N.Y.	89665	United Transformer Co.	Chicago, Ill.	95354	Metabode Mfg. Co.	Chicago, Ill.			
82893	Vactor Electronic Co.	Glenelde, Calif.	90179	US Rubber Co., Consumer Ind. & Plastics Prod. Div.	Passaic, N.J.	95712	Oage Electric Co., Inc.	Franklin, Ind.			
83053	Western Washer Mfg. Co.	Los Angeles, Calif.	90970	Bearing Engineering Co.	San Francisco, Calif.	95987	Weckesser Co.	Chicago, Ill.			
83058	Carr Fastener Co.	Cambridge, Mass.	91260	Connor Spring Mfg. Co.	San Francisco, Calif.	96067	Huggins Laboratories	Sunnyvale, Calif.			
83086	New Hampshire Ball Bearing, Inc.	Paterson, N.J.	91345	Walter Dial & Nameplate Co.	El Monte, Calif.	96095	Hi-Q Div. of Aerovox Corp.	Ossian, N.Y.			
83125	General Instrument Corp., Capacitor Div.	Dalington, S.C.	91412	Radio Materials Co.	Chicago, Ill.	96256	Thordarson-Mesanner Div. of Maguire Industries, Inc.	Mt. Carmel, Ill.			
83148	ITT Wire and Cable Div.	Los Angeles, Calif.	91506	Augat Inc.	Attleboro, Mass.	96295	Solar Manufacturing Co.	Los Angeles, Calif.			
83166	Victory Engineering Corp.	Springfield, N.J.	91637	Dale Electronics, Inc.	Columbus, Nebr.	96330	Carlton Screw Co.	Chicago, Ill.			
83288	Bando Corp., Red Bank Div.	Red Bank, N.J.	91662	Elico Corp.	Willow Grove, Pa.	96341	Microwave Associates, Inc.	Burlington, Mass.			
83315	Hubbell Corp.	Mundelein, Ill.	91737	Giemal Mfg. Co., Inc.	Wakefield, Mass.	96501	Excel Transformer Co.	Oakland, Calif.			
83330	Smith, Herman H., Inc.	Brooklyn, N.Y.	91827	K F Development Co.	Redwood City, Calif.	97464	Industrial Retaining Ring Co.	Irvine, N.J.			
83385	Centiai Screw Co.	Chicago, Ill.	91929	Honeywell Inc., Micro Switch Div.	Freeport, Ill.	97539	Automatic & Precision Mfg.	Englewood, N.J.			
83501	Gavitt Wire and Cable Co., Div. of Ametaco Corp.	Brockfield, Mass.	91961	Wahr Bros. Spring Co.	Oakland, Calif.	97976	Reon Resistor Corp.	Yonkers, N.Y.			
83594	Burroughs Corp., Electronic Tube Div.	Plainfield, N.J.	92180	Tu-Conector Corp.	Peabody, Mass.	97983	Litton System Inc., Adler-Westic Commun. Div.	New Rochelle, N.Y.			
83740	Evanside Div., National Carbon Div., Union Carbide Corp.	New York, N.Y.	92367	Elget Optical Co., Inc.	Rochester, N.Y.	98141	R-Tronic, Inc.	Jamaica, N.Y.			
83777	Model Eng. and Mfg., Inc.	Huntington, Ind.	92196	Universal Industries, Inc.	City of Industry, Calif.	98158	Rubber Tech, Inc.	Gardena, Calif.			
			92607	Tensolite Insulated Wire Co., Inc.	Tarrytown, N.Y.	98220	Francis L. Moseley	Pasadena, Calif.			
			93332	Sylvania Electric Prod. Inc., Semiconductor Div.	Woburn, Mass.	98278	Microdot, Inc.	So. Pasadena, Calif.			
						98291	Sealectric Corp.	Menaroneck, N.Y.			
						98405	Carid Corp.	Redwood City, Calif.			

THE FOLLOWING H-P VENDORS HAVE NO NUMBER ASSIGNED IN THE LATEST SUPPLEMENT TO THE FEDERAL SUPPLY CODE FOR MANUFACTURERS HANDBOOK.

0000F	Malco Tool and Die	Los Angeles, Calif.
0000H	Western Coil Div. of Automatic Mfg. Inc.	Redwood City, Calif.
00002	Willow Lasher Products Corp.	Newark, N.J.
000AA	British Radio Electronics Ltd.	Washington, D.C.
000AB	ETA	England
000AK	Siemens-America Components Div.	White Plains, N.Y.
000BB	Precision Instrument Components Co.	Van Nuys, Calif.
000MM	Rubber Eng. & Development	Hayward, Calif.
000NN	A "N" D Mfg. Co.	San Jose, Calif.
000QQ	Codtron	Oakland, Calif.
000SS	Control of Elgin Watch Co.	Burlington, Calif.
000WW	California Eastern Lab.	Burlington, Calif.
000YY	S.K. Smith Co.	Los Angeles, Calif.

From: FSC Handbook Supplements
M-1 Dated DECEMBER 1964
H-2 Dated MARCH 1962

SECTION VII

MANUAL CHANGES AND OPTIONS

7-1. MANUAL CHANGES.


7-2. This manual applies directly to standard Model 4260A Universal Bridges with serial prefix 601- or 602-. Table 7-1 lists instrument serial numbers and the changes required to make this manual apply to these older instruments.

7-3. OPTIONS.

7-4. There are currently no options offered for the Model 4260A Universal Bridges.

Table 7-1. Manual Changes for Older Instruments

Complete Serial No.	Make Change Number:
601/602-00740 and below	1, 2, 3
601/602-00741 thru -00840	2, 3
601/602-00841 thru -01040	3
CHANGE 1: Page 6-3, Table 6-1 and Table 6-2: Delete 1205-0033: HEAT DISSIPATOR FOR Q201	
CHANGE 2: Page 6-10, Table 6-1 and Table 6-2: Part number for R5 pulley was 04260-3021, but 04260-5099 is the preferred replacement.	
CHANGE 3: For older instruments with serial number 601/602- 01040 and below, the values listed in this manual are the preferred replacements for the following parts: Page 6-3: R103, R110, R111, A200, C207. Page 6-4: R210, R213. Page 6-8: R442, R452.	

 

SECTION VIII

CIRCUIT DIAGRAMS

8-1. INTRODUCTION.

8-2. This section includes the following:

- a. General Notes for Schematic Diagrams (Figure 8-1).
 - b. Block Diagram (Figure 8-2).
 - c. Schematic Diagrams and part location illustrations. Waveforms and voltages at indicated test points are also included.
- 8-3. The Block Diagram or schematic diagrams can be unfolded and used with any other portion of the manual.

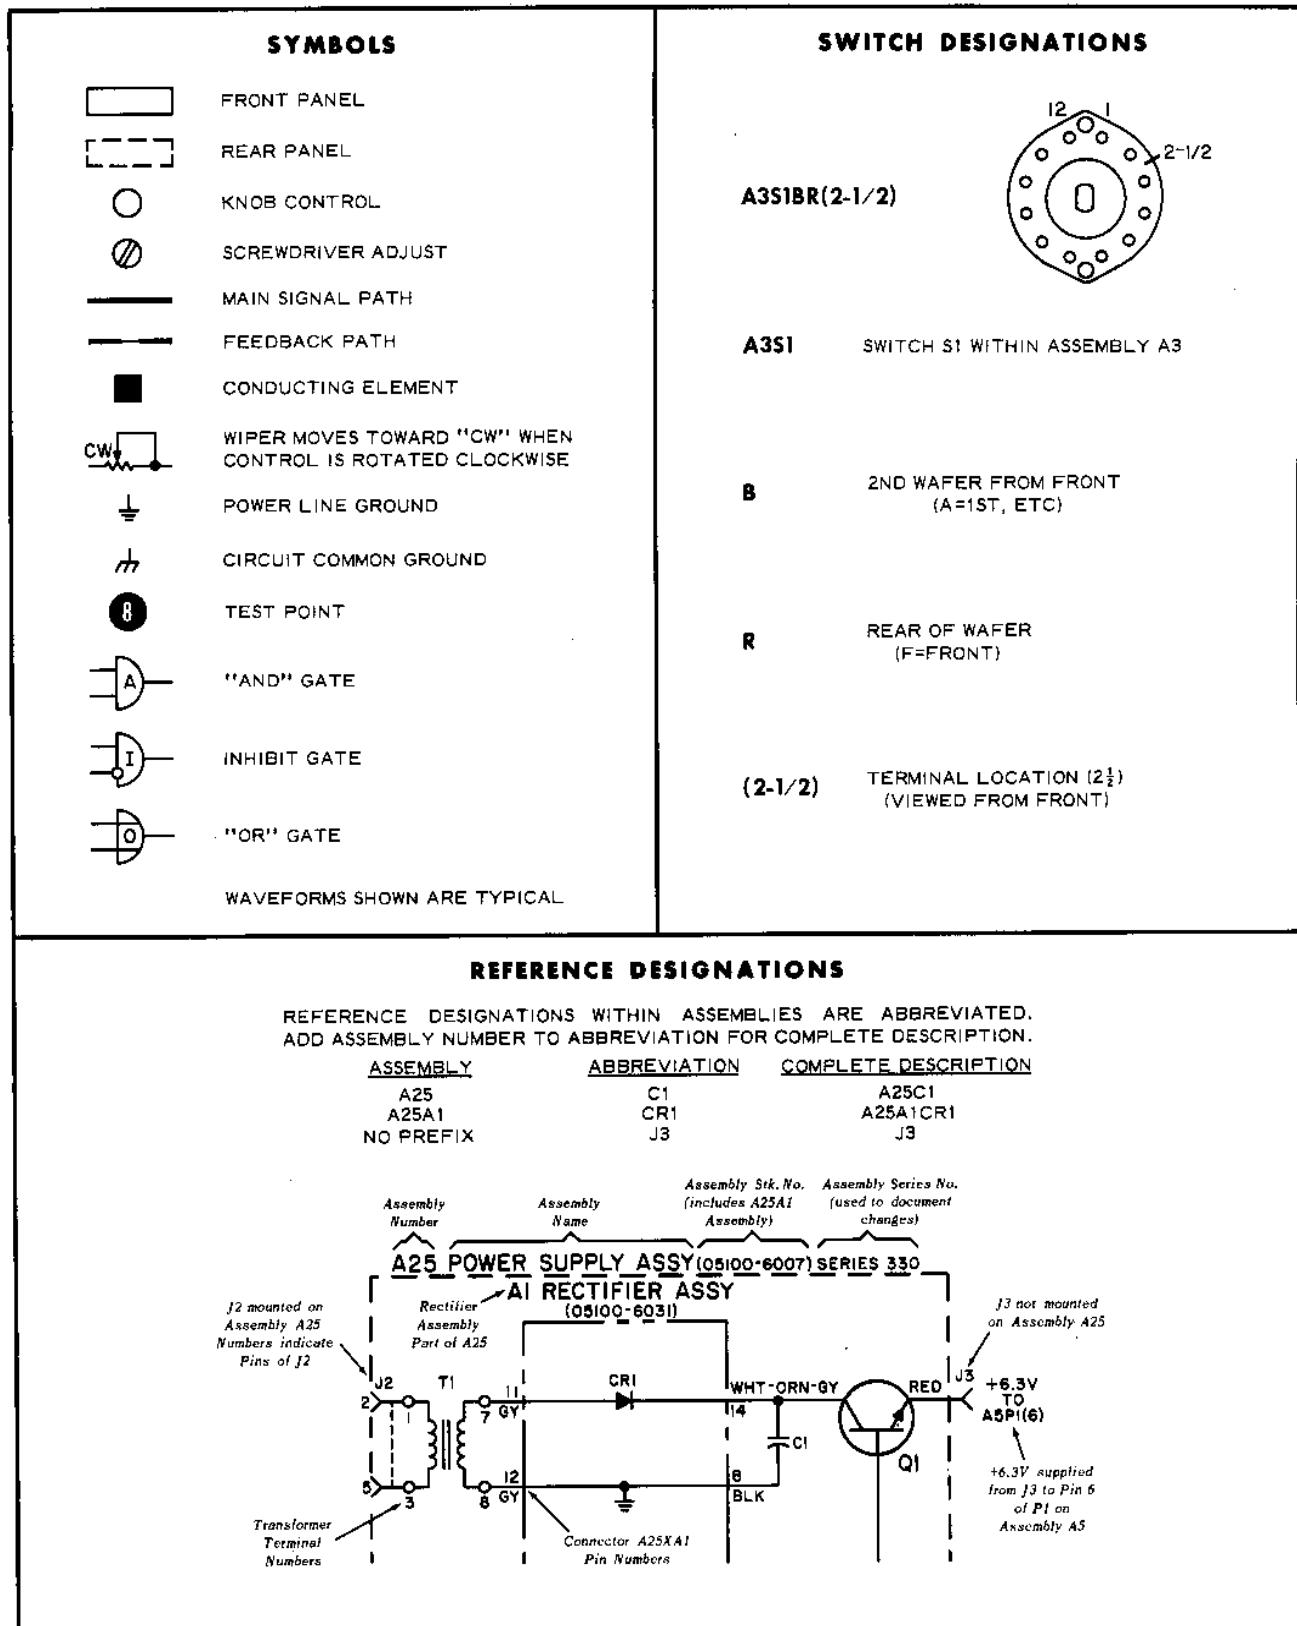
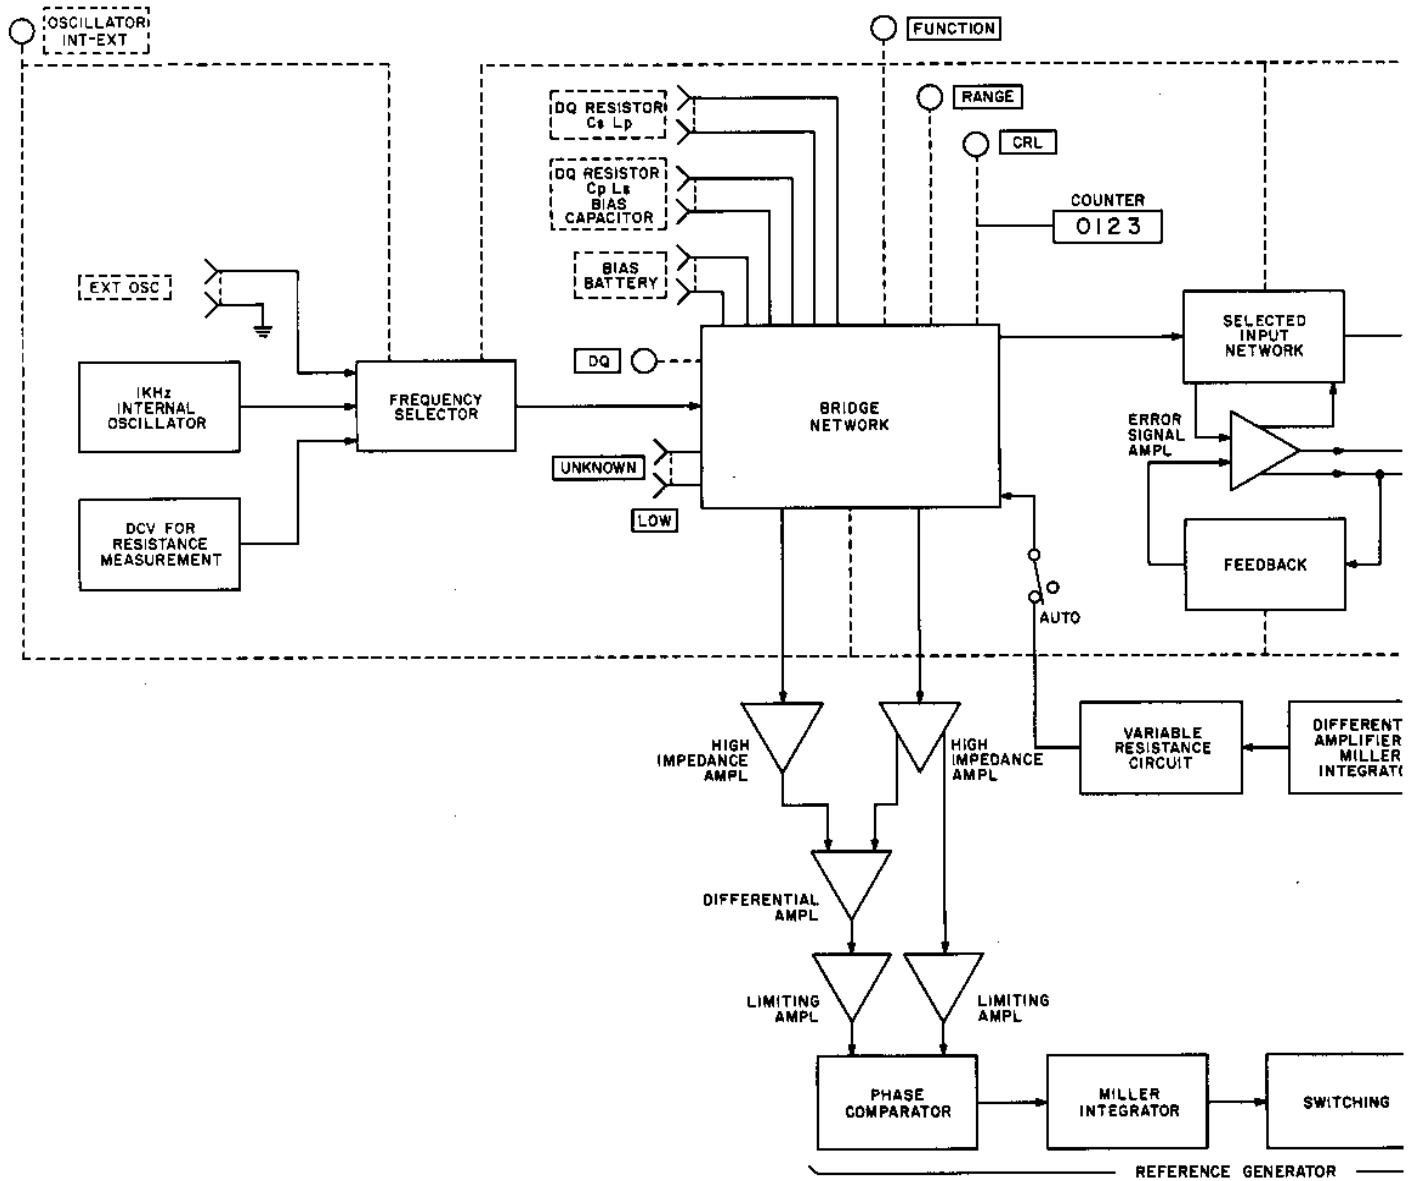


Figure 8-1. Schematic Diagram Notes






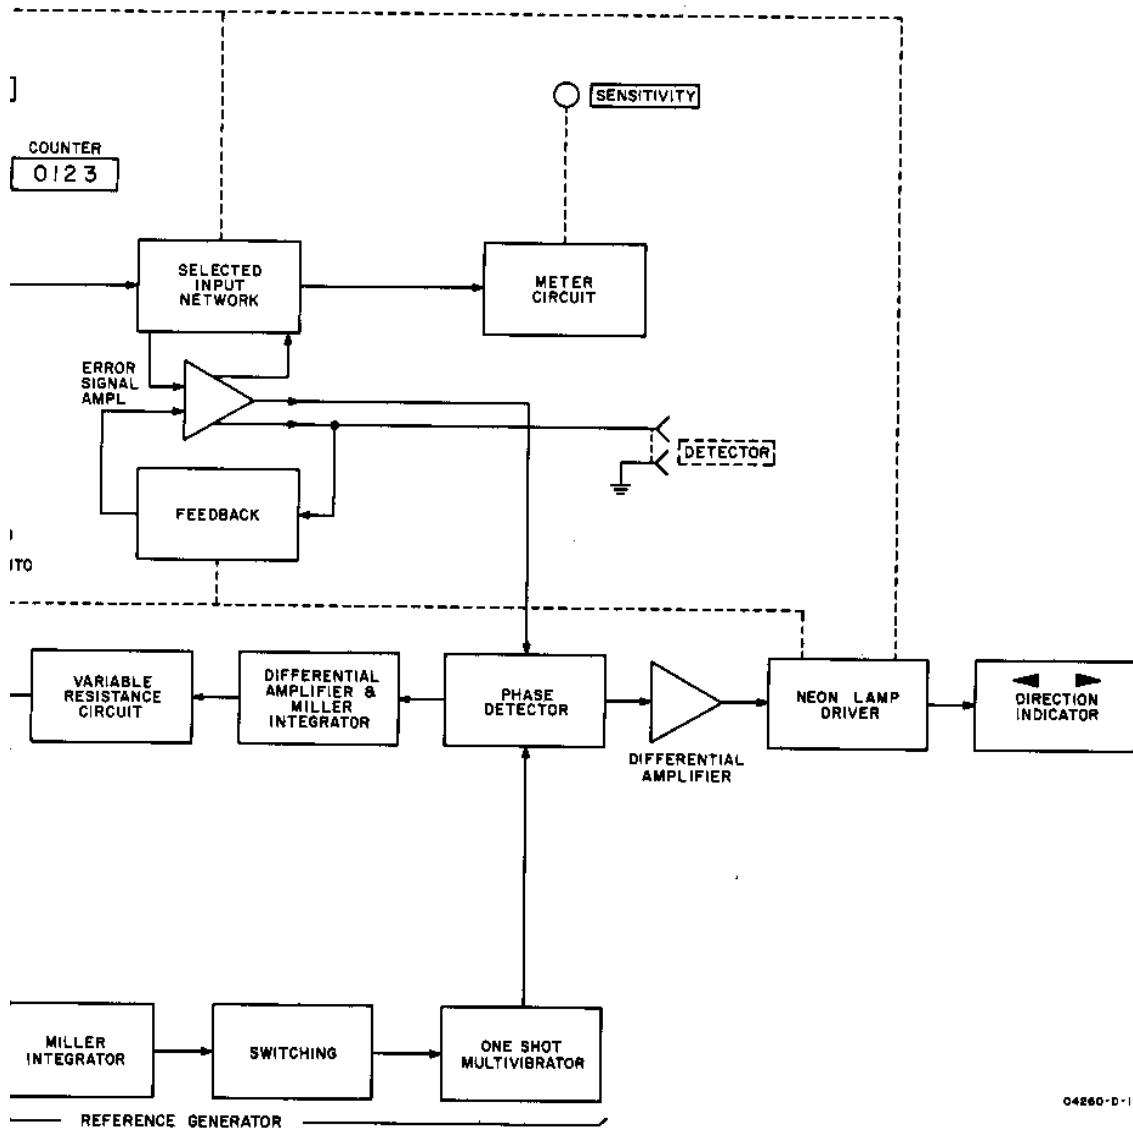


Figure 8-2. Overall Block Diagram

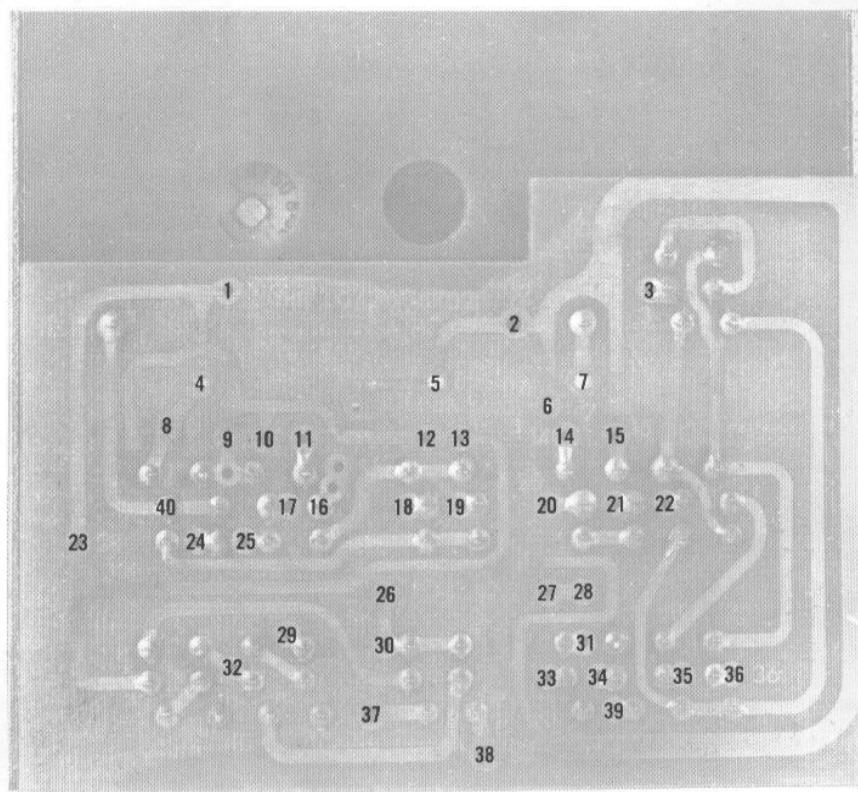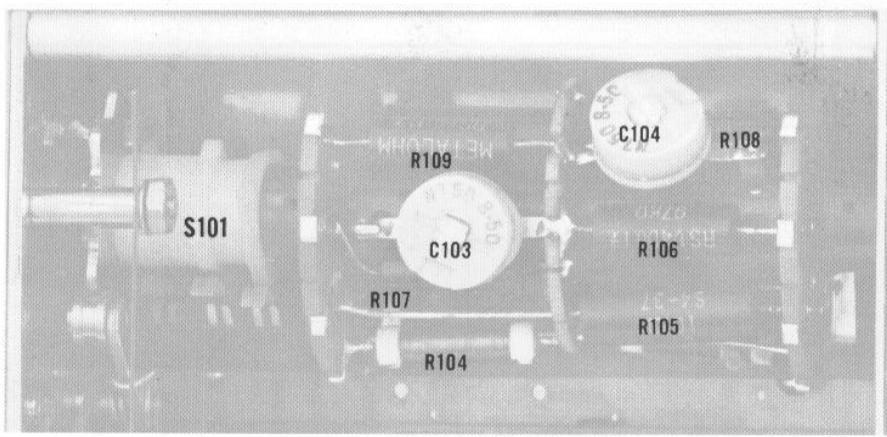

A100


Model 4260A

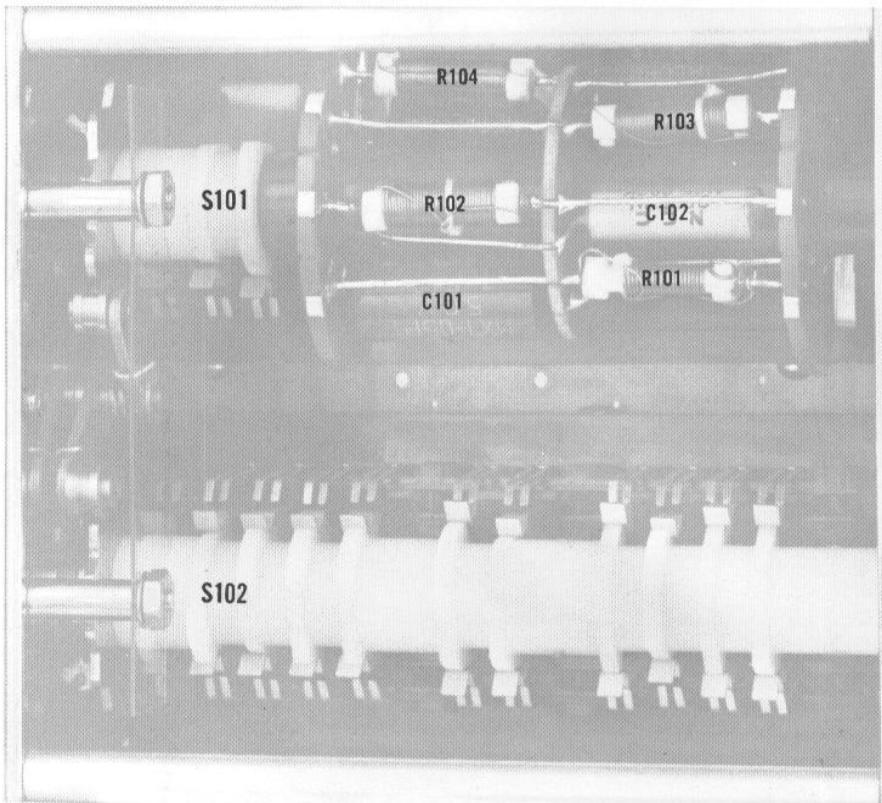

A100

See 17-3-2

A100 RANGE AND FUNCTION SW

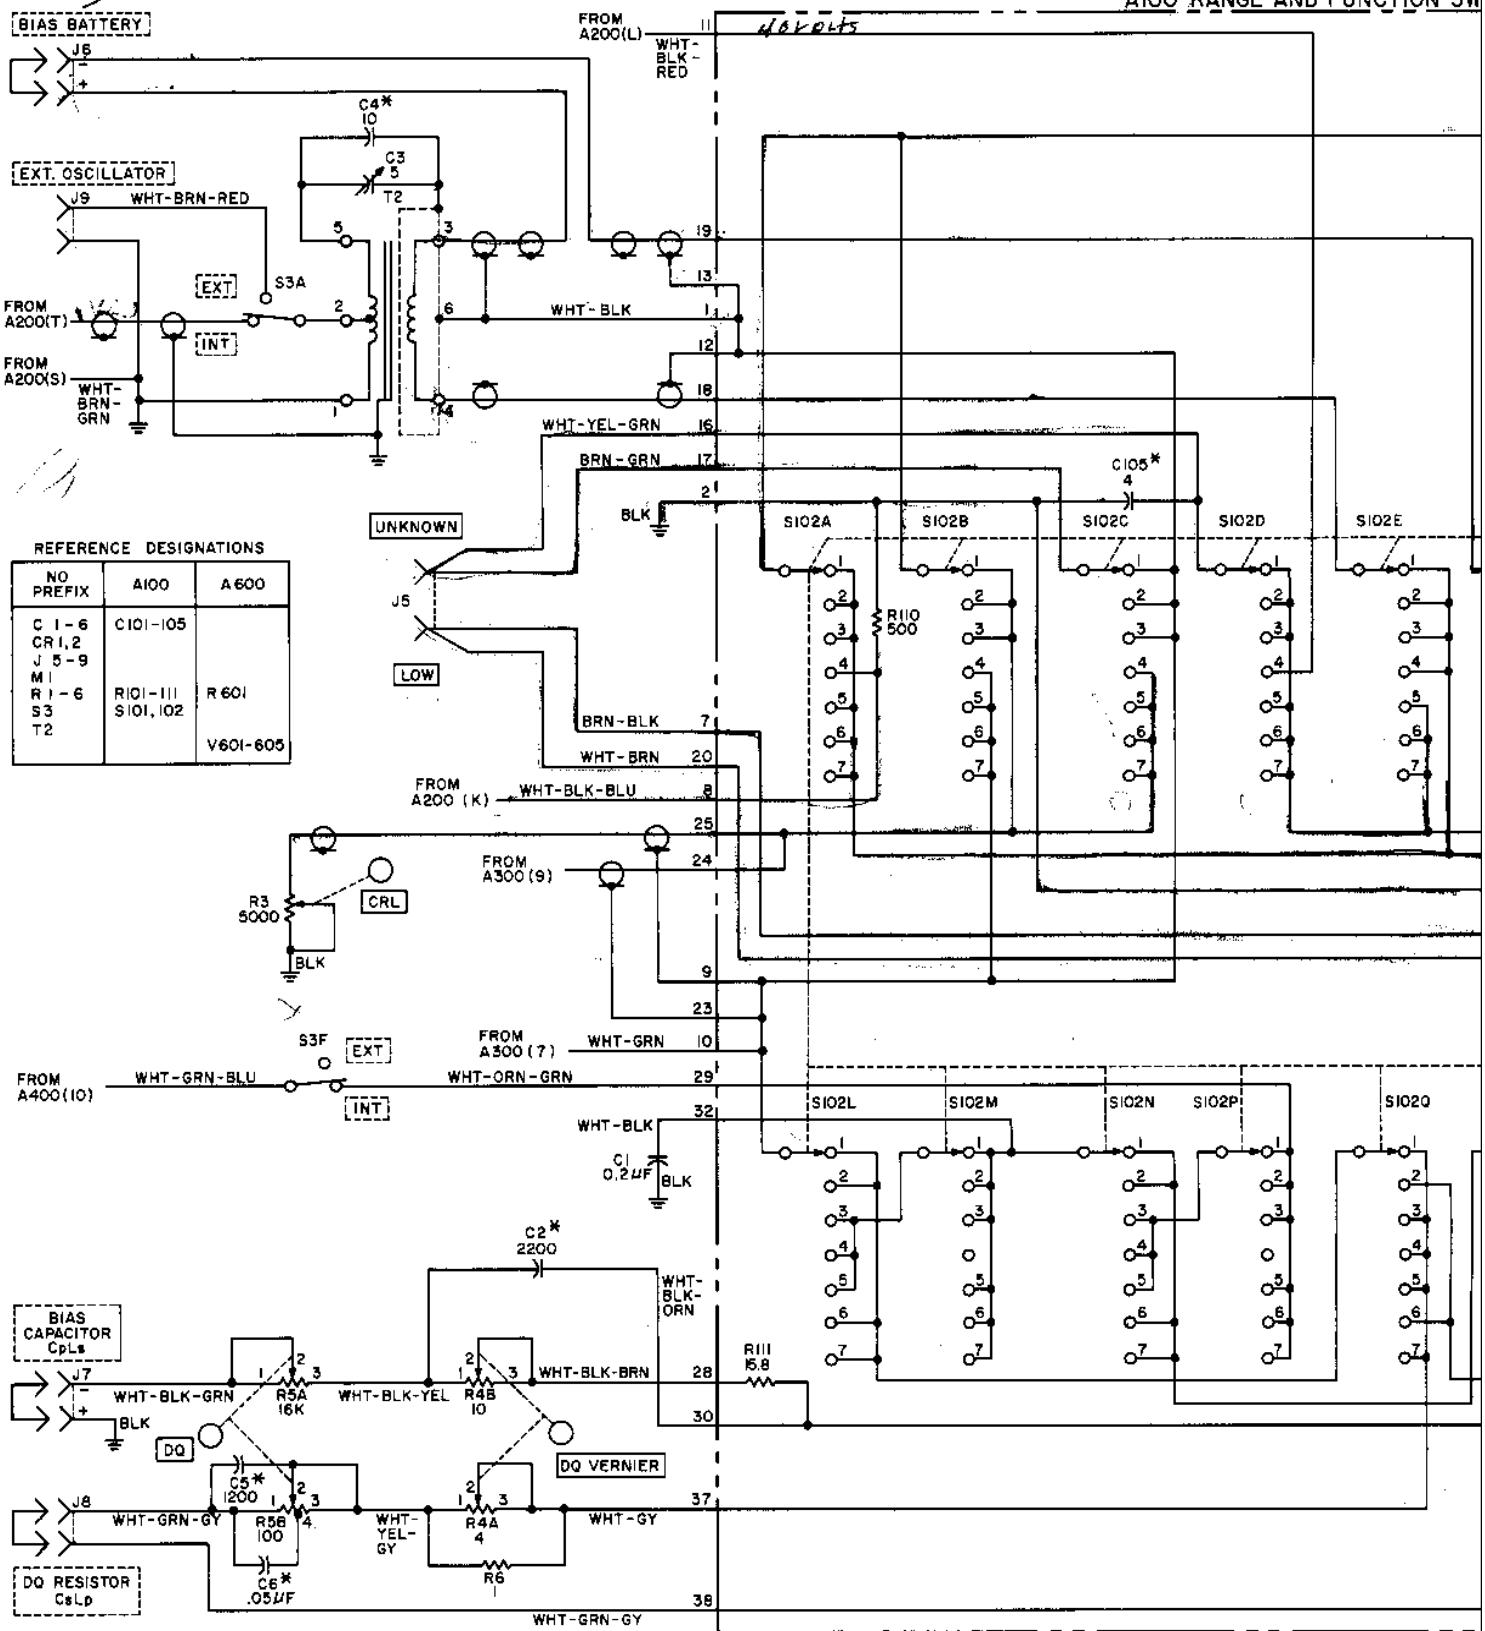

ITCH ASSEMBLY (04260-7021)



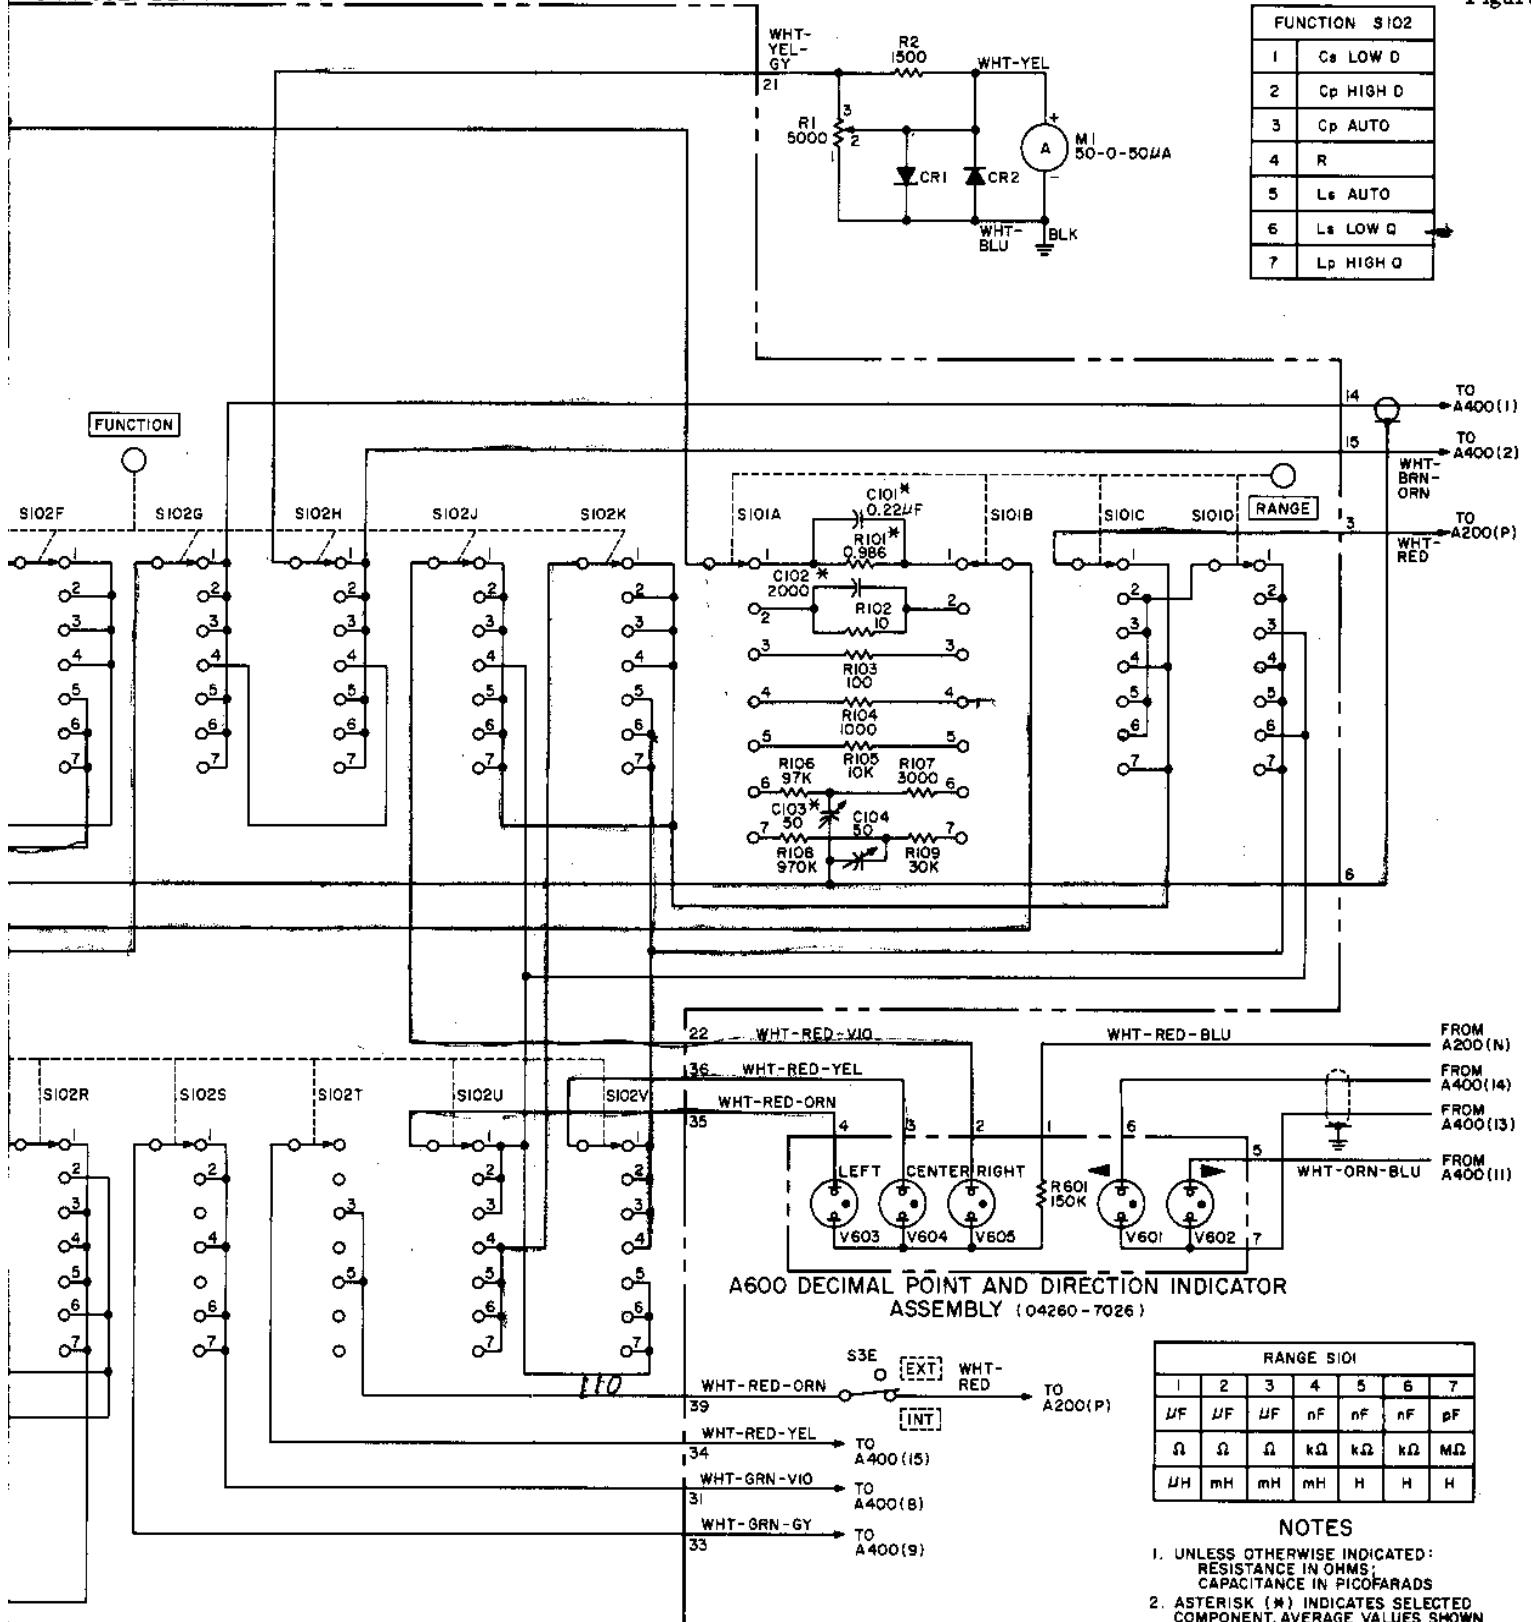



Figure 8-3. Range and Function Switch A1
Decimal Point and Direction Light A6

- ① +12 TO +13.5 VDC
- ② -11 TO -12.5 VDC
- ③ +95 TO +115 VDC

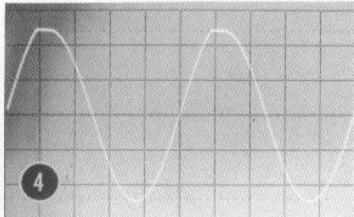

SWEET SPEED
200 μ s/cm
AMPLITUDE
1V/cm

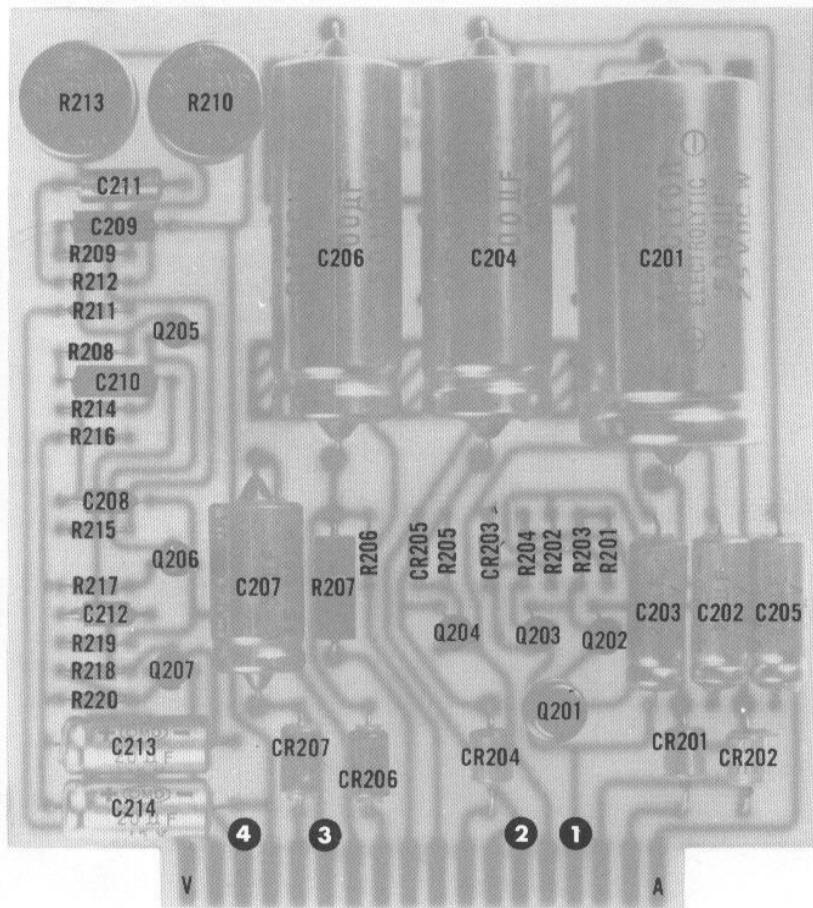

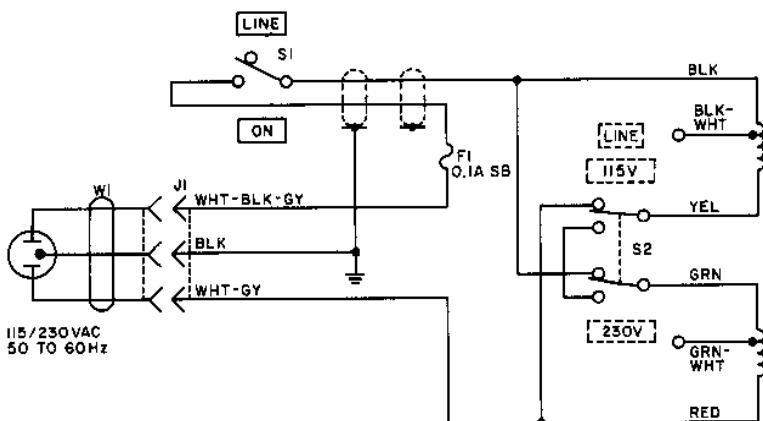


NOTES

- I. UNLESS OTHERWISE INDICATED:
RESISTANCE IN OHMS
CAPACITANCE IN PICOFARADS

REFERENCE DESIGNATIONS

NO PREFIX	A200
F1	C201-214 CR201-207
J1,9	Q201-207 R201-220
SI-3	
TI	
WI	

A200 POWER SUPPLY AND 1KHz OSCILLATOR

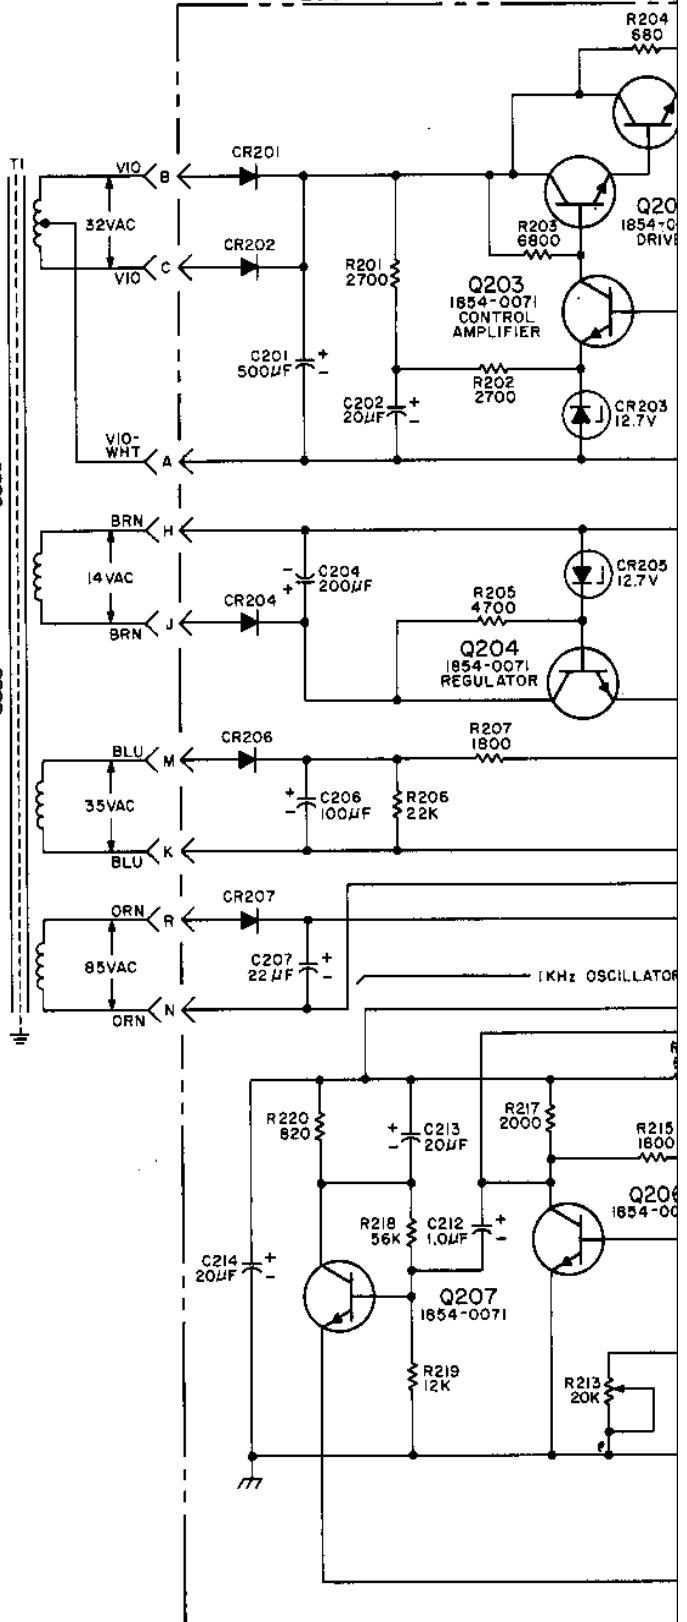

POWER SUPPLY AND 1 KHz OSCILLATOR ASSEMBLY (04260-8702)











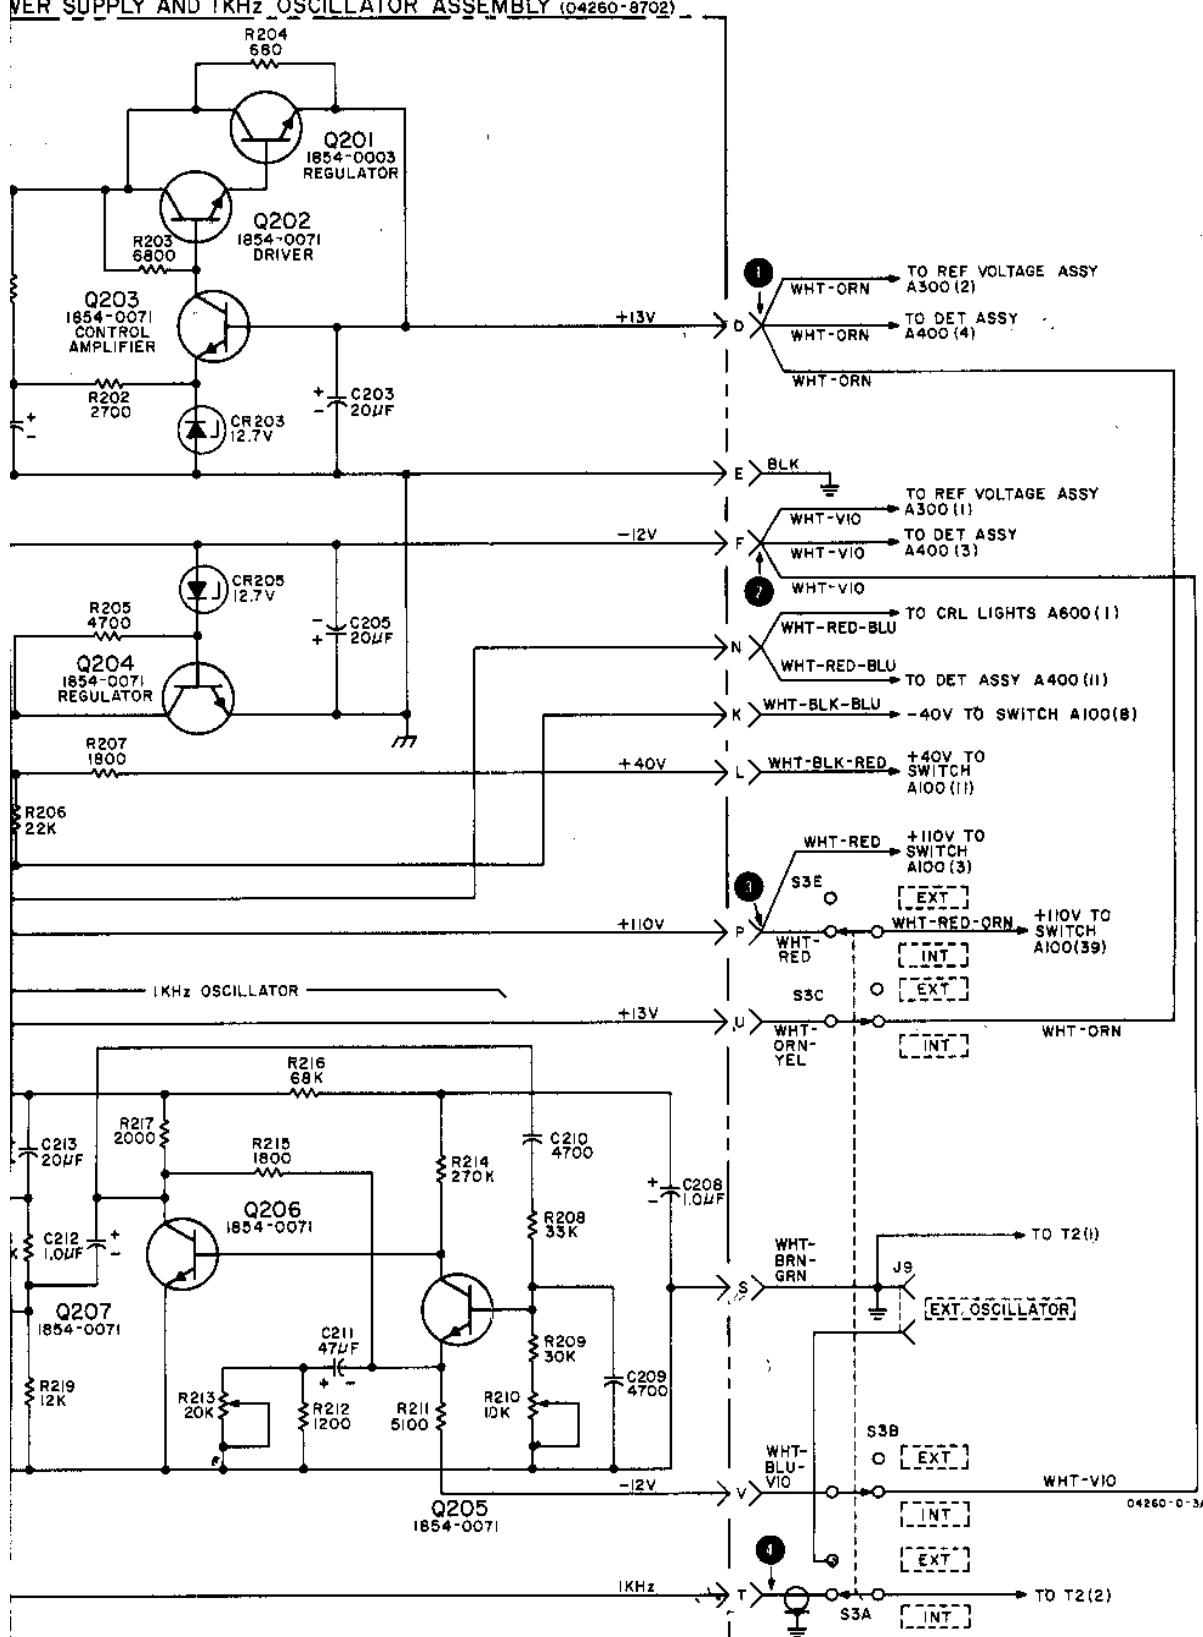


Figure 8-4. Power Supply and 1 kHz Oscillator Assembly (04260-8702)

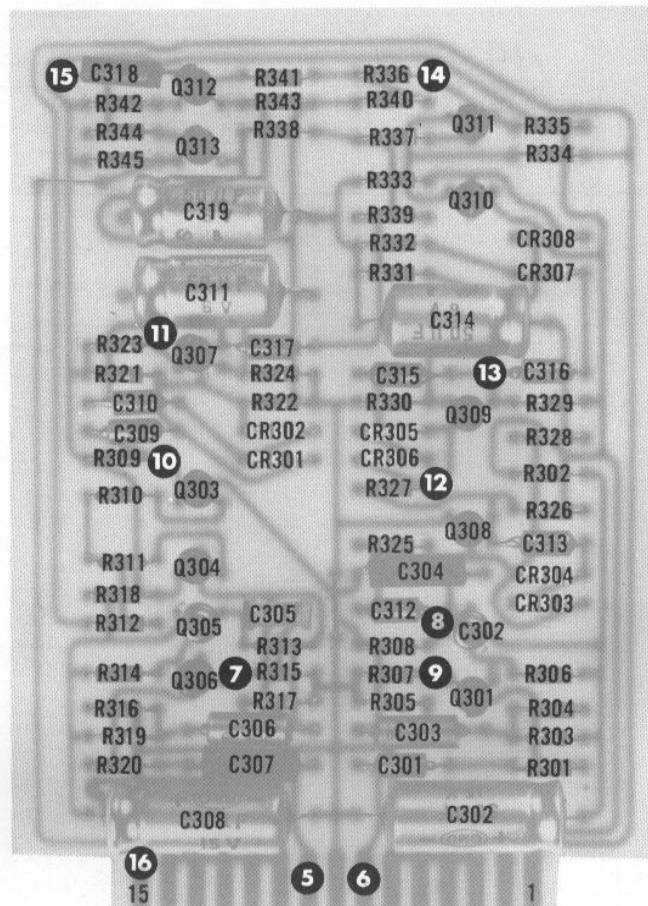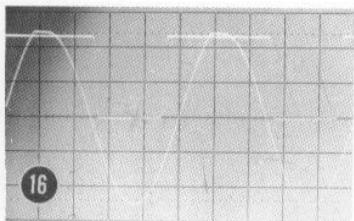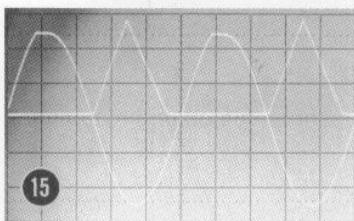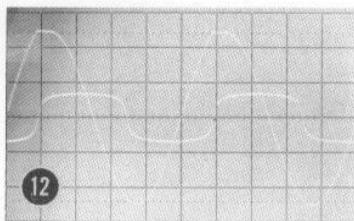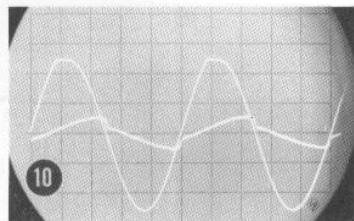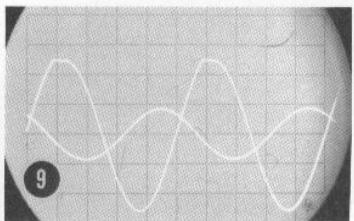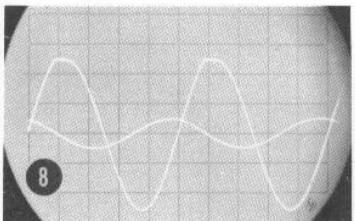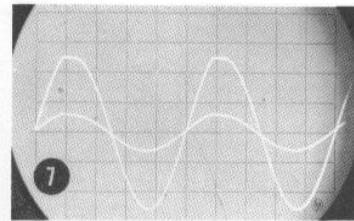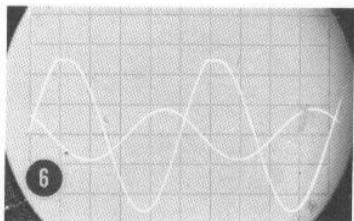



A300

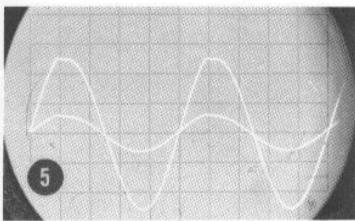

TEST POINTS	OSCILLOSCOPE SETTINGS	
	VERTICAL	HORIZONTAL
5 7 8	20 mV/cm (use 10:1 probe)	200 μ s/cm
6	2 mV/cm (use 10:1 probe)	
9 10	20 mV/cm <i>Direct</i>	
11 12 13	0.5 V/cm	
14 15	2V/cm	
16	5V/cm	
COMMON WAVEFORMS: FIGURE 8-4 (1kHz OSCILLATOR), 4 . SEE PAGE 5-12 FOR MEASUREMENT PROCEDURE.		

A300 REFERENCE VOLTAGE ASSEMBLY (04260-8703)

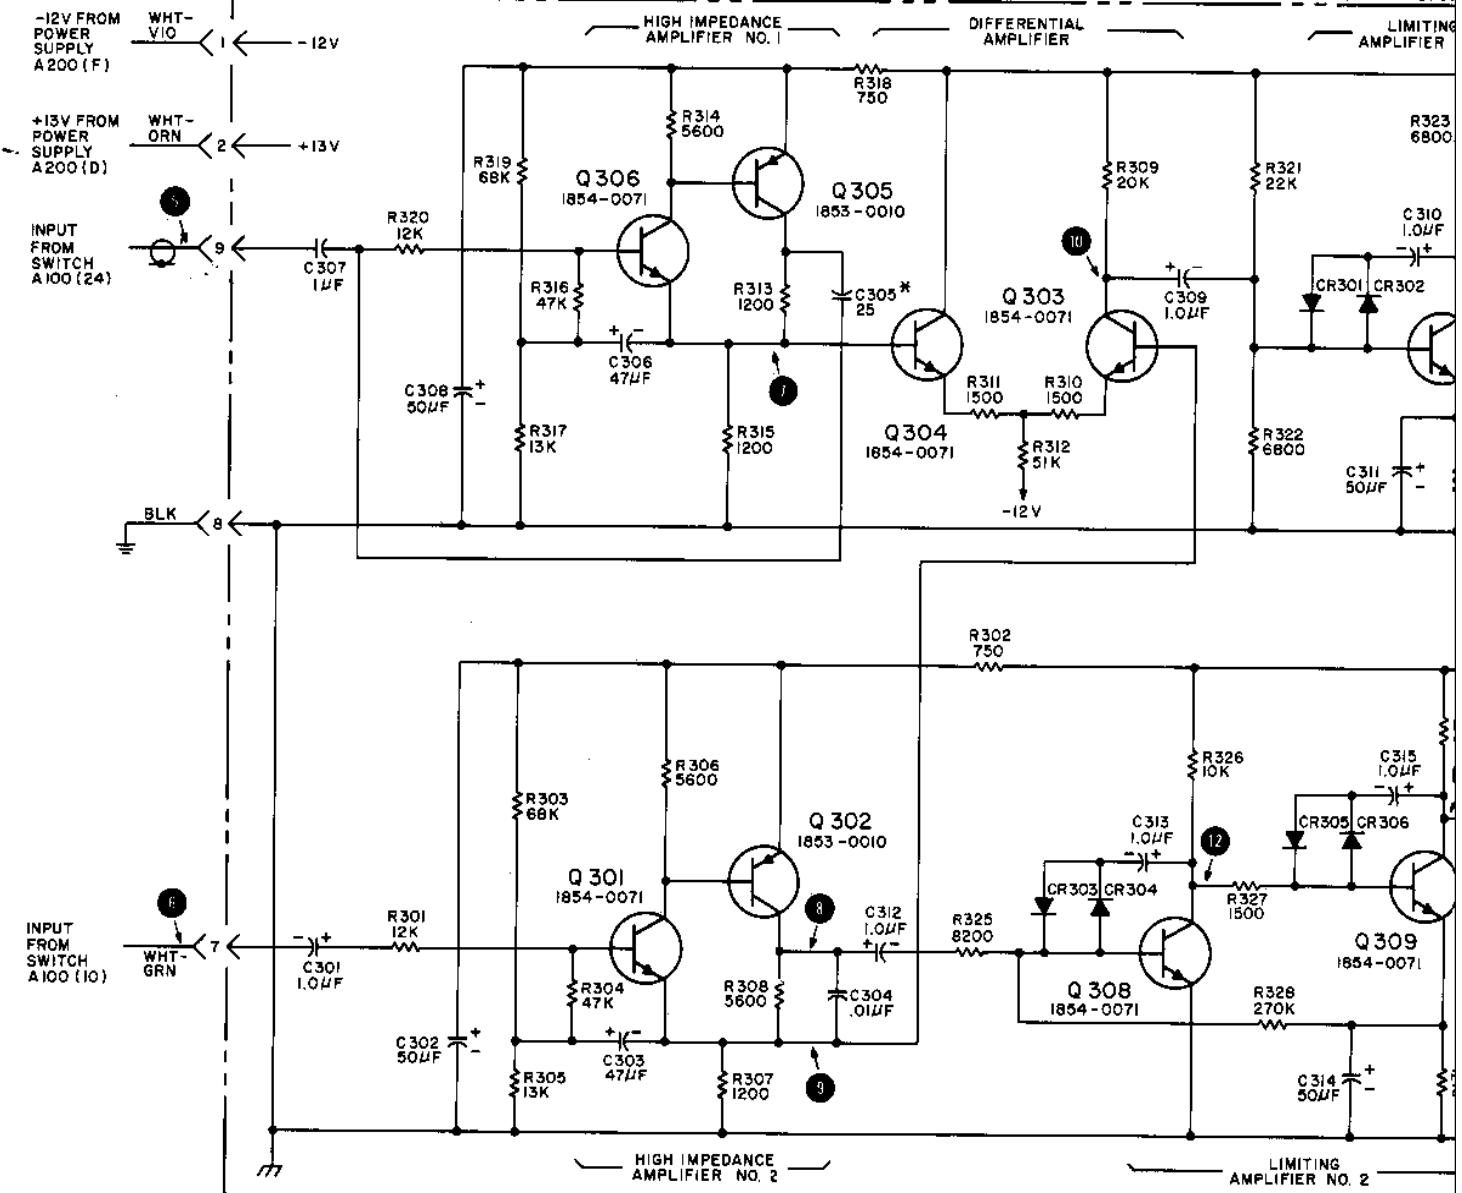

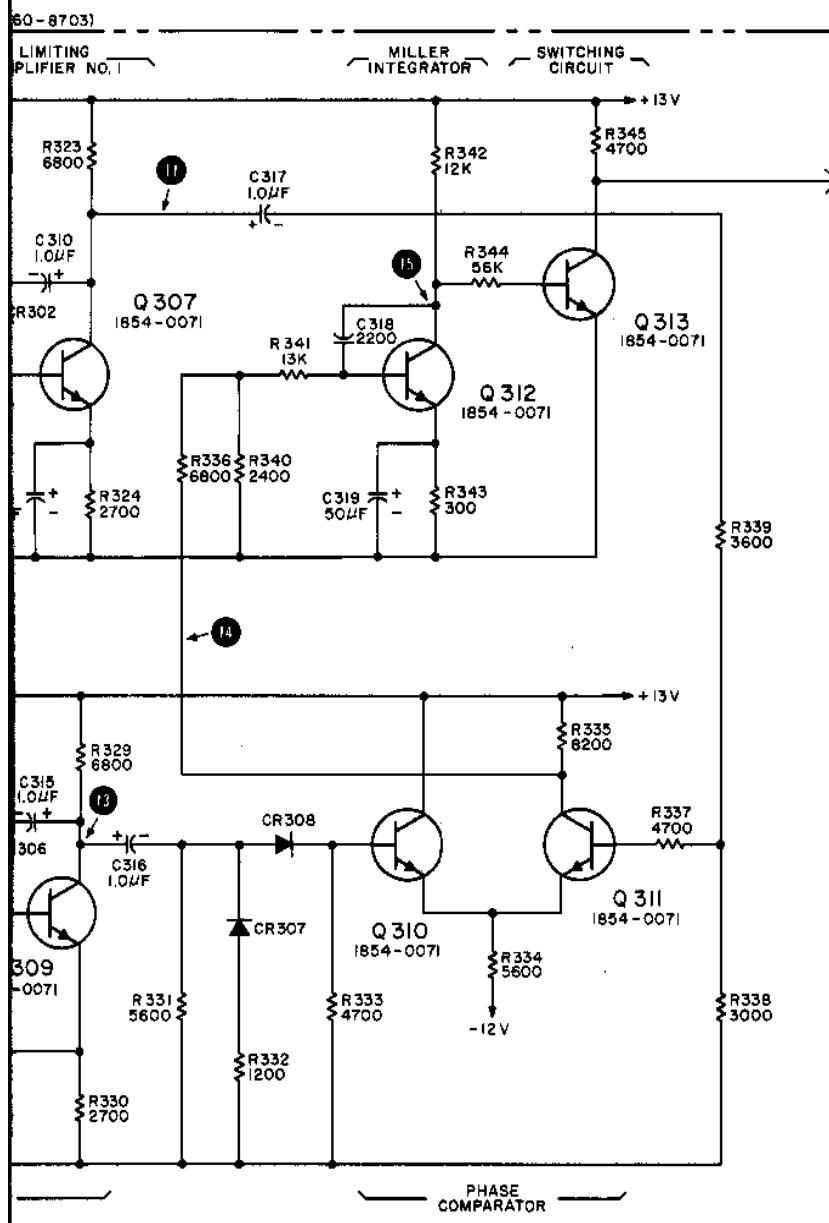

NOTES

1. UNLESS OTHERWISE INDICATED:
RESISTANCE IN OHMS;
CAPACITANCE IN PICOFARADS
2. ASTERISK (*) INDICATES SELECTED
COMPONENT, AVERAGE VALUES
SHOWN


REFERENCE
DESIGNATIONS


A 300

C 301 - 319
CR301 - 308
Q 301 - 313
R 301 - 345


COPYRIGHT 1966 BY HEWLETT-PACKARD COMPANY
04260-D-4A

Figure 8-5. Reference Voltage Assembly A300

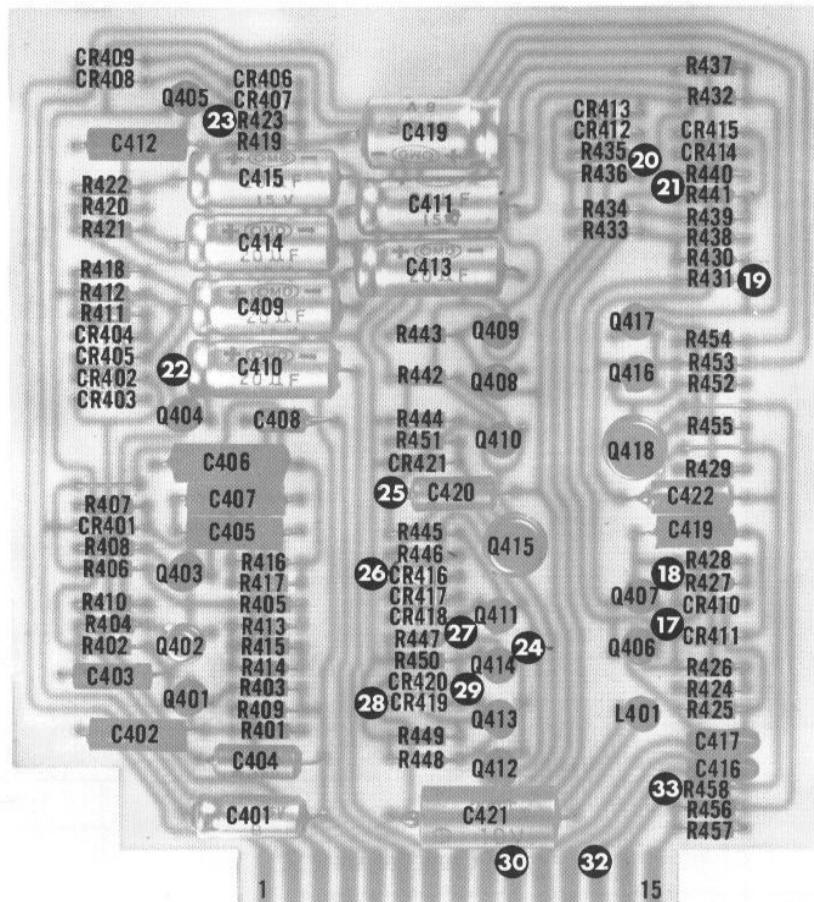

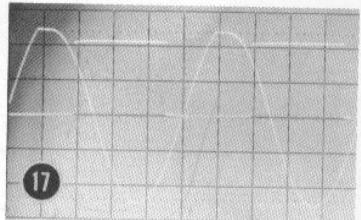

17 AND 18
OSCILLOSCOPE *:
VERT = 2V/cm
HORIZ = 200 μ s/cm

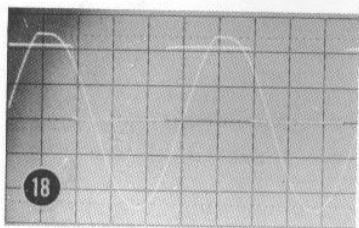

28 AND 29
+1.3V TO -0.4V BIAS
RANGE FOR CR419
AND CR420

DC VOLTAGE DIFFERENCE
BETWEEN 19 AND 20 OR
19 AND 21 IS LESS THAN
10mV WHEN BRIDGE IS
BALANCED




22 AND 23

- A. CRL DIAL 0.2% HIGH FROM BALANCE
- B. POLARITY REVERSED WITH CRL DIAL 0.2% LOW



OSCILLOSCOPE *:
VERT = .1V/cm
HORIZ = 200 μ s/cm



24 5.3 TO 6.1VDC

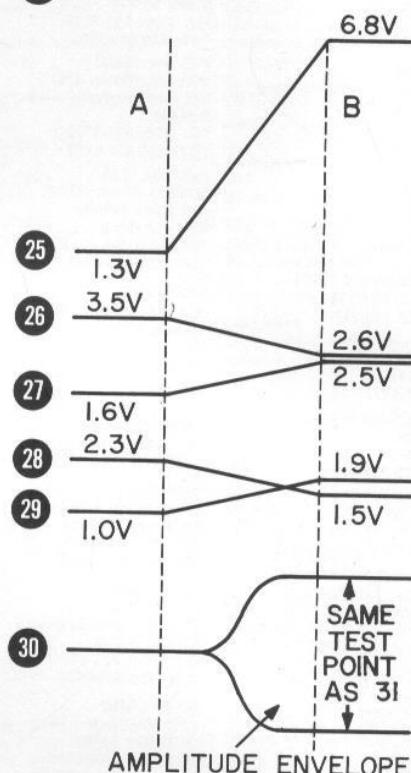


31 SEE PARAGRAPH 5-50

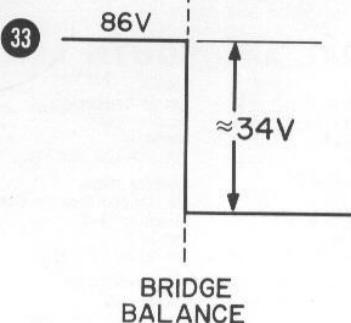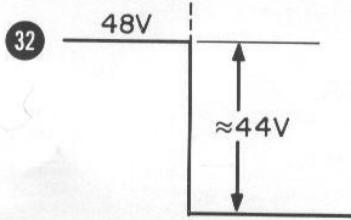

*SEE FIG 8-4 (1kHz OSCILLATOR) 4 FOR COMMON WAVEFORM SETTINGS.
SEE PAGE 5-12 FOR MEASUREMENT PROCEDURE.

A400 DETECTOR ASSEMBLY (04260-7024)

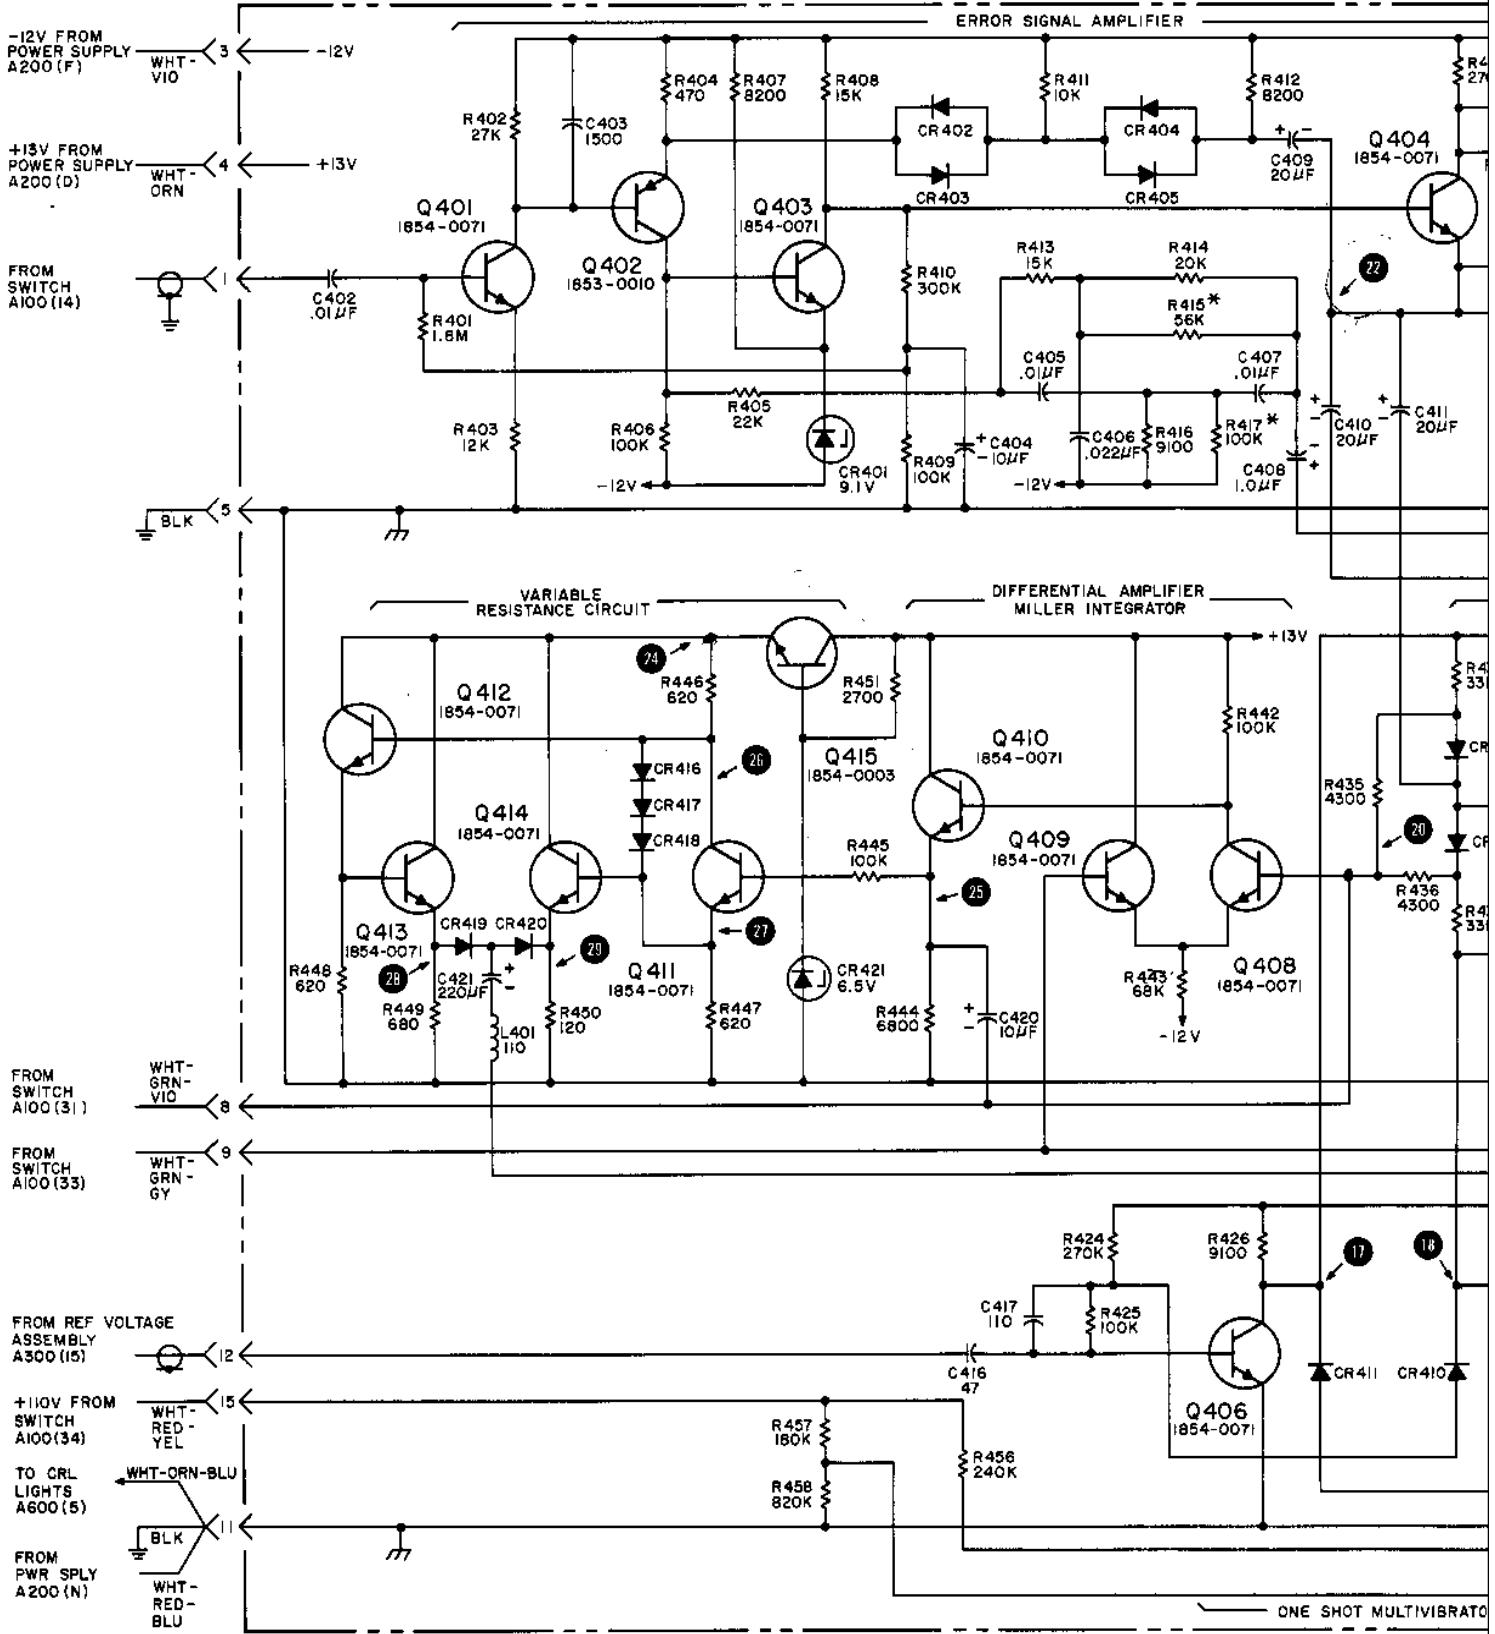

ONE SHOT MULTIVIBRATOR

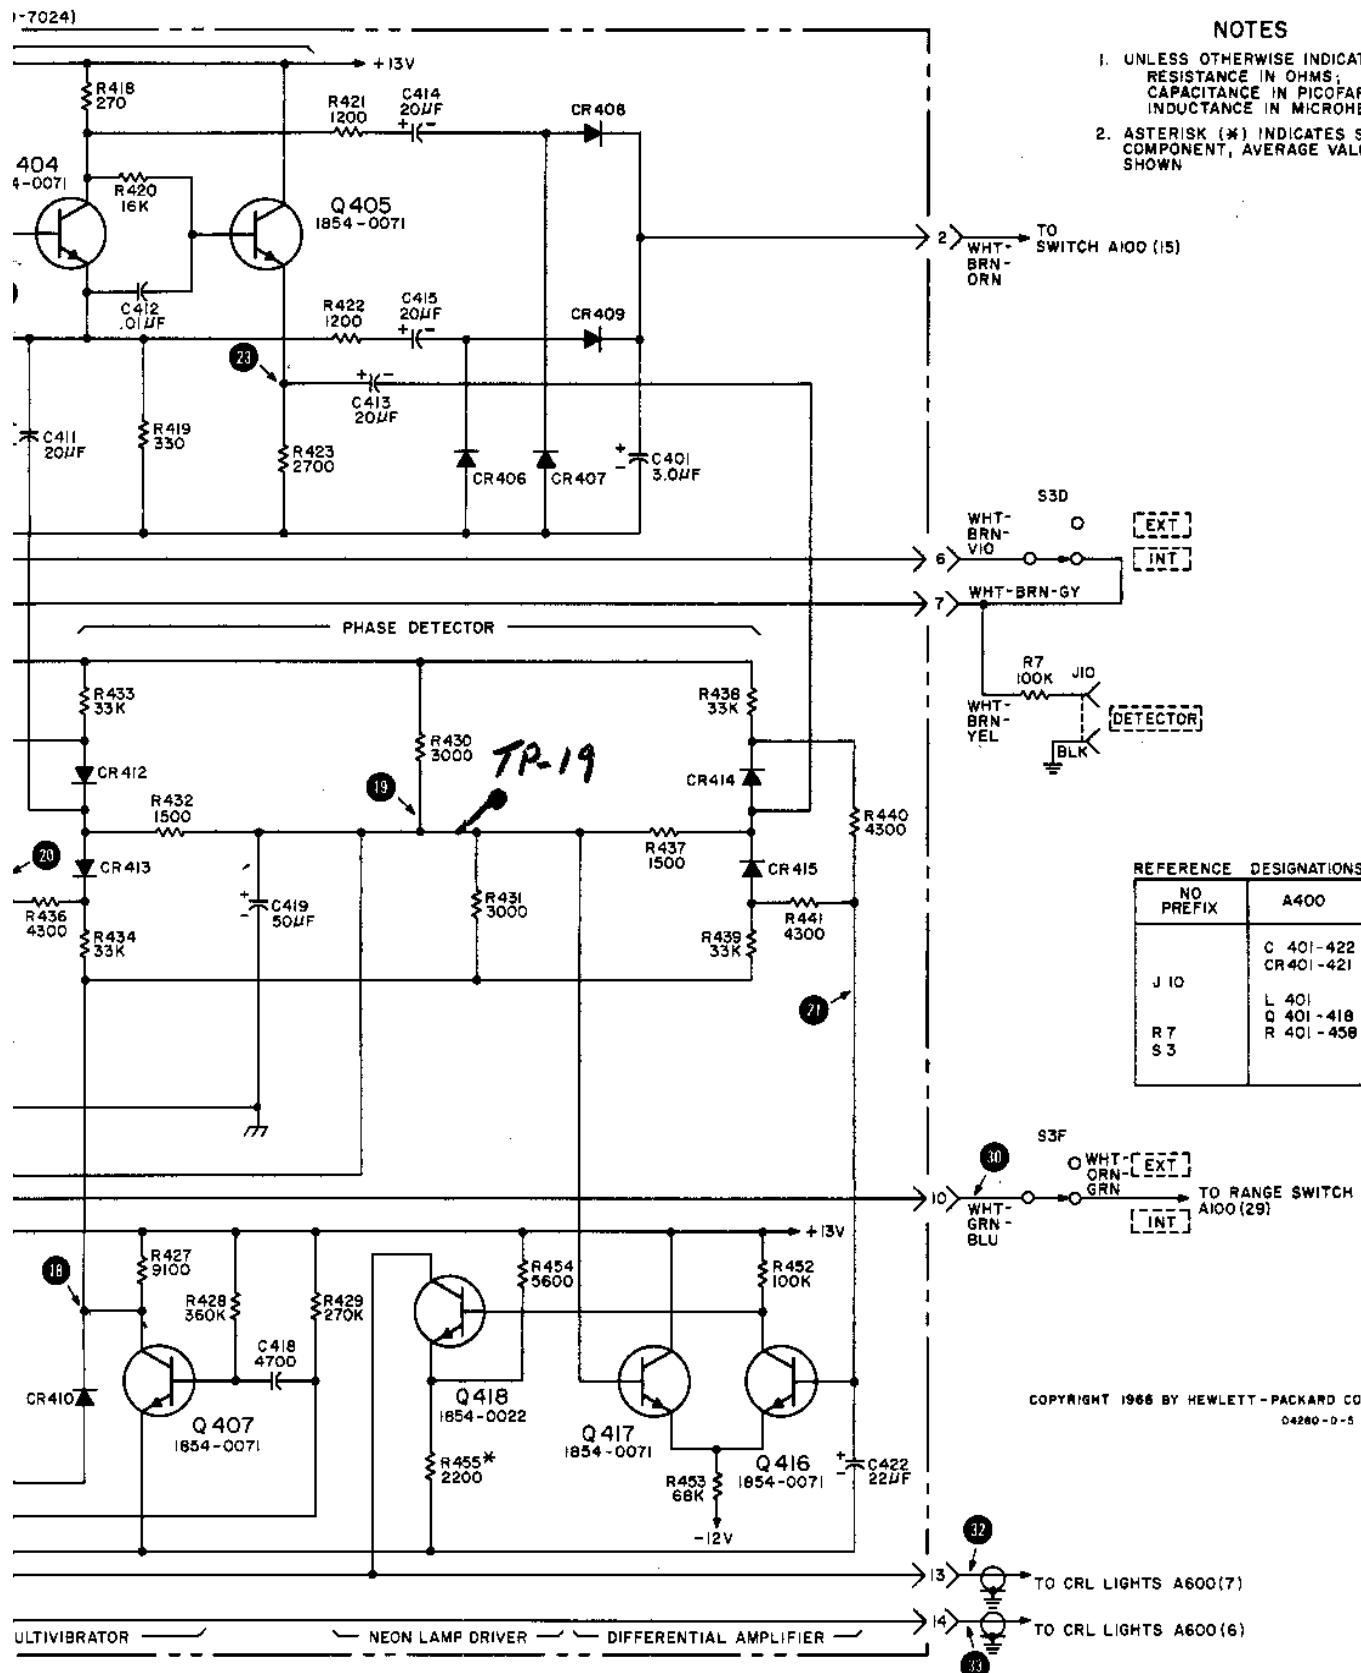


Figure 8-6. Detector Assembly A400



ELECTRONIC INSTRUMENTATION SALES AND SERVICE

UNITED STATES, CANADA, CENTRAL AND SOUTH AMERICA

UNITED STATES

ALABAMA
P.O. Box 4207
2003 Byrd Spring Road S.W.
Huntsville 35802
TWX: 510-579-2204
Tel: (205) 881-4591

ARIZONA
3009 North Scottsdale Road
Scottsdale 85251
Tel: (602) 945-7601
TWX: 910-950-1282
232 South Tucson Boulevard
Tucson 85716
Tel: (602) 623-2564
TWX: 910-952-1162

CALIFORNIA
3939 Lankershim Boulevard
North Hollywood 91604
Tel: (213) 877-1282
TWX: 910-499-2170
1101 Embarcadero Road
Palo Alto 94303
Tel: (415) 327-6500
TWX: 910-373-1280

2591 Carlsbad Avenue
Sacramento 95821
Tel: (916) 482-1463
TWX: 910-367-2092

1055 Shafter Street

San Diego 92106

Tel: (714) 223-8103

TWX: 910-335-2000

COLORADO
7965 East Prentice
Englewood 80110
Tel: (303) 771-3455
TWX: 910-935-0705

CONNECTICUT
508 Tolland Street
East Hartford 06108
Tel: (203) 289-9394
TWX: 710-425-3416

111 East Avenue
Norwalk 06851
Tel: (203) 853-1251
TWX: 710-468-3750

DELAWARE
3941 Kennett Pike
Wilmington 19807
Tel: (302) 655-6161
TWX: 510-666-2214

FLORIDA
Suite 106
9999 N.E. 2nd Avenue
Miami Shores 33138
Tel: (305) 758-3626
TWX: 810-848-7262

P.O. Box 20007
Herndon Station 32814
621 Commonwealth Avenue
Orlando
Tel: (305) 841-3970
TWX: 810-850-0113

P.O. Box 8128
Madeira Beach 33708
410 150th Avenue
St. Petersburg

Tel: (813) 391-0211
TWX: 810-863-0366

GEORGIA
3110 Maple Drive N.E.
Atlanta 30305
Tel: (404) 233-1141
TWX: 810-751-3283

ILLINOIS
5500 Howard Street
Skokie 60076
Tel: (312) 577-0400
TWX: 910-223-3613

INDIANA
4002 Meadows Drive
Indianapolis 46205
Tel: (317) 546-4891
TWX: 810-341-3263

LOUISIANA
P.O. Box 856
1942 Williams Boulevard
Kenner 70062
Tel: (504) 721-5201
TWX: 810-955-5524

MARYLAND
6707 Whistestone Road
Baltimore 21207
Tel: (301) 944-5400
TWX: 710-862-0850

P.O. Box 727
Twibrook Station 20851
12303 Twibrook Parkway
Rockville
Tel: (301) 429-7560
TWX: 710-828-9684

MASSACHUSETTS
Middlesex Turnpike
Burlington 01803
Tel: (617) 272-9000
TWX: 710-332-0382

MICHIGAN
24315 Northwestern Highway
Southfield 48076
Tel: (313) 353-9100
TWX: 810-232-1532

MINNESOTA
2459 University Avenue
St. Paul 55114
Tel: (612) 646-7881
TWX: 910-563-3734

MISSOURI
9208 Wyoming Place
Kansas City 64114
Tel: (816) 333-2445
TWX: 910-771-2087

2812 South Brantwood Blvd.
St. Louis 63144
Tel: (314) 644-0220
TWX: 910-760-1670

NEW JERSEY
Crystal Brook Prof. Bldg.
Route 35
Eatontown
Tel: (201) 747-1060

INDIANA
391 Grand Avenue
Englewood 07631
Tel: (201) 567-3933
TWX: 710-991-9707

NEW MEXICO
P.O. Box 8366
Station C 87108
6501 Lomas Boulevard N.E.
Albuquerque

Tel: (505) 255-5586
TWX: 910-989-1565

156 Wyatt Drive
Las Cruces 88001
Tel: (505) 526-2486
TWX: 910-983-0550

NORTH CAROLINA
P.O. Box 5187
1923 North Main Street
High Point 27262
Tel: (919) 882-6873
TWX: 510-928-1516

OHIO
5579 Pearl Road
Cleveland 44129
Station C 87108
6501 Lomas Boulevard N.E.
Albuquerque

Tel: (216) 884-9209
TWX: 810-421-8500

1250 West Dorothy Lane
Dayton 45409
Tel: (513) 298-0351
TWX: 810-459-1925

OREGON
2373 S.W. Corbett Avenue
Portland 97201
Tel: (503) 228-5107

PENNSYLVANIA
Park Place Office Building
Camp Hill
Tel: (717) 737-6791

NEW YORK
1219 Campville Road
Endicott 13760
Tel: (607) 754-0050
TWX: 510-252-0890

236 East 75th Street
New York 10021
Tel: (212) 879-2023
TWX: 710-581-4376

82 Washington Street
Poughkeepsie 12601
Tel: (914) 454-7330
TWX: 510-248-0012

39 Saginaw Drive
Rochester 14623
Tel: (716) 473-9500
TWX: 510-253-5981

1025 Northern Boulevard
Roslyn, Long Island 11576
Tel: (516) 869-8400
TWX: 510-223-0811

5858 East Molloy Road
Syracuse 13211
Tel: (315) 454-2485
TWX: 710-541-0482

NORTH CAROLINA
P.O. Box 5187
1923 North Main Street
High Point 27262
Tel: (919) 882-6873
TWX: 510-928-1516

OHIO
5579 Pearl Road
Cleveland 44129
Station C 87108
6501 Lomas Boulevard N.E.
Albuquerque

Tel: (216) 884-9209
TWX: 810-421-8500

1250 West Dorothy Lane
Dayton 45409
Tel: (513) 298-0351
TWX: 810-459-1925

PENNSYLVANIA
2373 S.W. Corbett Avenue
Portland 97201
Tel: (503) 228-5107

WASHINGTON
11556 N.E. Eighth Street
Bellevue 98004
Tel: (206) 454-3971
TWX: 910-443-2303

FOR AREAS NOT LISTED, CONTACT:
Hewlett-Packard
1501 Page Mill Road
Palo Alto, California 94304
Tel: (415) 326-7000
TWX: 910-373-1267
Telex: 034-8461

TEXAS
P.O. Box 7166
3605 Inwood Road
Dallas 75209
Tel: (214) 357-1881
TWX: 910-861-4081

P.O. Box 22813
4242 Richmond Avenue
Houston 77027
Tel: (713) 667-2407
TWX: 910-881-2645

GOVERNMENT CONTRACT OFFICE
225 Billy Mitchell Road
San Antonio 78226
Tel: (512) 434-4171
TWX: 910-871-1170

UTAH
2890 South Main Street
Salt Lake City 84115
Tel: (801) 486-8166
TWX: 910-925-5681

VIRGINIA
P.O. Box 6514
2111 Spencer Road
Richmond 23230
Tel: (703) 282-5451
TWX: 710-956-0157

WASHINGTON
11556 N.E. Eighth Street
Bellevue 98004
Tel: (206) 454-3971
TWX: 910-443-2303

FOR AREAS NOT LISTED, CONTACT:
Hewlett-Packard
1501 Page Mill Road
Palo Alto, California 94304
Tel: (415) 326-7000
TWX: 910-373-1267
Telex: 034-8461

QUEBEC
Hewlett-Packard (Canada) Ltd.
275 Hymus Boulevard
Pointe Claire
Tel: (514) 697-4232
TWX: 610-422-3022
Telex: 01-2819

FOR AREAS NOT LISTED, CONTACT:
Hewlett-Packard Inter-Americas
1501 Page Mill Road
Palo Alto, California 94304
Tel: (415) 326-7000
TWX: 910-373-1267
Telex: 034-8461

QUEBEC
Hewlett-Packard (Canada) Ltd.
275 Hymus Boulevard
Pointe Claire
Tel: (514) 697-4232
TWX: 610-422-3022
Telex: 01-2819

CANADA

BRITISH COLUMBIA
Hewlett-Packard (Canada) Ltd.
2184 West Broadway
Vancouver
Tel: (604) 738-7520
TWX: 610-922-5050

ONTARIO
Hewlett-Packard (Canada) Ltd.
880 Lady Ellen Place
Ottawa 3
Tel: (613) 722-4223
TWX: 610-562-1952

Hewlett-Packard (Canada) Ltd.
1415 Lawrence Avenue West
Toronto
Tel: (416) 249-9196
TWX: 610-492-2382

QUEBEC
Hewlett-Packard (Canada) Ltd.
275 Hymus Boulevard
Pointe Claire
Tel: (514) 697-4232
TWX: 610-422-3022
Telex: 01-2819

CENTRAL AND SOUTH AMERICA

ARGENTINA
Mauricio A. Suárez
Telecomunicaciones
Carlos Calvo 224
Buenos Aires
Tel: 30-6312, 34-9087

BRAZIL
Ciental, Importação e
Comércio Ltda.
Rua Cleto Campelo, 44 - 5º andar
Recife

Ciental, Importação e
Comércio Ltda.
Avenida 13 de Maio, 13-22º andar
Rio de Janeiro, G.B.

Ciental, Importação e
Comércio Ltda.
Rua Des. Eliseu Guilherme, 62
São Paulo 8
Tel: 70-2318

CHILE
Héctor Calcagni
Casilla 13942
Santiago
Tel: 490-505, 393-1119

COSTA RICA
Lic. Alfredo Gallegos Gutiérnán
Apartado 3243
San José
Tel: 21-86-13

EL SALVADOR
Electrónica
Apartado Postal 1589
San Salvador
Tel: 4683

GUATEMALA
Olander Associates Latin America
Apartado 1226
7a. Calle, 0-22, Zona 1
Guatemala City
Tel: 22812

MEXICO
Hewlett-Packard Mexicana,
S.A. de C.V.
Eugenio 408, Dept. 1
Mexico 12, D.F.

NICARAGUA
Roberto Terán G.
Edificio Terán
Apartado Postal 689
Managua

Tel: 3451, 3452

PANAMA
Electrónico Balboa, S.A.
P.O. Box 4929
Panama City
Tel: 3-0833

PERU
Fernando Ezeta B.
Av. Petit Thouars 4719
Casilla 3061
Lima
Tel: 50346

Puerto Rico
San Juan Electronics, Inc.
Ponce de León No. 150, Stop 3
Pta. de Tierra Sta.
San Juan

Tel: (809) 725-3342

VENEZUELA
Citec, C.A.
Edif. Arisan-Of. #4
Avda. Francisco de Miranda
Apartado del Este 10934 Chacaíto
Caracas
Tel: 71-88-05

FOR AREAS NOT LISTED, CONTACT:
Hewlett-Packard Inter-Americas
1501 Page Mill Road
Palo Alto, California 94304
Tel: (415) 326-7000
TWX: 910-373-1267
Telex: 034-8461

PUERTO RICO
San Juan Electronics, Inc.
Ponce de León No. 150, Stop 3
Pta. de Tierra Sta.
San Juan

Tel: (809) 725-3342



ELECTRONIC INSTRUMENTATION SALES AND SERVICE

EUROPE, AFRICA, ASIA, AUSTRALIA

ROPE

RIA
or HmbH
rechaffliche Instrumente
Härdtgasse 6/3
ox 33
IX/71
N 181

IUM
t-Packard Benelux S.A.
rue de l'Hôpital
ts
. 22 20

ARK
isen A/S
ade 1
hagen 0
48 00

ND
VY
Nikatu 11
ix 10153
il 10
133

DE
Packard France
éte d'Or
- Rhône
35 66

Packard France
levard Massena
30
7 97 19

GERMANY
Hewlett-Packard Vertriebs-GmbH
Liezenburger Strasse 30
1 Berlin W 30
Tel: 24 86 36

Hewlett-Packard Vertriebs-GmbH
Herrenberger Strasse 110
703 Böblingen, Württemberg
Tel: 6971

Hewlett-Packard Vertriebs-GmbH
Achenbachstrasse 15
4 Düsseldorf 1
Tel: 68 52 58

Hewlett-Packard Vertriebs-GmbH
Kurhessenstrasse 95
6 Frankfurt 50
Tel: 52 00 36

Hewlett-Packard Vertriebs-GmbH
Beim Strohause 26
2 Hamburg 1
Tel: 24 05 52

Hewlett-Packard Vertriebs-GmbH
Reginffedstrasse 13
8 Munich 9
Tel: 49 51 21

GREECE
Kostos Karayannis
18, Ermou Street
Athens 126
Tel: 230 301

IRELAND
Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks, England
Tel: Slough 28406-9, 29486-9

ITALY
Hewlett-Packard Italiana S.p.A.
Viale Lunigiana 46
Milan
Tel: 69 15 84

Hewlett-Packard Italiana S.p.A.
Palazzo Italia
Piazza Marconi 25
Rome - Eur
Tel: 591 2544

NETHERLANDS
Hewlett-Packard Benelux, N.V.
Beim Strohause 1043
Amsterdam, Z.Z
Tel: 42 77 77

NORWAY
Morgensterne & Co. A/S
Ingeniørfirma
6 Wessels Gate
Oslo
Tel: 20 16 35

PORTUGAL
Telecra
Rua Rodrigo da Fonseca 103
P.O. Box 2531
Lisbon 1
Tel: 68 60 72

SPAIN
Ataio Ingenieros
Urgel, 259
Barcelona, 11
Tel: 230-69-88

Ataio Ingenieros
Enrique Larreta 12
Madrid, 16
Tel: 235 43 44

SWEDEN
HP Instrument AB
Hagakergatan 7
Mölnadal
Tel: 031 - 27 68 00

SOLNA

Tel: 08 - 83 08 30

SWITZERLAND
HEWPAK AG
Zuricherstrasse 20
8952 Schlieren
Zürich
Tel: (051) 98 18 21

TURKEY
Telekom Engineering Bureau
P.O. Box 376 - Galata
Istanbul
Tel: 49 40 40

UNITED KINGDOM
Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks
Tel: Slough 28406-9, 29486-9

YUGOSLAVIA
Belram S.A.
83 avenue des Mimosas
Brussels 15, Belgium
Tel: 35 29 58

FOR AREAS NOT LISTED, CONTACT:
Hewlett-Packard S.A.
54 Route des Acacias
Geneva, Switzerland
Tel: (022) 42 81 50
Telex: 2.24.86
Cable: HEWPACKSA Geneva

AFICA, ASIA, AUSTRALIA

ALIA
Electronics (Vic) Pty., Ltd.
Fair Street
s S.E. 6
WB, Victoria
1372 (4 lines)
Electronics
V. Pty. Ltd.
Street
New South Wales
5338

WA
Salespower & Agency
Ltd., Co.
1 718
sba
90

ntific Instrument Co., Ltd
hadur Sapru Road
d 1
1
Tel-Aviv
ntific Instrument Co., Ltd
Dadabhai Naoroji Road
1
642

The Scientific Instr. Co., Ltd.
11, Esplanade East
Calcutta 1
Tel: 23-4129

The Scientific Instrument Co., Ltd.
30, Mount Road
Madras 2
Tel: 86339

The Scientific Instrument Co., Ltd.
B-7, Ajmeri Gate Extn.
New Delhi 1
Tel: 27-1053

IRAN
Telecom, Ltd.
P. O. Box 1812
Teheran
Tel: 43850, 48111

ISRAEL
Electronics & Engineering
Division of Motorola Israel Ltd.
16, Kremenski Street
Tel-Aviv
Tel: 35021/2/3

JAPAN
Yokogawa-Hewlett-Packard Ltd.
Shinhankyu Building
No. 8, Umeda
Kita-ku, Osaka City
Tel: 313-0091

Yokogawa-Hewlett-Packard Ltd.
Ito Building
No. 59, Kototori-cho
Nakamura-ku, Nagoya City
Tel: 551-0215

Yokogawa-Hewlett-Packard Ltd.
Ohashi Building
No. 59, I-chome, Yoyogi
Shibuya-ku, Tokyo
Tel: 370-2281

KENYA
R. J. Tilbury Ltd.
P. O. Box 2754
Suite 517/518
Hotel Ambassadeur
Nairobi
Tel: 25670, 26803, 68206

KOREA
American Trading Co., Korea, Ltd.
Seoul P. O. Box 1103
112-35 Sokong-Dong
Jung-ku, Seoul
Tel: 3.7049, 3.7613

LEBANON
Constantin E. Macridis
Clemenceau Street
Clemenceau Center
Beirut
Tel: 220845

NEW ZEALAND
Sampla Electronics (N.Z.) Ltd.
8 Matipo Street
Onehunga S.E. 5
Auckland
Tel: 667-356

PAKISTAN (EAST)
Musiko & Company, Ltd.
Zirat Chambers
31, Jinah Avenue
Dacca
Tel: 80058

PAKISTAN (WEST)
Musiko & Company, Ltd.
Osman Chambers
Victoria Road
Karachi 3
Tel: 51027, 52927

SOUTH AFRICA
F. H. Flanter & Co. (Pty.), Ltd.
Rosella House
Buitengrind Street
Cape Town
Tel: 3-3817

F. H. Flanter & Co. (Pty.), Ltd.
104 Pharmacy House
80 Jorissen Street
Braamfontein, Johannesburg
Tel: 724-4172

TAIWAN
Hwa Sheng Electronic Co., Ltd.
P. O. Box 1558
21, Nanking West Road
Taipei
Tel: 46076, 45936

THAILAND
The International
Engineering Co., Ltd.
P. O. Box 39
614 Sukhumvit Road
Bangkok
Tel: 913460-1-2

FOR AREAS NOT LISTED, CONTACT:
Hewlett-Packard Export Marketing
1501 Page Mill Road
Palo Alto, California 94304
Tel: (415) 326-7000
Telex: 034-8461
Cable: HEWPACK Palo Alto



04260-9992

PRINTED IN U.S.A.