

Philips  
CD lens cleaner

US2-PH62022



# Clean and protect your CD player

Regular cleaning of your CD player's lens ensures optimum performance of your equipment. It is important to keep a CD player optical laser lens clean and dust free. This dry-brush system safely removes dust, debris and other contaminants.

## **Maintain original sound quality**

- Safe dry brush cleaning system

## **Easy to use**

- Voice instructions in 14 languages

**PHILIPS**  
sense and simplicity

## Specifications

### Packaging dimensions

- **Packaging dimensions (W x H x D):**  
6.3 x .3 x 9.7 inch
- **Nett weight:** .232 lb
- **Gross weight:** .27784 lb
- **Tare weight:** .04584 lb

### Outer Carton

- **Gross weight:** 1.7 lb
- **Outer carton (L x W x H):** 6.8 x 3.5 x 10.3 inch
- **Nett weight:** 1.392 lb
- **Tare weight:** .308 lb

## Product highlights

### Dry brush system

*The dry brush cleaning system safely removes dust, debris and other contaminants from the CD/DVD players laser lens, leaving it clean and performing optimally.*

### Voice instructions

*The voice instructions on this easy to use CD lens cleaner guide you through the cleaning process in one of the 14 languages provided.*



Issue date 2008-08-17

Version: 1.0.5

12 NC: 8670 000 45672  
UPC: 0 26616 00077 7

© 2008 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)