 




Electrolux

**Hand Held
Vacuum Cleaner**
Household Type
Owner's Guide
60 - 70 Series

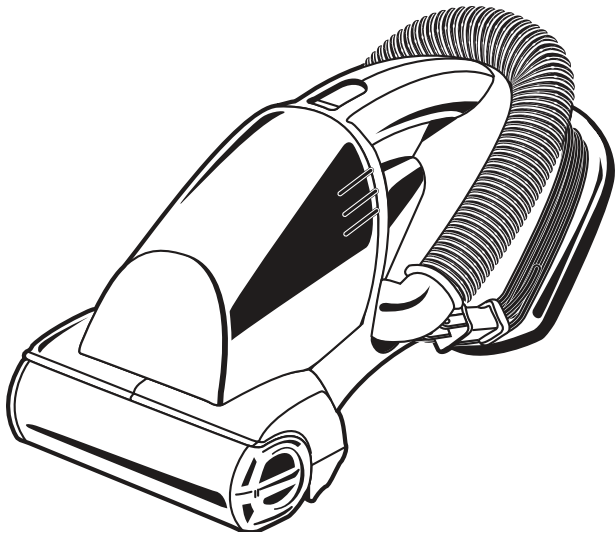

2 - 4 **IMPORTANT INFORMATION**

4 **GUARANTEE**

5 **HOW TO ASSEMBLE**

5 - 6 **HOW TO USE**

6 **ROUTINE MAINTENANCE**

6 **Dust Cup**

6 **Filter**

IMPORTANT

For any advice
on your cleaner and to order
filters and accessories,
please telephone the
Electrolux Helpline on
08445 614614
Calls to this number will be
charged at 5p per minute at
all times from a BT Landline.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.


WARNING

To reduce the risk of fire, electric shock, or injury:

- Do not use outdoors or on wet surfaces.
- **Do not leave vacuum cleaner when plugged in.** Turn off the switch and unplug the electrical cord when not in use and before servicing.
- This appliance is not intended for use by any persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center before using.
- Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Turn off all controls before unplugging.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- This vacuum cleaner creates suction and contains a revolving brush roll. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup or filter(s) in place.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Store your cleaner indoors in a cool, dry area.
- Keep your work area well lighted.
- Unplug electrical appliances before vacuuming them.
- Belt pulleys can become hot during normal use. To prevent burns, avoid touching the belt pulley when servicing the drive belt.

SAVE THESE INSTRUCTIONS



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

BEFORE YOU START

CHECK THE VOLTAGE

Before connecting the cleaner to an electrical supply, ensure that the voltage shown on the rating plate located beneath the cleaner is of the correct voltage for your electricity supply. If it is not, do not use the cleaner but refer back to your dealer.

CONNECTING TO YOUR ELECTRICITY SUPPLY

Permanently connected to the cleaner is a mains supply (2-core) cable fitted with a non-rewirable plug incorporating a 13A fuse. In the event of the fuse requiring replacement the fuse cover should be removed using a small screwdriver. The old fuse **MUST** be replaced by a 13A ASTA approved BS1362 fuse or a BSI approved fuse. The cover must be replaced before the plug is used again. In the event of loss of the fuse cover, replacements can be obtained from your Electrolux Retailers and must be of the same colour as indicated by the coloured insert on the base of the plug.

In no circumstances must the plug be used without a correct fuse cover fitted.

If the plug that is fitted to your appliance is not suitable for your socket outlet, it must be cut off and the appropriate plug fitted. Remove the fuse from the cut off plug.

The cut off plug should then be disposed of to prevent the hazard of shocks in case it should be plugged into a 13 amp socket in another part of your home.

The wires in the mains cable of this appliance are coloured in accordance with the following code: **Blue: Neutral. Brown: Live.**

 
As the colours of the wires in the mains cable of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

If using a three-pin plug, do not make any connection to the terminal marked with the letter E or by the earth symbol or coloured green or green-and-yellow. This cleaner is double insulated and no earth connection is necessary.

It is in your interest to ensure that the plug is correctly attached to the mains cable. In case of doubt, consult a qualified electrician, as Electrolux cannot regard the repair of faults on the plug connection as a service that can be given free of charge under the terms of the guarantee.

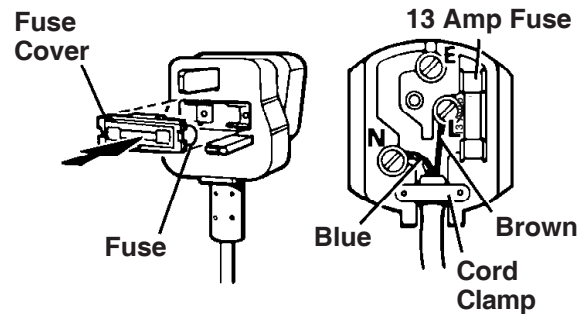

WARNING

The brush in the cleaning head rotates at high speed and can cause damage to the mains supply cable if the cleaner passes over it during cleaning operations.

Care should be taken to ensure that this does not happen. If the cleaning head has accidentally passed over the mains supply cable the following action should be taken:

1. Switch off and remove the plug from the socket outlet.
2. Examine the mains supply cable for damage (only after removing the plug from the socket outlet).
3. If there is any sign of damage to the supply cable it **MUST** be renewed. The repair **MUST** be carried out by an Electrolux Service Agent or a similar qualified person.
4. **NEVER** use the machine with a damaged mains supply cable.

Proprietary carpet conditioning and air freshening materials

After using proprietary carpet conditioning powders, it is recommended that the filters be changed. Some of these preparations contain substances which if left in the vacuum cleaner for extended periods could damage the plastic mouldings which form the structure of the cleaner.

Many air fresheners, household deodorants, sprays and polishes contain a highly flammable gas propellant.

Because of this, it is particularly important that these products are used strictly in accordance with the relevant manufacturer's instructions.

It is essential that none of the above products are sprayed directly into the vacuum cleaner or any of its filters, hose assembly, dustbag chamber or dust cup.

Thermal Cut Off

This vacuum cleaner has a special thermostat that protects the cleaner in case of motor overheating. If the cleaner switches off, push the switch to "Off" and unplug the cleaner. Check the cleaner for a possible source of overheating such as a full dust cup, a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the cleaner. After the 30 minute period, plug the cleaner back in and turn on the switch. If the cleaner still does not run, please call Electrolux on 08445 614614. Calls to this number will be charged at 5p per minute at all times from a BT Landline.

SERVICE

Should you require service on your Electrolux cleaner, please telephone Electrolux Helpline on 08445 614614. Calls to this number will be charged at 5p per minute at all times from a BT Landline. Before requesting service, please check whether your problem is covered under Service Checklist (see below). Electrolux will arrange the uplift of the product for repair should no local service agent be available.

New filters can be obtained from Electrolux Retailers.

SERVICE CHECKLIST

- If your cleaner will not operate, check the plug connection, plug fuse and mains fuse.
- **Never allow** the dust cup to become so full that it impedes the air-flow, thus reducing the cleaning efficiency of the machine. The character of household dust and its effect on the air-flow through the machine may vary considerably. Fluffy dust allows air to pass through readily whereas fine powdery dust or proprietary cleaning powders, pack tightly in the dust cup, offering greater resistance to air-flow and will reduce cleaning efficiency if the cup becomes overloaded.
- **Always store** your cleaner and spare dust filters in a dry place.
- **Renew** the filter pads three or four times a year. This is essential to ensure continued high filtration of dust particles.
- **Sucking up** such items as stockings, clippings of cloth, sizeable pieces of paper, wrappings from cigarette packets or sweets etc., may block the hose. **Electrolux regrets that the clearing of blocked hoses cannot be regarded as service that can be given free of charge, under the guarantee.** Should a blockage occur, first disconnect the cleaner from the electricity supply, refer to section headed "Blockages". If these operations are not successful, contact Electrolux Helpline for assistance.
- **Never** pick up hot cinders or lighted cigarette ends.
- **Make certain that your cleaner does not come into contact with water or any other liquid. It is not designed as a wet pick up cleaner, and must never be used on damp carpets or wet floors.**

Important - in the event of the mains supply cable of this vacuum cleaner requiring replacement, we recommend that this be carried out by Electrolux Service Staff.

Spares

New filters can be obtained from Authorised Electrolux Dealers and electrical retailers.

GUARANTEE

This guarantee is in addition to your statutory and other legal rights.

This product is for household use only.

Electrolux products are carefully designed, manufactured, tested and inspected and, in consequence, we undertake to replace or repair any part found to be defective in materials or workmanship, within one year of delivery to the original purchaser, free of charge. You may be required to take the product to your nearest service provider if the product requires attention during the first year.

There are certain conditions which may invalidate this guarantee:

- a. It is dependent upon the appliance being correctly installed and used in accordance with the Company's instructions under normal domestic conditions within the United Kingdom or the Republic of Ireland.
- b. Service at all times must be carried out by an Electrolux Service Representative or authorised agent.
- c. The guarantee may be invalidated by unauthorised repair or modification of the appliance.
- d. You may be charged by Electrolux if you call for an engineer to resolve a problem that we believe is covered in the instruction booklet. (example: blocked/dirty filters)

Electrolux does not accept liability for all defects arising from neglect, misuse or accident. This guarantee excludes such normal wearing parts as drive belts, brushes and filters as the life of these depends upon the amount and nature of use.

Proof of purchase will be required before service under guarantee is provided. Please call Electrolux Helpline for assistance.

IMPORTANT:

For future reference we suggest you record the following details here, and keep the receipt with the handbook as proof of purchase.

Purchased from _____
 Date purchased _____ Model no _____



Addington Way, LUTON, BEDFORDSHIRE, LU4 9QQ

 
Features of the Electrolux vacuum cleaner and accessories supplied with it are protected in Great Britain and abroad by Patents or Registered Designs.

This appliance conforms with the requirements of the amended E.E.C. directive No. 89/336/EEC relating to electromagnetic compatibility (EMC) CE.


Electrolux, may introduce modifications to their product from time to time, and consequently the details given in this booklet are subject to alteration without notice.

ASSEMBLY PARTS


- ① Vacuum cleaner
- ② Crevice tool

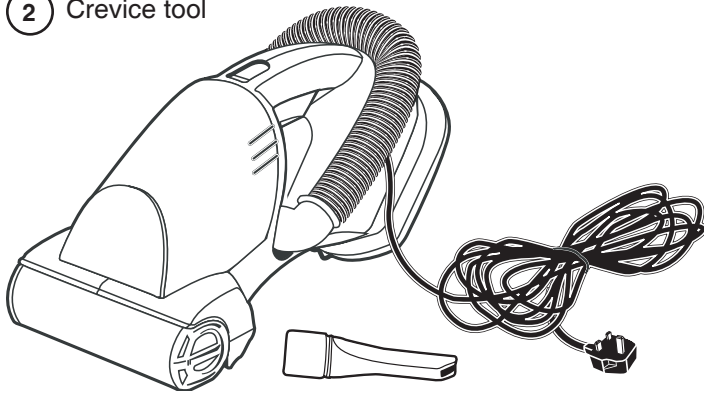

ASSEMBLY/STORAGE

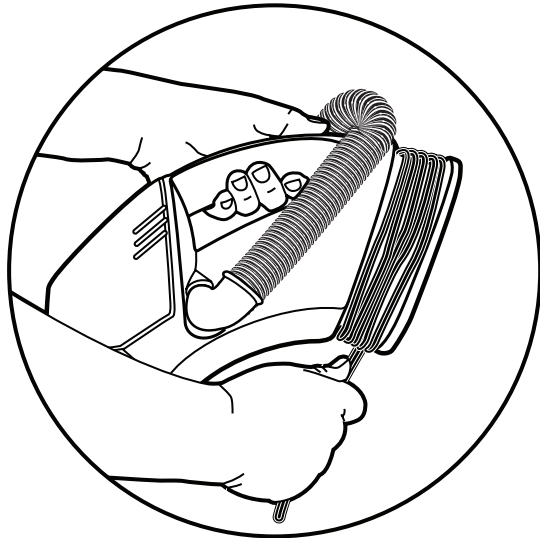 

 - ① Wrap electrical cord around the base of the cleaner. Secure electrical plug to cord to prevent cord from unwinding.


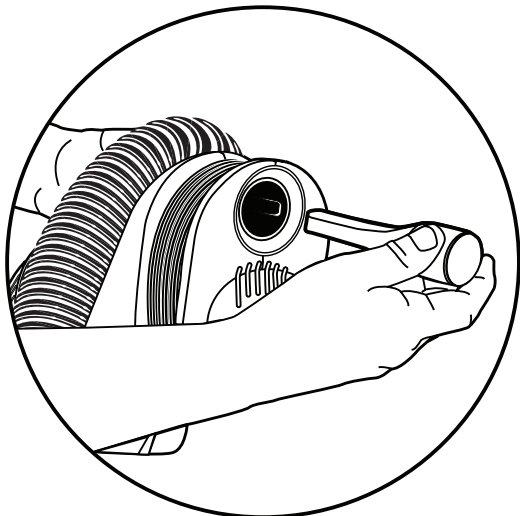


- ② Store crevice tool inside the base of the cleaner.

HOW TO USE

CAUTION: Moving parts. Make sure the power switch is in off (0) position before plugging in.

  
① Power Switch

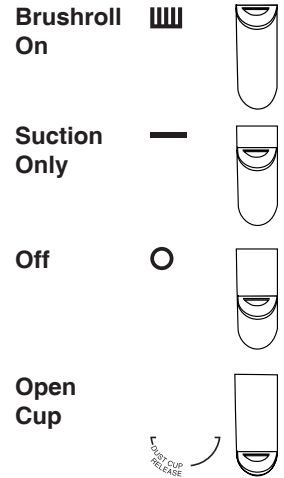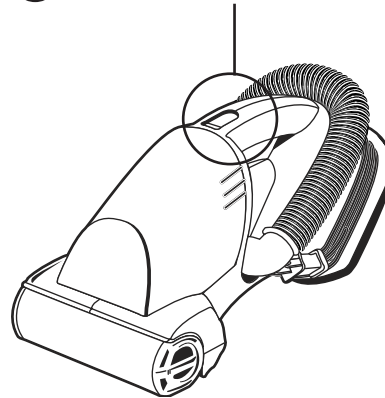

② Rizer Visor™ Nozzle Cover

The Rizer Visor™ nozzle features a rotating cover over the brush roll. When the cover is in the normal position, the brush roll action is toward the bottom side of the nozzle to clean flat areas such as stairs or upholstery.

 Twist the cover downward to rotate exposing the front of the brush roll for cleaning vertical surfaces, e.g. stair risers, furniture backs.

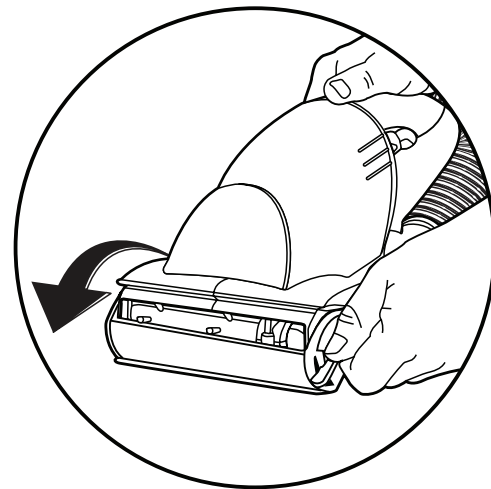

CAUTION: To prevent injury, turn off the power switch and unplug cleaner before rotating the Rizer Visor™ nozzle.

 
HOW TO ASSEMBLE

HOW TO USE


HOW TO USE (continued)

③ Cleaning Accessories


CAUTION: Moving brush roll, power switch should be in suction only position when using hose.

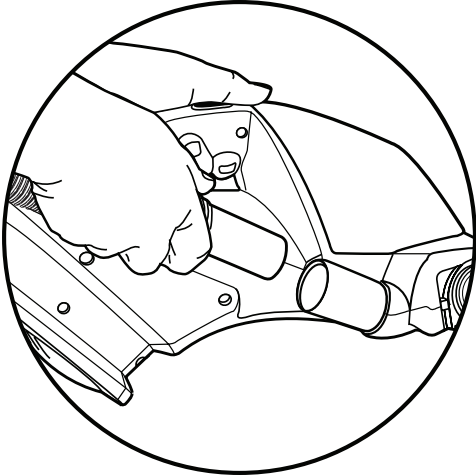

 - ① Pull the hose from hose adaptor on cleaner.

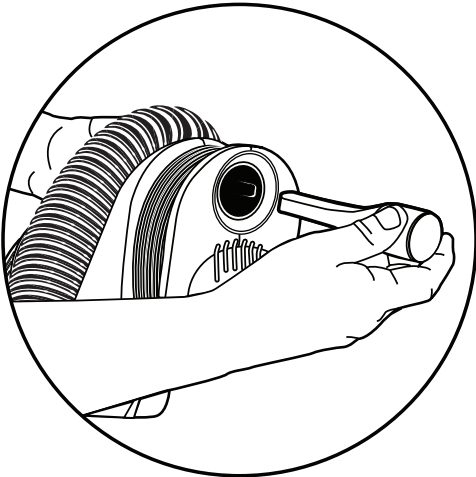

 - ② Pull the crevice tool out of the base of the cleaner.

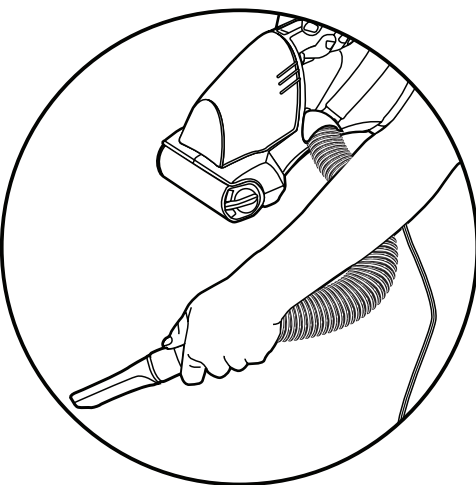

- ③ Place the crevice tool on the end of the hose.
- ④ When cleaning is completed, store crevice tool back in the base of the cleaner and replace the hose in the hose adaptor on the cleaner.

HOW TO MAINTAIN

 
The instructions given in this booklet serve as a guide to routine maintenance. To avoid unnecessary service calls, check the hose, dust cup and dust cup filter often. Clear a clogged hose, empty the dust cup if it is full, and clean the dust cup filter when it is dirty.

CAUTION: Turn off the power switch and unplug the electrical cord before emptying the dust cup or cleaning the dust cup filter.


CAUTION: Do not use the cleaner without the dust cup filter properly installed. This can damage the cleaner.

Hint: Some fine particles can restrict airflow very quickly and will decrease performance even before the dust container appears full. For that reason, when vacuuming carpet fresheners or cleaners, powder, plaster dust or similar fine substances, the dust cup and filter may need cleaning more often.

Dust Cup and Filter

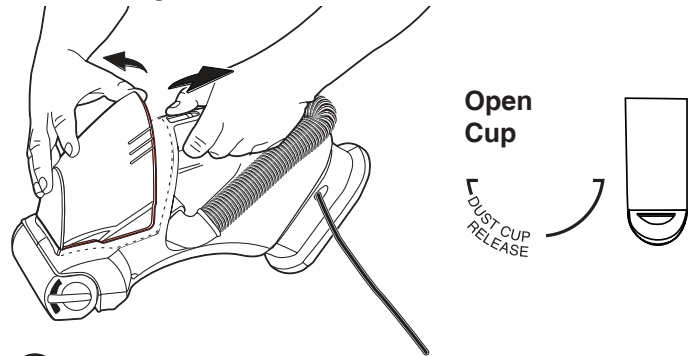

 - ① Pull back on the power switch to the "open cup" position and lift dust cup away from cleaner.

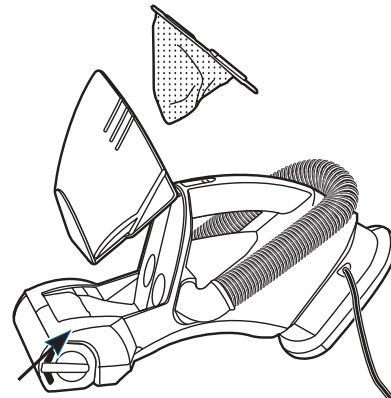

- ② Remove dust cup and empty.
- The dust cup filter can be cleaned by brushing off over a waste container. Do not allow to get wet.
- The dust cup can be rinsed under running water and completely dried before replacing on cleaner. **We do not recommend putting it in a dishwasher.**

- ③ Replace dust cup filter in dust cup.
- ④ Put bottom edge of dust cup in cleaner as shown above and rotate down against cleaner firmly. Dust cup latch will automatically lock.

HOW TO MAINTAIN (Continued)

Brush Roll

The brush roll turns to agitate, sweep and comb the carpet nap. Check the brush roll regularly to be sure it is in top condition. Cut away any hair or thread wound around the brush roll because the build-up could cause the brush roll to rotate unevenly.

Questions?

Call our Customer Service

08445 614614

Calls to this number will be charged at 5p per minute at all times from a BT Landline

**Thank you for purchasing an
Electrolux cleaner.**

**Don't Forget to Use
Genuine Electrolux
Bags and Belts**

CAUTION: Damages caused by the use of non-genuine Electrolux bags are not covered by the Electrolux Limited Warranty.

Electrolux

Addington Way, LUTON, BEDFORDSHIRE, LU4 9QQ

Features of the Electrolux vacuum cleaner and accessories supplied with it are protected in Great Britain and abroad by Patents or Registered Designs.

This appliance conforms with the requirements of the amended E.E.C. directive No. 89/336/EEC relating to electromagnetic compatibility (EMC) CE.

Electrolux may introduce modifications to their products from time to time, and consequently the details given in this booklet are subject to alteration without notice.