



***PERSONAL STEREO
CASSETTE PLAYER WITH
VOICE RECORDER AND
DIGITAL ALARM CLOCK***

***OWNER'S MANUAL
HK39***


WELCOME

My friends at Emerson Radio Corp. are producing this Personal Stereo Cassette Player with 10 Second Voice Recorder and Alarm Clock, under license from Sanrio Company Ltd. We have taken great care to make sure your unit was in perfect working order when it left our factory. It has been designed to give you many years of enjoyment and trouble free operation. Read this manual before operating this unit to become familiar with its features. In the event you require technical assistance, please contact my friends at the Emerson Radio Customer Service hotline at 1-800-898-9020. Retain this manual for future reference.

NOTES:

- Please avoid using this unit in places of high temperature or humidity over prolonged periods of time as damage may occur.
- Exposure to direct sunlight in places such as car interiors may cause the unit to become warped and/or lead to malfunctioning.
- Avoid using or storing this unit in dusty or sandy locations.

LOCATION OF CONTROLS

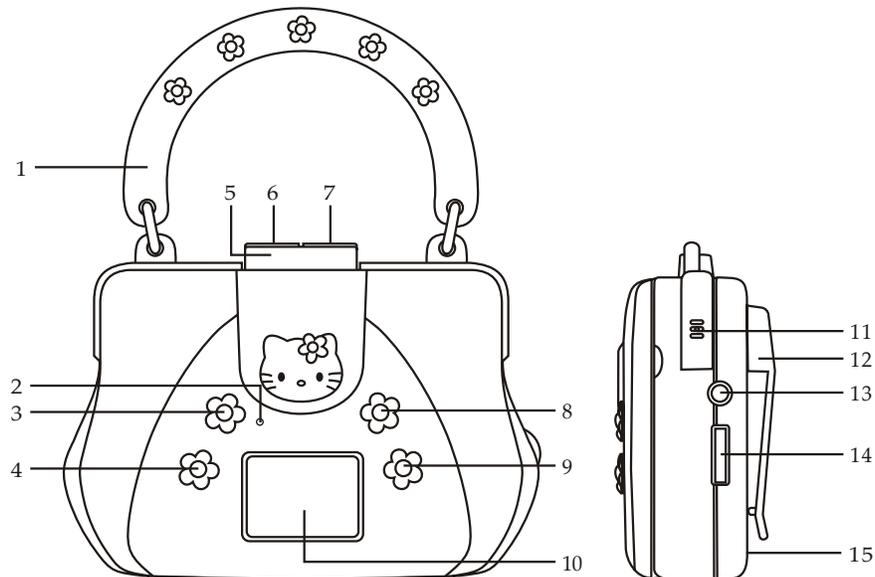


- | | |
|------------------------|--|
| 1. Carrying Handle | 9. SET Button |
| 2. RECORD Indicator | 10. Display |
| 3. VOICE RECORD Button | 11. Built-in Microphone |
| 4. MODE Button | 12. Belt Clip |
| 5. PLAY Button | 13. Earbud Jack |
| 6. STOP Button | 14. VOLUME Control |
| 7. FAST FORWARD Button | 15. Battery Compartment (Rear of Unit) |
| 8. VOICE PLAY Button | |

POWER SOURCE

BATTERY OPERATION

 1. Remove the belt clip. Open the battery compartment by pushing the tab at the center of the cover and lift it up. The door cannot be removed, so it cannot be lost.
2. Insert three (3) AA size batteries (not included) into the Battery Compartment following the diagram inside the compartment and replace the Battery Compartment cover.



BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated next to the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)

OPERATION

FCC INFORMATION:


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

TO CYCLE THROUGH THE CLOCK MODES:

Press the MODE button once to view the alarm time, twice to view the date and a third time to view the second's display. Press once more to revert back to the present time.

SETTING THE DATE AND TIME

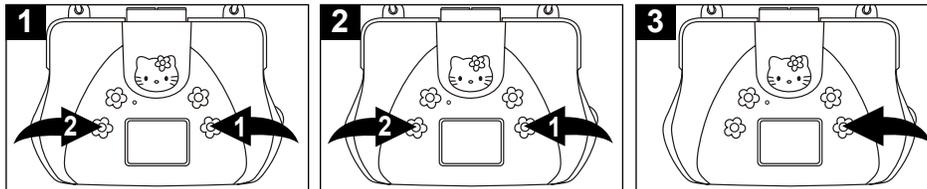


Press the SET button ❶ four times; the month will appear. Press the MODE button ❷ repeatedly to set the present month. Repeat this step to set the date.

Press the SET button ❶ again and the present hour will appear. Press the MODE button ❷ repeatedly to set the present hour and AM/ PM. Repeat this step to set the minute.


Press the SET button and the clock will be set and running.

OPERATION (CONTINUED)


SETTING THE ALARM TIME

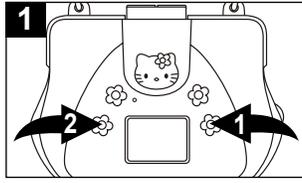

Press the SET button ❶ once; the alarm time will blink. Press the SET button ❶; the alarm hour and AM/PM will blink. Press the MODE button ❷ repeatedly to set the alarm hour and AM/PM.

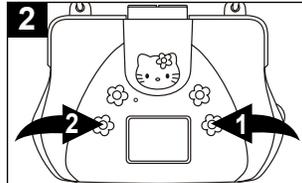


Press the SET button ❶ again and the alarm minute will blink. Press the MODE button ❷ repeatedly to set the alarm minute.

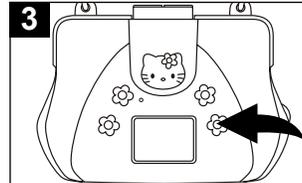


Press the SET button to return to the present time display.


ACTIVATING THE ALARM

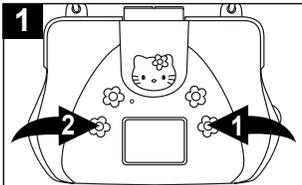

Press the SET button ❶ once; the alarm time will blink. Press the MODE button ❷ once to turn the alarm on; the Alarm indicator (⚡) will appear in the display.

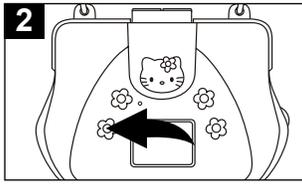


Press the MODE button again to turn the alarm and chime (see below) on; the Alarm (⚡) and Chime (🔔) indicators will appear in the display. Press the MODE button once again to turn the Chime off. Repeat the same to turn the Alarm off.

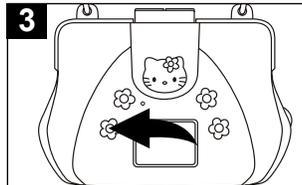


When the actual time matches the alarm time, the unit will beep for 30 seconds. To turn the alarm off, press the MODE button.

TURNING THE CHIME ON:


When the Chime is activated, a beep will sound every hour.

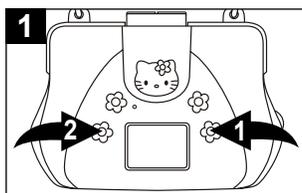

Press the SET button ❶ once; the alarm time will blink. Press the MODE button ❷ twice to turn the alarm (see above) and chime on; the Alarm (⚡) and Chime (🔔) indicators will appear in the display.

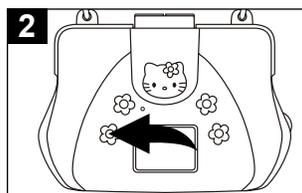


Press the MODE button again to turn the chime on, the Chime indicator (🔔) will appear in the display.

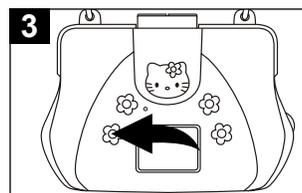


Press the MODE button once again to turn the Chime off.

OPERATION (CONTINUED)


USING THE CASSETTE PLAYER

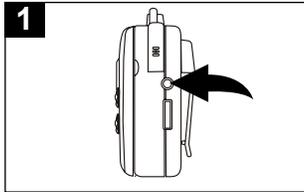

1 Open the cassette door by lifting the opening tab on the right of the door and insert a cassette tape with the open surface facing up. Close the Cassette Door and plug the earbuds into the Earbud jack.

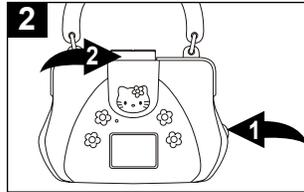


2 Set the VOLUME control **1** to minimum and press the PLAY button **2** to begin playback. Adjust the VOLUME control **3** as desired.

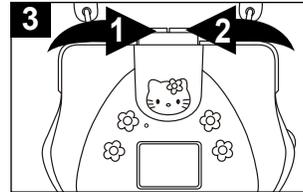


3 To stop the tape before it reaches the end, press the Stop button **1**. Press the Fast Forward button **2** to fast forward the cassette.


USING THE 10 SECOND VOICE RECORDER

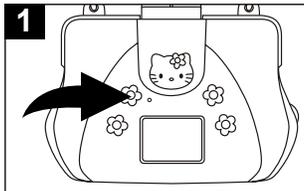

1 To record up to 10 seconds of voice recording, press and hold the RECORD button; the RECORD indicator will light.

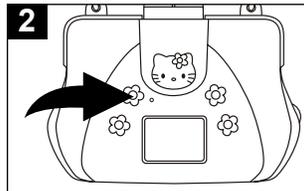

2 Speak into the built-in microphone. When done recording, release the RECORD button; the RECORD indicator will go out.

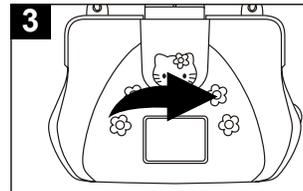

3 Press the VOICE PLAY button to listen to the digital recording through the earbuds.

LIMITED WARRANTY

Emerson Radio Corp. warrants manufacturing defects in original material, including original parts and workmanship, under normal use and conditions, for a period of ninety (90) days from the date of original purchase in the U.S. With your dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product at our discretion. For repair or replacement, pack your unit in a padded box, enclose your check or money order payable to Emerson Radio Corp. in the amount of \$5.00 (not required by California residents) to cover shipping and handling costs, and enclose a copy of your proof of purchase. Send your unit to:

Emerson Radio Corp.
1901 Diplomat Drive
Farmers Branch, TX 75234

This warranty does not cover damage from negligence, misuse, abuse, accident, failure to follow operating instructions, commercial use, rental, repairs by an unauthorized facility, or products purchased, used, serviced or damaged outside of the United States.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

AU898H