



Portable System Owners Manual

Customer Service Center • N53 W24700 South Corporate Circle • Sussex, WI 53089 • U.S.A.





READ AND UNDERSTAND OPERATOR'S MANUAL BEFORE USING THIS UNIT.

FAILURE TO FOLLOW OPERATING INSTRUCTIONS COULD RESULT IN INJURY OR DAMAGE TO PROPERTY.

1

Write Model Number From Box Here:

Toll-Free Customer Service Number for U.S: **1-800-558-5234**, For Canada: **1-800-284-8339**, For Europe: **00 800 555 85234** (Sweden: **009 555 85234**), For Australia: **1-800-632 7921**

Internet Address: http://www.huffysports.com

BEFORE YOU START!







To ensure optimal playability of backboard system, a close tolerance fit between the elevator components and hardware is required. Test-fit large bolts into large holes of elevator tubes, backboard brackets, and triangle plates. Carefully rock them in a circular motion to ream out any excess paint from holes if necessary.

Not all items pictured are included with every model.



WARNING

Read and understand warnings listed below before using this product.

Failure to follow these warnings may result in serious injury and/or property damage.

Owner must ensure that all players know and follow these rules for safe operation of the system.

- DO NOT HANG on the rim or any part of the system including backboard, support braces or net.
- During play, especially when performing dunk type activities, keep player's face away from the backboard, rim and net. Serious injury could occur if teeth/face come in contact with backboard, rim or net.
- Do not slide, climb, shake or play on base and/or pole.
- After assembly is complete, fill system completely with water or sand. Never leave system in an upright position without filling base with weight, as system may tip over causing injuries.
- When adjusting height or moving system, keep hands and fingers away from moving parts.
- Do not allow children to move or adjust system.
- During play, do not wear jewelry (rings, watches, necklaces, etc.). Objects may entangle in net.
- Surface beneath the base must be smooth and free of gravel or other sharp objects. Punctures cause leakage and could cause system to tip over.
- Keep organic material away from pole base. Grass, litter, etc. could cause corrosion and/or deterioration.
- Check pole system for signs of corrosion (rust, pitting, chipping) and repaint with exterior enamel paint. If rust has penetrated through the steel anywhere, replace pole immediately.
- Check system before each use for proper ballast, loose hardware, excessive wear and signs of corrosion and repair before use.
- Check system before each use for instability.
- Do not use system during windy and/or severe weather conditions; system may tip over. Place system in the storage position and/or in an area protected from the wind and free from personal property and/or overhead wires.
- Never play on damaged equipment.
- When moving system, use caution to keep mechanism from shifting.
- Keep pole top covered with cap at all times.
- Do not allow water in tank to freeze. During sub-freezing weather add 2 gallons of non-toxic antifreeze, sand or empty tank completely and store. (Do not use salt.)
- While moving system, do not allow anyone to stand or sit on base or have added ballasting on base.
- Do not leave system unsupervised or play on system when wheels are engaged for moving.
- Use Caution when moving system across uneven surfaces. System may tip over.
- Use extreme caution if placing system on sloped surface. System may tip over more easily.
- See instruction manual for proper installation and maintenance.



SAFETY INSTRUCTIONS

FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS MAY RESULT IN SERIOUS INJURY, PROPERTY DAMAGE AND WILL VOID WARRANTY.

Owner must ensure that all players know and follow these rules for safe operation of the system.

To ensure safety, do not attempt to assemble this system without following the instructions carefully. Proper and complete assembly, use and supervision is essential for proper operation and to reduce the risk of accident or injury. A high probability of serious injury exists if this system is not installed, maintained, and operated properly.

• If using a ladder during assembly, use extreme caution.

- Check base regularly for leakage. Slow leaks could cause the system to tip over unexpectedly
- Seat the pole sections properly (if applicable). Failure to do so could allow the pole sections to separate during play and/or during transport of the system.
- Climate, corrosion or misuse could result in system failure.
- If technical assistance is required, contact Huffy Sports.
- Minimum operational height is 6'6" (1.98m) to the bottom of backboard.

Most injuries are caused by misuse and/or not following instructions. Use caution when using this unit.







PARTS LIST - See Hardware Identifier

₫.	<u>ltem</u>	<u>Qty.</u>	<u>Part No.</u>	<u>Description</u>	V
	1	1	908026	Top Pole Section	
	2	1	90810701	Middle Pole Section (with Label	
	3	1	908015	Bottom Pole Section	
	4	1	900223		
	5	1	206940	Axle	
	6	2	226403	Wheel	
	7	2	206938	Pushnut	
	8	1	206660	Base	
	9	6	203156	Hex Bolt, 5/16-18 x 1	
	10	18*	203218	Flat Washer, 5/16	
	11	15*	203100	Hex-Flange Nut, 5/16-18	
	12	1	201581	Pole Bracket	
	13	2	202662	Hex Bolt, 5/16-18 x 4.5	
	14	2	203099	Lock Nut, 5/16-18	
	15	4	203223	Carriage Bolt, 5/16-18 x 1	
	16	2	906410	Tank Strut	
	17	1	200516	Bolt Cover	
	18	1	206990	Reinforcement Bracket	
	19	3	203038	Carriage Bolt, 5/16-18 x 2-3/4 Long	
	20	8	202862	Spacer, Plastic, 1.19" Long	
	21	7	206340	Lock Nut, 1/2-13	
	22	2	203053	Carriage Bolt, 5/16-18 x 4 Long	
	23	1	204872	Label, Height Indicator	
	24	2	204858	Spacer, Plastic, Biscuit	
	25	1	207103	Pole Cap	
	26	1	204853	Lanyard, Black Coil	
	27	1	204850	Pin, Locking	
	28	1	204832	Bracket, Pole Mount	
	29	4	206360	Hex Bolt, 3/8-16 x 2.625	
	30	6	203063	Nylon Insert Lock Nut, 3/8-16	
	31	4	201124	Lock Nut, 3/8-16	
	32	2	900867	Plate, Triangle	
	33	2	904807	Elevator Tube, Upper - Short	
	34	2	900183	Elevator Tube, Lower - Long	
	35	2	204859	Cover, Pin Slide	*) (

☑ Item Qty. Part No. Description

□ 44 1 205226 Left Board Pad □ 45 1 205225 Right Board Pad □ 46 6* 201596 Sheet Metal Screw, #14 x 1.25 □ 47 6* 206303 Flat Washer, 1/4 □ 48 1 205241 Center Board Pad □ 49 1 202856 Bolt, Hex, 1/2-13 x 4" Long □ 50 4 203232 Flat Washer, 3/8 □ 51 1 202795 Label, NBA	36	2	204838	Spring, Counter Balance
□ 39 4* 203257 Tie Straps □ 40 1 200504 Rim Cover □ 41 2 200520 Screw, #8 x .75 □ 42 1 511679 Label, Height Adj and Moving □ 43 2 204857 Spacer, Metal 1/2" O.D. x 1.44 Long □ 44 1 205226 Left Board Pad □ 44 1 205225 Right Board Pad □ 45 1 205225 Right Board Pad □ 46 6* 201596 Sheet Metal Screw, #14 x 1.25 □ 47 6* 206303 Flat Washer, 1/4 □ 48 1 205241 Center Board Pad □ 49 1 202856 Bolt, Hex, 1/2-13 x 4" Long □ 50 4 203232 Flat Washer, 3/8 □ 51 1 202795 Label, NBA	37	2	203617	Base Plug
□ 40 1 200504 Rim Cover □ 41 2 200520 Screw, #8 x .75 □ 42 1 511679 Label, Height Adj and Moving □ 43 2 204857 Spacer, Metal 1/2" O.D. x 1.44 Lor □ 44 1 205226 Left Board Pad □ 45 1 205225 Right Board Pad □ 46 6* 201596 Sheet Metal Screw, #14 x 1.25 □ 47 6* 206303 Flat Washer, 1/4 □ 48 1 205241 Center Board Pad □ 49 1 202856 Bolt, Hex, 1/2-13 x 4" Long □ 50 4 203232 Flat Washer, 3/8 □ 51 1 202795 Label, NBA	38	1	201965	Front Cover
□ 41 2 200520 Screw, #8 x .75 □ 42 1 511679 Label, Height Adj and Moving □ 43 2 204857 Spacer, Metal 1/2" O.D. x 1.44 Long □ 44 1 205226 Left Board Pad □ 44 1 205225 Right Board Pad □ 45 1 205225 Right Board Pad □ 46 6* 201596 Sheet Metal Screw, #14 x 1.25 □ 47 6* 206303 Flat Washer, 1/4 □ 48 1 205241 Center Board Pad □ 49 1 202856 Bolt, Hex, 1/2-13 x 4" Long □ 50 4 203232 Flat Washer, 3/8 □ 51 1 202795 Label, NBA	39	4*	203257	Tie Straps
□ 42 1 511679 Label, Height Adj and Moving □ 43 2 204857 Spacer, Metal 1/2" O.D. x 1.44 Long □ 44 1 205226 Left Board Pad □ 45 1 205225 Right Board Pad □ 46 6* 201596 Sheet Metal Screw, #14 x 1.25 □ 47 6* 206303 Flat Washer, 1/4 □ 48 1 205241 Center Board Pad □ 49 1 202856 Bolt, Hex, 1/2-13 x 4" Long □ 50 4 203232 Flat Washer, 3/8 □ 51 1 202795 Label, NBA	40	1	200504	Rim Cover
□ 43 2 204857 Spacer, Metal 1/2" O.D. x 1.44 Lot □ 44 1 205226 Left Board Pad □ 45 1 205225 Right Board Pad □ 46 6* 201596 Sheet Metal Screw, #14 x 1.25 □ 47 6* 206303 Flat Washer, 1/4 □ 48 1 205241 Center Board Pad □ 49 1 202856 Bolt, Hex, 1/2-13 x 4" Long □ 50 4 203232 Flat Washer, 3/8 □ 51 1 202795 Label, NBA	41	2	200520	Screw, #8 x .75
□ 44 1 205226 Left Board Pad □ 45 1 205225 Right Board Pad □ 46 6* 201596 Sheet Metal Screw, #14 x 1.25 □ 47 6* 206303 Flat Washer, 1/4 □ 48 1 205241 Center Board Pad □ 49 1 202856 Bolt, Hex, 1/2-13 x 4" Long □ 50 4 203232 Flat Washer, 3/8 □ 51 1 202795 Label, NBA	42	1	511679	Label, Height Adj and Moving
□ 45 1 205225 Right Board Pad □ 46 6* 201596 Sheet Metal Screw, #14 x 1.25 □ 47 6* 206303 Flat Washer, 1/4 □ 48 1 205241 Center Board Pad □ 49 1 202856 Bolt, Hex, 1/2-13 x 4" Long □ 50 4 203232 Flat Washer, 3/8 □ 51 1 202795 Label, NBA	43	2	204857	Spacer, Metal 1/2" O.D. x 1.44 Long
□ 46 6* 201596 Sheet Metal Screw, #14 x 1.25 □ 47 6* 206303 Flat Washer, 1/4 □ 48 1 205241 Center Board Pad □ 49 1 202856 Bolt, Hex, 1/2-13 x 4" Long □ 50 4 203232 Flat Washer, 3/8 □ 51 1 202795 Label, NBA	44	1	205226	Left Board Pad
□ 47 6* 206303 Flat Washer, 1/4 □ 48 1 205241 Center Board Pad □ 49 1 202856 Bolt, Hex, 1/2-13 x 4" Long □ 50 4 203232 Flat Washer, 3/8 □ 51 1 202795 Label, NBA	45	1	205225	Right Board Pad
□ 48 1 205241 Center Board Pad □ 49 1 202856 Bolt, Hex, 1/2-13 x 4" Long □ 50 4 203232 Flat Washer, 3/8 □ 51 1 202795 Label, NBA	46	6*	201596	Sheet Metal Screw, #14 x 1.25
□ 49 1 202856 Bolt, Hex, 1/2-13 x 4" Long □ 50 4 203232 Flat Washer, 3/8 □ 51 1 202795 Label, NBA	47	6*	206303	Flat Washer, 1/4
□ 50 4 203232 Flat Washer, 3/8 □ 51 1 202795 Label, NBA	48	1	205241	Center Board Pad
□ 51 1 202795 Label, NBA	49	1	202856	Bolt, Hex, 1/2-13 x 4" Long
,	50	4	203232	Flat Washer, 3/8
52 2 90096401 Bracket, Backboard Support	51	1	202795	Label, NBA
	52	2	90096401	Bracket, Backboard Support
□ 53 4 201681 Spacer, Plastic, .530 I.D. x .88 Lor	53	4	201681	Spacer, Plastic, .530 I.D. x .88 Long
□ 54 2 203103 Carriage Bolt, 5/16-18 x 2 Long	54	2	203103	Carriage Bolt, 5/16-18 x 2 Long
□ 55 1 204803 Screw, Phillips Head	55	1	204803	Screw, Phillips Head
□ 56 4 201682 Spacer, .530 I.D. x 1.875	56	4	201682	Spacer, .530 I.D. x 1.875
□ 57 6 202532 Bolt, Hex, 1/2-13 x 9.5"	57	6	202532	Bolt, Hex, 1/2-13 x 9.5"
58 1 904866 Height Adjustment Rod	58	1	904866	Height Adjustment Rod
□ 59 1 204855 Handle, Left	59	1	204855	Handle, Left
60 1 204856 Handle, Right	60	1		
61 1 900033 Bracket, Slam Jam				
		1	200318	Bracket, Reinforcement, Slam Jam
G3 1 203470 Washer Flat, Slam Jam				
□ 64 1 203472 Spring, Black, Slam Jam		1		
65 1 203795 Nut, Special, Slam Jam				•
□ 66 1 203796 T-Bolt, 3/8-16 x 5 Long		1	203796	
□ 67 Rim				
-			205528	Bolt, Hex Flange, 5/16-18 x 1 Long
□ 68 1 Net	68	1		Net

*You may have extra parts with this model.

HARDWARE IDENTIFIER (NUTS, WASHERS & METAL SPACERS)



P/N M601111 08/05



HARDWARE IDENTIFIER (RIM)





Align dimple of middle pole with slot of bottom pole.While maintaining alignment, bounce top and middle pole assembly (1 & 2) onto lower pole section (3) as shown until they no longer move toward pole identification mark.



3.





3.

Secure tank struts (16) to pole as shown. Nut should be tightened until flush (even) with lock nuts outer edge. Place cap (17) over exposed end of bolt as shown.





Rotate non-secured ends of tank struts (16) outward to mounting holes in tank as shown. Secure ends of tank struts (16) to tank as shown. Repeat for opposite side.





08/05

Insert axle (5) through wheel bracket (4). Secure wheels (6) to axle using pushnuts (7). Carefully tap pushnuts onto axle with hammer or mallet



5.

14



Install pole mount bracket (28) and reinforcement bracket (18) with carriage bolts (22) as shown. Tighten flange nuts (11) completely.



1.







Toward Board October State of the state of t	Towa		0	0	0			0	Toward
Board Lower Elevator tube Lower Elevator tube Lower Elevator tubes (34) and counter balance spring (36) to backboard support rackets (52) using spacers (53 & 56), bolt (57), and nut (21) as shown.	БОа	ra				e		\prec _	Pole
Board Lower Elevator tube Lower Elevator tube Lower Elevator tubes (34) and counter balance spring (36) to backboard support rackets (52) using spacers (53 & 56), bolt (57), and nut (21) as shown.									
Lower Elevator tube ttach lower elevator tubes (34) and counter balance spring (36) to backboard support rackets (52) using spacers (53 & 56), bolt (57), and nut (21) as shown.		0				0	0	~ °	○ Toward Pole
rackets (52) using spacers (53 & 56), bolt (57), and nut (21) as shown.				Lower F	Elevator tub	е		34	
									l support
	rackets	(52) usi	ng spa	acers (53 8	3 56), bolt (5	7), and nut	(21) as sh	own.	
					/				
		/							
				r					
		$\langle \langle$				52	36	21	
	/		M					\rightarrow	\times
							56	× //	
					56				
52				57					
52						$\langle $			
52									
52					34				
							ne la		
					/		57		66
					\				
					\setminus				

9. Attach upper elevator tubes (33) to backboard support brackets (52) using spacers (53), bolt (57), and nut (21) as shown.



10. Support pole on sawhorse. Attach backboard assembly to top pole section (4) as shown. Install pole cap (25).













SECTION G: HEIGHT ADJUSTMENT AND MOVING LABEL



Apply Height Adjustment and Moving Label (42) to front of pole, where it is clearly visible.

