Thinking of you

Electrolux

instruction booklet





gas hobs

We were thinking of you when we made this product

#### Welcome to the world of Electrolux

Thank you for choosing a first class product from Electrolux, which hopefully will provide you with lots of pleasure in the future.

The Electrolux ambition is to offer a wide variety of quality products that make your life more comfortable.

You find some examples on the cover in this manual. Please take a few minutes to study this manual so that you can take advantage of the benefits of your new machine.

We promise that it will provide a superior User Experience delivering Fase-of-Mind.

Good luck!

#### 4 electrolux

## **Contents**

Important Safety Information	5
Description of the Hob	7
Instructions for the User	
Operation	8
Maintenance and Cleaning	
Periodic Maintenance	
Something Not Working?	12
Standard Guarantee Conditions	
European Guarantee	26
•	
Instructions for the Installer	12
	I V
Engineer technical data	13
Engineer technical data	13
Engineer technical dataImportant safety requirements	13 15
Engineer technical data	13 15 16
Engineer technical data	13 15 16 17
Engineer technical data	13 15 16 17
Engineer technical data	13 15 16 17 18
Engineer technical data	13 15 16 17 18 19

## **Guide to Use the instructions**

The following symbols will be found in the text to guide you throughout the Instructions:



Safety Instructions



Step by step instructions for an operation



Hints and Tips



Environmental information

#### **MANUFACTURER:**

ELECTROLUX ITALIA S.p.A. C.so Lino Zanussi, 30 33080 PORCIA (PN)- Italy

# **Important Safety Information**

You MUST read these warnings carefully before installing or using the hob. If you need assistance, contact our Customer Care Department on 08445 613 613.

#### Installation

- This appliance must be installed and serviced by a competent person as stated in the Gas Safety (Installation and Use) Regulations Current Editions and the IEE Wiring Regulations.
- For appliances installed in the Republic of Ireland please refer to NSAl-Domestic Gas Installations I.S.813 Current Editions and the ETCI Rules for Electrical Installations.
- Remove all packaging before using the hob.
- Ensure that the gas and electrical supply complies with the type stated on the rating plate, located near the gas supply pipe.
- Do not attempt to modify the hob in any way.

## **People Safety**

- This hob is designed to be operated by adults. Do not allow children to play near or with the hob.
- This appliance is not intended for use by children or other persons whose physical, sensory or mental capabilities or lack of experience and knowledge prevents them from using the appliance safely without supervision or instruction by a responsible person to ensure that they can use the appliance safely.
- The hob gets hot when it is in use. Children should be kept away until it has cooled.
- Children can also injure themselves by pulling pans or pots off the hob.

## **During Use**

- This hob is intended for domestic cooking only. It is not designed for commercial or industrial purposes.
- This appliance is not connected to a combustion products evacuation device.
   It must be installed and connected in accordance with current installation regulations. Particular attention shall be given to the relevant requirements regarding ventilation.
- When in use a gas cooking hob will produce heat and moisture in the room in which it has been installed. Ensure there is a continuous air supply, keeping air vents in good condition or installing a cooker hood with a venting hose.
- Ensure a good ventilation around the appliance. A poor air supply could cause lack of oxygen.
- When using the hob for a long period time, the ventilation should be

#### 6 electrolux

- improved, by opening a window or increasing the extractor speed.
- Do not use this hob if it is in contact with water. Do not operate the hob with wet hands.
- Appliances become very hot with use, and retain their heat for long periods after use. Care should be taken to avoid touching heating elements inside the hob.
- Ensure the control knobs are in the 'OFF' position when not in use.
- When using other electrical appliances, ensure the cable does not come into contact with the hot surfaces of the cooking appliance.
- Unstable or misshapen pans should not be used on the hob as unstable pans can cause an accident by tipping or spillage.
- Never leave the hob unattended when cooking with oil and fats.
- Never use plastic or aluminium foil dishes on the hob.
- Perishable food, plastic items and areosols may be affected by heat and should not be stored above or below the hob unit.
- This appliance cannot be cleaned with steam or with a steam cleaning machine.

#### Service

• This hob should only be repaired or serviced by an authorised Service Engineer and only genuine approved spare parts should be used.


## Environmental Information

- After installation, please dispose of the packaging with due regard to safety and the environment.
- When disposing of an old appliance, make it unusable, by cutting off the cable.
- The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

These instructions are only valid for countries whose identification symbols are shown on the cover of this instruction booklet and on the appliance itself.

Keep this instruction book for future reference and ensure it is passed on to any new owner.

# **Description of the Hob**

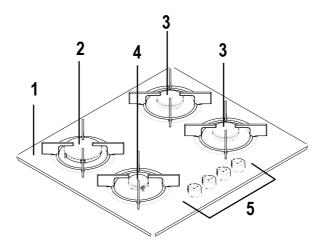

- 1. Hob top
- 2. Rapid Burner
- 3. Semi Rapid Burner
- 4. Auxiliary Burners
- 5. Control knobs

## Instructions for the User



#### INSTALLATION

Any gas installation must be carried out by a registered competent person, and in accordance with existing rules and regulations.

The relevant instructions are to be found in the second section of this manual.

Please, ensure that, once the hob is installed, it is easily accessible for the engineer in the event of a breakdown.

#### WHEN THE HOB IS FIRST INSTALLED

Once the hob has been installed, it is important to remove any protective materials, which were put on in the factory.

The manufacturer will not accept liability, should the above instructions or any of the other safety instructions incorporated in this book be ignored.

# Operation

#### Hob burners control knobs

The symbols on the knobs mean that :

there is no gas supply

there is maximum gas supply

hthere is minimum gas supply


## Lighting the burners

For easier lighting, proceed before putting a pan on the pan support.



- Turn the relevant knob anticlockwise to maximum position (☆) and push down the knob to ignite.
- After lighting the flame, keep the knob
  pushed down for about 5 seconds. This will allow the "thermocouple"
  (Fig.-lett. D) to be heated and the safety device to be switched off,
  otherwise the gas supply would be interrupted.
- Then, check the flame is regular and adjust it as required.
- If the burner does not ignite, turn the control knob to off position, and try again.
- If you cannot light the flame even after several attempts, check the "cap" (Fig.-lett. A) and "crown" (Fig.-lett. B) are in the correct position.
- When switching on the mains, after installation or a power cut, it is quite normal for the spark generator to be activated automatically.
- In the absence of electricity, ignition can occur without the electrical device; in this case, approach the burner with a flame, push the relevant knob down and turn it anti-clockwise until it reaches the "maximum" position.

Do not keep the control knob pressed for more than 15 seconds. If the burner does not light even after 15 seconds, release the control knob, turn it the "off" position (■) and wait for at least one minute before trying to light the burner again.

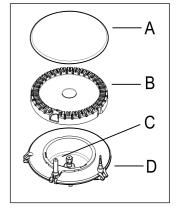

- A Burner cap
- **B** Burner crown
- C Ignition electrode
- $\boldsymbol{\mathsf{D}}$  Thermocouple

- If the burner accidentally goes out, turn the control knob to the "off" position and wait for at least **one minute** before trying to light the burner again.
- if the control knobs become difficult to turn, please contact your local Service Force Centre.

## Using the hob correctly

To ensure maximum burner efficiency, it is strongly recommended that you use only pots and pans with a **flat** bottom fitting the size of the burner used, so that flame will not spread beyond the bottom of the vessel (see the table below).

Burner	minimum diameter	maximum diameter
Large (rapid)	180 mm	260 mm
Medium (semi-rapid)	120 mm	220 mm
Small (auxiliary)	80 mm	180 mm

As soon as a liquid starts boiling, turn down the flame so that it will barely keep the liquid simmering.




Use only pans or pots with flat bottom.



If you use a saucepan which is smaller than the recommended size, the flame will spread beyond the bottom of the vessel, causing the handle to overheat.

- Carefully supervise cooking with **fat or oil**, since these types of foodstuff can result in a fire, if over-heated.
- The stainless steel can become tarnished if excessively heated. Therefore prolonged cooking with potstones, earthenware pans or cast-iron plates is inadvisable. Also, do not use aluminium foil to protect the top during use.

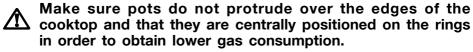

Do not place unstable or deformed pots on the rings: they could tip over or spill their contents, causing accidents.

Pots must not enter the control zone.

# **Maintenance and Cleaning**



Before any maintenance or cleaning can be carried out, you must DISCONNECT the hob from the electricity supply.



The hob is best cleaned whilst it is still warm, as spillage can be removed more easily than if it is left to cool.



This appliance cannot be cleaned with steam or with a steam cleaning machine.

## The Hob Top

Clean the hob while it is still warm.

Never use aggressive or abrasive agents, such as oven sprays, stain or rust removers, scouring powders, or sponges with an abrasive effect.

Special cleaning agents are available from department stores.

Slight, non-burnt soilage can be wiped off with a damp cloth. Burnt soilage has to be removed with a damp cloth.

Light metallic stains (aluminium residues) can be removed from the cooking zone with a glass hob cleaning agent such as Vitroclen when cool.

Sugar solutions, food stuffs with a high sugar content must be removed immediately. If this type of soilage is not removed immediately it can cause irreparable damage to the glass surface. When the surface has cooled wipe over with a damp cloth and Vitroclen.

Before using any detergent or cleaning agent on the glass top, ensure they are recommended by the manufacturer for use on glass hobs.

Do not apply any cleaning agents to hot cooking zones. Ensure any residues are wiped off before the cooking zones are used again.



If scratches or cracks are noticed on the glass top, immediately disconnect the appliance from the electrical supply, contact your local Service Force Centre and avoid using the appliance until it has been repaired.



Keep all objects and materials which can melt away from the cooking surface, e.g. plastics, aluminium foil.



Care should be taken when preparing food or drinks containing sugar. If anything of this nature accidentally comes into contact with the glass surface it must be removed immediately while still hot and wiped away to avoid damage to the surface.


## **Pan Supports**

The pan supports can be removed to easily clean the hob (Fig.). Wash the pan supports using hot soapy water; after cleaning, be sure to wipe dry with a soft cloth.



The pan supports **are not** dishwasher proof; they must be washed **by hand**.

Washing them by hand, take care when drying them as the enamelling process occasionally leaves rough edges. If necessay, remove stubborn stains using a paste cleaner. After cleaning, make sure that the pan supports are correctly positioned.

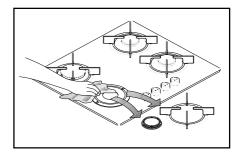



Pay attention when replacing the pan supports in order to avoid scratching the glass hob top.

#### The Burners

The burner caps and crowns can be removed for cleaning.

Wash the burners caps and crowns using hot soapy water, and remove marks with a mild paste cleaner. A well moistened soap impregnated steel wool pad can be used with caution, if the marks are particularly difficult to remove.

After cleaning, be sure to wipe dry with a soft cloth.

## The Ignition electrode

The electric ignition is obtained through a ceramic electrode which contains a metal electrode (Page 8 - lett. C). Keep these components very clean, to avoid difficult lighting, and check that the burner crown holes (Page 8 - lett. B) are not obstructed.

## **Periodic Maintenance**

Periodically ask your local Service Centre to check the conditions of the gas supply pipe and the pressure adjuster, if fitted.

# **Something Not Working?**

If the hob is not working correctly, please carry out the following checks before contacting your local Service Force Centre.

SYMPTOM	SOLUTION
■ There is no spark when lighting the gas.	<ul> <li>Check that the unit is plugged in and the electrical supply is switched on.</li> <li>Check that the RCCB has not tripped (if fitted).</li> <li>Check the mains fuse has not blown.</li> <li>Check the burner cap and crown have been replaced correctly, e.g. after cleaning.</li> </ul>
■ The gas ring burns unevenly.	<ul> <li>Check the main jet is not blocked and the burner crown is clear of food particles.</li> <li>Check the burner cap and crown have been replaced correctly, e.g. after cleaning.</li> </ul>

If after all these checks, your hob still does not operate correctly, contact your local Service Force Centre.

Please note that it will be necessary to provide proof of purchase for any in-guarantee service calls.

In-guarantee customers should ensure that the above checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

230  $V_{\sim}$  50 Hz supply, 3 core flexible cable with non rewireable plug fitted with a 3 amp cartridge fuse.

## Instructions for the Installer

## Engineer technical data

OVERALL DIMENSIONS Width: 590 mm

Depth: 520 mm

**CUT OUT DIMENSIONS** Width: 560 mm

Depth: 480 mm

#### SUPPLY CONNECTIONS

Gas:

R 1/2 inch (1/2 inch male) Rear right hand corner

Electric:

230  $V_{\sim}$  50 Hz supply, 3 core flexible cable with non rewireable plug fitted with a 3 amp cartridge fuse.

**HEAT INPUT** 

Rear Right Burner 1.9 kW (6485 BTU/HR)

(semi-rapid)

Front Right Burner 1.9

(semi-rapid)

1.9 kW (6485 BTU/HR)

Rear Left Burner

(rapid)

2.9 kW Natural Gas (9898 BTU/HR)

2.7 kW L.P.G.

Front Left Burner

(auxiliary)

1.0 kW (3413 BTU/HR)

APPLIANCE CLASS 3

APPLIANCE CATEGORY GB - IE: II2H3+

GAS SUPPLY Natural gas G20 (2H) 20 mbar

This appliance is manufactured according to the following EEC directives:

2006/95 EEC - 2004/108 EEC - 2009/142 EEC, current edition.

## **14** electrolux

# Characteristics of gas burners

TYPE OF	BURNERS	INJECTORS	NORMAL POWER	REDUCED POWER	NORMAL POWER			FEEDING PRESSURE
GAS		1/100 mm	kW	kW	m <sup>3</sup> /h	g/h G30	g/h G31	mbar
NATURAL GAS	Rapid Semi-rapid Auxiliary	119 96 70	2,9 1,9 1,0	0,75 0,45 0,33	0,276 0,181 0,09			20
LIQUID GAS	Rapid Semi-rapid Auxiliary	86 71 50	2,7 1,9 1,0	0,75 0,45 0,33		196 138 73	192 136 71	28-30

Burner	Dia. Tap By-pass 1/100 mm	
Auxiliary Semi-rapid Rapid	28 32 42	
Aeration adjustment none		

# Important safety requirements

This hob must be installed in accordance with the Gas Safety (Installation and Use) Regulations (Current Edition) and the IEE Wiring Regulations (Current Edition).

For appliances installed in the Republic of Ireland please refer to NSAI-Domestic Gas Installation I.S. 813 Current Editions and the ETCI Rules for Electrical Installations.

#### Provision for Ventilation

Detailed recommendations are contained in the following British Standards Codes Of Practice: B.S. 6172/ B.S. 5440, Par. 2 and B.S. 6891 Current Editions.

The hob should not be installed in a bed sitting room with a volume of less than 20 m³. If it is installed in a room of volume less than 5 m³ an air vent of effective area of 100 cm² is required. If it is installed in a room of volume between 5 m³ and 10 m³ an air vent of effective area of 50 cm² is required, while if the volume exceeds 11 m³ no air vent is required.

However, if the room has a door which opens directly to the outside no air vent is required even if the volume is between 5 m<sup>3</sup> and 11 m<sup>3</sup>.

If there are other fuel burning appliances in the same room, B.S. 5440 Part 2 Current Edition, should be consulted to determine the requisite air vent requirements.

For appliances installed in the Republic of Ireland please refer to the NSAl-Domestic Gas Installation I.S. 813 Current Editions Table Four.

## Installation


#### **IMPORTANT**

### Any gas installation must be carried out by a GAS SAFE REGISTER installer.

Please, ensure that, once the hob is installed, it is easily accessible for the engineer in the event of a breakdown.

The manufacturer will not accept liability, should the above instructions or any of the other safety instructions incorporated in this instruction booklet be ignored.

On the end of the shaft, which includes the G 1/2" threaded elbow. adjustment is fixed so that the washer is fitted between the components as shown in the diagram. Screw the parts together without using excessive force.

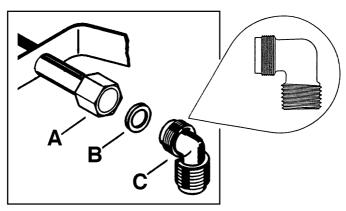

- A) End of shaft with nut
- B) Washer
- C) Elbow

## **Gas Connection**

Connection to the gas supply should be with either rigid or semi-rigid pipe, i.e. steel or copper.

The connection should be suitable for connecting to R 1/2 (1/2 BSP male thread).

When the final connection has been made, it is essential that a thorough leak test is carried out on the hob and installation.

Ensure that the main connection pipe does not exert any strain on the hob.



It is important to install the elbow correctly, with the shoulder on the end of the thread, fitted to the hob connecting pipe.

Failure to ensure the correct assembly will cause leakage of gas.

## Location

The hob may be located in a kitchen, a kitchen/diner or bed sitting room, but not in a bathroom, shower room or garage.


Ensure that there is a minimum distance of 55 mm between the rear cut out edge and the wall.

A minimum distance of **450 mm** must be left between the side edges of the cut out and any adjacent cabinets or walls.

The minimum distance combustible material can be fitted above the hob in line with the edges of the hob is 400 mm. If it is fitted below 400 mm a space of 50 mm must be allowed from the edges of the hob.

The minimum distance combustible material or a cooker hood can be fitted above the hob is 650 mm.


For appliances installed in the Republic of Ireland please refer to NSAI-Domestic Gas Installation I.S 813 Current Edition Section 7- Permitted Locations of Appliance.

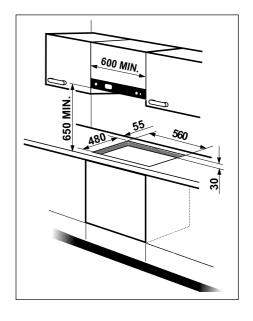


# Fitting the Hob into the Worktop

Before fitting the hob into the cut out, an adhesive seal must be fitted to the underside outside edge of the hob. It is essential that no gaps are left in this seal in order to prevent spillage near the hob seeping into the cabinet below.

- Remove the pan supports, the burners caps and crowns and turn the hob upside down, taking care the ignition candles are not damaged in this operation.
- 2) Place the sealing gasket (**C**) all around the glass top edge as shown in diagram **A**.
- 3) Place the hob in the cut out, taking care of its centring.
- 4) Fit the hob in the cut out and push it down until the glass top and the working top make contact, as shown in diagram **B**.

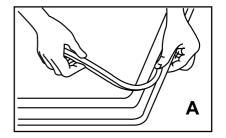

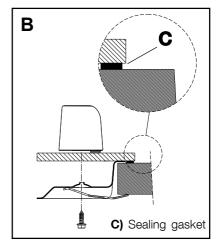

# **Building In**

## Building over a cupboard or drawer


If the hob is to be installed above a cupboard or drawer it will be necessary to fit a heat resistant board below the base of the hob on the underside of the work surface.


It is also recommended to carry out the electrical connection to the hob as shown in diagrams 1 and 2.


# Building over a kitchen unit with door


Proper arrangements must be taken in designing the furniture unit, in order to avoid any contact with the bottom of the hob which can be heated when it is operated. The recommended solution is shown in diagram 3.

The panel fitted under the hob ("a") should be easily removable to allow easy access if technical assistance is needed. The space behind the kitchen unit ("b") can be used for connections.

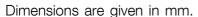

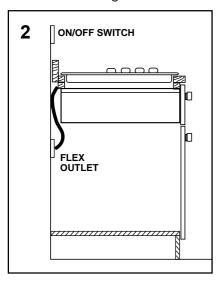

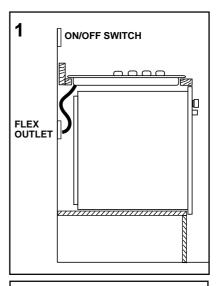

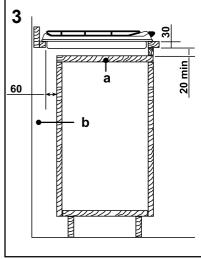

## **Electrical Connections**



Any electrical work required to install this hob should be carried out by a qualified electrician or competent person, in accordance with the current regulations.



 $m{\Upsilon}$  This hob must be earthed.

The manufacturer declines any liability should these safety measures not be observed.

# This hob is designed to be connected to a 230 V 50 Hz AC electrical supply.

Before switching on, make sure the electricity supply voltage is the same as that indicated on the hob rating plate. The rating plate is located on the bottom of the hob. A copy is attached on the back cover of this book.

The hob is supplied with a 3 core flexible supply cable.

The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow - Earth
Blue - Neutral
Brown - Live

- 1. Connect the green and yellow (earth) wire to the terminal which is marked with the letter 'E' or the earth symbol (a) or coloured green and yellow. The earth wire should be about 2 cm longer than the neutral and live wires.
- 2. Connect the blue (neutral) wire to the terminal which is marked with the letter 'N' or coloured black.
- **3.** Connect the brown (live) wire to the terminal which is marked with the letter 'L' or coloured red.

Upon completion there must be no cut, or stray strands of wire present and the cable clamp must be secure over the outer sheath.



A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely.



The replacement of electric cable must be carried out exclusively by the service force centre or by personnel with similar competencies, in accordance with the current regulations.

#### Permanent Connection

In the case of a permanent connection, it is necessary that you install a double pole switch between the hob and the electricity supply (mains), with a minimum gap of 3 mm between the switch contacts and of a type suitable for the required load in compliance with the current electric regulations.

The switch must not break the yellow and green earth cable at any point.



Ensure that the hob supply cord does not come into contact with surfaces with temperatures higher than 90 deg. C.

### Supply cable replacement

The cable used to connect the hob to the electrical supply must comply to the specifications given below.

Min. size Cable/flex	Cable / flex type	Fuse
0.75 mm <sup>2</sup>	H05 V2V2-F (T90)	3 A

# Commissioning

When the hob has been fully installed it will be necessary to check the minimum flame setting. To do this, follow the procedure below.




- 1) Turn the gas tap to the MAX position and ignite.
  - 2) Set the gas tap to the MIN flame position then turn the control knob from MIN to MAX several times. If the flame is unstable or is extinguished follow the procedure below.

#### Procedure:



- (2) Re-ignite the burner and set to MIN.
  - 2) Remove the control knob.
  - 3) To adjust, use a thin bladed screwdriver and turn the adjustment screw (see diagram) until the flame is and does steadv extinguish, when the knob is turned from MIN to MAX.

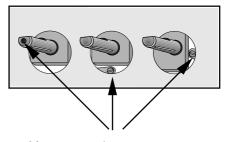

Minimum adjustment screw

Repeat this procedure for all burners.

## Pressure Testing

The pressure testing must be carried out on the burners.



Proceed as follows:

- 1) Remove the pan supports and the burner caps and crowns.
- 2) Fit manometer tube over the injector.
- 3) Turn on the burner gas supply and ignite another burner supply. The pressure reading should be nominally 20 mbar and must be between 17 mbar and 25 mbar.
- 4) Turn off the burner supplies.

## **Conversion from Natural Gas to LPG**



# ↑ IMPORTANT

The replacement/conversion from natural gas to LPG should only be undertaken by a competent person.

It is important to note that this model is designed for use with natural gas but can be converted for use with butane or propane gas providing the correct injectors are fitted. The gas rate is adjusted to suit.

#### Method



- (2) Insure that the gas taps are in the 'OFF' position
  - 2) Isolate the hob from the electricity supply
  - 3) Remove all pan supports, burner caps, rings, crowns and control knobs.
  - 4) With the aid of a 7mm box spanner the burner injectors can then be unscrewed and replaced by the appropriate LPG injectors.

#### TO ADJUST THE GAS RATE

With the aid of a thin bladed screwdriver completely tighten down the by pass adjustment screw. Upon completion stick the replacement rating plate on the under side of the hob.

## **Standard Guarantee Conditions**

We, Electrolux, undertake that if within 12 months of the date of the purchase this Electrolux appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:

- •The appliance has been correctly installed and used only on the gas and electricity supply stated on the rating plate.
- •The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
- •The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- Electrolux Service Force Centre must undertake all service work under this guarantee.
- •Any appliance or defective part replaced shall become the Company's property.
- •This guarantee is in addition to your statutory and other legal rights.

#### **Exclusions**

- •Damage or calls resulting from trans-portation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- •Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of Electrolux manufacturer that are not marketed by Electrolux.

## **Service and Spare Parts**

In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning

#### 08445 616 616

Your telephone call will be automatically routed to the Service Force Centre covering your postcode area.

For the address of your local Service Force Centre and further information about Service Force, please visit the website at

### www.serviceforce.co.uk

Before calling out an engineer, please ensure you have read the details under the heading "Something not working". When you contact the Service Force Centre you will need to give the follo-wing details:

- 1. Your name, address and postcode.
- 2. Your telephone number.

- 3. Clear concise details of the fault.
- 4. The model and Serial number of the appliance (found on the rating plate).
- 5. The purchase date.

Please note a valid purchase receipt or guarantee documentation is required for in guarantee service calls.

#### **Customer Care**

For general enquiries concerning your Electrolux appliance, or for further information on Electrolux products please contact our Customer Care Department by letter or telephone at the address below or visit our website at **www.electrolux.co.uk** 

Customer Care Department Electrolux Major Appliances Addington Way Luton Bedfordshire, LU4 9QQ Tel: **08445 613 613** (\*)

(\*) Calls may be recorded for training purposes

# For Customer Service in The Republic of Ireland please contact us at the address below:

Electrolux Group (Irl) Ltd Long Mile Road Dublin 12 Republic of Ireland

Tel: +353 (0)1 4090751

Email: service.eid@electrolux.ie

# **European Guarantee**

This appliance is guaranteed by Electrolux in each of the countries listed at the back of this user manual, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of the countries listed below the appliance guarantee will move with you subject to the following qualifications:

- The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by the seller of the appliance.
- The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your new country of residence for this particular model or range of appliances.
- The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user.
- The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes.
- The appliance is installed in accordance with all relevant regulations in force within your new country of residence.

The provisions of this European Guarantee do not affect any of the rights granted to you by law.

	www.ele	ectrolux.com
	10-11	
•	<u> </u>	
Albania	+35 5 4 261 450	Rr. Pjeter Bogdani Nr. 7 Tirane
Belgique/België/Belgien	+32 2 363 04 44	Bergensesteenweg 719, 1502 Lembeek
Česká republika	+420 2 61 12 61 12	Budějovická 3, Praha 4, 140 21
Danmark	+45 70 11 74 00	Sjællandsgade 2, 7000 Fredericia
Deutschland	+49 180 32 26 622	Muggenhofer Str. 135, 90429 Nürnberg
Eesti	+37 2 66 50 030	Pärnu mnt. 153, 11624 Tallinn
España	+34 902 11 63 88	Carretera M-300, Km. 29,900 Alcalá de Henares Madrid
France	www.electrolux.fr	
Great Britain	+44 8705 929 929	Addington Way, Luton, Bedfordshire LU4 9QQ
Hellas	+30 23 10 56 19 70	4, Limnou Str., 54627 Thessaloniki
Hrvatska	+385 1 63 23 338	Slavonska avenija 3, 10000 Zagreb
Ireland	+353 1 40 90 753	Long Mile Road Dublin 12
Italia	+39 (0) 434 558500	C.so Lino Zanussi, 26 - 33080 Porcia (PN)
Latvija	+37 17 84 59 34	Kr. Barona iela 130/2, LV-1012, Riga
Lietuva	+370 5 2780609	Ozo 10A, LT 08200 Vilnius
Luxembourg	+352 42 431 301	Rue de Bitbourg, 7, L-1273 Hamm
Magyarország	+36 1 252 1773	H-1142 Budapest XIV, Erzsébet királyné útja 87
Nederland	+31 17 24 68 300	Vennootsweg 1, 2404 CG - Alphen aan den Rijn
Norge	+47 81 5 30 222	Risløkkvn. 2 , 0508 Oslo
Österreich	+43 18 66 400	Herziggasse 9, 1230 Wien
Polska	+48 22 43 47 300	ul. Kolejowa 5/7, Warszawa
Portugal	+35 12 14 40 39 39	Quinta da Fonte - Edificio Gonçalves Zarco - Q 35 -2774-518 Paço de Arcos
Romania	+40 21 451 20 30	Str. Garii Progresului 2, S4, 040671 RO
Schweiz - Suisse - Svizzera	+41 62 88 99 111	Industriestrasse 10, CH-5506 Mägenwil
Slovenija	+38 61 24 25 731	Gerbičeva ulica 98, 1000 Ljubljana
Slovensko	+421 2 43 33 43 22	Electrolux Slovakia s.r.o., Electrolux Domáce spotrebiče SK, Seberíniho 1, 821 03 Bratislava
Suomi	www.electrolux.fi	
Sverige	+46 (0)771 76 76 76	Electrolux Service, S:t Göransgatan 143, S-105 45 Stockholm
Türkiye	+90 21 22 93 10 25	Tarlabaşı caddesi no : 35 Taksim İstanbul
Россия	+7 495 937 7837	129090 Москва, Олимпийский проспект, 16, БЦ "Олимпик"

# www.electrolux.com www.electrolux.co.uk