

Canon

***MultiPASS*TM C75/C80/C70**
FAX-B215C/B230C/B210C
User's Guide



This equipment (H12197/H12158/H12159) conforms with the essential requirements of EC Directive 1999/5/EC.
We declare that this product conforms with the EMC requirements of EC Directive 1999/5/EC at nominal mains input 230V, 50Hz although the rated input of the product is 200V–240V, 50/60Hz.

(For Europe Only)

Copyright

Copyright © 2000 by Canon, Inc. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of Canon, Inc.

Trademarks

Canon and BJ are registered trademarks. BCI, Bubble Jet, MultiPASS, and UHQ are trademarks of Canon Inc.

All other product and brand names are registered trademarks, trademarks or service marks of their respective owners.



As an ENERGY STAR® Partner, Canon has determined that these products meet the ENERGY STAR® guidelines for energy efficiency.

Contents

Chapter 1: Introduction

Using Your Documentation	1-2
Type Conventions Used in This Guide	1-2
Customer Support	1-3
Important Safety Instructions	1-4

Chapter 2: Setting Up

Unpacking Your Unit	2-2
Removing Shipping Materials	2-3
Assembling Your Unit	2-5
Making Connections	2-6
Connecting the Telephone Line and External Devices	2-6
Connecting Your Unit to a PC	2-8
Connecting the Power Cord	2-9
Main Components of Your Unit	2-10
Operation Panel	2-11
One-Touch Speed Dialling/Special Function Buttons	2-12
Installing the BJ Cartridge	2-13
Guidelines	2-13
Installing the BJ Cartridge in Your Unit	2-14
Loading Paper	2-17
Paper Guidelines	2-17
Loading Paper in the Multi-Purpose Tray	2-19
Testing Your Unit	2-20

Chapter 3: Registering Information

Methods of Registering Information in Your Unit	3-2
Guidelines for Entering Numbers, Letters, and Symbols	3-3
Correcting a Mistake	3-5
Registering Sender Information	3-6
What is Sender Information?	3-6
Entering the Date and Time	3-7
Registering Your Unit Number and Name	3-7
Printing a List to Check Information Registered in Your Unit	3-9
Setting the Telephone Line Type	3-10
Dialling Through a Switchboard	3-11
Registering the R Button	3-11

Chapter 4: Document Handling

Document Requirements	4-2
Scanned Area of a Document	4-3
Loading Documents	4-4
Problems With Multipage Documents	4-6
Adding Pages to the Document	4-6

Chapter 5: Paper Handling

Print Media Requirements	5-2
Printable Areas	5-3
Selecting Print Media	5-4
Setting the Paper Thickness Lever	5-6
Loading Paper	5-7
Loading Envelopes	5-8
Using Canon Specialty Print Media	5-10
Specialty Print Media Guidelines	5-10
Printing on High Resolution Paper	5-11
Using the Cleaning Sheet	5-11
Printing on Fabric Sheets	5-13
Printing on Banner Paper	5-14

Chapter 6: Speed Dialling

What is Speed Dialling?	6-2
Speed Dialling Methods	6-2
One-Touch Speed Dialling	6-3
Registering Numbers for One-Touch Speed Dialling	6-3
Using One-Touch Speed Dialling	6-5
Coded Speed Dialling	6-6
Registering Numbers for Coded Speed Dialling	6-6
Using Coded Speed Dialling	6-8
Group Dialling	6-9
Creating Groups	6-9
Using Group Dialling	6-12
Speed Dialling Lists	6-13
Printing Speed Dialling Lists	6-13

Chapter 7: Sending Faxes

Preparing to Send a Fax	7-3
Documents You Can Fax	7-3
Adjusting the Quality of Your Faxes	7-3
Setting Colour or Black & White Transmission	7-3
Setting the Scanning Resolution	7-4
Setting the Scanning Contrast	7-5
Dialling Methods	7-6

Sending Methods	7-7
Memory Sending	7-7
Manual Sending Via the Handset	7-8
Cancelling Sending	7-10
Redialling When the Line is Busy	7-11
Manual Redialling	7-11
Cancelling Manual Redialling	7-11
Automatic Redialling	7-11
What is Automatic Redialling?	7-11
Cancelling Automatic Redialling	7-12
Setting the Options for Automatic Redialling	7-12
Sequential Broadcasting	7-14
Sending a Document to More Than One Destination	7-14
Sending a Document Using Group Dialling	7-16
Delayed Sending (MultiPASS Models Only)	7-16
Sending Other Documents While Your Unit is Set for Delayed Sending	7-16
Documents Stored in Memory	7-17
Printing a List of Documents in Memory	7-17
Printing a Document in Memory	7-18
Deleting a Document From Memory	7-20
Using Alternative Telephone Networks (All Models Except the	
MultiPASS C75/FAX-B215C)	7-21
Registering an Alternative Telephone Network	7-22
Sending With an Alternative Telephone Network	7-23
Registering Speed Dialling With the M Button	7-24
 Chapter 8: Receiving Faxes	
Different Ways to Receive a Fax	8-2
Receiving Faxes Automatically: FAX ONLY MODE	8-3
Setting FAX ONLY MODE	8-3
Receiving Both Faxes and Telephone Calls Automatically: Fax/Tel Mode	8-5
Setting Fax/Tel Mode	8-5
Setting the Options for Fax/Tel Mode	8-6
Receiving Faxes Manually: MANUAL MODE	8-8
Setting MANUAL MODE	8-8
Receiving a Fax Manually	8-8
Receiving With an Answering Machine: ANS.MACHINE MODE	8-10
Setting ANS.MACHINE MODE	8-10
Using Your Unit With an Answering Machine	8-10
Receiving Faxes to the MultiPASS Suite (MultiPASS Models Only)	8-11
When Your PC is Off	8-11
Receiving in Colour	8-12
Setting Colour Reception	8-12

Receiving While Performing Other Tasks	8-13
Receiving Faxes in Memory When a Problem Occurs	8-13
Cancelling Receiving	8-14

Chapter 9: Special Features

Special Dialling	9-2
Dialling an Overseas Number (With Pauses)	9-2
Switching Temporarily to Tone Dialling	9-4
Confirming a Dial Tone	9-5
Restricting Use of Your Unit	9-6
Enabling Restriction of Your Unit	9-6
Cancelling Restriction of Your Unit	9-7

Chapter 10: Making Copies

Documents You Can Copy	10-2
Copying Documents	10-2
Setting the Paper Type for Colour Copying (All Models Except the MultiPASS C75/FAX-B215C)	10-5
Setting the Length of the Bottom Margin	10-6

Chapter 11: Reports and Lists

Summary of Lists and Reports	11-2
ACTIVITY REPORT	11-3
TX (Transmission) REPORT	11-4
MULTI TX/RX (Transaction) REPORT	11-5
RX (Reception) REPORT	11-5

Chapter 12: Maintenance

Periodic Cleaning	12-2
Cleaning the Unit's Exterior	12-2
Cleaning the Unit's Interior	12-3
Cleaning Inside the Printer Cover	12-3
Cleaning the Scanner Components	12-5
Cleaning the Rollers	12-6
BJ Cartridge	12-7
BJ Cartridges and BJ Tanks	12-7
When to Replace a BJ Cartridge or BJ Tank	12-8
Testing and Cleaning the BJ Cartridge Print Head	12-10
Printing the Nozzle Check Pattern	12-10
Cleaning the BJ Cartridge Print Head	12-11
Replacing the BJ Cartridge	12-12
Replacing a BJ Tank	12-15

Chapter 13: Troubleshooting	
If You Cannot Solve the Problem	13-2
Clearing Jams	13-3
Jams in the ADF	13-3
Jams in the Multi-Purpose Tray	13-4
LCD Messages	13-5
Paper Feeding Problems	13-13
Faxing Problems	13-14
Sending Problems	13-14
Receiving Problems	13-16
Copying Problems	13-19
Telephone Problems	13-20
Print Quality Problems	13-20
Printing Problems	13-22
General Problems	13-24
If a Power Cut Occurs	13-26
 Chapter 14: Summary of Settings	
Understanding the Menu System	14-2
Accessing the Menus	14-2
User Settings Menu	14-4
Report Settings Menu	14-5
TX (Transmission) Settings Menu	14-6
RX (Reception) Settings Menu	14-7
Printer Settings Menu	14-8
System Settings Menu	14-9
 Appendix A: Specifications	
General Specifications	A-2
Facsimile	A-3
Copier	A-4
Telephone	A-4
Printer	A-4
BJ Cartridges	A-5
Scanner (MultiPASS Models Only)	A-5
 Appendix B: Options	
Optional Handset	B-2
Package Contents	B-2
Attaching the Handset to Your Unit	B-3
Maintaining Your Handset	B-4
 Index	I-1

Chapter 1

Introduction

Using Your Documentation 1-2

 Type Conventions Used in This Guide 1-2

Customer Support 1-3

Important Safety Instructions 1-4

Using Your Documentation

Your unit includes the following documentation:

- **This guide:** Provides detailed information on how to set up, operate, maintain, and troubleshoot your unit.



This guide contains information for several Canon models. Please note that the illustrations of the unit in this guide may differ from your model, and that button names for your model may appear in brackets. Instructions for specific models are labelled with the unit names.

- **MultiPASS Suite for Windows® Software User's Guide** (MultiPASS models only): This guide, included in the CD-ROM, describes how to use your unit to fax, print, and scan from within your PC's Windows® environment.
- **FAX Suite for Windows® Software User's Guide** (FAX models only): This guide, included in the CD-ROM, describes how to use your unit to print from within your PC's Windows® environment.

Type Conventions Used in This Guide

Please read the list below of symbols, terms, and abbreviations used in this guide.



Cautions tell you how to avoid actions that could injure you or damage your unit. In order to use your unit safely, always observe these cautions.



Notes provide advice on using your unit more effectively, describe operating restrictions, and tell you how to avoid minor difficulties. Reading these is recommended to make the most of your unit and its functions.

(→ p. <i>n-nn</i>)	A number preceded by an arrow and enclosed in parenthesis references a page number in this guide which contains more information on the topic of the previous sentence.
→ <i>Software User's Guide</i>	Refer to the Software User's Guide (included in the CD-ROM) for details on the topic of the previous sentence.
default	A setting that remains in effect unless you change it.
document or fax	The original sheet(s) of paper you send or receive with the unit.
menu	A list of settings from which you select an item to set up or change. A menu has a title which appears in the LCD.
∨ and ∧ buttons	Used to select an item in a menu. Press ∨ to select the next item, and press ∧ to select the previous item.
transaction number	When you send or receive a document, your unit automatically assigns the document a unique transaction number. A transaction number is a four-digit number that will help you keep track of documents you send and receive.

TX/RX NO.	TX/RX NO. is the abbreviation used for <i>Transaction number</i> .
TX	Denotes <i>Sending</i> .
RX	Denotes <i>Receiving</i> .

In addition, this guide uses distinctive typefaces to identify buttons and information in the LCD:

- The buttons you press appear in this typeface: **Stop**.
- Information in the LCD appears in this typeface: `USER SETTINGS`.

Customer Support

Your unit is designed with the latest technology to provide trouble-free operation. If you encounter a problem with the unit's operation, try to solve it by using the information in Chapter 13. If you cannot solve the problem or if you think your unit needs servicing, contact your local authorised Canon dealer or the Canon help line.

Important Safety Instructions



Read these safety instructions thoroughly before using your unit.



Except as specifically described in this guide, do not attempt to service your unit yourself. Never attempt to disassemble the unit: opening and removing its interior covers will expose you to dangerous voltages and other risks. For all service, contact your local authorised Canon dealer or the Canon help line.

■ Handling and Maintenance

- Follow all warnings and instructions marked on the unit.
- Do not subject the unit to strong physical shock or vibration.
- Always unplug the unit before moving or cleaning it.
- To avoid paper jams, never unplug the power cord, open the printer cover, or remove paper from the multi-purpose tray while printing.
- When transporting the unit, leave the BJ cartridge installed in the cartridge holder and tape the cartridge holder to the right side of the unit. This will prevent ink spilling inside the unit.
- Always lift the unit as shown below. Never lift it by any of its attachments.

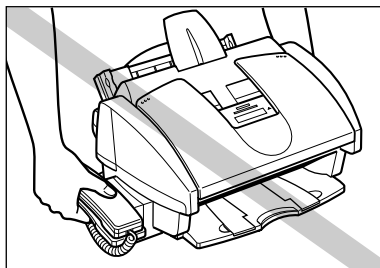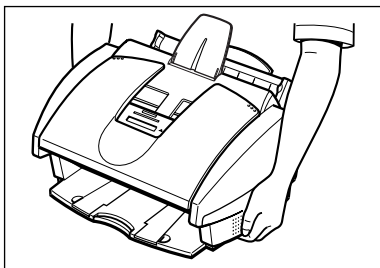

- Do not push objects of any kind into the slots or openings on the cabinet as they may touch dangerous voltage points or short out parts. This could result in fire or electric shock.
- Do not allow small objects (such as pins, paper clips, or staples) to fall into the unit. If something does fall into it, unplug the unit immediately and contact your local authorised Canon dealer or the Canon help line.
- To avoid spillage in or around the unit, do not eat or drink near the unit. If you spill liquid or if any substance falls into the unit, unplug the unit immediately and contact your local authorised Canon dealer or the Canon help line.
- Keep the unit clean. Dust accumulation can prevent the unit from operating properly.

- Unplug the unit from the wall outlet and refer service to qualified personnel under the following conditions:
 - When the power cord or plug is damaged or frayed.
 - If liquid has spilled into the unit.
 - If the unit has been exposed to rain or water.
 - If the unit does not operate normally when you have followed the instructions in this guide. Adjust only those controls that are covered by the instructions in this guide. Improper adjustment of other controls may result in damage and may require extensive work by a qualified technician to restore the product to normal operation.
 - If the unit has been dropped or the cabinet has been damaged.
 - If the unit exhibits a distinct change in performance, indicating a need for servicing.

■ Location

- Place the unit on a flat, stable, vibration-free surface that is strong enough to support its weight (approx. 5.1 kg).
- Place the unit in a cool, dry, clean, well ventilated place.
 - Make sure the area is free from dust.
 - Make sure the location is not affected by extreme temperature changes, and always stays between 10° and 32.5°C.
 - Make sure the area's relative humidity is always between 20% and 85%.
- Keep the unit away from direct sunlight as this can damage it. If you have to place it near a window, install heavy curtains or blinds.
- Do not use the unit near water. Make sure that no wet or humid objects come into contact with the unit.
- Do not use or store the unit outdoors.
- Do not install the unit near devices that contain magnets or generate magnetic fields, such as speakers.
- If possible, place the unit near an existing telephone outlet to avoid the expense of installing a new one.
- Place the unit near a standard 200–240 V AC power outlet.
- Place the unit near the PC you will be connecting it to, and make sure you can reach it easily.

- To ensure reliable operation of the unit and to protect it from overheating (which can cause it to operate abnormally and create a fire risk), do not block the exhaust vent and never block or cover any openings on the unit by placing it on a bed, sofa, rug, or other similar surface. Do not place the unit in a cupboard or built-in installation, or near a radiator or other heat source unless proper ventilation is provided. Install the unit approximately 10 cm away from walls and other equipment. For the dimensions of the unit, → p. A-2.
- Do not stack boxes or furniture around the power outlet. Keep the area free so you can reach the outlet quickly. If you notice anything unusual (smoke, strange odours, noises) around the unit, unplug it immediately. Contact your local authorised Canon dealer or the Canon help line.
- Do not allow anything to rest on the power cord, and do not place the unit where the cord will be walked on. Make sure the cord is not knotted or kinked.

■ Power Supply

- During electrical storms, disconnect the power cord from the power outlet. (Please note that any documents stored in the unit's memory will be deleted when you unplug the unit.)
- Whenever you unplug the unit, wait at least five seconds before you plug it in again.



This product emits low level magnetic flux.

If you use a cardiac pacemaker and feel abnormalities, please move away from this product and consult your doctor.

Chapter 2 Setting Up

Unpacking Your Unit	2-2
Removing Shipping Materials	2-3
Assembling Your Unit	2-5
Making Connections	2-6
Connecting the Telephone Line and External Devices	2-6
Connecting Your Unit to a PC	2-8
Connecting the Power Cord	2-9
Main Components of Your Unit	2-10
Operation Panel	2-11
One-Touch Speed Dialling/Special Function Buttons	2-12
Installing the BJ Cartridge	2-13
Guidelines	2-13
Installing the BJ Cartridge in Your Unit	2-14
Loading Paper	2-17
Paper Guidelines	2-17
Loading Paper in the Multi-Purpose Tray	2-19
Testing Your Unit	2-20

Unpacking Your Unit

Before unpacking your unit, be sure to choose a suitable location for it. (→ p. 1-5)

Carefully remove all items from the box. You should have someone help by holding the box while you lift the unit and its protective packaging out of the box. Save the carton and packaging in case you need to transport the unit in the future.

Make sure you have the following items:

- ① Main unit
- ② Power cord
- ③ Telephone line
- ④ Document support
- ⑤ Document tray (FAX models only)
- ⑥ Extension (FAX models only)
- ⑦ BC-21e Colour BJ cartridge*
- ⑧ BX-20 Black BJ cartridge*
- ⑨ BCI-21 Black BJ tank*
- ⑩ BJ cartridge container
- ⑪ Documentation and software
- ⑫ Limited warranty card**



Please note that the items included with your unit may vary depending on the country of purchase.

- If any items are damaged or missing, notify your local authorised Canon dealer or the Canon help line immediately.
- In addition to the items shipped with your unit, you will need to purchase a printer cable to connect your unit to a PC. (→ p. 2-8)
- Important! Save your sales receipt for proof of purchase in case your unit requires warranty service.


* The BJ cartridges and/or tanks included with your unit may vary depending on the model and country of purchase.

** This item is only included in some countries.


Removing Shipping Materials

Follow this procedure to remove the shipping materials. Keep them in case you need to transport the unit in the future:


MultiPASS C75/FAX-B215C

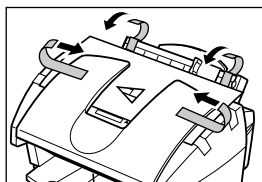


- 1 Remove the shipping tapes from the top of the unit.

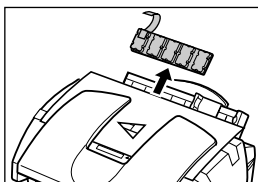



- 2 Remove the protective piece from the multi-purpose tray.

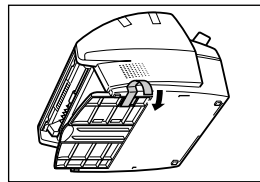



- 3 Remove the shipping tape and protective piece from the bottom of the unit.

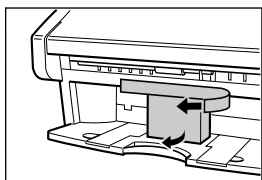



- 4 Remove the shipping tape and protective piece from the output tray.

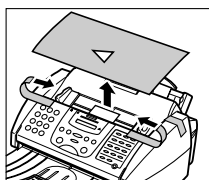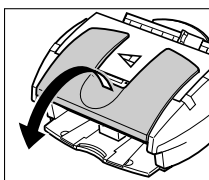

- 5 Open the document tray (MultiPASS model only), then remove the protective sheet and shipping tapes.

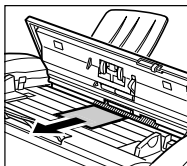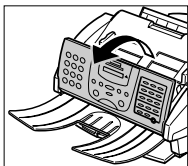

- 6 Open the operation panel partially by gently pulling it towards you (it only opens slightly). Then remove the protective sheet from the ADF. Close the operation panel by pressing it down from the centre until it locks into place.

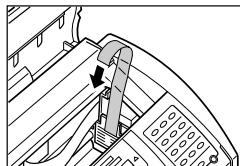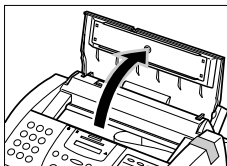


- 7 Open the printer cover, then remove the shipping tape from the side of the unit. Close the printer cover and document tray.




The actual shipping materials may differ in shape, quantity, and position from the ones shown above.


MultiPASS C80/C70, FAX-B230C/B210C

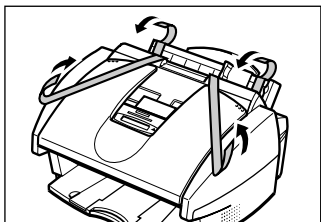


- 1** Remove the shipping tapes from the top of the unit.

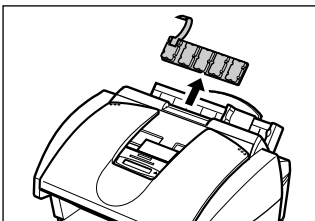

- 2** Remove the protective piece from the multi-purpose tray.

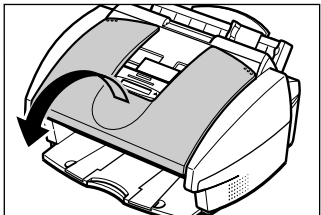

- 3** Open the document tray (MultiPASS models only), then remove the protective sheet.

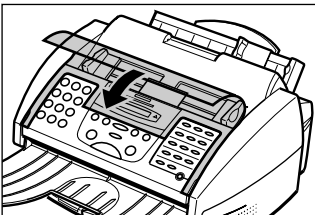


- 4** Open the operation panel partially by gently pulling it towards you (it only opens slightly). Then remove the protective sheet from the ADF. Close the operation panel by pressing it down from the centre until it locks into place.
Close the document tray (MultiPASS models only).




The actual shipping materials may differ in shape, quantity, and position from the ones shown above.

Assembling Your Unit

Follow this procedure to assemble your unit:




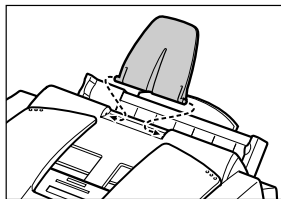


Hold the document support so that it curves towards the back of the unit and fit the tabs on the support into the slots above the ADF.

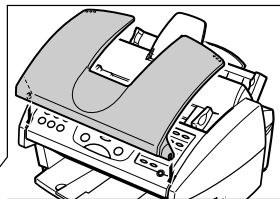

MultiPASS Models Only

Your unit comes with the document tray already attached. However, if you accidentally remove the tray, attach it by fitting the slots on the tray into the tabs on the unit.

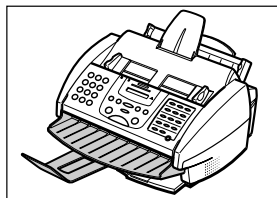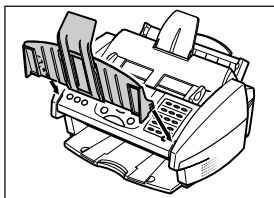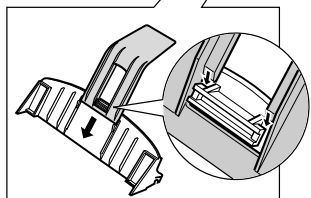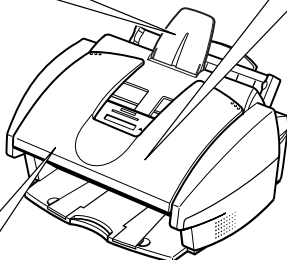

FAX Models Only

Hold the extension as shown and slide it into the rails on the back of the document tray. Then slide the inner section of the extension into the inner rails on the document tray. Attach the document tray to the unit by fitting the slots on the tray into the tabs on the unit.



- To see how your unit looks fully assembled, → p. 2-10.
- For details on attaching the optional handset to your unit, → Appendix B.

Making Connections

Connecting the Telephone Line and External Devices



Your unit has three jacks on the side for connection of the following:


- Telephone line
- Optional handset or telephone
- Extension phone (i.e. an additional telephone that you may wish to place away from your unit to answer calls from a different location), answering machine, or data modem.


If you only have one telephone line and plan to use your unit for receiving both faxes and voice calls, you will need to connect the optional handset, a telephone, or an answering machine to the unit.


Be sure to connect any external device before using your unit.


Follow this procedure to connect the telephone line and external devices:

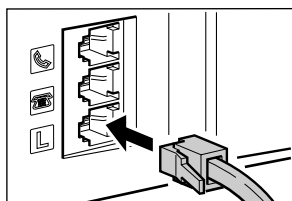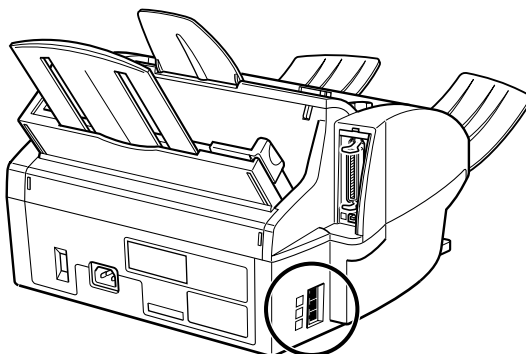


- 1** Connect the supplied telephone line to the  jack, then connect the other end of the line to the telephone jack on your wall.

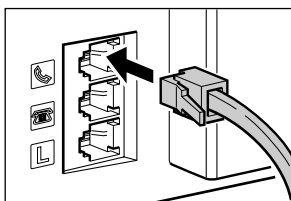

- 2** Connect the line from the optional handset or telephone to the  jack.

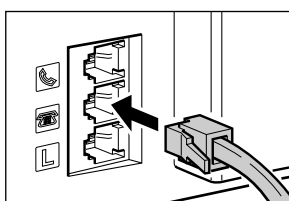

- 3** Connect the line from the extension phone, answering machine, or data modem to the  jack.





- Due to the range of specifications, Canon cannot guarantee that all answering machines will be compatible with your unit.
- If you have connected an external device to your unit, be sure to select the correct receive mode. (→ Chapter 8)
- To connect an extension phone as well as an answering machine, connect the extension phone to the answering machine, and then the answering machine to your unit.
- If you connect a modem to your unit and you use it extensively or others access your PC frequently through the modem, you may want a dedicated telephone line for your modem.


Users in the UK Only


To connect an external device to your unit, you may need to use the B.T. adaptor provided with your unit.

Follow this procedure to connect the B.T. adaptor:

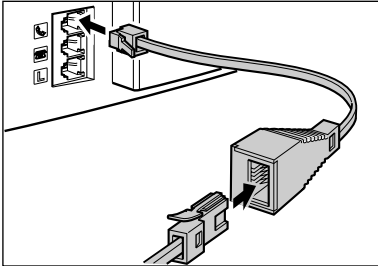

Connect the line from the optional handset or telephone to the B.T. adaptor. Then connect the B.T. adaptor to the  jack.

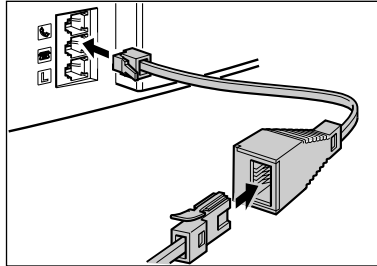

Connect the line from the extension phone, answering machine, or data modem to the B.T. adaptor. Then connect the B.T. adaptor to the  jack.


Connecting Your Unit to a PC

To connect your unit to a PC, you will need to purchase a printer cable that matches the interface connector on your PC:

- A Centronics®-compatible parallel cable (IEEE 1284-compliant) no longer than 2 metres -or-
- A USB cable no longer than 5 metres (MultiPASS C75/FAX-B215C only)

You can purchase either of these cables from your local authorised Canon dealer.

Follow this procedure to connect the appropriate cable:

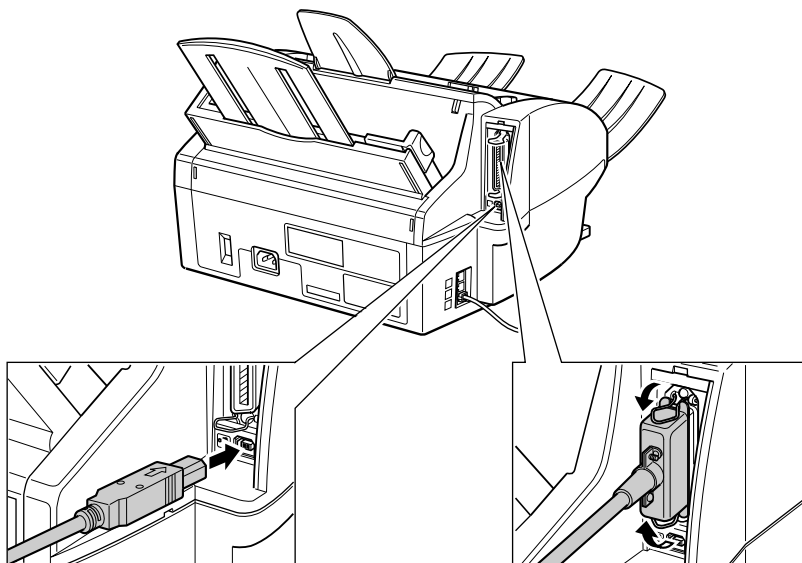

■ Connecting a USB Cable (MultiPASS C75/FAX-B215C Only)

Connect the USB cable to the unit and PC during software installation to ensure proper operation of the printer driver.
(→ *Software User's Guide*)

■ Connecting a Parallel Cable

Connect the parallel cable to your unit and PC. Be sure to secure the cable connectors with the wire clips.




- You only need to connect one of the above cables (MultiPASS C75/FAX-B215C only).
- If using a USB cable (MultiPASS C75/FAX-B215C only), make sure your PC is running Microsoft Windows® 98/Me or Windows® 2000, preinstalled by a computer manufacturer on purchase. (The USB port operation also needs to be assured by the manufacturer.)

Connecting the Power Cord

Before connecting the power cord, → *Power Supply*, p. 1-6.

Follow this procedure to connect the power cord:

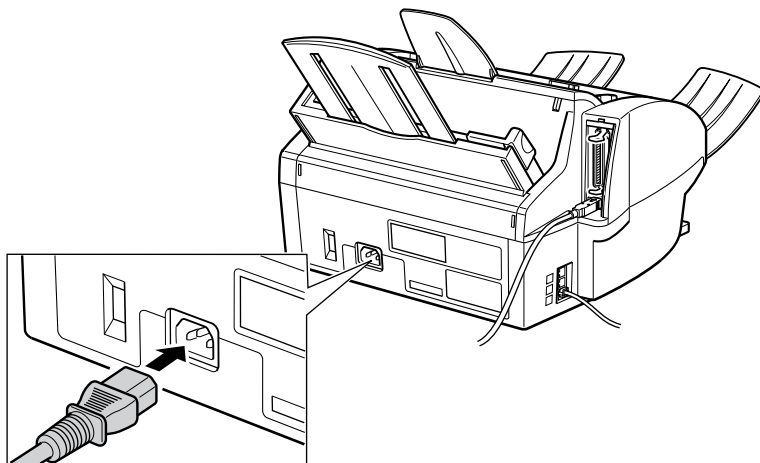

Connect the supplied power cord to the power cord connector. Then connect the other end into a properly grounded 200–240 V AC three-prong outlet.*

The unit has no power switch, so its power is on as long as it is plugged in. Once connected, though, the unit still needs to warm up before you can use it. Wait until the LCD no longer displays **PLEASE WAIT**.




- Your unit is equipped with a three-prong, grounding-type plug provided with a third (grounding) pin. This plug will only fit into a grounding-type outlet. This is a safety feature. If you are unable to insert the plug into your outlet, contact an electrician to replace your outlet. Do not defeat the safety purpose of the grounding-type plug by breaking off the third prong or using a 3-to-2 adaptor.*
- Do not plug the unit into the same circuit as an appliance such as an air conditioner, electric typewriter, television, or copier. Such devices generate electrical noise that can interfere with your unit's ability to send and receive faxes.

* The shape of the plug and outlet vary depending on the country of purchase.

Main Components of Your Unit




Please note that your unit may differ from the illustration below.

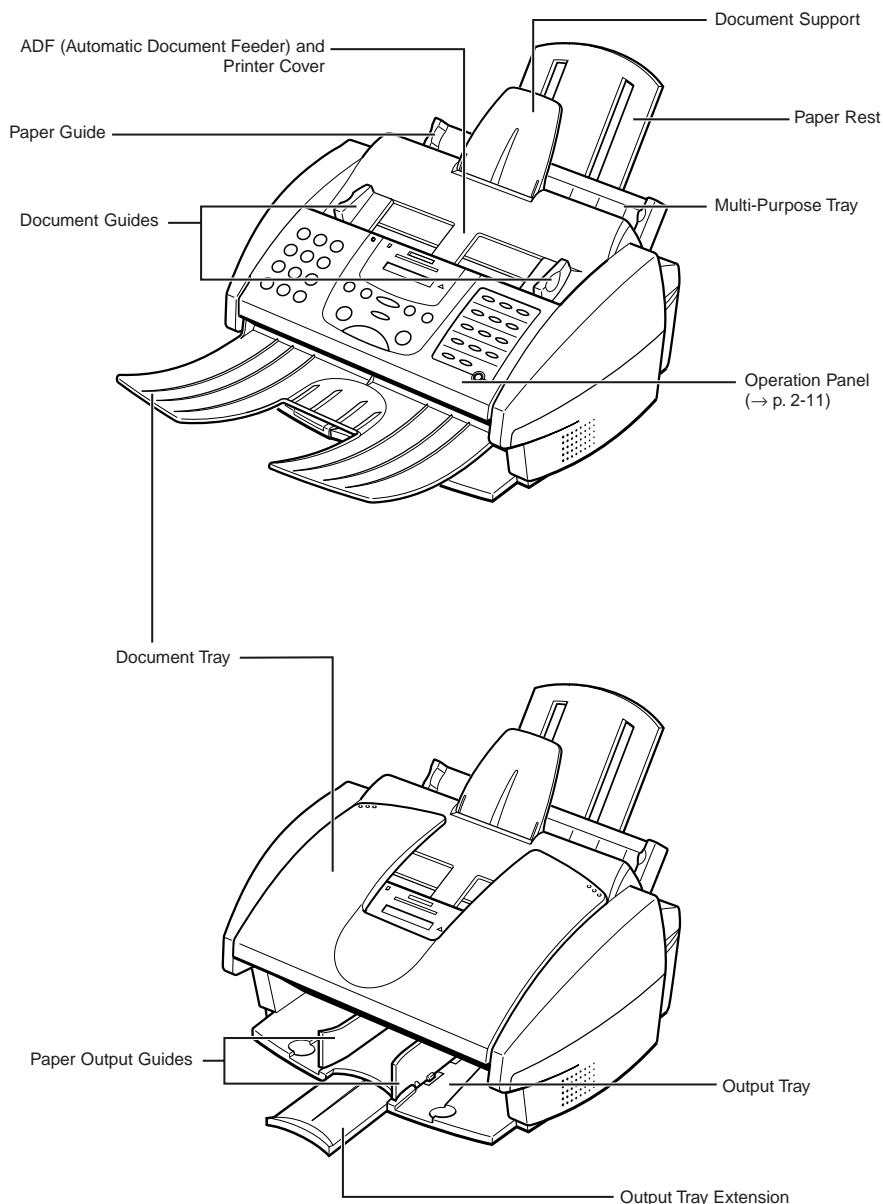

Operation Panel



Please note that your unit may differ from the illustration below.

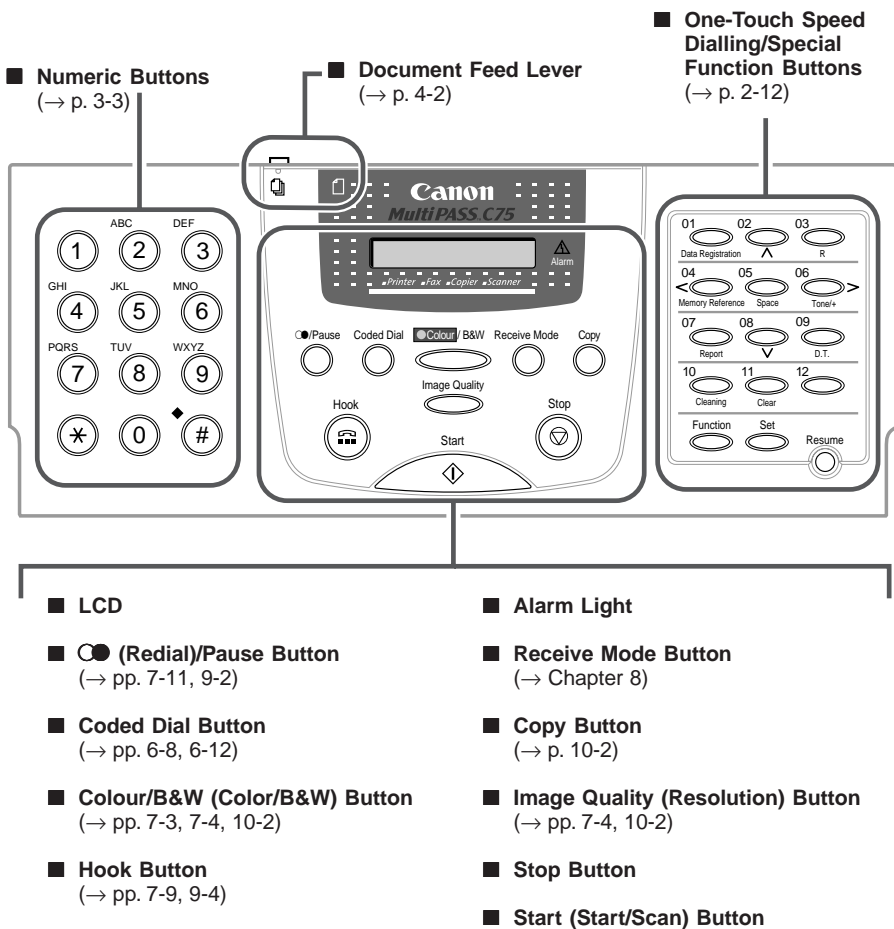

One-Touch Speed Dialling/Special Function Buttons


The buttons on the right of the operation panel have the following two functions:

- **One-Touch Speed Dialling Buttons** (→ pp. 6-5, 6-12)

When the **Function** button's light is off, the buttons marked 01 to 12 can be used for one-touch speed dialling.

- **Special Function Buttons**

When the **Function** button's light is on, the special function buttons (marked under or to the sides of the buttons) can be used.

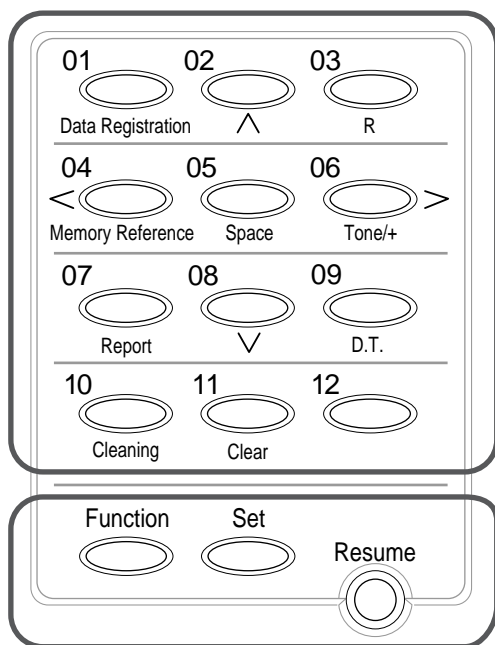

■ **Function Button/Light**
(→ above)

■ **Set Button**
(→ p. 14-2)

■ **Resume Button**
(→ pp. 13-3, 13-4)

■ **Data Registration Button**
(→ p. 14-2)

■ **Λ, V Buttons**
(→ p. 14-2)

■ **R Button**
(→ p. 3-11)

■ **Memory Reference Button**
(→ pp. 7-17, 7-18, 7-20, 8-11)

■ **<, > Buttons**
(→ pp. 3-4, 3-5)

■ **Space Button**
(→ pp. 3-4, 3-5)

■ **Tone/+ Button**
(→ pp. 3-8, 9-4)

■ **Report Button**
(→ pp. 3-9, 6-13, 11-3)

■ **D.T. Button***
(→ p. 9-5)

■ **Cleaning Button**
(→ pp. 5-12, 12-10, 12-11)

■ **Clear Button**
(→ p. 3-5)

* This button is not available in the UK or Ireland.



Installing the BJ Cartridge

Install the BJ cartridge as explained in this section.

For additional information on BJ cartridges and tanks, and for instructions on replacing,
→ p. 12-7.


Guidelines

Follow these guidelines to ensure optimum performance of your BJ cartridges and tanks:

- Store BJ cartridges and tanks at room temperature.
- Keep BJ cartridges in their sealed packaging until you are ready to use them.
- Once opened, use BJ tanks within six months and BJ cartridges within one year.
- Do not remove BJ cartridges and tanks from the unit unnecessarily, or the ink in them may harden.
- Do not leave empty BJ tanks in a Colour BJ cartridge. Remove them immediately when they run out of ink, and replace them with new ones. Do not leave a Colour BJ cartridge with either of its BJ tanks missing as the ink in the BJ cartridge will dry and adversely affect print quality.
- To change a BJ cartridge, be sure to press  (inside the unit) to move the cartridge holder to the centre.
- Make sure the cartridge holder is in its home position (on the right side of the unit) when you are not using the unit. If it is not in its home position, press  (inside the unit). Leaving the cartridge holder out of its home position will cause the BJ cartridge to remain uncapped and dry out.
- When changing BJ cartridges, always store the unused BJ cartridge in the BJ cartridge container provided with your unit.



- **Keep BJ cartridges and tanks out of children's reach. If a child inadvertently ingests ink, consult a physician immediately.**
- **Do not touch the precision components on the BJ cartridge.**

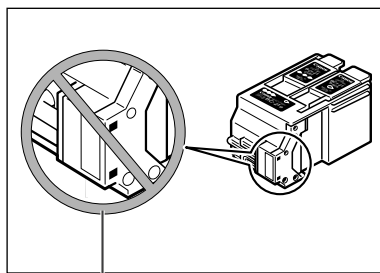

Do not touch this area.

The ink in the BJ cartridges and tanks is difficult to clean up if spilled. Follow these precautions when handling:

- Carefully remove packaging from BJ cartridges and tanks.
- Do not attempt to disassemble or refill BJ cartridges or tanks.
- Do not shake or drop BJ cartridges or tanks, or tip the print head downwards.

Installing the BJ Cartridge in Your Unit



When there is no BJ cartridge installed in your unit, the LCD displays **PUT IN CARTRIDGE**.




The steps in this section show installation of the Colour BJ cartridge. However, please note that installation is the same for all BJ cartridges.

Follow this procedure to install the BJ cartridge:

- 1** Make sure your unit is plugged in.
- 2** Open the document tray (MultiPASS models only).
- 3** Lift the document guides to open the printer cover.
 - If the printer cover does not open easily, slide the document guides outwards and then open the printer cover.

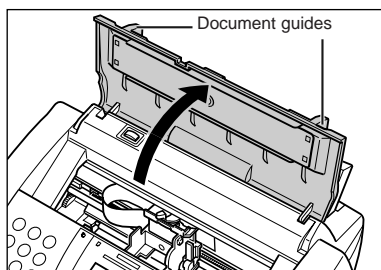
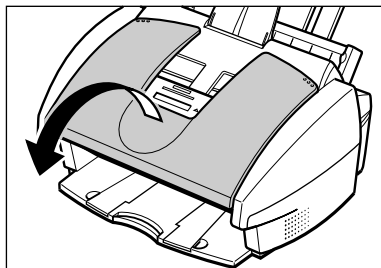




When you plug in your unit for the first time, the cartridge holder automatically moves to the centre of the unit so you can install the BJ cartridge. If this does not happen, press  (inside the unit).





- Do not try to manually move or stop the cartridge holder since this may damage the unit.
- Do not touch the components shown or any metal parts since this may adversely affect operation of the unit and/or affect print quality.

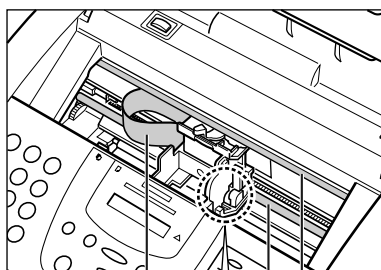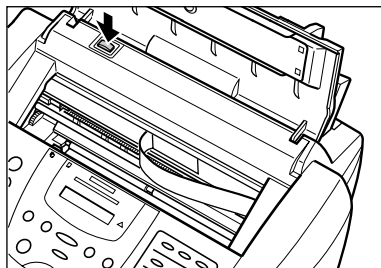

Ribbon cable


Guide rail
Round shaft

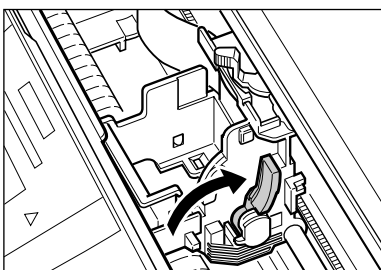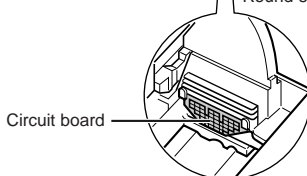


- 4 Raise the blue cartridge lock lever on the cartridge holder.

- 5 Remove the BJ cartridge from its package, then remove the orange protective cap ① and tape ②.

- Discard the cap and tape. Never attempt to reattach them to the BJ cartridge print head.
- Install the BJ cartridge immediately after removing the cap and tape.
- Spilled ink can stain any surface; protect yourself and your work area.

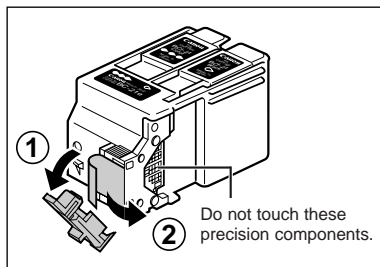

- 6 With the label facing outwards, insert the BJ cartridge into the cartridge holder. Lower the blue cartridge lock lever until it locks into position.

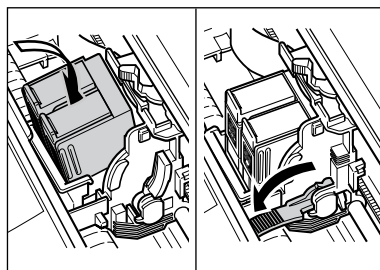


- 7 Press .

- The cartridge holder moves to its home position on the right side of the unit and begins cleaning the BJ cartridge print head. This process takes about 55 seconds.



Do not try to manually move or stop the cartridge holder since this may damage the unit.

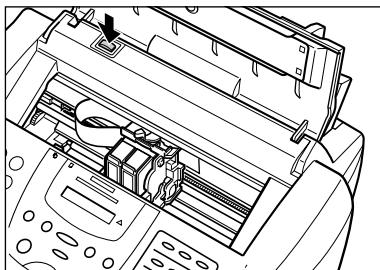

- 8 Close the printer cover.
- 9 Close the document tray (MultiPASS models only).



If you need to unplug the unit, wait until it is in standby mode (time and receive mode displayed in the LCD). Otherwise the cartridge holder may not be in its home position causing the BJ cartridge to remain uncapped and dry out.


Loading Paper

This section describes how to load plain paper in the multi-purpose tray so that you can begin using your unit.

For complete details on the different print media you can use, and for instructions on selecting and loading other print media, → Chapter 5.

Paper Guidelines

- Store all print media wrapped and on a flat surface until ready to use. Keep opened packs in their original packaging, in a cool, dry location.
- Store paper at 18°–24°C, 40%–60% relative humidity.
- To avoid paper jams and poor print quality, do not print on damp, curled, wrinkled, or torn paper.
- Use cut-sheet paper only, not paper that comes on a roll.
- Do not use paper thicker than can be used for the unit (→ p. 5-2). Thick paper can cause damage to the BJ cartridge print head.
- Do not load paper beyond the paper limit mark (▶) or beyond the tab on the multi-purpose tray. Doing so may cause problems. Also, make sure there are no gaps on either side of the paper stack.

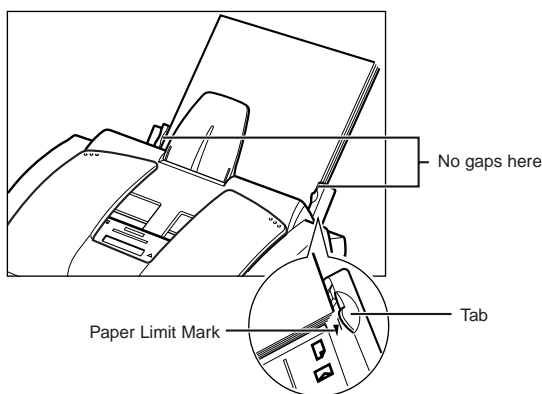


- If the print media has a print side, set it in the multi-purpose tray with the print side facing upwards.

- The capacity of the output tray is 50 sheets of paper. To prevent paper jams, remove paper from the output tray before the count reaches 50.
- Let the paper run out before refilling the multi-purpose tray. Avoid mixing new stock with paper already loaded.
- Do not leave paper stacked in the multi-purpose tray for long periods of time since it may bend or curl and cause problems.
- Certain environmental conditions, such as extreme temperatures or humidity, can cause some print media to misfeed in the multi-purpose tray. If you have trouble, feed one sheet at a time.
- Depending on the density of the printed pages, the ink may need time to dry. Within two or three seconds, the ink becomes smudge resistant. After drying for several minutes, the ink becomes water-resistant.
- If your printed page contains a large amount of graphics, the ink on the page may be damp due to the print density. Leave the page in the output tray for 30 to 60 seconds to allow the ink to dry. Then remove the page carefully without touching any surfaces.
- Printing dense graphics on light paper stock may cause the paper to curl. Try using heavier stock.
- If paper curls after printing, remove it immediately; otherwise paper jams may occur.
- The platen (a roller inside the unit) may become inked if you print data beyond the width of the page. If this happens, clean inside the unit. (→ p. 12-3)

Loading Paper in the Multi-Purpose Tray


Follow this procedure to load paper in the multi-purpose tray:

- 1 Make sure the paper thickness lever is set to  (left).


- For details, → p. 5-6.




Do not set the paper thickness lever while the unit is printing since this will cause problems.

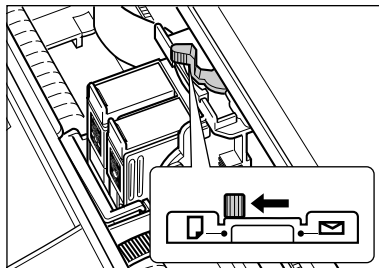

- 2 Raise the paper rest until it stops ①, then move the paper guide to the left to match the size of your paper ②.

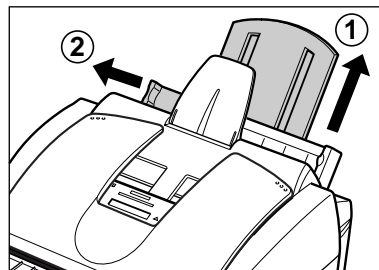


- 3 Prepare a stack of paper by fanning the edge that will feed into the unit first, and then by tapping the stack on a flat surface to even its edges.

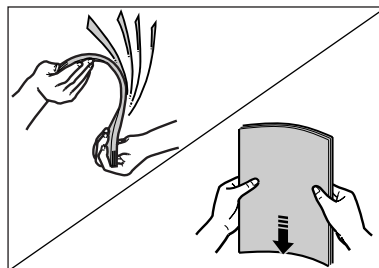

- 4 Insert the stack into the multi-purpose tray ①, and align the right edge of the stack with the right side of the multi-purpose tray. Slide the paper guide snugly against the left edge of the stack ②.

- The multi-purpose tray holds up to 100 sheets of 75 g/m² plain paper.
- Make sure the stack does not exceed the paper limit mark (▶).

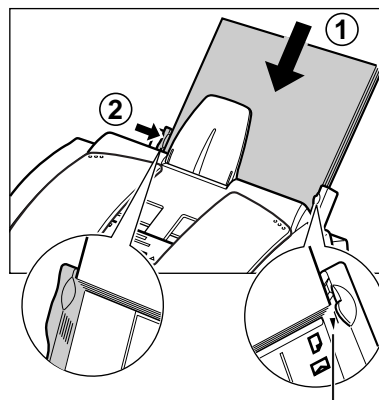

Paper Limit Mark

The unit is now ready to print.

Testing Your Unit

After you have assembled your unit, installed the BJ cartridge, and loaded the paper, you can make sure your unit is printing properly by making several copies of a document. (→ p.10-2)

If you have problems printing, → Chapter 13.

Chapter 3

Registering Information

Methods of Registering Information in Your Unit	3-2
Guidelines for Entering Numbers, Letters, and Symbols	3-3
Correcting a Mistake	3-5
Registering Sender Information	3-6
What is Sender Information?	3-6
Entering the Date and Time	3-7
Registering Your Unit Number and Name	3-7
Printing a List to Check Information Registered in Your Unit	3-9
Setting the Telephone Line Type	3-10
Dialling Through a Switchboard	3-11
Registering the R Button	3-11

Methods of Registering Information in Your Unit

To customise your unit to your particular needs, you can adjust the general operation, sending, receiving, printing, system settings, and speed dialling settings. There are two methods of adjusting these settings:

■ Method 1: Using the unit operation panel (All models)

You can adjust settings directly via the operation panel of your unit. Detailed instructions are described in this guide. For MultiPASS models, adjusting settings through the operation panel is convenient when your unit is not connected to a PC.

■ Method 2: Using the MultiPASS Suite Software (MultiPASS models only)

You can adjust settings using the MultiPASS Suite software included with your unit. For instructions, → *Software User's Guide*.

Before adjusting any settings, decide whether you prefer to make changes from the operation panel or from the MultiPASS Suite. Using both—the operation panel and the MultiPASS Suite—may cause confusion. Changes made to settings through the operation panel will not be displayed in the MultiPASS Suite, and changes made in the MultiPASS Suite will override any corresponding settings made through the operation panel.




If your unit is connected to a PC, we recommend using the MultiPASS Suite to adjust settings.

Guidelines for Entering Numbers, Letters, and Symbols

When you come to a step that requires you to enter a name or number, refer to the table below to determine which numeric button to press for the character you want:

Button	Uppercase Letter Mode (:A)	Lowercase Letter Mode (:a)	Number Mode (:1)
①			1
^{ABC} ②	ABCĂĂĂĂĂĂÆÇ	abcăăăăăăæç	2
^{DEF} ③	DEFĐĚĚĚĚĚ	defďěěěěě	3
^{GHI} ④	GHIİİİİİ	ghiııııı	4
^{JKL} ⑤	JKL	jkl	5
^{MNO} ⑥	MNOÑØØØØØØ	mnoñøøøøøø	6
^{PQRS} ⑦	PQRSþ	pqrsþ	7
^{TUV} ⑧	TUVÜÚÙÛ	tuvüúùû	8
^{WXYZ} ⑨	WXYZÝ	wxyzý	9
⑩			0
◆ #	- . * # ! " , ; : ^ ` _ = ' ? \$ @ % & + { } [] { } < >		
⊛	<div> Uppercase Letter Mode (:A) → Lowercase Letter Mode (:a) → Number Mode (:1) </div>		

 If you pause for more than 60 seconds between entering data, the unit will automatically return to standby mode.

■ Changing Between Number and Letter Modes

Press **✱** to select number mode (: 1), uppercase letter mode (: A), or lowercase letter mode (: a).

— : 1
(Number mode)

— : A
(Uppercase letter mode)

— : a
(Lowercase letter mode)

■ Entering Letters

- 1 Press **✱** to switch to uppercase letter mode (: A) or lowercase letter mode (: a).
- 2 Press the numeric button that contains the letter you want.
 - Press repeatedly until the letter you want appears. Each button cycles through the letters it contains.
 - If you are unsure which button to press for the letter you want, → p. 3-3.

Ex: — : A

Ex: C : A

- 3 Continue entering other letters using the numeric buttons.
 - If the next letter you want to enter is under a different numeric button, simply press that button until the letter you want appears.
-or-
If the next letter you want to enter is under the same numeric button you pressed in step 2, press **>** to move the cursor to the right. Then press that same numeric button repeatedly until the letter you want appears.
 - To enter a space, press **Space**.

Ex: C A : A

■ Entering Numbers

- 1 Press **X** to switch to number mode (:1).

— : 1

- 2 Press the numeric button that contains the number you want.

- To enter a space, press **Space**.

Ex: 1— : 1

- 3 Continue entering other numbers using the numeric buttons.

Ex: 10— : 1

■ Entering Symbols

- 1 Press **#** repeatedly until the symbol you want appears.

Ex: #— : 1

- 2 If you want to enter another symbol, press **>** to move the cursor to the right, then press **#** repeatedly until the symbol you want appears.

Ex: #— : 1

Correcting a Mistake

You can clear an entire entry by pressing **Clear**. Alternatively, follow this procedure to correct individual characters:

- 1 Use **<** or **>** to move the cursor under the incorrect character.

Ex: CANEN : A

- 2 Use the numeric buttons to enter the correct character over the incorrect character.


Ex: CANQN : A

- 3 When you have finished making corrections, press **Set** to register your new entry.

Registering Sender Information

What is Sender Information?

When you receive a fax, the name of the person or company who sent you the fax, their fax/telephone number, and the date and time of transmission may be printed in small type at the top of each page. This information is called the *Sender information* or the *Transmit Terminal Identification (TTI)*. Similarly, you can register your details in your unit so that whenever you send a fax, the other party knows who sent it, and when it was sent. Below is an example of how your sender information would print on a fax sent from your unit:

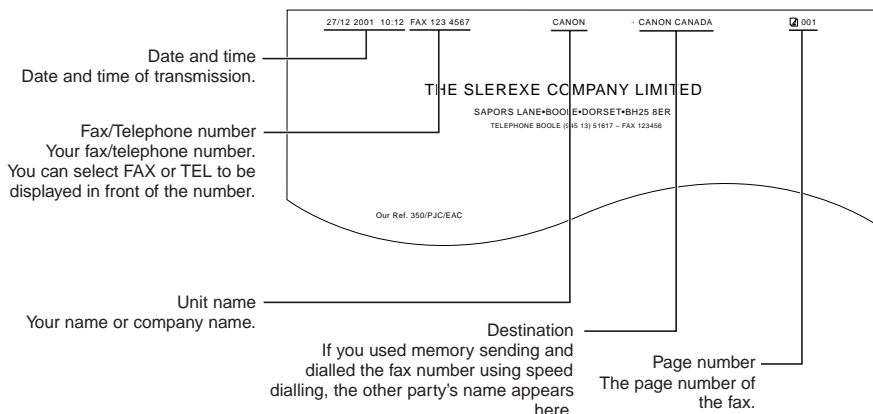

- You can set the sender information to print inside or outside the image area. (→ TTI POSITION, p. 14-4)
- You can enter the sender information from the operation panel (→ p. 3-7), or for MultiPASS models, from the MultiPASS Suite. (→ *Software User's Guide*)

Entering the Date and Time

Follow this procedure to set the current date and time:

1 Press **Function**.

2 Press **Data Registration**.

DATA REGISTRATION

3 Press **Set** three times.

- The date and time currently set for the unit are displayed.

USER SETTINGS

DATE & TIME

Ex: 20/12 2001 13:30

- 4** Use the numeric buttons to enter the correct day, month, year, and time in this order.
- Enter only the last two digits of the year.
 - Use the 24-hour format for the time (e.g. 1:00 p.m. as 13:00).
 - If you make a mistake, press **Clear** and re-enter the date and time.

Ex: 27/12 2001 15:00

5 Press **Set**.

DATA ENTRY OK

UNIT TELEPHONE #

6 Press **Stop** to return to standby mode.

Ex: 15:00 FaxOnly

Registering Your Unit Number and Name

Follow this procedure to register the fax/telephone number for your unit, and your name or company name:

1 Press **Function**.

2 Press **Data Registration**.

DATA REGISTRATION

3 Press **Set** twice.

USER SETTINGS

DATE & TIME

4 Use **V** or **Λ** to select **UNIT TELEPHONE #**.

UNIT TELEPHONE #

5 Press **Set**.

TEL=

6 Use the numeric buttons to enter your fax/telephone number (max. 20 digits, including spaces).

- To enter a space, press **Space**.
- To enter a plus sign (+) before the number, press **Tone/+**.
- If you make a mistake, press **Clear** and re-enter the number.

Ex: TEL= 123 4567

7 Press **Set** twice.

DATA ENTRY OK

UNIT NAME

— :A

8 Use the numeric buttons to enter your name or company name (max. 24 characters, including spaces).

- If you are unsure how to enter characters, → p. 3-3.
- If you make a mistake, press **Clear** and re-enter the name.

Ex: CANON :A

9 Press **Set**.

DATA ENTRY OK

TX TERMINAL ID

10 Press **Stop** to return to standby mode.

Ex: 15:00 FaxOnly

Printing a List to Check Information Registered in Your Unit

You can print the USER'S DATA LIST to check the sender information and current settings of your unit.

Follow this procedure to print the USER'S DATA LIST:

1 Press **Function**.

2 Press **Report**.

ACTIVITY REPORT

3 Use **V** or **Λ** to select **USER DATA LIST**.

USER DATA LIST

4 Press **Set**.

- The unit prints the USER'S DATA LIST.

PRINTING REPORT

The sender information is shown at the beginning of the list. The current settings of your unit are listed after this.

27/12 2001 17:23 FAX 123 4567		CANON	001

*** USER'S DATA LIST ***			

1. USER SETTINGS			
UNIT TELEPHONE #	123 4567		
UNIT NAME	CANON		
TX TERMINAL ID	ON		
TTI POSITION	OUTSIDE IMAGE		
TELEPHONE # MARK	FAX		
SCANNING CONTRAST	STANDARD		
OFFHOOK ALARM	ON		
VOLUME CONTROL			
CALLING VOLUME	2		
KEYPAD VOLUME	2		
ALARM VOLUME	2		
LINE MONITOR VOL.	2		
RX CALL LEVEL	HIGH		

Setting the Telephone Line Type

Before using your unit, you need to make sure it is set for your telephone line type*. If you are unsure of your telephone line type, check with your local telephone company.

Follow this procedure if you need to change the telephone line type setting:

1 Press **Function**.

2 Press **Data Registration**.

DATA REGISTRATION

3 Press **Set** twice.

USER SETTINGS

DATE & TIME

4 Use **V** or **Λ** to select TEL LINE TYPE.

TEL LINE TYPE

5 Press **Set**.

Ex: TOUCH TONE

6 Use **V** or **Λ** to select the telephone line type setting you want.

Ex: ROTARY PULSE

- You can select from the following:
 - ROTARY PULSE
 - TOUCH TONE

7 Press **Set**.

R-KEY SETTING

8 Press **Stop** to return to standby mode.

Ex: 15:00 FaxOnly

* The default setting for the UK is TOUCH TONE.
The default setting for Ireland is ROTARY PULSE.

Dialling Through a Switchboard

A PBX (Private Branch Exchange) is an on-site telephone switchboard. If your unit is connected through a PBX or other telephone switching system, you have to dial the outside line access number first, and then the number of the party you are calling.

To facilitate this procedure, you can register the access type and the outside line access number under the **R** button so that you only need to press **Function** and **R** before dialling the fax/telephone number you want to reach. This is explained below.

Registering the R Button

Follow this procedure to register the access type and outside line access number under the **R** button:

- 1 Press **Function**.
- 2 Press **Data Registration**.
- 3 Press **Set** twice.
- 4 Use **V** or **Λ** to select **R-KEY SETTING**.
- 5 Press **Set**.
- 6 Use **V** or **Λ** to select **PBX**.
- 7 Press **Set**.
- 8 Use **V** or **Λ** to select the access type of your switching system.
 - The default setting is **EARTH CONNECTION**.
 - You can select from the following:
 - **PREFIX**
 - **HOOING**
 - **EARTH CONNECTION**

DATA REGISTRATION

USER SETTINGS

DATE & TIME

R-KEY SETTING

PSTN

PBX

Ex: EARTH CONNECTION

Ex: PREFIX

■ If you selected **HOOKING or EARTH CONNECTION** in step 8:

9 Press **Set**.

Ex:

REPORT SETTINGS

10 Press **Stop** to return to standby mode.

Ex:

15:00	FaxOnly
-------	---------

■ If you selected **PREFIX** in step 8:

9 Press **Set** (twice for the MultiPASS C80/C70 and FAX-B230C/B210C).

PREFIX

--

10 Use the numeric buttons to enter the outside line access number (max. 20 digits).

Ex:

123456

11 Press **○● (Redial)/Pause** to enter a pause.

Ex:

123456P

12 Press **Set**.

Ex:

REPORT SETTINGS

13 Press **Stop** to return to standby mode.

Ex:

15:00	FaxOnly
-------	---------

Chapter 4





Document Handling

Document Requirements	4-2
Scanned Area of a Document	4-3
Loading Documents	4-4
Problems With Multipage Documents	4-6
Adding Pages to the Document	4-6

Document Requirements

The documents you load into the ADF for sending, copying, and scanning must meet the requirements shown in the table below.

Depending on your document, select automatic or manual document feed with the document feed lever located at the top of the operation panel.

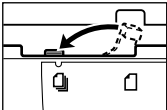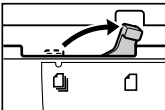	 (Automatic Document Feed)	 (Manual Document Feed)
		
Type of document	Multipage documents of the same thickness and weight.	<ul style="list-style-type: none">• Thick paper• Documents with uneven surfaces• Photographs• Small documents (e.g. business cards, postcards)• Special types of paper (Use of a carrier sheet is recommended to avoid scratching the surface of documents.)
Size (W × L)	Max. 216 mm × Approx. 1 m Min. 210 × 148 mm	Max. 216 mm × Approx. 1 m Min. 80 × 45 mm
Quantity	Max. 20 A4- or letter-size sheets* Max. 10 legal-size sheets* 1 sheet for sizes other than these.	1 sheet
Thickness	0.08 to 0.13 mm	0.08 to 0.43 mm
Weight	75 to 90 g/m ²	90 to 340 g/m ²


* 75 g/m² paper

■ Problem Documents

- To prevent document jams in the ADF, do not use any of the following:
 - Wrinkled or creased paper
 - Carbon paper or carbon-backed paper
 - Coated paper
 - Onion skin or thin paper
 - Curled or rolled paper
 - Torn paper
- Remove all fasteners (staples, paper clips, etc.) before loading the document into the ADF.
- Make sure any glue, ink, or correction fluid on the document is completely dry before loading it into the ADF.
- If you have a document that will not feed properly into the ADF, make a photocopy of the document and load the copy instead.



Scanned Area of a Document

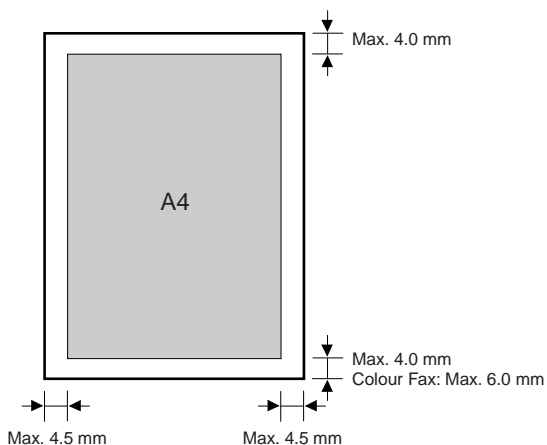
The shaded area in the illustration below shows the scanned area of a document. Make sure your document's text and graphics are within this area.




Loading Documents

Follow this procedure to load documents into the ADF:


- 1 Open the document tray (MultiPASS models only).
- 2 Set the document feed lever to  (automatic) or  (manual) document feed.
 - If you are unsure which to select, → p. 4-2.

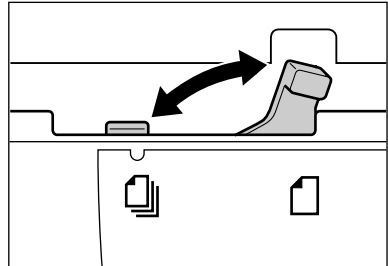

- 3 Adjust the document guides to the width of the document.

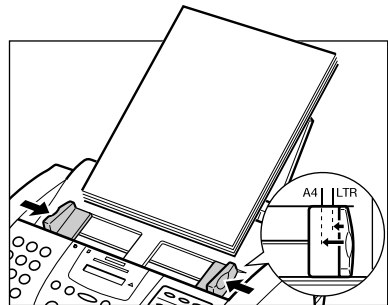


(Automatic document feed)

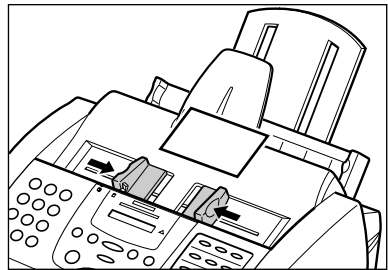


(Manual document feed)

- 4 Gently insert the top of the document, face down, into the ADF until you hear a beep.
- Tap multipage documents on a flat surface to even the edges before inserting them into the ADF.

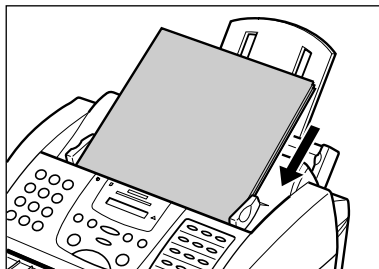

(Automatic document feed)

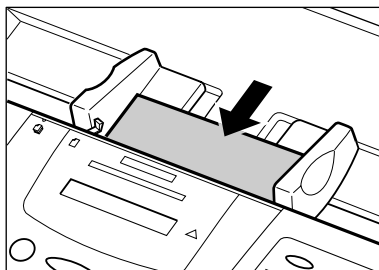

(Manual document feed)

The document is now ready.


- For a multipage document, the pages are fed one by one from the bottom of the stack.
- Wait until all pages of your document have been scanned before starting a new job.



When you have finished scanning your document, be sure to slide the document guides outwards. Leaving the document guides near the centre of the ADF may obstruct opening the printer cover, and cause damage to the unit.

Problems With Multipage Documents


If you have trouble feeding multipage documents into the ADF, remove the stack and tap it on a flat surface to even the edges. Then “slant” the stack so that its front edge is bevelled, and insert the stack into the ADF.

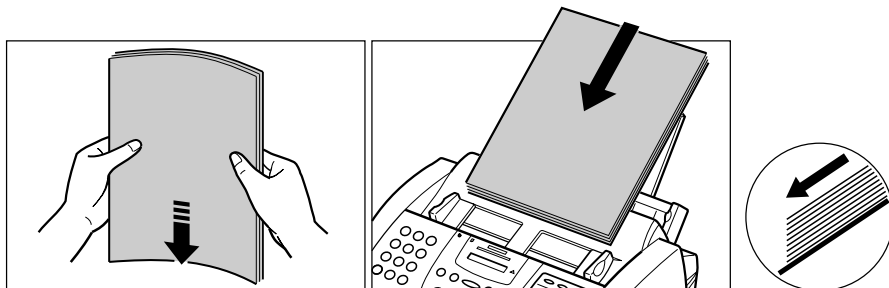

To avoid feeding problems, make sure the document meets the document requirements. (→ p. 4-2)

Adding Pages to the Document

If you are using automatic document feed and you need to add pages to your document in the ADF, wait until the last page starts feeding, then load up to 20 additional pages (10 legal size). The last and first page should overlap by about 2.5 cm.

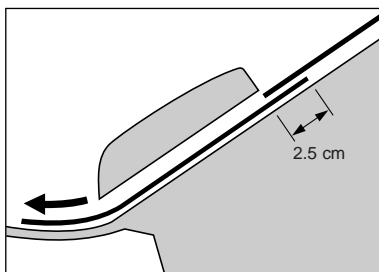

Chapter 5

Paper Handling

Print Media Requirements	5-2
Printable Areas	5-3
Selecting Print Media	5-4
Setting the Paper Thickness Lever	5-6
Loading Paper	5-7
Loading Envelopes	5-8
Using Canon Specialty Print Media	5-10
Specialty Print Media Guidelines	5-10
Printing on High Resolution Paper	5-11
Using the Cleaning Sheet	5-11
Printing on Fabric Sheets	5-13
Printing on Banner Paper	5-14

Print Media Requirements

You can stack the following media in the multi-purpose tray:


Print Media	Size	Weight	Quantity	Paper Thickness Lever Position
Plain paper	A4 (210 × 297 mm/ 8.27 × 11.69 in.) Letter (215.9 × 279.4 mm/ 8.5 × 11 in.) Legal (215.9 × 355.6 mm/ 8.5 × 14 in.)	64-90 g/m ²	Approx. 100 sheets* (Max. 10 mm stack)	☐ (Left)
Envelopes	European DL (220 × 110 mm/ 8.66 × 4.33 in.) U.S. Commercial No. 10 (241.3 × 104.1 mm/ 9.5 × 4.1 in.)		10 envelopes	✉ (Right)
Glossy photo paper	A4, Letter		1 sheet	☐ (Left)
Banner paper	210 × 297 mm Max. length: 1782 mm		2 to 6 sheets (joined)	✉ (Right)
High resolution paper	A4, Letter		Approx. 10 sheets	☐ (Left)
Bubble Jet paper	A4, Letter		Approx. 100 sheets (Max. 10 mm stack)	☐ (Left)
Fabric sheet	241 × 356 mm		1 sheet	✉ (Right)
Transparencies	A4, Letter		50 sheets	☐ (Left)
Back print film	A4, Letter		10 sheets	☐ (Left)
High gloss film	A4, Letter		1 sheet	☐ (Left)

* 75 g/m² paper

Printable Areas


■ Paper

The shaded area below shows the printable area of A4-size paper. Be sure to print within this area.

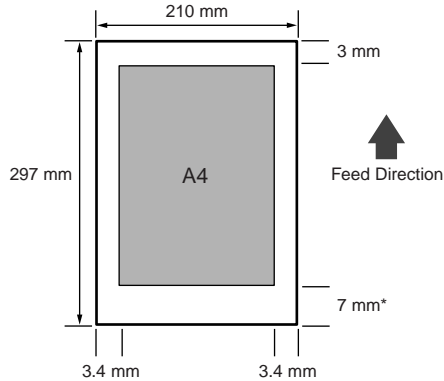

■ Envelope

The shaded area below shows the printable area of European DL-size envelopes. Be sure to print within this area.

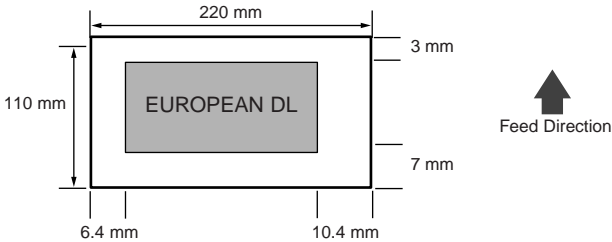

* The length of the lower margin varies depending on the printing conditions:

- 7 mm for black & white printing when not using the printer driver (4 mm when printing from memory).
- 16 mm for black & white and colour printing when using the printer driver.
- 21 mm for colour copying and printing of received colour faxes.

Selecting Print Media

This section describes the different print media you can use with your unit. To achieve the best possible printing performance of your unit, be sure to select the correct print media.



- Be sure to test print media before purchasing large quantities.
- For Canon print media, be sure to purchase the recommended print media types. (→ below)

■ Plain Paper

Your unit supports A4-, letter-, and legal-size paper in portrait orientation. You can use regular copier paper, cotton bond paper, or typical letterhead. Your unit does not require special ink jet paper. Always use paper without curls, folds, staples, or damaged edges. Look at the label on the package to see if the paper has a preferred side for printing.

■ Envelopes

Your unit can print on European DL and U.S. Commercial No. 10 envelopes. You may be able to load other sizes, but Canon cannot guarantee consistent performance on these.

Do not use the following types of envelopes since they may cause problems:

- Envelopes with windows, holes, perforations, cutouts, and double flaps.
- Envelopes made with special coated paper or deeply embossed paper.
- Envelopes with peel-off sealing strips.
- Envelopes with letters enclosed.

■ Glossy Photo Paper GP-301

A high gloss, thick paper that produces the look and feel of a photograph. Use this paper with the Photo BJ cartridge to print photo-realistic images.

■ Banner Paper

Specifically designed for printing one continuous sheet in a banner format. The connected sheets are divided by perforations and you can print from two to six sheets at a time.

■ High Resolution Paper HR-101/HR-101N

Designed to produce near-photographic quality print output with sharp and vivid graphics. For best results, use this paper with the Photo BJ cartridge.

■ Bubble Jet Paper LC-301

Developed for high quality printing with minimal or no smearing when in contact with water or damp surfaces. This specially coated paper produces bright and vivid colours and stands up to normal office highlighters.

■ Fabric Sheet FS-101

A machine-washable white cotton sheet for printing images or scanned photographs.

■ Back Print Film BF-102

A unique mylar-based translucent sheet, designed to deliver sharp, brilliant, high-intensity colour images suitable for business presentations, design work, or professional reports. Back print film is printed on the back (non-glossy) side of the film in mirror image and then viewed from the front (glossy) side using a backlit device, such as a light box.

■ High Gloss Film HG-101

A bright white finish film that lends striking visual power to charts, graphs, and photographic images. It creates a sharper and more vivid colour output than is possible with coated paper.

■ Transparencies CF-102

Produce excellent contrast, sharpness, and colour, creating crisp and professional overhead presentations.

Do not use normal transparencies in the unit as they do not absorb ink and may cause ink to run.

■ Starter Kit

Contains an assortment of different papers for you to try out.

■ Photo Kit

Contains a Photo BJ cartridge, a BJ cartridge container, and 60 sheets of Canon High Resolution Paper.

Setting the Paper Thickness Lever

The paper thickness lever adjusts the gap between the BJ cartridge print head and the print media to suit the print media's thickness. Before printing, be sure to set the paper thickness lever.

For details on which position to set the paper thickness lever for the print media you are using, → p. 5-2.




If the paper thickness lever is not set correctly before printing, poor print quality may occur.

Follow this procedure to set the paper thickness lever:


1 Open the document tray (MultiPASS models only).

2 Lift the document guides to open the printer cover.


- If the printer cover does not open easily, slide the document guides outwards and then open the printer cover.

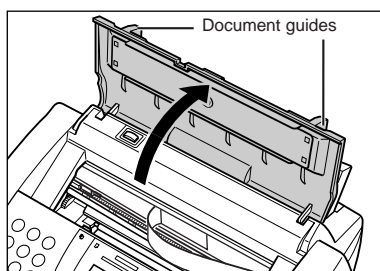


3 Press

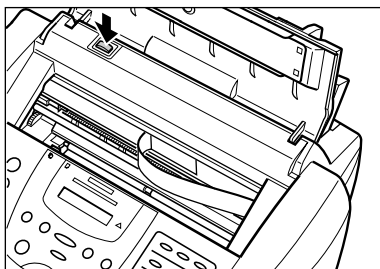


- Do not try to manually move or stop the cartridge holder since this may damage the unit.
- Do not touch the components shown or any metal parts since this may adversely affect operation of the unit and/or affect print quality.

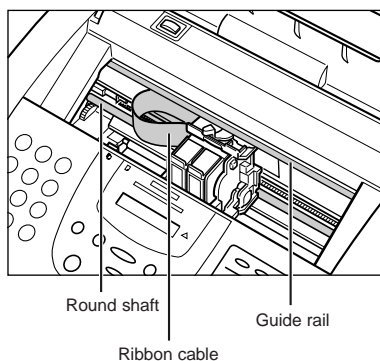


- 4 Set the paper thickness lever.
- For details on which position to set for the print media you are using, → p. 5-2.

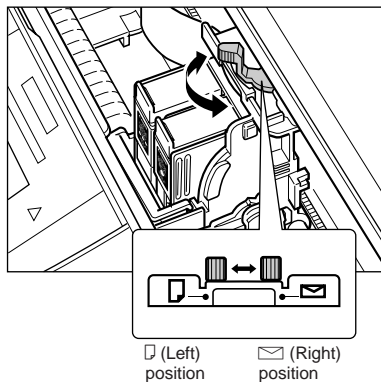

- 5 Press .
- The cartridge holder moves to its home position on the right side of the unit and begins cleaning the BJ cartridge print head. This process takes about 55 seconds*.



Do not try to manually move or stop the cartridge holder since this may damage the unit.

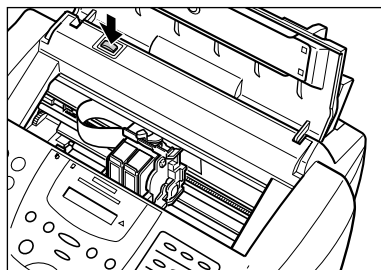

- 6 Close the printer cover.
- 7 Close the document tray (MultiPASS models only).

Loading Paper

For details on loading paper in the multi-purpose tray, → p. 2-19.


You can also load other types of print media in the multi-purpose tray. (→ This chapter)

* For the Black BJ cartridge, the cleaning process takes about 15 seconds.

Loading Envelopes


You can load up to 10 envelopes in the multi-purpose tray. For details on the types of envelopes you can load, → pp. 5-2, 5-4.

Follow this procedure to load envelopes in the multi-purpose tray:


- 1 Make sure the paper thickness lever is set to  (right).
 - For details, → p. 5-6.




Do not set the paper thickness lever while the unit is printing since this will cause problems.

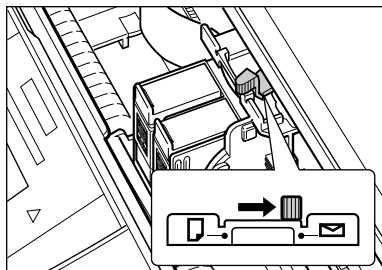


- 2 Prepare the envelopes as follows:
 - Arrange the stack of envelopes on a firm, clean surface, and press down firmly on the edges to make the folds crisp.
 - Press all the way around the envelopes to remove any curls and expel air from inside the envelopes. Also, press firmly on the area that corresponds to the edges of the back flap.

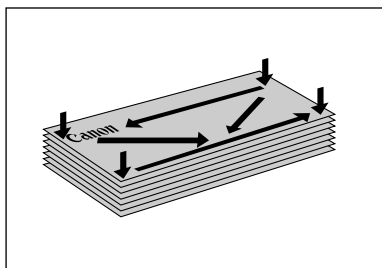

- Remove any curling from the envelopes by holding the edges diagonally and bending them gently.

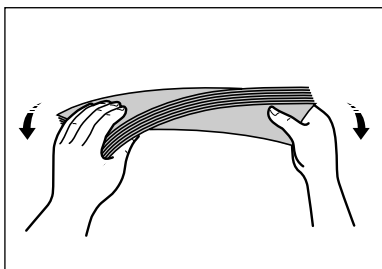


- Run a pen or other rounded object along the back flaps to flatten them.
 - The flaps should not bulge more than 5 mm.

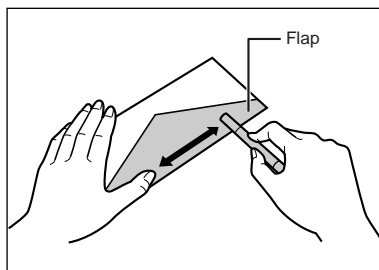

- 3** Insert the stack of envelopes into the multi-purpose tray ①, and align the right edge of the stack with the right side of the multi-purpose tray. Slide the paper guide snugly against the left edge of the stack ②.

- Insert the envelopes with the print side up (flaps should not be visible).
- Feed the top of the envelope (return address portion) into the multi-purpose tray first.
- Make sure the stack does not exceed the paper limit mark (▶).

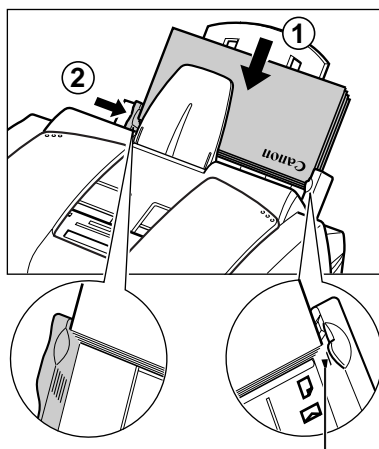

Paper Limit Mark

The unit is now ready to print.

Using Canon Specialty Print Media


Specialty Print Media Guidelines



Be sure to read any instructions that come with your Canon specialty print media, as these provide important information on how to achieve the highest print quality.

Follow these guidelines:


- When feeding transparencies or back print film, remove each sheet after it is delivered, being careful not to touch any surfaces. Do not allow film sheets to stack up in the output tray.
- Let the printed sheets of film or paper dry completely before storing them.
Drying time:
 - Canon High Gloss Film HG-101, Canon Glossy Photo Paper GP-301: 10 minutes
 - Canon Transparencies CF-102, Canon Back Print Film BF-102: 15 minutes
 - Canon Fabric Sheet FS-101: 1 hour
- When your printed sheets of film have dried completely, cover the printed sides with a sheet of plain (not coated) paper before storing. This is recommended even if you place the sheets in a clear file or plastic holder.

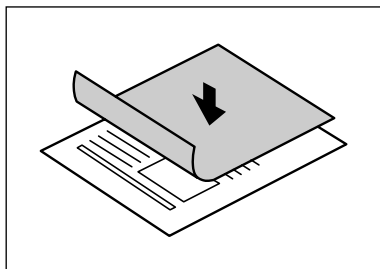

- When loading transparencies or back print film, insert one sheet of plain paper as the last sheet in the stack.
- Do not leave film in the multi-purpose tray for long periods of time. Dust and dirt may accumulate on the film resulting in spotty printing.
- To avoid smudging caused by fingerprints, use a pair of thin cloth gloves while loading and handling film.
- To avoid fading, do not expose printed film to prolonged sunlight.
- Store all print media flat. Do not remove them from their protective packaging until you are ready to use them.
- Store unused film at temperatures between 15° and 30°C. The relative humidity should be between 10% and 70%.

Printing on High Resolution Paper

To load high resolution paper in your unit, follow the same procedure as for loading paper in the multi-purpose tray (→ p. 2-19). However, before printing, be sure to raise both paper output guides as shown below:

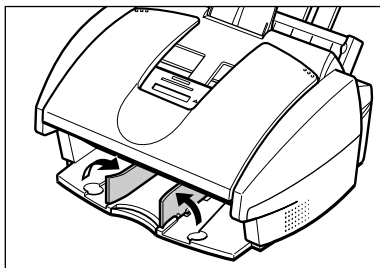

The paper output guides support the printed sheet as it exits the unit. This will keep the sheet from sagging as it exits which can lead to poor print quality. When you finish printing on high resolution paper, lower the paper output guides.



Always lower the paper output guides when using the unit as a fax machine, or they can cause received faxes to pile up and jam.


Some types of high resolution paper require you to clean the unit's rollers after using a package of this paper. Refer to the instructions included with the high resolution paper. If you need to clean the rollers, → below.

Using the Cleaning Sheet

Read the instructions provided with the high resolution paper to see if you are required to clean the unit's rollers after using a package of this paper. A cleaning sheet may be included with the high resolution paper.


The cleaning sheet removes paper dust from the unit's rollers helping to prevent paper feeding problems.

Follow this procedure to load and use the cleaning sheet:


- 1 Make sure the paper thickness lever is set to  (left).
 - For details, → p. 5-6.




Do not set the paper thickness lever while the unit is printing since this will cause problems.

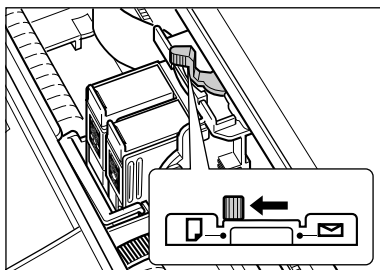

- 2 Remove the backings from the two tapes on the cleaning sheet.

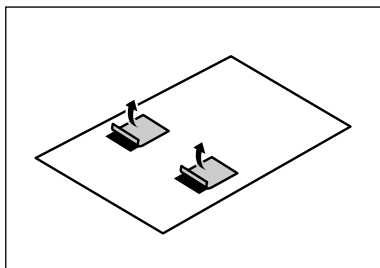

- 3 With the sticky side towards you and going into the multi-purpose tray first, insert the cleaning sheet into the multi-purpose tray ①, and align the right edge of the sheet with the right side of the multi-purpose tray. Slide the paper guide snugly against the left edge of the sheet ②.

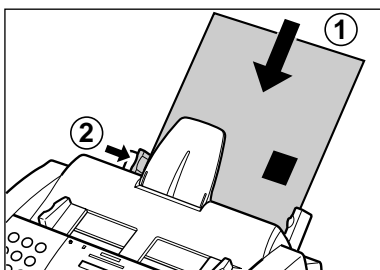

- 4 Press **Function**.

- 5 Press **Cleaning**.

NOZZLE CHECK

- 6 Use **V** or **Λ** to select **ROLLER CLEANING**.

ROLLER CLEANING

- 7 Press **Set**.

- The cleaning sheet is fed into the unit and the rollers are cleaned.


Printing on Fabric Sheets

Canon Fabric Sheet FS-101 comes with a booklet that describes special handling procedures. Be sure to read this booklet for special information on fabric sheets.



- Do not use the fixing agent provided with the Canon Fabric Sheet FS-101. This agent is not necessary when printing with your unit.
- Do not touch newly printed fabric sheets until the ink has dried completely. This takes about an hour.


Follow this procedure to load a fabric sheet in the multi-purpose tray:

- 1 Make sure the paper thickness lever is set to  (right).


• For details, → p. 5-6.



Do not set the paper thickness lever while the unit is printing since this will cause problems.

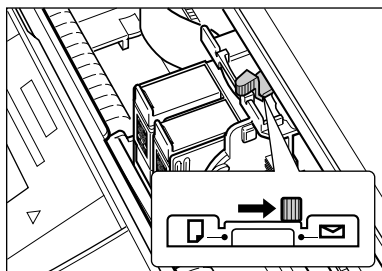

- 2 With the cloth side towards you and the open end at the top, insert one fabric sheet into the multi-purpose tray ①, and align the right edge of the sheet with the right side of the multi-purpose tray. Slide the paper guide snugly against the left edge of the sheet ②.

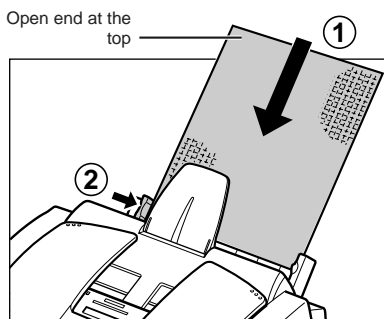

- 3 Your unit is now ready to print. Set your PC to print on the fabric sheet.
- 4 When the fabric sheet is printed, let it dry for about an hour to allow the ink to dry completely.
- 5 When dry, peel the film backing from the printed fabric sheet.


Printing on Banner Paper

Banner paper is a continuous sheet of paper with perforations at equal distances along its length, where it can be cut to the length required. For best results, use Canon Banner Paper. You can print banners from two to six sheets in length.



Always leave an extra sheet at the end of the banner—just in case the type runs over.


The shaded portion of the illustration below shows the maximum recommended printing area of banner paper.

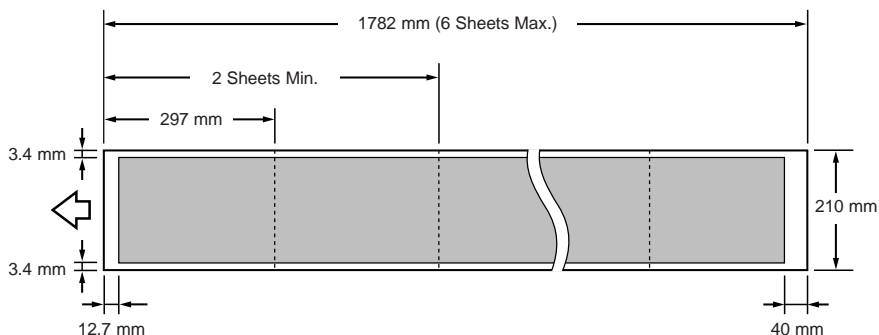

- To prevent ink from running over the edges of the sheet, print within the margins shown above.
- Printing on banner paper may require considerable amounts of ink, so use a new BJ cartridge or tanks if necessary.
- For best print results on banner paper, use light design patterns.


Follow this procedure to load banner paper in the multi-purpose tray:


- 1 Place the unit near the edge of a table so that the paper can flow over the edge as it exits the unit.
 - Make sure the paper rest is raised.

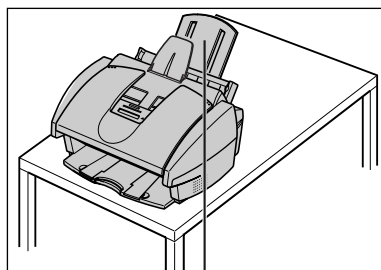

Paper Rest


- 2 Raise both paper output guides.

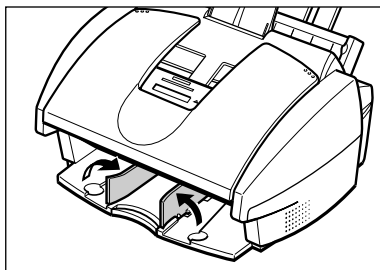


- 3 Make sure the paper thickness lever is set to  (right).
- For details, → p. 5-6.




Do not set the paper thickness lever while the unit is printing since this will cause problems.

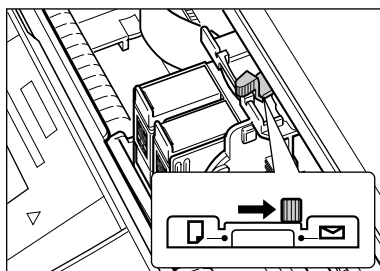

- 4 Cut the banner paper along one of the perforations to the length required. Then gently fold along the perforations between the first and second sheets.
- Your banner can be up to six sheets (1782 mm) long.

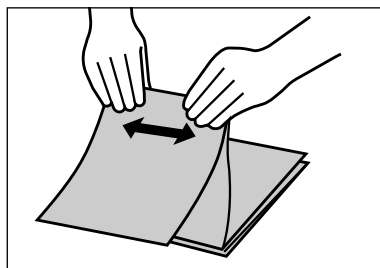


- 5 Place the banner paper behind the unit on a flat surface. Then insert the first sheet into the multi-purpose tray ①, and align the right edge of the sheet with the right side of the multi-purpose tray. Slide the paper guide against the left edge of the sheet, leaving a 1 mm gap between the paper guide and the edge of the sheet ②.
- Make sure the sheet is under the tab on the multi-purpose tray.
 - Make sure the sheets behind the unit are aligned with the multi-purpose tray.

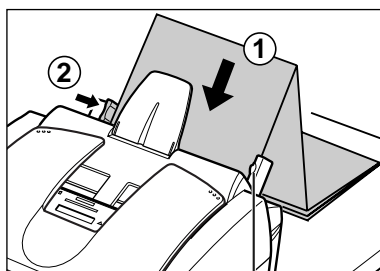

Tab

- 6** Your unit is now ready to print.
Set your PC to print on the banner paper.
- Allow the paper to flow over the edge of the table as it exits the unit.

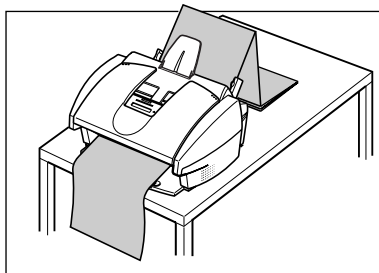

Be sure to lower the paper output guides when you finish printing on banner paper.

Chapter 6

Speed Dialling

What is Speed Dialling?	6-2
Speed Dialling Methods	6-2
One-Touch Speed Dialling	6-3
Registering Numbers for One-Touch Speed Dialling	6-3
Using One-Touch Speed Dialling	6-5
Coded Speed Dialling	6-6
Registering Numbers for Coded Speed Dialling	6-6
Using Coded Speed Dialling	6-8
Group Dialling	6-9
Creating Groups	6-9
Using Group Dialling	6-12
Speed Dialling Lists	6-13
Printing Speed Dialling Lists	6-13

What is Speed Dialling?

Speed dialling allows you to simplify dialling procedures by registering a fax/telephone number(s) and name under a button or code. You can then dial that number by pressing only one or a few buttons.

Speed Dialling Methods

The three speed dialling methods available with your unit are as follows:

■ One-Touch Speed Dialling (→ p. 6-3)

Allows you to dial a fax or telephone number by pressing only one button. You can register up to 12 destinations for one-touch speed dialling.

■ Coded Speed Dialling (→ p. 6-6)

Allows you to dial a fax or telephone number by pressing **Coded Dial** followed by a two-digit code of your choice. While coded speed dialling requires you to press more buttons, you can register up to 100 different destinations.

■ Group Dialling (→ p. 6-9)

Allows you to dial a group of registered one-touch and/or coded speed dialling fax numbers. By registering a group for one-touch or coded speed dialling, you press only one or three buttons to send a same document to several destinations.

The following pages describe how to register numbers for speed dialling and how to send using speed dialling.




For MultiPASS models:

- You can also register numbers for speed dialling from the MultiPASS Suite. (→ *Software User's Guide*)
- Any settings adjusted from the unit operation panel will not be displayed in the MultiPASS Suite.
- Settings changed from the MultiPASS Suite will override any settings made from the operation panel.

One-Touch Speed Dialling

Registering Numbers for One-Touch Speed Dialling

One-touch speed dialling allows you to dial a fax/telephone number at the press of one button. You can register up to 12 fax/telephone numbers; one for every one-touch speed dialling button on the operation panel.

 For MultiPASS models, you can also register fax/telephone numbers for one-touch speed dialling from the MultiPASS Suite. (→ *Software User's Guide*)

Follow this procedure to register numbers and names for one-touch speed dialling:

1 Press **Function**.

2 Press **Data Registration**.

DATA REGISTRATION

3 Use **V** or **Λ** to select **TEL REGISTRATION**.

TEL REGISTRATION

4 Press **Set** twice.

1-TOUCH SPD DIAL

Ex:

01=

5 Use **V** or **Λ** to select a one-touch speed dialling button (01 to 12).

Ex:

04=

- If a one-touch speed dialling button has already been registered, the number registered under that button appears.
- If a group is already registered under a one-touch speed dialling button, **GROUP DIAL** appears.

6 Press **Set** twice.

TELEPHONE NUMBER

Ex:

TEL=_

- 7** Use the numeric buttons to enter the fax/telephone number you want to register (max. 120 digits, including spaces and pauses).
- To enter a space, press **Space**. Spaces are optional and are ignored during dialling.
 - To enter a pause, press **● (Redial)/Pause**.
 - To correct a mistake in the number, press **<** to delete the rightmost digit.
 - To delete an entire entry or to change a previous entry, press **Clear**.
 - If you have already registered a number and you only want to change the name, ignore this step.
 - To cancel one-touch speed dialling for the button you selected, press **Clear** then **Set**. Press **Stop** to return to standby mode. The fax/telephone number and name registered under that button will be deleted.

Ex: TEL=20 545 8545_

- 8** Press **Set** twice.

DATA ENTRY OK

NAME

Ex: _ :A

- 9** Use the numeric buttons to enter the name that goes with the number (max. 16 characters, including spaces).
- If you are unsure how to enter characters, → p. 3-3.
 - If you have already registered a name and want to keep the same name, ignore this step.

Ex: Canon EUROPA :A

- 10** Press **Set**.

DATA ENTRY OK

Ex: 05=

- 11** To continue registering other one-touch speed dialling buttons, repeat the procedure from step 5.
-or-
Press **Stop** to return to standby mode.

Ex: 15:00 FaxOnly



You can print the 1-TOUCH SPD DIAL LIST showing all the numbers and names registered for one-touch speed dialling (→ p. 6-13). Keep this list near your unit so you can refer to it when dialling.

Using One-Touch Speed Dialling

To use this feature, you must first register a number for one-touch speed dialling. (→ p. 6-3)

Follow this procedure to send documents using one-touch speed dialling:

- 1 Open the document tray (MultiPASS models only).
- 2 Adjust the document feed lever for the document you are loading. (→ p. 4-2)
- 3 Prepare the document and load it, face down, in the ADF. (→ p. 4-4)
 - For colour sending, press **Colour/B&W (Color/B&W)** to turn on its light. (→ p. 7-3)
 - To adjust the resolution and contrast, → pp. 7-4, 7-5.
- 4 Press the one-touch speed dialling button assigned to the number you wish to fax.
 - The number registered under that one-touch speed dialling button is displayed.
 - If you press the wrong button, press **Stop**, then press the correct button.
 - NO TEL # appears if no fax number is assigned to the one-touch speed dialling button you pressed.
- 5 Press **Start (Start/Scan)** to begin scanning for sending, or wait a few seconds for the unit to begin scanning automatically.
 - If you prefer the unit never to scan a document automatically after a few seconds, disable the **TIME OUT** setting. (→ p. 14-6)



- You can also use one-touch speed dialling to send a document to more than one destination at a time. (→ p. 7-14)
- To dial a telephone number registered for one-touch speed dialling, simply lift the handset and press the one-touch speed dialling button.

Ex:

MEMORY USED	0%
-------------	----

(Currently used memory)

DOCUMENT READY

(Standby to scan)

Ex:

TEL=905 795 1111

Coded Speed Dialling

Registering Numbers for Coded Speed Dialling

Coded speed dialling allows you to dial a fax/telephone number by pressing only three buttons. First you press **Coded Dial** and then you enter a two-digit code under which you have registered a fax/telephone number. You can register up to 100 different fax/telephone numbers for coded speed dialling.



For MultiPASS models, you can also register fax/telephone numbers for coded speed dialling from the MultiPASS Suite. (→ *Software User's Guide*)

Follow this procedure to register numbers and names for coded speed dialling:

1 Press **Function**.

2 Press **Data Registration**.

DATA REGISTRATION

3 Use ∇ or \blacktriangle to select **TEL REGISTRATION**.

TEL REGISTRATION

4 Press **Set**.

1-TOUCH SPD DIAL

5 Use ∇ or \blacktriangle to select **CODED SPEED DIAL**.

CODED SPEED DIAL

6 Press **Set**.

Ex: *00=

7 Use ∇ or \blacktriangle to select a coded speed dialling code (00 to 99).

Ex: *01=

- If a coded speed dialling code has already been registered, the number registered under that code appears.
- If a group is already registered under a coded speed dialling code, **GROUP DIAL** appears.

8 Press **Set** twice.

TELEPHONE NUMBER

Ex: TEL=_

- 9** Use the numeric buttons to enter the fax/telephone number you want to register (max. 120 digits, including spaces and pauses).
- To enter a space, press **Space**. Spaces are optional and are ignored during dialling.
 - To enter a pause, press **⏻ (Redial)/Pause**.
 - To correct a mistake in the number, press **<** to delete the rightmost digit.
 - To delete an entire entry or to change a previous entry, press **Clear**.
 - If you have already registered a number and you only want to change the name, ignore this step.
 - To cancel coded speed dialling for the code you selected, press **Clear** then **Set**. Press **Stop** to return to standby mode. The fax/telephone number and the name registered under that code will be deleted.

Ex: TEL=3 3758 2111_

- 10** Press **Set** twice.

DATA ENTRY OK

NAME

Ex: _ : A

- 11** Use the numeric buttons to enter the name that goes with the number (max. 16 characters, including spaces).
- If you are unsure how to enter characters, → p. 3-3.
 - If you have already registered a name and want to keep the same name, ignore this step.

Ex: Canon Inc_ : a

- 12** Press **Set**.

DATA ENTRY OK

Ex: *02=

- 13** To continue registering other coded speed dialling codes, repeat the procedure from step 7.
-or-
Press **Stop** to return to standby mode.

Ex: 15:00 FaxOnly



You can print the CODED SPEED DIAL LIST showing all the numbers and names registered for coded speed dialling (→ p. 6-13). Keep this list near your unit so you can refer to it when dialling.

Using Coded Speed Dialling

To use this feature, you must first register a number for coded speed dialling. (→ p. 6-6)

Follow this procedure to send documents using coded speed dialling:

- 1 Open the document tray (MultiPASS models only).
- 2 Adjust the document feed lever for the document you are loading. (→ p. 4-2)
- 3 Prepare the document and load it, face down, in the ADF. (→ p. 4-4)
 - For colour sending, press **Colour/B&W (Color/B&W)** to turn on its light. (→ p. 7-3)
 - To adjust the resolution and contrast, → pp. 7-4, 7-5.
- 4 Press **Coded Dial**.
- 5 Use the numeric buttons to enter the two-digit code assigned to the number you wish to fax.
 - The number registered under that coded speed dialling code is displayed.
 - If you enter the wrong code, press **Stop**. Then press **Coded Dial** and enter the correct code.
 - NO TEL # appears if no fax number is assigned to the coded speed dialling code you entered.
- 6 Press **Start (Start/Scan)** to begin scanning for sending, or wait a few seconds for the unit to begin scanning automatically.
 - If you prefer the unit never to scan a document automatically after a few seconds, disable the **TIME OUT** setting. (→ p. 14-6)



- You can also use coded speed dialling to send a document to more than one destination at a time. (→ p. 7-14)
- To dial a telephone number registered for coded speed dialling, simply lift the handset, press **Coded Dial**, and enter the two-digit code.

Ex:

MEMORY USED	0%
-------------	----

(Currently used memory)

DOCUMENT READY

(Standby to scan)

*

Ex:

*01

Ex:

TEL=03 3758 2111

Group Dialling

Creating Groups

If you frequently send documents to a same group of fax numbers, you can create a group of these numbers and register them under a speed dialling button or code. This enables you to press a single one-touch speed dialling button, or press **Coded Dial** and enter a two-digit code to send the same document to all the fax numbers in the group.



- You can only group numbers that have already been registered for one-touch or coded speed dialling.
- A group can contain up to 111 destinations.
- For MultiPASS models, you can also create groups from the MultiPASS Suite. (→ *Software User's Guide*)

Follow this procedure to create groups:

1 Press **Function**.

2 Press **Data Registration**.

DATA REGISTRATION

3 Use **V** or **Λ** to select **TEL REGISTRATION**.

TEL REGISTRATION

4 Press **Set**.

1-TOUCH SPD DIAL

5 Use **V** or **Λ** to select **GROUP DIAL**.

GROUP DIAL

6 Press **Set**.

Ex: 01=1-TOUCH SPD

7 Select a one-touch speed dialling button or coded speed dialling code under which you want to register the group.

- To register a group under a one-touch speed dialling button:

Use **V** or **Λ** to select the button under which you want to register the group (01 to 12).

- If a one-touch speed dialling button has already been registered, 1-TOUCH SPD or GROUP DIAL appears.

Ex: 03=

- To register a group under a coded speed dialling code:
Press **Coded Dial**, then use the numeric buttons to enter the code under which you want to register the group (00 to 99).
 - If a coded speed dialling code has already been registered, CODED SPEED or GROUP DIAL appears.



If you wish to register a group under a button or code already registered for speed dialling, or you want to re-enter a group, you must delete the previous information first.
(→ pp. 6-3, 6-6)

8 Press **Set** twice.

Ex:

TELEPHONE NUMBER

TEL=

9 Enter the one-touch and/or coded speed dialling numbers you want to register in the group.

- To enter a destination registered for one-touch speed dialling:
Press **Function**, then press the one-touch speed dialling button(s) assigned to the number(s) you want to register in the group. Then press **Function** again.

Ex:

- To enter a destination registered for coded speed dialling:
Press **Coded Dial**, then use the numeric buttons to enter the two-digit code assigned to the number you want to register in the group. Repeat for other codes.
 - The number registered under the button or code you enter appears, or GROUP DIAL appears if you select a group.
 - You cannot enter numbers not registered for one-touch or coded speed dialling (i.e. with the numeric buttons).
 - You can enter buttons or codes that have groups registered under them.

Ex:

- To add destinations to a group already registered, simply enter them as explained in this step.
- If you enter the wrong destination, or if you want to delete a destination already registered in a group, use **V** or **Λ** to select that entry, then press **Clear**.
- To cancel group dialling for the button or code you selected, press **Clear** until all entries are deleted, then press **Set**. Press **Stop** to return to standby mode. All fax numbers and the name of the group registered under that button or code will be deleted.

10 Press **Set** twice.

NAME

— : A

11 Use the numeric buttons to enter a name for the group (max.16 characters, including spaces).

- If you are unsure how to enter characters, → p. 3-3.
- If you have already registered a name and want to keep the same name, ignore this step.

Ex: Canon GROUP 2_:1

12 Press **Set**.

DATA ENTRY OK

Ex: 04=1-TOUCH SPD

13 To continue registering other groups, repeat the procedure from step 7.

-or-

Press **Stop** to return to standby mode.

Ex: 15:00 FaxOnly



You can print the GROUP DIAL LIST showing all the numbers and names registered for group dialling (→ p. 6-13). Keep this list near your unit so you can refer to it when dialling.

Using Group Dialling

To use this feature, you must first register a group of fax numbers for one-touch or coded speed dialling. (→ p. 6-9)

Follow this procedure to send a document to a group of destinations registered under a one-touch speed dialling button or coded speed dialling code:

- 1 Open the document tray (MultiPASS models only).
- 2 Adjust the document feed lever for the document you are loading. (→ p. 4-2)
- 3 Prepare the document and load it, face down, in the ADF. (→ p. 4-4)
 - For colour sending, press **Colour/B&W (Color/B&W)** to turn on its light. (→ p. 7-3)
 - To adjust the resolution and contrast, → pp. 7-4, 7-5.
- 4 Enter the group registered under a one-touch speed dialling button or coded speed dialling code.
 - To enter a group registered under a one-touch speed dialling button:
Press the one-touch speed dialling button assigned to the group you wish to fax.
 - If you press the wrong button, press **Stop**, then press the correct button.
 - To enter a group registered under a coded speed dialling code:
Press **Coded Dial**, then use the numeric buttons to enter the two-digit code assigned to the group you wish to fax.
 - If you enter the wrong code, press **Stop**. Then press **Coded Dial** and enter the correct code.
- 5 Press **Start (Start/Scan)** to begin scanning for sending, or wait a few seconds for the unit to begin scanning automatically.
 - If you prefer the unit never to scan a document automatically after a few seconds, disable the **TIME OUT** setting. (→ p. 14-6)

Ex:

MEMORY USED	0%
-------------	----

(Currently used memory)

DOCUMENT READY

(Standby to scan)

TEL=GROUP DIAL

Ex: *21=

TEL=GROUP DIAL

Speed Dialling Lists

You can print lists of fax/telephone numbers registered for speed dialling. Keep these lists near your unit so you can refer to them when dialling.

Printing Speed Dialling Lists

Follow this procedure to print speed dialling lists:

1 Press **Function**.

2 Press **Report**.

ACTIVITY REPORT

3 Use **V** or **Λ** to select **SPEED DIAL LIST**.

SPEED DIAL LIST

4 Press **Set**.

1-TOUCH LIST

5 Use **V** or **Λ** to select the list you want to print.

- You can select from the following:

- 1-TOUCH LIST
- CODED DIAL LIST
- GROUP DIAL LIST

Ex: CODED DIAL LIST

6 Press **Set**.

- If you selected 1-TOUCH LIST or CODED DIAL LIST above, select in what order you want the destinations to be printed:

Press ***** to print the list with the names of the destinations in alphabetical order.

-or-

Press **#** to print the list in code or button order.

- The unit prints the list.

SORTED OUTPUT

YES=(*) NO=(#)

Samples of the lists are shown on the following page.

1-TOUCH SPD DIAL LIST

27/12 2001 17:23 FAX 123 4567

CANON

001

27/12 2001 17:23 FAX 123 4567

CANON

001

NO.	
[01]	905 79
[03]	GROUP
[04]	2 5092
[05]	1 432 2
[12]	2 887 0

*** 1-TOUCH SPD DIAL LIST ***

NO.	CONNECTION TEL	CONNECTION ID
[12]	2 887 0166	Canon AUSTRALIA
[01]	905 795 1111	Canon CANADA
[03]	GROUP DIAL	Canon EUROPA
[04]	2 50921	Canon ITALIA
[05]	1 432 2060	Canon OPTICS

Unsorted list: Destinations listed in button order.

Sorted list: Destinations listed in alphabetical order.

CODED SPEED DIAL LIST

27/12 2001 17:23 FAX 123 4567

CANON

001

27/12 2001 17:23 FAX 123 4567

CANON

001

NO.	
[* 00]	2131 1
[* 01]	03 375
[* 02]	1 49 39
[* 03]	516p48
[* 21]	GROUP
[* 32]	81 773

*** CODED SPEED DIAL LIST ***

NO.	CONNECTION TEL	CONNECTION ID
[* 00]	2131 1250	Canon DEUTSCH.
[* 02]	1 49 39 25 25	Canon FRANCE
[* 21]	GROUP DIAL	Canon GROUP 1
[* 01]	03 3758 2111	Canon TOKYO
[* 03]	516p488 6700	Canon U.S.A.
[* 32]	81 773 3173	Canon UK

Unsorted list: Destinations listed in code order.

Sorted list: Destinations listed in alphabetical order.

GROUP DIAL LIST

27/12 2001 17:23 FAX 123 4567

CANON

001

*** GROUP DIAL LIST ***

[07] Canon GROUP 2

[04] 2 50921

[* 00] 2131 1250

[* 02] 1 49 39 25 25

[* 32] 81 773 3173

[* 21] Canon GROUP 1

[01] 905 795 1111

[* 03] 516p488 6700

Canon ITALIA

Canon DEUTSCH.

Canon FRANCE

Canon UK

Canon CANADA

Canon U.S.A.

Chapter 7

Sending Faxes

Preparing to Send a Fax	7-3
Documents You Can Fax	7-3
Adjusting the Quality of Your Faxes	7-3
Setting Colour or Black & White Transmission	7-3
Setting the Scanning Resolution	7-4
Setting the Scanning Contrast	7-5
Dialling Methods	7-6
Sending Methods	7-7
Memory Sending	7-7
Manual Sending Via the Handset	7-8
Cancelling Sending	7-10
Redialling When the Line is Busy	7-11
Manual Redialling	7-11
Cancelling Manual Redialling	7-11
Automatic Redialling	7-11
What is Automatic Redialling?	7-11
Cancelling Automatic Redialling	7-12
Setting the Options for Automatic Redialling	7-12
Sequential Broadcasting	7-14
Sending a Document to More Than One Destination	7-14
Sending a Document Using Group Dialling	7-16
Delayed Sending (MultiPASS Models Only)	7-16
Sending Other Documents While Your Unit is Set for Delayed Sending	7-16
Documents Stored in Memory	7-17
Printing a List of Documents in Memory	7-17
Printing a Document in Memory	7-18
Deleting a Document From Memory	7-20

Using Alternative Telephone Networks (All Models Except the

MultiPASS C75/FAX-B215C)	7-21
Registering an Alternative Telephone Network	7-22
Sending With an Alternative Telephone Network	7-23
Registering Speed Dialling With the M Button	7-24

Preparing to Send a Fax

Documents You Can Fax

For information on the types of documents you can fax, their requirements, and details on loading documents, → Chapter 4.

Adjusting the Quality of Your Faxes

Canon's Ultra High Quality (UHQ™) imaging technology enables you to send documents that are very close to the quality of the original. Your unit allows you to send a document in colour or black & white, and to adjust the resolution and contrast to best suit your particular document.

Setting Colour or Black & White Transmission

Your unit can send faxes in black & white. It can also send faxes in colour to fax machines with colour capability. Before sending a document, you need to adjust whether the document will be sent in colour, or in black & white only.

■ To send in black & white:

Make sure the **Colour/B&W (Color/B&W)** button's light is off. If not, press **Colour/B&W (Color/B&W)** to turn it off.

■ To send in colour (to fax machines that support colour fax reception):

Press **Colour/B&W (Color/B&W)** to turn on its light.



If you attempt to send a colour document to a fax machine that does not support colour faxing, the document will not be sent and the LCD will display TRY AGAIN IN B&W (TRY AGAIN IN B/W). Try sending again in black & white. For the MultiPASS C75/ FAX-B215C, you can enable the COLOUR DIRECT TX setting (→ p. 14-6) that converts colour faxes to black & white if the other party's fax machine does not support colour faxing, thus enabling you to send colour documents to any fax machine without an error occurring.

Setting the Scanning Resolution

Resolution is a measure of the fineness or clarity of a printout. Low resolutions may cause text and graphics to have a jagged appearance, while higher resolutions provide smoother curves and lines, crisp text and graphics, and a better match to traditional typeface designs.



The higher the resolution, the higher the output quality, but the slower the scanning speed.

■ For black & white sending, set the resolution as follows:

- 1 Make sure the light above **Colour/B&W** (**Color/B&W**) is turned off.
 - If not, press **Colour/B&W (Color/B&W)** to turn it off.
- 2 Press **Image Quality (Resolution)** to select the resolution setting you want.
 - You can select from the following:
 - FAX STANDARD
Suitable for most text-only documents.
 - FAX FINE
Suitable for fine-print documents.
 - FAX PHOTO
Suitable for documents that contain images such as photos. With this setting, areas of the document that contain photos are automatically scanned with 64 levels of grey, rather than just two (black & white).

Ex:

FAX PHOTO

After about 10 seconds, the LCD returns to standby mode.

■ For colour sending, set the resolution as follows:

- 1 Press **Colour/B&W (Color/B&W)** to turn on its light.
- 2 Press **Image Quality (Resolution)** to select the resolution setting you want.
 - You can select from the following:
 - FAX STANDARD
Provides standard colour resolution.
 - FAX FINE
Provides a higher quality colour resolution.

Ex:

FAX FINE

After about 10 seconds, the LCD returns to standby mode.



You can change the resolution setting while the document is being scanned for sending. However, please note that your new setting will only be effective from the next page scanned.

Setting the Scanning Contrast

Contrast is the difference in brightness between the lightest and darkest parts of a printed document. You can adjust the contrast your unit uses to send or copy black & white documents. Adjust according to how light or dark your document is.



For MultiPASS models, you can also set the scanning contrast for sending from the MultiPASS Suite. (→ *Software User's Guide*)

Follow this procedure to set the scanning contrast:

1 Press **Function**.

2 Press **Data Registration**.

DATA REGISTRATION

3 Press **Set** twice.

USER SETTINGS

DATE & TIME

4 Use **∨** or **∧** to select **SCAN CONTRAST**.

SCAN CONTRAST

5 Press **Set**.

Ex:

STANDARD

6 Use **∨** or **∧** to select the scanning contrast you want.

Ex:

DARKER

- You can select from the following:

- STANDARD
Adequate for most documents.
- DARKER
Suitable for light documents.
- LIGHTER
Suitable for dark documents.

7 Press **Set**.

OFFHOOK ALARM

8 Press **Stop** to return to standby mode.

Ex:

15:00 FaxOnly

Dialling Methods

There are several ways of dialling the number of the party you want to send to. They are as follows:

- **Regular Dialling**

Dial a fax number by using the numeric buttons, just like dialling a telephone number.

- **One-Touch Speed Dialling**

Dial a fax number by pressing the one-touch speed dialling button (01 to 12) that the number is assigned to. For details on registering and using one-touch speed dialling, → pp. 6-3, 6-5.

- **Coded Speed Dialling**

Dial a fax number by pressing **Coded Dial** followed by the two-digit code (00 to 99) that the number is assigned to. For details on registering and using coded speed dialling, → pp. 6-6, 6-8.

- **Group Dialling**

Send a document to a predefined group of fax numbers. (The numbers must already be registered under one-touch speed dialling buttons or coded speed dialling codes.) For details on creating groups and using group dialling, → pp. 6-9, 6-12.

- **PC Dialling (MultiPASS Models Only)**

Dial a fax number from your PC using the MultiPASS Suite. (→ *Software User's Guide*)

Sending Methods

This section describes the methods and advantages of the two main sending methods: *Memory sending* and *Manual sending via the handset*.

Memory Sending

Memory sending is a quick and easy way to send a document. As the first page of a multipage document is being scanned into the unit's memory, your unit begins calling the other party and transmitting the information even as the remaining pages are being scanned.

Since your unit is multitasking, you can even scan a document into memory while performing other tasks.

The unit has enough memory to store up to approximately 42* pages** (fewer if the document contains many graphics or particularly dense text).

Follow this procedure for memory sending:

- 1 Open the document tray (MultiPASS models only).
- 2 Adjust the document feed lever for the document you are loading. (→ p. 4-2)
- 3 Prepare the document and load it, face down, in the ADF. (→ p. 4-4)
 - For colour sending, press **Colour/B&W (Color/B&W)** to turn on its light. (→ p. 7-3)
 - To adjust the resolution and contrast, → pp. 7-4, 7-5.
 - You may be unable to use memory sending if the percentage shown in the LCD is close to 100%. Use manual sending via the handset instead. (→ p. 7-8)
- 4 Dial the other party's fax number.
 - For dialling methods, → p. 7-6.
 - If you enter the wrong number, press **Stop**, then enter the correct number.
 - If you must first dial a digit to get an outside line ("9", for example), add a pause after that digit by pressing **○● (Redial)/Pause**.

Ex:

MEMORY USED	0%
-------------	----

(Currently used memory)

DOCUMENT READY

(Standby to scan)

Ex:

TEL=	9p7654321
------	-----------

* MultiPASS C80/FAX-B230C: Up to approximately 426 pages.

** Based on Canon FAX Standard Chart No. 1, standard mode.

5 Press **Start (Start/Scan)** to begin scanning for sending, or if you used speed dialling, wait a few seconds for the unit to begin scanning automatically.

- If you prefer the unit never to scan a document automatically after a few seconds, disable the **TIME OUT** setting. (→ p. 14-6)
- To cancel sending once dialling has started, press **Stop** then **✳**. (→ p. 7-10)



- You can scan up to 30 different documents for memory sending.
- When an error occurs during sending, the document is automatically deleted from memory, even if it was not sent completely.
- If you attempt to send a colour document to a fax machine that does not support colour faxing, the document will not be sent and the LCD will display **TRY AGAIN IN B&W (TRY AGAIN IN B/W)**. Try sending again in black & white. For the MultiPASS C75/ FAX-B215C, you can enable the **COLOUR DIRECT TX** setting (→ p. 14-6) that converts colour faxes to black & white if the other party's fax machine does not support colour faxing, thus enabling you to send colour documents to any fax machine without an error occurring.

Manual Sending Via the Handset

Manual sending via the handset allows you to talk to the other party before sending a document. This method is useful if the other party must manually set their fax machine to receive before they can receive a fax.

Follow this procedure for manual sending via the handset:



For this mode, you need to connect the optional handset, a telephone, or an extension phone to your unit. (→ p. 2-6)

- 1** Open the document tray (MultiPASS models only).
- 2** Adjust the document feed lever for the document you are loading. (→ p. 4-2)
- 3** Prepare the document and load it, face down, in the ADF. (→ p. 4-4)
 - For colour sending, press **Colour/B&W (Color/B&W)** to turn on its light. (→ p. 7-3)
 - To adjust the resolution and contrast, → pp. 7-4, 7-5.

Ex:

MEMORY USED	0%
-------------	----

(Currently used memory)

DOCUMENT READY

(Standby to scan)

4 Press **Hook**.

- You can also lift the handset instead of pressing **Hook**.

TEL=

5 Dial the other party's fax/telephone number.

- For dialling methods, → p. 7-6.
- If you make a mistake during dialling, press **Hook** or hang up the handset and start again from step 4.

Ex:

TEL= 7 6 5 4 3 2 1

6 When you hear the other party answer the call, pick up the handset to start talking.

- If you pressed **Hook** in step 4 instead of lifting the handset, you will hear the other party's voice but they will not be able to hear you through the speaker. Pick up the handset to talk to the other party.
- If you hear a high-pitched signal instead of the other party's voice, press **Start (Start/Scan)**. If you picked up the handset to dial, press **Start (Start/Scan)** and hang up the handset. The unit will begin sending the document.

7 When you are ready to send the document, ask the other party to press the start button on their fax unit.

8 When you hear the high-pitched signal of the other party's fax unit press **Start (Start/Scan)** on the unit and then hang up the handset.

- The unit begins sending the document.



- Be sure to hang up the handset *after* you press **Start (Start/Scan)** on the unit; otherwise the call will be disconnected.
- The unit will beep if the handset is not hung up properly. Make sure the handset is seated properly in its cradle. If you do not want the unit to beep, disable the OFFHOOK ALARM setting. (→ p. 14-4)
- If you attempt to send a colour document to a fax machine that does not support colour faxing, the document will not be sent and the LCD will display TRY AGAIN IN B&W (TRY AGAIN IN B/W). Try sending again in black & white. For the MultiPASS C75/ FAX-B215C, you can enable the COLOUR DIRECT TX setting (→ p. 14-6) that converts colour faxes to black & white if the other party's fax machine does not support colour faxing, thus enabling you to send colour documents to any fax machine without an error occurring.

Cancelling Sending

Follow this procedure if you want to stop sending a document before transmission is completed:

■ Cancel manual sending via the handset as follows:

- 1 Press **Stop**.
 - The transmission is cancelled.
 - The unit prints an ERROR TX REPORT.
(→ p. 11-4)

■ Cancel memory sending as follows:

- 1 Press **Stop**.
 - The unit asks you to confirm that you want to cancel sending.

CANCEL? *YES #NO

YES=(*) NO=(#)

- 2 Press ***** to cancel sending.
 - Sending is not cancelled until you press *****.
 - If you change your mind and want to continue sending, press **#**.
 - To cancel transmission of a document waiting to be sent, you will have to delete it from memory.
(→ p. 7-20)
 - The unit prints an ERROR TX REPORT.
(→ p. 11-4)



When you cancel sending, you may need to open the operation panel to remove the document from the ADF. (→ p. 13-3)

Redialling When the Line is Busy

There are two methods of redialling: *Manual redialling* and *Automatic redialling*. This section explains these two methods.

Manual Redialling

Press **⬤ (Redial)/Pause** to dial the last number you dialled with the numeric buttons. (This starts redialling regardless of whether automatic redialling is enabled.)

Cancelling Manual Redialling

To cancel manual redialling, press **Stop**.

Automatic Redialling

What is Automatic Redialling?

When you are sending a document using memory sending and the other party's line is busy, the unit waits the specified time and then dials the same number again. You can set your unit to redial several times if previous attempts fail because of a busy signal. This feature is called *Automatic redialling*.

After the initial dial attempt, your unit is factory-set to wait two minutes and then try to dial again. If the second attempt fails because the line was busy, the unit will again wait for two minutes and make a final attempt to complete the call.

Automatic redialling can be turned off and on. The number of redialling attempts and the time interval between attempts can also be adjusted. (→ p. 7-12)

If all redialling attempts are unsuccessful, the unit will cancel the transmission and print an **ERROR TX REPORT** to remind you that the transmission was not completed. (→ p. 11-4)



For MultiPASS models, you can also set the automatic redialling feature from the MultiPASS Suite. (→ *Software User's Guide*)

When automatic redialling is in use, the LCD alternately displays **AUTO REDIAL** and the transaction number (TX/RX NO.) while it is waiting to redial.

Cancelling Automatic Redialling

Automatic redialling cannot be cancelled with the **Stop** button while the unit is waiting to redial.

Follow this procedure to cancel automatic redialling:

- 1 Wait until the unit begins redialling.

DIALING

- 2 Press **Stop**.

- The unit asks you to confirm that you want to cancel.

CANCEL? *YES #NO

YES=(*) NO=(#)

- 3 Press ***** to cancel redialling.

- Redialling is not cancelled until you press *****.
- If you change your mind and want to continue redialling, press **#**.
- The unit prints an ERROR TX REPORT.
(→ p. 11-4)



If you want to cancel a transmission while the unit is waiting to redial, you will have to delete the document from memory. (→ p. 7-20)

Setting the Options for Automatic Redialling

You can set the following options for automatic redialling:

- Whether or not the unit redials automatically.
- The number of times the unit attempts to redial.
- The time interval between redialling attempts.

Follow this procedure to adjust the automatic redialling settings:

- 1 Press **Function**.

- 2 Press **Data Registration**.

DATA REGISTRATION

- 3 Press **Set**.

USER SETTINGS

- 4 Use **V** or **^** to select **TX SETTINGS**.

TX SETTINGS

- 5 Press **Set**.

ECM TX

6 Use ∇ or \blacktriangle to select **AUTO REDIAL**.

AUTO REDIAL

7 Press **Set**.

- To disable automatic redialling, use ∇ or \blacktriangle to select **OFF**, then press **Set**. Press **Stop** to return to standby mode.
- To enable automatic redialling, use ∇ or \blacktriangle to select **ON**. Continue with the steps below.

Ex: ON

8 Press **Set** twice.

REDIAL TIMES

Ex: 2TIMES

9 Use the numeric buttons to enter the number of times you want the unit to redial.

- You can select from 1 to 10 times.
- The default setting is twice.

Ex: 5TIMES

10 Press **Set** twice.

REDIAL INTERVAL

Ex: 2MIN.

11 Use the numeric buttons to enter the time interval between rediallings.

- You can select from 1 to 99 minutes.
- The default setting is 2 minutes.

Ex: 5MIN.

12 Press **Set**.

TIME OUT

13 Press **Stop** to return to standby mode.

Ex: 15:00 FaxOnly

Sequential Broadcasting

Sending a Document to More Than One Destination

This feature allows you to scan a document once and send it to several destinations. You can send the document to a maximum of 113 destinations using a combination of the following dialling methods:

- One-touch speed dialling: up to 12 destinations
- Coded speed dialling: up to 100 destinations
- Regular dialling (using the numeric buttons): one destination

You can enter the destinations in any order. (Be sure to press **Set** after your entry with the numeric buttons.)



If you frequently send documents to the same group of destinations, you can group them and register these numbers for group dialling. You can register up to 111 fax numbers with group dialling and send the same document to these numbers at the press of one or three buttons. (→ p. 6-9)

Follow this procedure to send a document to more than one destination:

- 1 Open the document tray (MultiPASS models only).
- 2 Adjust the document feed lever for the document you are loading. (→ p. 4-2)
- 3 Prepare the document and load it, face down, in the ADF. (→ p. 4-4)
 - For colour sending, press **Colour/B&W (Color/B&W)** to turn on its light. (→ p. 7-3)
 - To adjust the resolution and contrast, → pp. 7-4, 7-5.
- 4 Enter up to 113 fax numbers using any of the following methods:
 - One-touch speed dialling:
Press the desired one-touch speed dialling button(s).
 - Coded speed dialling:
Press **Coded Dial**, then use the numeric buttons to enter the two-digit code. Repeat for other codes.
 - Be sure to press **Coded Dial** before each code.

Ex:

MEMORY USED	0%
-------------	----

(Currently used memory)

DOCUMENT READY

(Standby to scan)

Ex:

TEL=905 795 1111

Ex:

*01

Ex:

TEL=03 3758 2111

■ Regular dialling:

Use the numeric buttons to enter the fax number, then press **Set**.

- You can only enter one fax number this way.

Ex:

TEL=2 887 0166



- If you enter an incorrect destination, press **Function**, then **Clear**. Then press **Function** again, and enter the correct destination.
- You must enter the second fax number within five seconds of entering the first one. All subsequent fax numbers must be entered within 10 seconds. If you wait longer than these times, the unit automatically begins scanning the document for sending. If you prefer the unit not to do this, disable the **TIME OUT** setting. (→ p. 14-6)
- If you want to review the numbers you entered, press **Function** and use **✓** or **△** to scroll through the numbers.

5 Press **Start (Start/Scan)** to begin scanning for sending, or wait a few seconds for the unit to begin scanning automatically.

- The unit will first send the document to the one-touch speed dialling destinations, then the coded speed dialling destinations, and finally to the destination dialled using regular dialling.
- If you prefer the unit never to scan a document automatically after a few seconds, disable the **TIME OUT** setting. (→ p. 14-6)
- To cancel sending, press **Stop** then **✕**. Sending to all destinations you specified in step 4 will be cancelled (you cannot cancel only one destination), and the unit will print a **MULTI TX/RX REPORT**. (→ p. 11-5)



- If a number is busy, the unit will continue sending to the other destinations and then redial the number that was busy.
- If the unit's memory becomes full while scanning your document, **MEMORY FULL** will appear in the LCD. If this happens, remove the remainder of the document from the ADF (you may need to open the operation panel to do so), then divide the document into several sections and send each section separately.
- If you attempt to send a colour document to a fax machine that does not support colour faxing, the document will not be sent, the LCD will display **TRY AGAIN IN B&W** (TRY AGAIN IN B/W), and transmission to that destination will be cancelled. Try sending again in black & white. (For the MultiPASS C75/FAX-B215C, this occurs even if the **COLOUR DIRECT TX** setting is enabled.)

Sending a Document Using Group Dialling

If you frequently send faxes to the same group of fax numbers, you can create a group of these numbers. Groups are stored under one-touch speed dialling buttons or coded speed dialling codes. For details, → p. 6-9.

Delayed Sending (MultiPASS Models Only)

You can use your unit to send faxes at a preset time. This feature is called *Delayed sending* or *Timer sending*. By using this feature, you can take advantage of lower long distance rates at night, for example.



- You can only set this feature from the MultiPASS Suite. (→ *Software User's Guide*)
- To use this feature, your PC must be turned on and connected to the unit.

Sending Other Documents While Your Unit is Set for Delayed Sending

Your unit is a multitasking device, so you can perform other tasks even when you have set your unit for delayed sending.

To print, copy, scan, or send other documents after setting the unit for delayed sending, simply follow the procedures described in this guide or in the *Software User's Guide*.

Documents Stored in Memory

Printing a List of Documents in Memory

Your unit can print a list of documents stored in memory, along with the transaction number (TX/RX NO.) of each document. Once you know the transaction number of a document in memory, you can print it or delete it. These procedures are described later in this chapter.

Follow this procedure to print a list of documents in memory:

- 1 Press **Function**.
- 2 Press **Memory Reference**.
- 3 Press **Set**.
 - The unit prints the DOC. MEMORY LIST.

DOC. MEMORY LIST

PRINTING REPORT

27/12 2001 23:42 FAX 123 4567

CANON

001

*** DOC. MEMORY LIST ***

TX/RX NO	MODE	CONNECTION TEL/ID	PGS.	SET TIME	
0046	TRANSMIT	COL	3	27/12 23:24	
0047	TRANSMIT		[04] Canon ITALIA	2	27/12 23:26
0048	B'CAST		[01] Canon CANADA	1	27/12 23:38
0049	B'CAST		[03] Canon GROUP 2	1	27/12 23:39

Printing a Document in Memory

Before printing a document, make sure you have the correct BJ cartridge installed.

	Black & White Document in Memory	Colour Document in Memory
Colour BJ cartridge	Printing possible.	Printing possible.
Black BJ cartridge	Printing possible.	Printing possible if converted to black & white.
Photo BJ cartridge	MultiPASS C75/ FAX-B215C: Printing possible. All other models: Change the BJ cartridge to the Black or Colour BJ cartridge.	Printing possible.

Follow this procedure to print a document stored in memory:

1 Press **Function**.

2 Press **Memory Reference**.

DOC. MEMORY LIST

3 Use **V** or **Λ** to select **PRINT DOCUMENT**.

PRINT DOCUMENT

4 Press **Set**.

Ex: TX/RX NO. 0001

5 Use **V** or **Λ** to select the transaction number (TX/RX NO.) of the document you want to print.

Ex: TX/RX NO. *0003

- The marks before the transaction number (TX/RX NO.) mean the following:
 - (No mark): Black & white document
 - *: Colour document
 - #: Black & white document being sent
 - &: Colour document being sent
- If you are unsure of the transaction number (TX/RX NO.), print the DOC. MEMORY LIST. (→ p. 7-17)
- Use **<** or **>** to display details of the transaction (destination, for example).

6 Press Set.

1ST PG ONLY?

YES=(*) NO=(#)

7 Press * to print the first page only, or press # to print all pages of the document.

- The unit prints the document.
- If you are printing a colour document and have the Black BJ cartridge installed, these messages appear:

Press * to print the document in black & white with the Black BJ cartridge, or press # to cancel printing. The unit returns to step 5.

- If you are printing a colour document and have the Photo BJ cartridge installed, these messages appear (PHOTO INK PRINT setting disabled in the MultiPASS C75/FAX-B215C):

Press * to print the document with the Photo BJ cartridge, or press # to cancel printing. The unit returns to step 5.

CONVERT CLR>B&W?

YES=(*) NO=(#)

PRINT W/ BC-22e?

YES=(*) NO=(#)

8 To continue printing other documents in memory, repeat the procedure from step 5.

-or-

Press **Stop** to return to standby mode.

Ex: 15:00 FaxOnly



You cannot print a black & white document with the Photo BJ cartridge (PHOTO INK PRINT setting disabled in the MultiPASS C75/FAX-B215C). If you have this BJ cartridge installed, press **Stop**, replace the BJ cartridge with the Black or Colour BJ cartridge (→ p. 12-12) and start again from the beginning. For the MultiPASS C75/FAX-B215C, you can alternatively enable the PHOTO INK PRINT setting. (→ p. 14-8)

Deleting a Document From Memory

Follow this procedure to delete a document from memory:

1 Press **Function**.

2 Press **Memory Reference**.

DOC. MEMORY LIST

3 Use **V** or **Λ** to select **DELETE DOCUMENT**.

DELETE DOCUMENT

4 Press **Set**.

Ex: TX/RX NO. 0001

5 Use **V** or **Λ** to select the transaction number (TX/RX NO.) of the document you want to delete.

Ex: TX/RX NO. *0004

- The marks before the transaction number (TX/RX NO.) mean the following:
 - (No mark): Black & white document
 - *: Colour document
 - #: Black & white document being sent
 - &: Colour document being sent
- If you are unsure of the transaction number (TX/RX NO.), print the DOC. MEMORY LIST. (→ p. 7-17)
- Use **<** or **>** to display details of the transaction (destination, for example).

6 Press **Set**.

- The unit asks you to confirm that you want to delete the document.

OK TO DELETE?

YES=(*) NO=(#)

7 Press ***** to delete the document.

- If you change your mind and want to keep the document in memory, press **#**.
- The unit deletes the document.

ERASING END

8 To continue deleting other documents in memory, repeat the procedure from step 5.

-or-


Press **Stop** to return to standby mode.

Ex: 15:00 FaxOnly

Using Alternative Telephone Networks (All Models Except the MultiPASS C75/ FAX-B215C)

Your unit has a built-in feature that allows you to send documents and make telephone calls with an alternative long distance service, such as the UK Call, Global Call, and Day Call Services of Cable and Wireless Communications Limited available to users in the UK. Subscribers to such services can save money on most long distance communications.

The procedures described in this section show you how to use your unit with these services of Cable and Wireless Communications Limited. For details on using your unit with other alternative telephone services, contact your local authorised Canon dealer or the Canon help line.

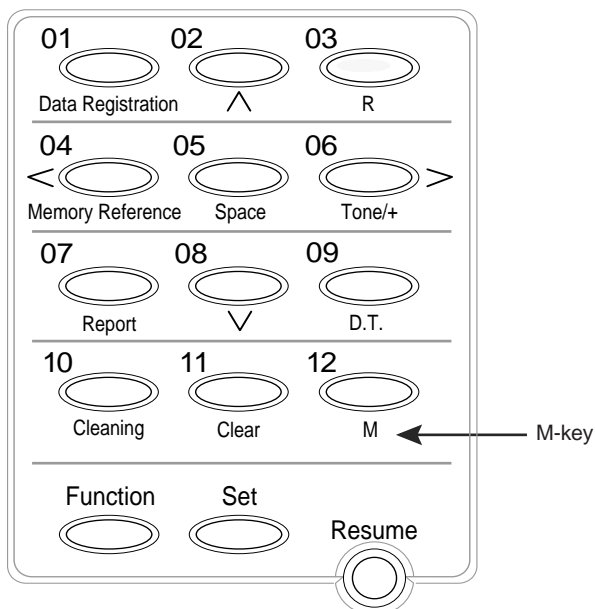

Registering an Alternative Telephone Network

Follow this procedure to register the access and ID codes under the **M** button for an alternative telephone network:

1 Press **Function**.

2 Press **Data Registration**.

DATA REGISTRATION

3 Press **Set** twice.

USER SETTINGS

DATE & TIME

4 Use **V** or **Λ** to select **M-KEY SETTING**.

M-KEY SETTING

5 Press **Set**.

Ex: OFF

6 Use **V** or **Λ** to select **ON**.

ON

7 Press **Set** twice.

ACCESS CODE

Ex: 132

8 Use **V** or **Λ** to select the access code.

- You can select from the following:
 - 132
 - 131P ("P" indicates a four-second pause.)

Ex: 131P

■ If you selected 132 in step 8:

9 Press **Set**.

REPORT SETTINGS

10 Press **Stop** to return to standby mode.

Ex: 15:00 FaxOnly

■ If you selected 131P in step 8:

9 Press **Set** twice.

ID CODE

- 10** Use the numeric buttons to enter the ID code (max. 20 digits, no pauses necessary).
- This ID code is given to you by Cable and Wireless Communications Limited (or another alternative service).
 - If an ID code is already registered, you will see a string of asterisks (*****) in the LCD.

Ex: 123456789

- 11** Press **Set**.

REPORT SETTINGS

- 12** Press **Stop** to return to standby mode.

Ex: 15:00 FaxOnly

Sending With an Alternative Telephone Network

Follow this procedure to send using a registered long distance service:

- 1** Open the document tray (MultiPASS models only).
- 2** Adjust the document feed lever for the document you are loading. (→ p. 4-2)
- 3** Prepare the document and load it, face down, in the ADF. (→ p. 4-4)
 - For colour sending, press **Colour/B&W (Color/B&W)** to turn on its light. (→ p. 7-3)
 - To adjust the resolution and contrast, → pp. 7-4, 7-5.
 - You may be unable to use memory sending if the percentage shown in the LCD is close to 100%. Use manual sending via the handset instead. (→ p. 7-8)

Ex: MEMORY USED 0%
(Currently used memory)

DOCUMENT READY
(Standby to scan)

- 4** Press **Function**.

- 5** Press **M**.

TEL= M

- 6** Use the numeric buttons to dial the other party's fax number.
- If you enter the wrong number, press **Stop**, then start again from step 4.

Ex: TEL= M416795111

- 7** Press **Start (Start/Scan)** to begin scanning for sending.
- The unit automatically dials the access and ID codes registered under the **M** button and then dials the other party's fax number.
 - To cancel sending once dialling has started, press **Stop** then ***.** (→ p. 7-10)



- To protect your access and ID codes, these are not printed on any reports.
- If you frequently call the same numbers with this feature, you can register the access and ID codes together with a fax/telephone number for speed dialling. (→ below)

Registering Speed Dialling With the M Button

By registering your access and ID codes together with the fax/telephone number for one-touch speed dialling or coded speed dialling, you can send documents or make calls over these services at the press of one or a few buttons and without having to press **M**.



- You must first register the access and ID codes under the **M** button before you can register the **M** button under speed dialling entries. (→ p. 7-22)
- For details on registering numbers for speed dialling, → Chapter 6.

Follow this procedure to register the **M** button settings for speed dialling:

- 1** During speed dialling registration, when you come to the step that requires you to enter the fax/telephone number, press **M**.
- 2** Use the numeric buttons to enter the fax/telephone number you want to register.
- 3** Continue with the procedure for registering entries for one-touch or coded speed dialling.

Ex:

Ex:

Once you have completed the above procedure, you can simply press the one-touch speed dialling button or press **Coded Dial** and enter the coded speed dialling code to dial the fax/telephone number using the UK Call, Global Call, or Day Call Service of Cable and Wireless Communications Limited.

Chapter 8

Receiving Faxes

Different Ways to Receive a Fax	8-2
Receiving Faxes Automatically: FAX ONLY MODE	8-3
Setting FAX ONLY MODE	8-3
Receiving Both Faxes and Telephone Calls Automatically: Fax/Tel Mode	8-5
Setting Fax/Tel Mode	8-5
Setting the Options for Fax/Tel Mode	8-6
Receiving Faxes Manually: MANUAL MODE	8-8
Setting MANUAL MODE	8-8
Receiving a Fax Manually	8-8
Receiving With an Answering Machine: ANS.MACHINE MODE	8-10
Setting ANS.MACHINE MODE	8-10
Using Your Unit With an Answering Machine	8-10
Receiving Faxes to the MultiPASS Suite (MultiPASS Models Only)	8-11
When Your PC is Off	8-11
Receiving in Colour	8-12
Setting Colour Reception	8-12
Receiving While Performing Other Tasks	8-13
Receiving Faxes in Memory When a Problem Occurs	8-13
Cancelling Receiving	8-14

Different Ways to Receive a Fax

Your unit provides you with several modes for receiving faxes. To determine which mode best suits your requirements, refer to the table below:

Receive Mode	Main Use	Operation	Requirements	Details
FAX ONLY MODE	Fax	Unit answers all calls as fax calls. It receives faxes automatically and disconnects voice calls.	Separate telephone line for fax use only.	p. 8-3
Fax/Tel Mode	Fax/Tel	Automatically switches between fax and voice calls. Receives faxes automatically and rings for voice calls.	Optional handset, telephone or extension phone connected to the unit.	p. 8-5
MANUAL MODE	Tel	Unit rings for every call, whether a fax call or a voice call. For a fax call, you have to manually activate reception of the fax.	Optional handset, telephone or extension phone connected to the unit.	p. 8-8
ANS.MACHINE MODE	Fax/Tel	Receives faxes automatically and routes voice calls to the answering machine.	Answering machine connected to the unit.	p. 8-10
MultiPASS Suite (MultiPASS models only)	PC Fax	Directs faxes to your PC.	PC connected to the MultiPASS and MultiPASS Suite installed. (→ <i>Software User's Guide</i>)	p. 8-11

Once you have decided which mode is suitable for your needs, set the mode as described in this chapter. You can change the mode at any time.

Receiving Faxes Automatically: FAX ONLY MODE

If you have a separate telephone line for your unit, set **FAX ONLY MODE** for the unit to answer all calls as fax calls.

Setting FAX ONLY MODE

Your unit is factory-set to **FAX ONLY MODE**. If you have not changed the receive mode to Fax/Tel Mode, simply follow this procedure:

- 1 Press **Receive Mode** to select **FAX ONLY MODE**.

- After a few seconds, the LCD changes to this display:

Ex:

FAX ONLY MODE
15:00 FaxOnly

If **FAX ONLY MODE** does not appear in the LCD when you press **Receive Mode**, follow this procedure to set this mode:

- 1 Press **Function**.
- 2 Press **Data Registration**.
- 3 Press **Set**.
- 4 Use **V** or **^** to select **RX SETTINGS**.
- 5 Press **Set**.
- 6 Use **V** or **^** to select **RX MODE**.
- 7 Press **Set**.
- 8 Use **V** or **^** to select **FAX ONLY MODE**.
- 9 Press **Set**.

DATA REGISTRATION

USER SETTINGS

RX SETTINGS

ECM RX

RX MODE

Ex:

FAX/TEL AUTO SW

FAX ONLY MODE

INCOMING RING

10 Press **Stop** to return to standby mode.

Ex:

15:00	FaxOnly
-------	---------

11 Confirm that FaxOnly is displayed in the LCD.

Ex:

15:00	FaxOnly
-------	---------

- If FaxOnly is not displayed, press **Receive Mode** to select FAX ONLY MODE. After a few seconds, the LCD returns to standby mode.

The unit assumes all incoming calls are from fax machines sending faxes. It receives the documents automatically and disconnects all voice calls.



The unit does not ring when it receives a fax call. If you want to be alerted when a fax call is received, connect the optional handset, a telephone, or an extension phone to the unit, and enable the INCOMING RING setting. (→ p. 14-7)

Receiving Both Faxes and Telephone Calls Automatically: Fax/Tel Mode

Set this mode if you want your unit to automatically switch between voice and fax calls.



For this mode, you need to connect the optional handset, a telephone, or an extension phone to your unit. (→ p. 2-6)

Setting Fax/Tel Mode

Follow this procedure to set the receive mode to FAX/TEL AUTO SW (Fax/Tel Mode):

1 Press **Function**.

2 Press **Data Registration**.

DATA REGISTRATION

3 Press **Set**.

USER SETTINGS

4 Use **∇** or **▲** to select **RX SETTINGS**.

RX SETTINGS

5 Press **Set**.

ECM RX

6 Use **∇** or **▲** to select **RX MODE**.

RX MODE

7 Press **Set**.

Ex: FAX ONLY MODE

8 Use **∇** or **▲** to select **FAX/TEL AUTO SW**.

FAX/TEL AUTO SW

9 Press **Set**.

RING START TIME

10 Press **Stop** to return to standby mode.

Ex: 15:00 FaxTel

11 Confirm that **FaxTel** is displayed in the LCD.

- If **FaxTel** is not displayed, press **Receive Mode** to select **Fax/Tel Mode**. After a few seconds, the LCD returns to standby mode.

Ex: 15:00 FaxTel

Setting the Options for Fax/Tel Mode


If you set Fax/Tel Mode, you can control precisely how the unit handles incoming calls by adjusting the following settings:

- Adjust the time the unit takes to check whether a call is from a fax machine or a telephone (RING START TIME setting).
- Adjust the length of time the unit rings when the call is a voice call (F/T RING TIME setting).
- Set whether the unit switches to receive mode after the ring time set in F/T RING TIME has elapsed (DEFAULT ACTION setting).



For MultiPASS models, you can also set these options from the MultiPASS Suite. (→ *Software User's Guide*)

■ What Happens When Fax/Tel Mode is Selected

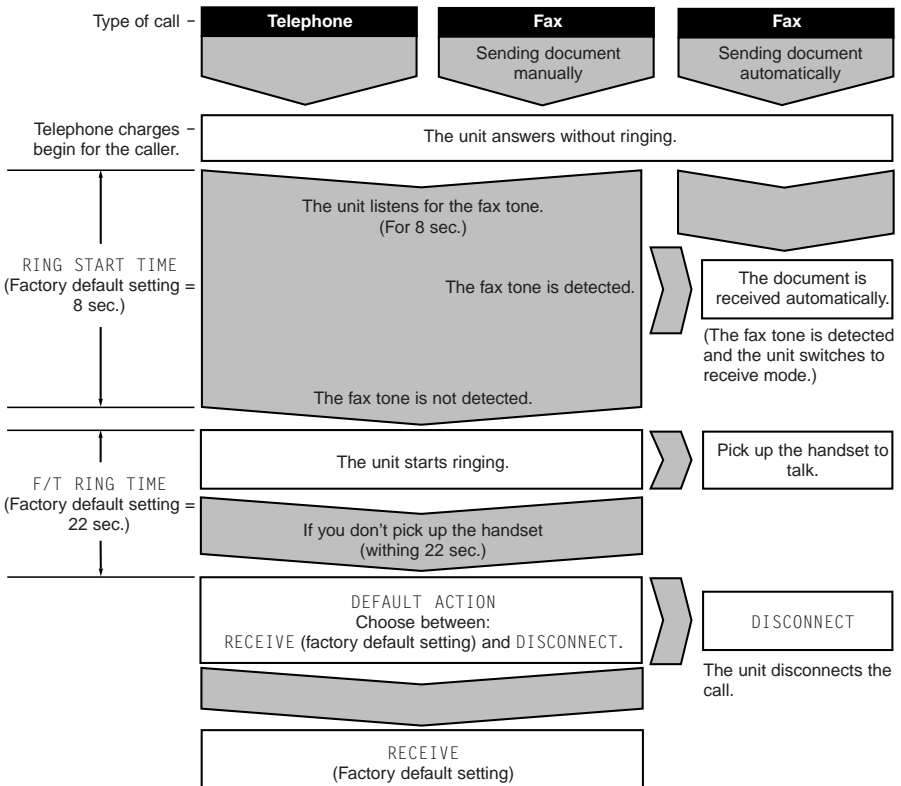

Not all fax machines are capable of sending a fax tone. For those cases if you set the DEFAULT ACTION to RECEIVE, the unit switches to receive mode automatically and starts receiving the document. If no document comes in, it disconnects the call after approximately 40 seconds.

Follow this procedure to set the Fax/Te1 Mode options:

- 1** Follow steps 1 to 9 on page 8-5.

RING START TIME

- 2** Press **Set**.

Ex: 8SEC

- 3** Use the numeric buttons to enter the time the unit waits before ringing when it receives a call.

Ex: 9SEC

- You can select from 0 to 30 seconds.
- The default setting is eight seconds.

- 4** Press **Set** twice.

F/T RING TIME

Ex: 22SEC

- 5** Use the numeric buttons to enter the time the unit rings while waiting for someone to pick up the handset.

Ex: 30SEC

- You can select from 10 to 60 seconds.
- The default setting is 22 seconds.

- 6** Press **Set** twice.

DEFAULT ACTION

Ex: RECEIVE

- 7** Use **V** or **Λ** to select **RECEIVE** or **DISCONNECT**.

Ex: DISCONNECT

- This setting tells the unit what to do if no one picks up the handset within the specified ring time set in step 5.
- Select **RECEIVE** to receive the call, or **DISCONNECT** to disconnect the call.
- The default setting is **RECEIVE**.

- 8** Press **Set**.

INCOMING RING

- 9** Press **Stop** to return to standby mode.

Ex: 15:00 FaxTel

Receiving Faxes Manually: MANUAL MODE

In **MANUAL MODE**, if you connect the optional handset, a telephone, or an extension phone to your unit, you can receive voice calls as well as manually activate reception of faxes. You can activate reception from your unit or from the telephone or extension phone connected to the unit (this is called *Remote receiving*).

 


- For this mode, you need to connect the optional handset, a telephone, or an extension phone to your unit. (→ p. 2-6)
- Make sure the **REMOTE RX** setting is enabled (→ p. 14-7). For MultiPASS models, you can also enable this setting from the MultiPASS Suite. (→ *Software User's Guide*)

Setting MANUAL MODE

Follow this procedure to set the receive mode to **MANUAL MODE**:


- 1 Press **Receive Mode** to select **MANUAL MODE**.
 - After a few seconds, the LCD changes to this display:



Receiving a Fax Manually

Follow this procedure to receive a fax manually:

 - 1 Make sure **Manual** is displayed in the LCD. (→ above)
- 2 Make sure you have connected the optional handset, a telephone, or an extension phone to the unit. (→ p. 2-6)
- 3 When you hear the optional handset, telephone, or extension phone ring, pick up the handset.



- 4 ■ If you hear a person's voice:
Start your conversation. If the caller wants to send a fax after talking to you, ask them to press the start button on their fax machine.

When you hear a slow beep, press **Start (Start/Scan)** on the unit to begin receiving the fax. Hang up the handset.

- If the telephone or extension phone is located away from your unit, dial 25 (the remote receiving ID) on the telephone or extension phone and hang up.
- The unit begins receiving the fax.

- If you hear a slow beep tone or silence:
Someone is trying to send you a fax. Press **Start (Start/Scan)** on the unit to begin receiving the fax. Hang up the handset.

- If the telephone or extension phone is located away from your unit, dial 25 (the remote receiving ID) on the telephone or extension phone and hang up.
- The unit begins receiving the fax.



- Be sure to hang up the handset *after* you press **Start (Start/Scan)** or dial the remote receiving ID; otherwise the call will be disconnected.
- You can change the number for the remote receiving ID (00 to 99), or disable remote receiving. (→ REMOTE RX, p. 14-7)
- The unit will beep if the handset is not hung up properly. Make sure the handset is seated properly in its cradle. If you do not want the unit to beep, disable the OFFHOOK ALARM setting. (→ p. 14-4)
- If you have an answering machine connected to your unit that can carry out remote-control operations (controlling your answering machine from a remote telephone), the security code for this function may be the same as the remote receiving ID. If so, make sure you change the unit's remote receiving ID to make it distinct from the answering machine's security code. (→ REMOTE RX ID, p. 14-7)

Receiving With an Answering Machine: **ANS.MACHINE MODE**

Connecting an answering machine to your unit allows you to receive faxes and telephone messages while you are out.

In **ANS.MACHINE MODE**, your unit allows the answering machine to answer incoming calls, then listens for the fax tone and automatically receives the fax if it detects this tone.

Setting **ANS.MACHINE MODE**



For this mode, you need to connect an answering machine or a telephone with an answering machine to your unit. (→ p. 2-6)

Follow this procedure to set the receive mode to **ANS.MACHINE MODE**:

- 1 Press **Receive Mode** to select **ANS.MACHINE MODE**.

- After a few seconds, the LCD changes to this display:

ANS.MACHINE MODE

Ex:

15:00	AnsMode
-------	---------

Using Your Unit With an Answering Machine

Follow these guidelines when using your unit with an answering machine:

- Set the answering machine to answer on the first or second ring.
- When recording the outgoing message on the answering machine:
 - The entire message must be no longer than 15 seconds.
 - In the message, tell your callers how to send a fax. For example:
"Hello. I can't answer the phone right now, but please leave a message after the beep. I'll return your call as soon as possible. If you would like to send a fax, press the start button on your fax machine after you leave your message. Thank you."

Receiving Faxes to the MultiPASS Suite (MultiPASS Models Only)

When your PC is on, you can set the MultiPASS Suite to automatically upload incoming faxes from your unit to your PC. (→ *Software User's Guide*)

When Your PC is Off

If you have set the MultiPASS Suite to upload received faxes from your unit to your PC but your PC is off, your unit stores the received faxes in its memory. When you turn on your PC, the faxes will automatically be uploaded to your PC.

If you want to print a fax stored in memory instead of uploading it to your PC, follow this procedure:

1 Press **Function**.

2 Press **Memory Reference**.

DOC. MEMORY LIST

3 Use **V** or **Λ** to select **FILE PRINT**.

FILE PRINT

4 Press **Set**.

- The unit prints all received faxes that were to be uploaded to your PC.



- The faxes you print are erased from memory and can no longer be transferred to your PC.
- For your unit to receive faxes in memory, the **MEMORY RX** setting must be enabled. (→ p. 14-7)

Receiving in Colour

Your unit has been factory-set to receive faxes in colour from fax machines with colour capability. When receiving a fax, your unit detects if the incoming fax is a colour or black & white transaction, and prints the fax accordingly.

For automatic printing of received colour faxes, you need to have the correct BJ cartridge installed in your unit. If not, the unit will receive the colour fax in memory and the LCD will alternate REC'D IN MEMORY and INSTALL BC-21e.

Replace the installed BJ cartridge with the Colour BJ cartridge (→ p. 12-12). The unit then prints automatically the colour fax stored in memory.

Setting Colour Reception

Your unit is factory-set to receive colour faxes from fax machines that have colour capability. Follow this procedure to disable or enable colour reception:

1 Press **Function**.

2 Press **Data Registration**.

DATA REGISTRATION

3 Press **Set**.

USER SETTINGS

4 Use **V** or **Λ** to select **RX SETTINGS**.

RX SETTINGS

5 Press **Set**.

ECM RX

6 Use **V** or **Λ** to select **COLOUR RX (COLOR RX)**.

Ex: COLOUR RX

7 Press **Set**.

Ex: ON

8 Use **V** or **Λ** to select **OFF** or **ON**.

Ex: OFF

9 Press **Set**.

PRINTER SETTINGS

10 Press **Stop** to return to standby mode.

Ex: 15:00 FaxOnly

Receiving While Performing Other Tasks

Your unit is a multitasking device so it can receive faxes and voice calls while you are performing other tasks.

If you receive a fax while performing certain tasks, the unit stores the incoming fax in memory. As soon as you finish your task, the unit automatically prints the fax.

Receiving Faxes in Memory When a Problem Occurs

If your unit encounters a problem when receiving a fax, it automatically stores the unprinted pages in memory, and the LCD displays `REC'D IN MEMORY` as well as one or more messages. For an explanation of the message(s) and details on the action to take, → p. 13-5.



- The unit memory can store up to approximately 42* pages.**
- You can set the unit not to store faxes in memory if a problem occurs during reception. (→ `MEMORY RX`, p. 14-7)
- Once the pages are printed, they are deleted from memory.
- If the memory becomes full, you will not be able to receive the remaining pages. Contact the other party and ask them to resend the remainder of the fax.

* MultiPASS C80/FAX-B230C: Up to approximately 426 pages.

** Based on Canon FAX Standard Chart No. 1, standard mode.

Cancelling Receiving

Follow this procedure if you want to stop receiving a fax before reception is completed:

1 Press **Stop**.

- The unit asks you to confirm that you want to cancel.

CANCEL? *YES #NO

YES=(*) NO=(#)

2 Press * to cancel receiving.

- Receiving is not cancelled until you press *.
- If you change your mind and want to continue receiving, press #.

TX/RX CANCELLED

Ex:

TX/RX NO. 5003

Chapter 9

Special Features

Special Dialling	9-2
Dialling an Overseas Number (With Pauses)	9-2
Switching Temporarily to Tone Dialling	9-4
Confirming a Dial Tone	9-5
Restricting Use of Your Unit	9-6
Enabling Restriction of Your Unit	9-6
Cancelling Restriction of Your Unit	9-7

Special Dialling

Dialling an Overseas Number (With Pauses)

When you dial or register an overseas number, you may need to insert a pause within and/or after the number. The length and location of the pause depends on the telephone system of your country.

Follow this procedure to dial an overseas number with pauses:

- 1 Open the document tray (MultiPASS models only).
- 2 Adjust the document feed lever for the document you are loading. (→ p. 4-2)
- 3 Prepare the document and load it, face down, in the ADF. (→ p. 4-4)
 - For colour sending, press **Colour/B&W (Color/B&W)** to turn on its light. (→ p. 7-3)
 - To adjust the resolution and contrast, → pp. 7-4, 7-5.
- 4 Use the numeric buttons to dial the international access code.
 - If you enter the wrong number, press **Stop**, then enter the correct number.
 - For details on international access codes, contact your local telephone company.
- 5 If necessary, press **○● (Redial)/Pause** to enter a pause.
 - A pause entered within a number (p) is four seconds* long.
 - For a longer pause, press **○● (Redial)/Pause** again for another four-second* pause. Alternatively, you can change the length of the pause. (→ MID PAUSE SET, p. 14-6)

Ex:

MEMORY USED	0%
-------------	----

(Currently used memory)

DOCUMENT READY

(Standby to scan)

Ex:

TEL=	00
------	----

Ex:

TEL=	00P
------	-----

* Two seconds in Ireland.

- 6** Use the numeric buttons to dial the country code, the area code, and the fax/telephone number of the other party.

- If you enter the wrong number, press **Stop** and start again from step 4.

Ex: TEL= 00p811234

- 7** If necessary, press **Redial/Pause** to enter a pause.

- A pause at the end of a number (P) is fixed to ten seconds.

Ex: TEL= 00p811234P

- 8** Press **Start (Start/Scan)** to begin scanning for sending.

- To cancel the transmission once dialling has started, press **Stop** then ***.** (→ p. 7-10)



To take advantage of the speed dialling features of your unit, register frequently used overseas numbers for one-touch or coded speed dialling. (→ pp. 6-3, 6-6)

Switching Temporarily to Tone Dialling

Many information services for banks, airline reservations, hotel reservations, etc., require tone dialling for their services. If your unit is connected to a rotary pulse line, follow this procedure to set the unit temporarily for tone dialling:

- 1 Open the document tray (MultiPASS models only).
- 2 Press **Hook**.
 - Instead of pressing **Hook**, you can also lift the handset if you have connected the optional handset, a telephone, or an extension phone to your unit.
- 3 Use the numeric buttons to dial the telephone number of the information service.
 - The unit connects using the pulses required by your telephone line.
- 4 When the recorded message of the information service answers, press **Function**.
- 5 Press **Tone/+** to switch to tone dialling.
 - When **Tone/+** is pressed, T is displayed in the LCD.
 - If you pressed **Hook** in step 2, you can pick up the handset if you need to talk to the other party.
- 6 Use the numeric buttons to enter the numbers requested by the information service.
 - Numbers entered after pressing **Tone/+** will be dialled using tone dialling.
- 7 When you have finished, press **Hook** to disconnect the call.
 - If you used the handset, hang up to disconnect the call.
 - Tone dialling is cancelled when you disconnect the call.

TEL=

Ex: TEL= 7654321

Ex: TEL= 7654321T

Ex: TEL= 7654321T*34

Confirming a Dial Tone*

This feature allows you to set your unit to listen for and detect a dial tone in the middle of a fax/telephone number before dialling the rest of the number. This is called *Dial tone detection*.

Use this feature only when you register a number for speed dialling.



For details on registering numbers for speed dialling, → Chapter 6.

Follow this procedure for dial tone detection:

- 1 During speed dialling registration, when you come to the step that requires you to enter the fax/telephone number, use the numeric buttons to enter the first part of the number before dial tone detection is required.
- 2 Make sure the **Function** button's light is on.
 - If not, press **Function**.
- 3 Press **D.T.** for dial tone detection.
 - A small dot shows where the unit will wait for the dial tone.
- 4 Use the numeric buttons to enter the rest of the number.

Ex:

TEL=345_

Ex:

TEL=345 • _

* This feature is not available in the UK or Ireland.

Restricting Use of Your Unit

By enabling the restriction feature of your unit, you can prevent unauthorised people from making calls and sending faxes.

Enabling Restriction of Your Unit

To restrict use of your unit, you need to enable the LOCK PHONE setting. To prevent access to the LOCK PHONE setting, you need to register a password.

Follow this procedure to set the PASSWORD and LOCK PHONE settings:

1 Press **Function**.

2 Press **Data Registration**.

DATA REGISTRATION

3 Press **Set**.

USER SETTINGS

4 Use **V** or **^** to select **SYSTEM SETTINGS**.

SYSTEM SETTINGS

5 Press **Set** three times.

UN/LOCK PHONE

PASSWORD

PASSWORD _

6 Use the numeric buttons to enter a four-digit password.

Ex: PASSWORD 1234

7 Press **Set** twice.

LOCK PHONE

OFF

8 Use **V** or **^** to select **ON**.

ON

9 Press **Set**.

DATE SETUP

10 Press **Stop** to return to standby mode.

Ex: 15:00 FaxOnly

Restriction of the unit is now enabled. No one can make calls or send faxes. (This setting does not restrict incoming calls or faxes.)

Cancelling Restriction of Your Unit

If you have previously set a password and enabled the **LOCK PHONE** setting, follow this procedure to cancel restriction of the unit:

1 Press **Function**.

2 Press **Data Registration**.

DATA REGISTRATION

3 Press **Set**.

USER SETTINGS

4 Use **V** or **Λ** to select **SYSTEM SETTINGS**.

SYSTEM SETTINGS

5 Press **Set** twice.

UN/LOCK PHONE

PASSWORD _

6 Use the numeric buttons to enter the four-digit password you previously registered.

PASSWORD

7 Press **Set** four times.

PASSWORD

Ex: PASSWORD 1234

LOCK PHONE

ON

8 Use **V** or **Λ** to select **OFF**.

OFF

9 Press **Set**.

DATE SETUP

10 Press **Stop** to return to standby mode.

Ex:

15:00 FaxOnly

Restriction of the unit is disabled. Anyone can make calls or send faxes.

Chapter 10

Making Copies

Documents You Can Copy	10-2
Copying Documents	10-2
Setting the Paper Type for Colour Copying (All Models Except the MultiPASS C75/FAX-B215C)	10-5
Setting the Length of the Bottom Margin	10-6

Documents You Can Copy

For information on the types of documents you can copy, their requirements, and details on loading documents, → Chapter 4.

Copying Documents

One of your unit's convenient features is its ability to make high-quality black & white and colour copies.

Follow this procedure to make copies:

- 1 Open the document tray (MultiPASS models only).
- 2 Adjust the document feed lever for the document you are loading. (→ p. 4-2)
- 3 Prepare the document and load it, face down, in the ADF. (→ p. 4-4)

- 4 Press **Copy**.

- 5 ■ For colour copying:
Press **Colour/B&W (Color/B&W)** to turn on its light, then press **Image Quality (Resolution)** to select the image quality setting you want.

- You can select from the following:

MultiPASS C75/FAX-B215C:

- PLAIN PAPER
For colour copying on plain paper.
- HIGH RES. PAPER
For colour copying on high resolution paper.
- COLOUR SNAPSHOT
For copying colour photos that are less than 102 mm wide. Use high resolution paper with this setting.
- COLOUR DRAFT
For high-speed colour copying at a lower resolution.

Ex:

MEMORY USED	0%
-------------	----

(Currently used memory)

DOCUMENT READY

(Standby to scan)

COPY	100%	01
------	------	----

Ex:

COLOUR DRAFT

All Other Models:

- COLOR DRAFT
For high-speed colour copying at a lower resolution.
- COLOR FINE
For high-quality colour copying.
- COLOR SNAPSHOT
For copying colour photos that are less than 102 mm wide. Use high resolution paper with this setting.

- If you have the Photo BJ cartridge installed, you can only select HIGH RES. PAPER or COLOUR SNAPSHOT (MultiPASS C75/ FAX-B215C only).

■ For black & white copying:

Make sure the **Colour/B&W (Color/B&W)** button's light is off, then press **Image Quality (Resolution)** to select the image quality setting you want.

- If the **Colour/B&W (Color/B&W)** button's light is on, press **Colour/B&W (Color/B&W)** to turn it off.
- You can select from the following:
 - B&W TEXT
Suitable for most text documents.
 - B&W PHOTO
Suitable for documents that contain photographs.
- You cannot copy in black & white if you have the Photo BJ cartridge installed (PHOTO INK PRINT setting disabled in the MultiPASS C75/ FAX-B215C).

Ex:

B&W TEXT

6 To make a reduction or enlargement of your document, press **Function**, then use ∇ or Δ to select the percentage you want.

- You can select from the following:

MultiPASS C75/FAX-B215C:

- 70%
 - 80%
 - 90%
 - 100%
 - 150% (COLOUR SNAPSHOT mode only)
 - 200% (COLOUR SNAPSHOT mode only)
- (Please note that although you can select 150% and 200% in other modes, you can only make enlargements in COLOUR SNAPSHOT mode.)

Ex:

COPY 80% 01

All Other Models:

- 70%
- 80%
- 90%
- 100%

7 If you want to make multiple black & white copies, use the numeric buttons to enter the number of copies.

- You can make up to 99 black & white copies.
- You can only make one colour copy at a time.

Ex:

COPY 80% 05

- 8** Press **Start (Start/Scan)** to begin copying.
- To stop copying, press **Stop**. You may then need to open the operation panel to remove the document. (→ p. 13-3)

COPY



- You will be unable to make multiple copies if **MEMORY FULL** appears in the LCD. Print or delete any documents stored in memory (→ pp. 7-18, 7-20, 8-11, 8-13) to free up space in the unit's memory, then start again. Also, if you are copying multiple pages with many graphics, separate the pages into smaller stacks or make the desired number of copies one at a time as needed.
- You can also adjust the scanning contrast of documents you are copying. (→ p. 7-5)
- For all models except the MultiPASS C75/FAX-B215C, you can select the paper type for best results when colour copying. (→ p. 10-5)

Setting the Paper Type for Colour Copying (All Models Except the MultiPASS C75/ FAX-B215C)

For best results when copying in colour, adjust your unit for the type of paper you are using.

The default paper type setting is PLAIN PAPER.

Follow this procedure to set the paper type for copying:

1 Press **Function**.

2 Press **Data Registration**.

DATA REGISTRATION

3 Press **Set**.

USER SETTINGS

4 Use **V** or **^** to select **PRINTER SETTINGS**.

PRINTER SETTINGS

5 Press **Set**.

RX REDUCTION

6 Use **V** or **^** to select **COLOR COPY MEDIA**.

COLOR COPY MEDIA

7 Press **Set**.

Ex: PLAIN PAPER

8 Use **V** or **^** to select the paper type setting you want for colour copying.

Ex: HIGH RES. PAPER

- You can select from the following:
 - PLAIN PAPER
 - HIGH RES. PAPER (High resolution paper)

9 Press **Set**.

BOTTOM MARGIN

10 Press **Stop** to return to standby mode.

Ex: 15:00 FaxOnly

Setting the Length of the Bottom Margin

You can adjust the length of the bottom margin for colour copying and colour reception.

The default margin length is NORMAL (21 mm).

Follow this procedure to set the length of the bottom margin:

1 Press **Function**.

2 Press **Data Registration**.

DATA REGISTRATION

3 Press **Set**.

USER SETTINGS

4 Use **V** or **Λ** to select **PRINTER SETTINGS**.

PRINTER SETTINGS

5 Press **Set**.

RX REDUCTION

6 Use **V** or **Λ** to select **BOTTOM MARGIN**.

BOTTOM MARGIN

7 Press **Set**.

Ex: NORMAL

8 Use **V** or **Λ** to select the length of the bottom margin for colour copying and colour reception.

Ex: SMALLER

- You can select from the following:

- NORMAL

The bottom margin is 21 mm (larger than the bottom margin of a black & white printed page).

- SMALLER

The bottom margin is 7 mm (same length as the bottom margin of a black & white printed page).

9 Press **Set**.

Ex: PHOTO INK PRINT

10 Press **Stop** to return to standby mode.

Ex: 15:00 FaxOnly

Chapter 11

Reports and Lists

Summary of Lists and Reports	11-2
ACTIVITY REPORT	11-3
TX (Transmission) REPORT	11-4
MULTI TX/RX (Transaction) REPORT	11-5
RX (Reception) REPORT	11-5

Summary of Lists and Reports

The table below shows the lists and reports that can be printed from your unit. Refer to the pages indicated for more details.

Report or List	Description	Details
USER'S DATA LIST	Lists the current settings of your unit and the registered sender information.	p. 3-9
ACTIVITY REPORT	Shows recent facsimile transactions performed by your unit. You can enable or disable automatic printing of this report after every 20 transactions. You can also manually set the unit to print it.	p. 11-3 p. 14-5
TX (Transmission) REPORT	Prints after transmission of a document. You can enable or disable this feature, or set the unit to print a report only when an error occurs. You can also set the unit to print the first page of the document under the transmission report to remind you of the contents of the document.	p. 11-4 p. 14-5
RX (Reception) REPORT	Prints after reception of a document. You can enable or disable this feature, or set the unit to print a report only when an error occurs.	p. 11-5 p. 14-5
MULTI TX/RX (Transaction) REPORT	Prints after sequential broadcasting of a document.	p. 11-5
DOC. MEMORY LIST	Lists the documents currently stored in the unit's memory.	p. 7-17
MEMORY CLEAR REPORT	Prints automatically when power is restored to the unit after a power cut. Lists the documents deleted from memory.	p. 13-26
1-TOUCH SPD DIAL LIST	Lists the numbers and names registered under one-touch speed dialling buttons.	p. 6-13
CODED SPEED DIAL LIST	Lists the numbers and names registered under coded speed dialling codes.	p. 6-13
GROUP DIAL LIST	Lists groups registered under one-touch speed dialling buttons and coded speed dialling codes.	p. 6-13

ACTIVITY REPORT

Your unit is factory-set to automatically print an ACTIVITY REPORT after every 20 transactions. If you want to print an ACTIVITY REPORT before it is automatically printed, follow this procedure:

 If you prefer the unit not to print an ACTIVITY REPORT after every 20 transactions, disable the AUTO PRINT setting. (→ p. 14-5)

1 Press **Function**.

2 Press **Report**.

ACTIVITY REPORT

3 Press **Set**.

- The unit prints an ACTIVITY REPORT.

PRINTING REPORT

Transactions in an ACTIVITY REPORT are listed chronologically.

27/12 2001 15:00 FAX 123 4567

CANON

001

*** ACTIVITY REPORT ***

ST. TIME	CONNECTION TEL	CONNECTION ID	NO.	MODE	PGS.	RESULT
* 27/12 13:43	905 795 1111	Canon CANADA	5001	AUTO RX	ECM	1 OK 00'33
* 27/12 13:45	905 795 1111	Canon CANADA	5002	AUTO RX	ECM	1 OK 00'24
* 27/12 13:51	03 3758 2111	Canon TOKYO	0001	B'CAST	ECM	3 OK 01'18
* 27/12 14:05	2 887 0166	Canon AUSTRALIA	0001	B'CAST	ECM	3 OK 01'18
* 27/12 14:10	905 795 1111	Canon CANADA	5003	AUTO RX	ECM	1 OK 00'18
* 27/12 14:16	2 887 0166	Canon AUSTRALIA	5004	AUTO RX	ECM	4 OK 03'59
* 27/12 14:27	20 545 8545	Canon EUROPA	0002	TRANSMIT	COL	1 OK 01'20
* 27/12 14:30	20 545 8545	Canon EUROPA	0003	TRANSMIT	COL	1 OK 04'12
27/12 14:53	03 3758 2111	Canon TOKYO	5005	AUTO RX	ECM	1 OK 01'16
27/12 14:57	2 887 0166	Canon AUSTRALIA	0004	TRANSMIT	COL	3 NG 01'25
27/12 14:59	1 432 2060	CANON OPTICS	0005	TRANSMIT	COL	0 NG 00'01
						3 STOP #018

Indicates an entry that has appeared on a previous report.

Transaction (TX/RX) Number

Transaction Mode

Colour Transaction

Error Correction Mode Transaction

Error Page

Error Code (→ p. 13-5)

Stop Pressed During Transaction

Transaction Duration

TX (Transmission) REPORT

Your unit is factory-set to print a TX (transmission) REPORT only when an error occurs during sending. To change this setting, → TX REPORT, p. 14-5.

If you set the unit to print a report, a TX REPORT or an ERROR TX REPORT, similar to the ones below, will be printed depending on the setting you select.

27/12 2001 14:59 FAX 123 4567

CANON

001

*** TX REPORT ***

TRANSMISSION OK

TX/RX NO 0003 :COLOUR TX
CONNECTION TEL 1 432 2060

27/12 2001 14:59 FAX 123 4567

CANON

001

*** ERROR TX REPORT ***

TX FUNCTION WAS NOT COMPLETED

TX/RX NO 0004
CONNECTION TEL 20 545 8545
CONNECTION ID Canon EUROPA
ST. TIME 27/12 14:59
USAGE T 00'18
PGS. SENT 1
RESULT NG

●

THE SLEREXE COMPANY LIMITED
SAPORS LANE•BOOLE•DORSET•BH25 8ER
TELEPHONE BOOLE (945 13) 51617 – FAX 123456

Our Ref. 350/PJC/EAC

27 December, 2001

Dr. P. N. Cundall,
Mining Surveys Ltd.,
Holroyd Road,
Reading,
Berks.

OK: Transmission successful
NG: Some or no pages sent

Number of pages sent

Transmission Duration

Transmission Time

“:Colour TX” (“:COLOR TX”) Indicates a Colour Transmission.

If you enable the print with image setting (→ p. 14-5), the first page of the fax will print on the report to remind you of the contents of the fax (Black & White faxes only).

MULTI TX/RX (Transaction) REPORT

If the transmission was a sequential broadcast, a MULTI TX/RX (transaction) REPORT, similar to the one below, will be printed.

27/12 2001 17:23 FAX 123 4567		CANON		001	
***** *** MULTI TX/RX REPORT *** *****					
TX/RX NO		0054			
PGS.		1			
TX/RX INCOMPLETE					
TRANSACTION OK		[01]905 795 1111		Canon CANADA	
		[* 01]03 3758 2111		Canon TOKYO	
		[* 02]1 49 39 25 25		Canon FRANCE	
ERROR INFORMATION					

RX (Reception) REPORT

Your unit is factory-set not to print an RX (reception) REPORT even if an error occurs during reception. To change this setting, → RX REPORT, p. 14-5.

If you set the unit to print a report, an RX REPORT, similar to the one below, will be printed.

27/12 2001 14:59 FAX 123 4567		CANON		001	
***** *** RX REPORT *** *****					
RECEPTION OK					
TX/RX NO		5004 :COLOUR RX			
CONNECTION TEL		905 795 1111			
CONNECTION ID		Canon CANADA			
ST. TIME		27/12		14:59	
USAGE T		01'59			
PGS.		4			
RESULT		OK			

- OK: Reception successful
- NG: Some or no pages received
- Number of pages received
- Reception Duration
- Reception Time
- "Colour RX" ("COLOR RX") Indicates a Colour Reception.

Chapter 12 Maintenance

Periodic Cleaning	12-2
Cleaning the Unit's Exterior	12-2
Cleaning the Unit's Interior	12-3
Cleaning Inside the Printer Cover	12-3
Cleaning the Scanner Components	12-5
Cleaning the Rollers	12-6
BJ Cartridge	12-7
BJ Cartridges and BJ Tanks	12-7
When to Replace a BJ Cartridge or BJ Tank	12-8
Testing and Cleaning the BJ Cartridge Print Head	12-10
Printing the Nozzle Check Pattern	12-10
Cleaning the BJ Cartridge Print Head	12-11
Replacing the BJ Cartridge	12-12
Replacing a BJ Tank	12-15

Periodic Cleaning

Your unit requires little periodic maintenance. This section describes the necessary cleaning procedures for your unit. Please note the following before cleaning:

- Be sure to disconnect the power cord before cleaning the unit. Since documents in memory are erased when the power is disconnected, print any documents stored in memory before disconnecting the power cord. (→ pp. 7-18, 8-11, 8-13)
- Do not use tissue paper, paper towels, or similar materials for cleaning; they can stick to the components or generate static charges.



Never use volatile liquids such as thinners, benzene, acetone, or any other chemical cleaner to clean the interior of the unit; these can damage its components.

Cleaning the Unit's Exterior

Follow this procedure to clean the unit's outer casing:

- 1 Disconnect the power cord from the unit.
- 2 Wipe the unit's exterior with a clean, soft, lint-free cloth moistened with water or diluted dishwashing detergent solution.
- 3 When you are finished, reconnect the power cord.


Cleaning the Unit's Interior

Cleaning Inside the Printer Cover


To prevent ink spots and paper dust from accumulating inside the unit and affecting print quality, clean the unit's print area periodically.

Follow this procedure to clean inside the unit:


- 1 Disconnect the power cord from the unit.
- 2 Open the document tray (MultiPASS models only).
- 3 Lift the document guides to open the printer cover.
 - If the printer cover does not open easily, slide the document guides outwards and then open the printer cover.

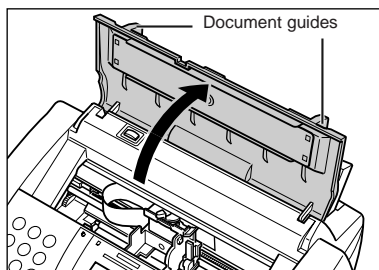

Do not touch the components shown or any metal parts since this may adversely affect operation of the unit and/or affect print quality.

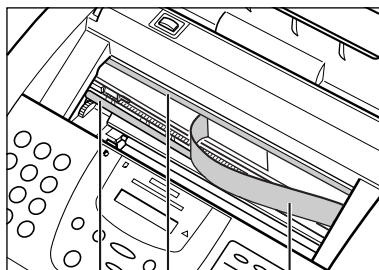

- 4** Use a clean, soft, dry, lint-free cloth to remove any ink or paper debris from the unit's interior (shaded area), especially around the platen.
- Be careful not to touch the BJ cartridge or its holder.

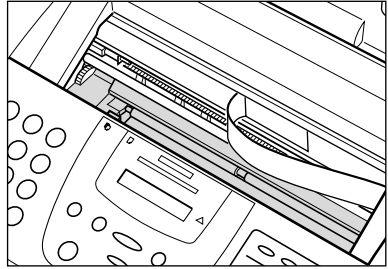


- 5** Check the small black rollers. If they are dirty, clean them with a soft, dry toothbrush.
- 6** When you are finished, close the printer cover.
- 7** Close the document tray (MultiPASS models only).
- 8** Reconnect the power cord.

Cleaning the Scanner Components

Follow this procedure to periodically check and clean the scanner components:

- 1 Disconnect the power cord from the unit.
- 2 Open the document tray (MultiPASS models only).
- 3 Open the operation panel partially by gently pulling it towards you.
 - It only opens slightly.

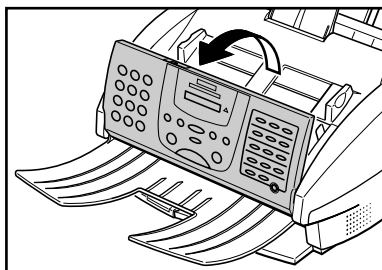

- 4 While holding the operation panel open, clean these components:


- Separation guide and separation roller
Wipe with a clean, soft, dry, lint-free cloth.
- White sheet and scanning glass
Wipe with a clean, soft, lint-free cloth moistened with water, then wipe with a clean, soft, dry, lint-free cloth.



- If the scanner components are dirty, the documents you send or copy will also be dirty.
- Be sure to use a soft cloth to avoid scratching the components.




Do not use tissue paper, paper towels, or similar materials for cleaning; they can stick to the components or generate static charges.

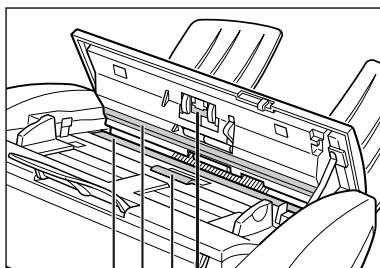


Separation Guide
Separation Roller
White Sheet
Scanning Glass

- 5** Clean the shaded area of the operation panel.
- Dirt and dust particles that collect on the underside of the operation panel affect the quality of the documents you copy or send.

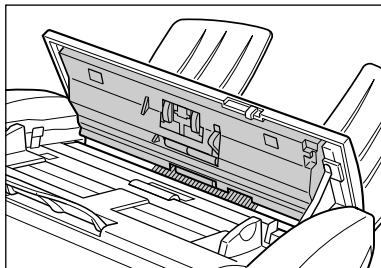

- 6** Use a clean, soft, dry, lint-free cloth to wipe up paper dust from the areas (shaded) surrounding the separation roller.

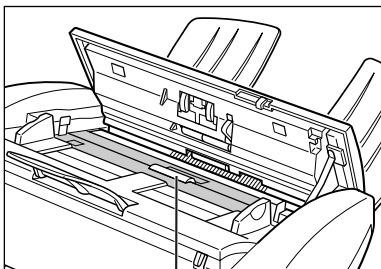

Separation Roller

- 7** When you are finished, close the operation panel by pressing it down from the centre.
- Be sure to close the operation panel until it locks into place, or the unit will not function properly.
- 8** Close the document tray (MultiPASS models only).
- 9** Reconnect the power cord.

Cleaning the Rollers

You may need to clean the unit's rollers after using a package of high resolution paper. This process removes paper dust from the unit's rollers, preventing paper feed problems. For details, → p. 5-11.

BJ Cartridge


BJ Cartridges and BJ Tanks

You can purchase the following BJ cartridges and tanks for use with your unit. Contact your local authorised Canon dealer.




For optimum printing results and to avoid printing problems, Canon recommends that you only use the Canon BJ cartridges and tanks described in this guide.

■ BC-21e Colour BJ Cartridge

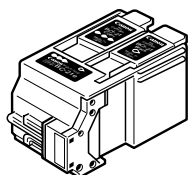


Contains the print head unit and two replaceable BJ tanks, one colour (cyan, magenta, yellow) and one black. When you run out of ink, you can replace the BJ tanks without having to replace the print head unit.

■ BX-20 Black BJ Cartridge

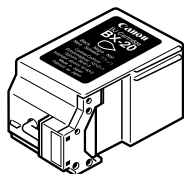


Contains the print head unit and black ink only. Use this BJ cartridge for fast, black ink printing. When you run out of ink, replace the entire BJ cartridge.

■ BC-22e Photo BJ Cartridge

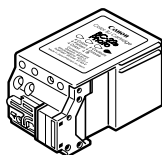


Contains the print head unit and colour and black inks. Use this BJ cartridge for photo-realistic colour printing. When used with Canon High Resolution Paper, this BJ cartridge produces images comparable to photographs. When you run out ink, replace the entire BJ cartridge.

■ BCI-21 Black BJ Tank

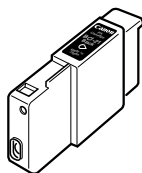

Contains the black ink for the Colour BJ cartridge. When the Black BJ tank of the Colour BJ cartridge runs out, replace with this tank.

■ BCI-21 Colour BJ Tank

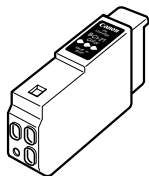

Contains the colour ink for the Colour BJ cartridge. When the Colour BJ tank of the Colour BJ cartridge runs out, replace with this tank.

When to Replace a BJ Cartridge or BJ Tank

How frequently you need to replace a BJ cartridge or tank depends on how you use your unit. If you print many graphics, halftones, or greyscales, you will need to replace them more often than if you print mainly text.


In general, you will need to replace a BJ cartridge in the following situations:

- If you have been using a BJ cartridge for over a year.
- If your printed output is not crisp and clear or has gaps in the characters (missing dots).
- If your colour printouts appear to be missing a colour.
- If the message `CHANGE CARTRIDGE` appears in the LCD.

In general, you will need to replace a BJ tank in the Colour BJ cartridge in the following situations:

- If you have been using a BJ tank for over six months.
- If your output is blank.
- If your printouts appear to be missing a colour.
- If the messages `BLACK INK EMPTY` and/or `COLOUR INK EMPTY (COLOR INK EMPTY)` appear in the LCD.

Refer to the flow chart on the next page to check if the BJ cartridge or tank(s) need replacing.

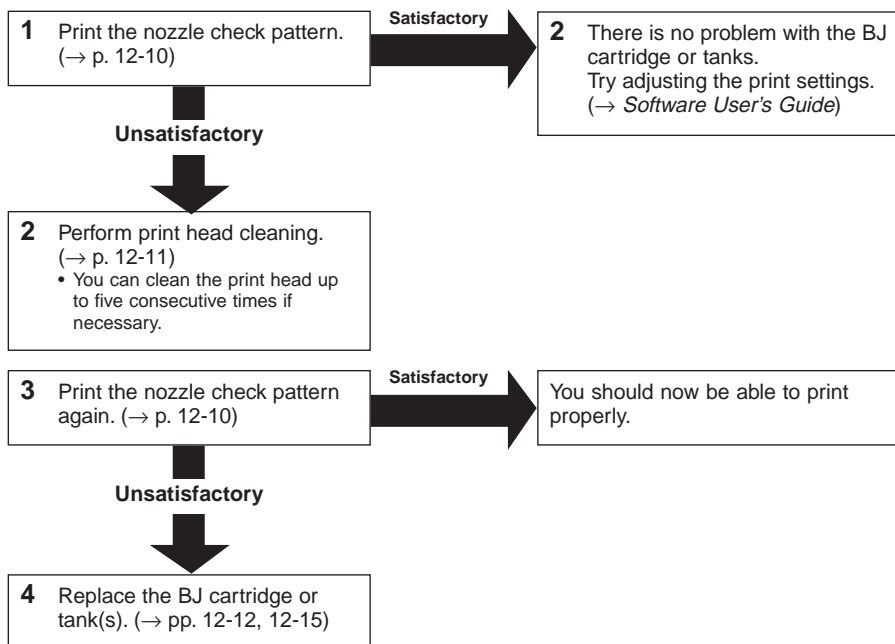

- To help ensure the maximum life of your BJ cartridges, always follow the guidelines for cartridge maintenance. (→ p. 2-13)
- For optimum printing results and to avoid printing problems, Canon recommends that you only use the Canon BJ cartridges and tanks described in this guide.
- For BJ cartridge yields, → p. A-5.

Testing and Cleaning the BJ Cartridge Print Head

The print head in the BJ cartridge contains nozzles through which ink is propelled onto the paper. To maintain the best possible print quality, these nozzles need to be cleaned from time to time. Your unit is equipped with a print head cleaning function that does this.

Printing the Nozzle Check Pattern

Before cleaning the print head, you may want to print the nozzle check pattern to test the print head of the BJ cartridge installed in the unit. This test shows if each print head nozzle is operating properly.

Refer to the flow chart (→ p. 12-9) for the correct order of testing and cleaning the BJ cartridge print head.

Follow this procedure to print the nozzle check pattern:

1 Press Function.


2 Press Cleaning.

NOZZLE CHECK

3 Press Set.

- The unit prints the nozzle check pattern.

When the Colour BJ cartridge is installed, the pattern includes all four colours; yellow, magenta, cyan, and black. In the colour pattern you will notice that lines are missing between the colours. This is normal.

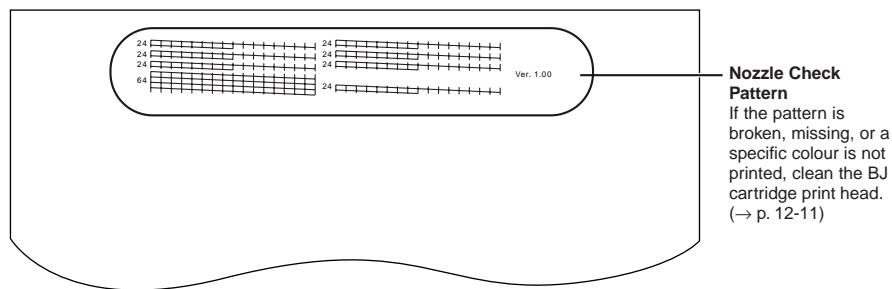

Print the nozzle check pattern again after cleaning the BJ cartridge print head to check if cleaning corrected the problem.

Cleaning the BJ Cartridge Print Head

If your printouts become faint or streaked, or if their quality otherwise deteriorates, print the nozzle check pattern to see if the print head nozzles are operating properly (→ p. 12-10). If the pattern is broken, missing, or a specific colour is not printed, clean the BJ cartridge print head.

Refer to the flow chart (→ p. 12-9) for the correct order of testing and cleaning the BJ cartridge print head.



- To maintain the best possible print quality, clean the BJ cartridge print head from time to time.
- Cleaning the print head consumes a small amount of ink. Cleaning too often reduces the amount of ink in the BJ cartridge or tanks.
- If your printing is faint, you can often correct the problem by adjusting the print settings.
(→ *Software User's Guide*)

Follow this procedure to clean the BJ cartridge print head:

1 Press **Function**.

2 Press **Cleaning**.

NOZZLE CHECK

3 Use **∨** or **∧** to select **HEAD CLEANING**.

HEAD CLEANING

4 Press **Set**.

- The unit cleans the print head.



- You can clean the print head up to five consecutive times if necessary.
- After cleaning, print the nozzle check pattern to check if cleaning corrected the problem.
(→ p. 12-10)
- If cleaning does not improve print quality, replace the BJ cartridge (→ p. 12-12) or tank(s).
(→ p. 12-15)

Replacing the BJ Cartridge


This section describes how to replace the BJ cartridge. Before replacing the BJ cartridge, be sure to read the section *When to Replace a BJ Cartridge or BJ Tank*. (→ p. 12-8)




- The procedure explained here is the same for replacing an old BJ cartridge with a new one, or simply exchanging the BJ cartridge for one of the optional BJ cartridges.
- Do not replace the BJ cartridge while the unit is printing or performing another operation.
- You only need to replace the Colour BJ cartridge when the print head is damaged or when you have printed approximately 2000 pages. If ink runs out in the Colour BJ cartridge, you can replace the individual BJ tanks (colour or black) without having to replace the entire BJ cartridge. (→ p. 12-15)

Follow this procedure to replace the BJ cartridge:


- 1 Make sure the unit is plugged in.
- 2 Open the document tray (MultiPASS models only).
- 3 Lift the document guides to open the printer cover.
 - If the printer cover does not open easily, slide the document guides outwards and then open the printer cover.

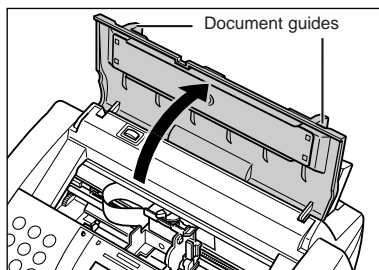


- 4 Press

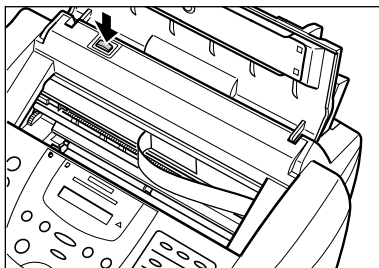



- Do not try to manually move or stop the cartridge holder since this may damage the unit.
- Do not touch the components shown or any metal parts since this may adversely affect operation of the unit and/or affect print quality.
- The unit has an automatic protection feature that helps keep it from overheating. If the cartridge holder does not move, unplug the unit and let it cool for several minutes. Then plug it in again and press  to move the cartridge holder.

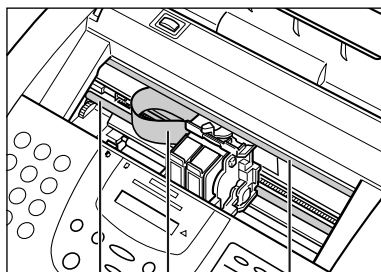



Round Shaft

Guide Rail


Ribbon Cable

5 Raise the blue cartridge lock lever on the cartridge holder and remove the BJ cartridge.


- Discard the old BJ cartridge immediately according to the local laws and regulations for disposal of consumables. You may want to place it in a plastic bag to keep any residual ink from spilling.
- Spilled ink can stain any surface; protect yourself and your work area.
- If removing a BJ cartridge to use one of the optional BJ cartridges, be sure to store the BJ cartridge in the container provided with your unit. Otherwise the ink will dry and affect print quality.

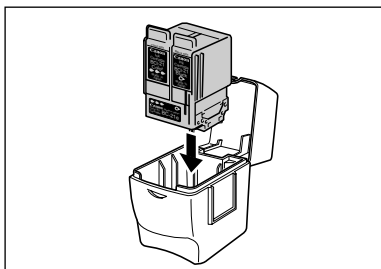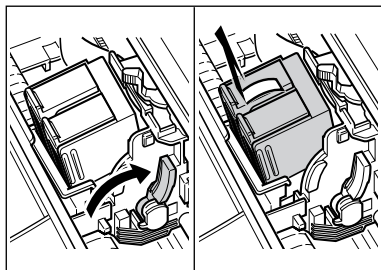


- 6 Remove the new BJ cartridge from its package, then remove the orange protective cap ① and tape ②.
- Discard the cap and tape. Never attempt to reattach them to the BJ cartridge print head.
 - Install the BJ cartridge immediately after removing the cap and tape.
 - Spilled ink can stain any surface; protect yourself and your work area.

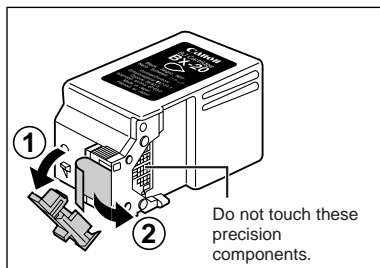


- 7 With the label facing outwards, insert the BJ cartridge into the cartridge holder. Lower the blue cartridge lock lever until it locks into position.

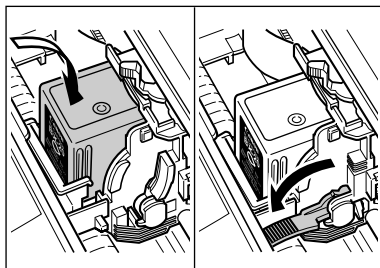

- 8 Press .
- The cartridge holder moves to its home position on the right side of the unit and begins cleaning the BJ cartridge print head. This process takes about 55 seconds.



Do not try to manually move or stop the cartridge holder since this may damage the unit.

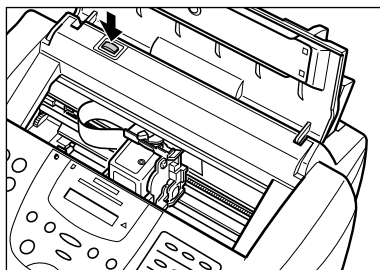

- 9 Close the printer cover.
- 10 Close the document tray (MultiPASS models only).



If you need to unplug the unit, wait until it is in standby mode (time and receive mode displayed in the LCD). Otherwise the cartridge holder may not be in its home position causing the BJ cartridge to remain uncapped and dry out.

Replacing a BJ Tank


This section describes how to replace a BJ tank in an installed Colour BJ cartridge. Before replacing a BJ tank, be sure to read the section *When to Replace a BJ Cartridge or BJ Tank*. (→ p. 12-8)




- Do not leave empty BJ tanks in a Colour BJ cartridge. Remove them immediately when they run out of ink, and replace them with new ones. Do not leave a Colour BJ cartridge with either of its BJ tanks missing as the ink in the BJ cartridge will dry and adversely affect print quality.
- Do not replace BJ tanks while the unit is printing or performing another operation.

Leave the Colour BJ cartridge installed in the unit and follow this procedure to replace a BJ tank:


- 1 Make sure the unit is plugged in.
- 2 Open the document tray (MultiPASS models only).
- 3 Lift the document guides to open the printer cover.
 - If the printer cover does not open easily, slide the document guides outwards and then open the printer cover.

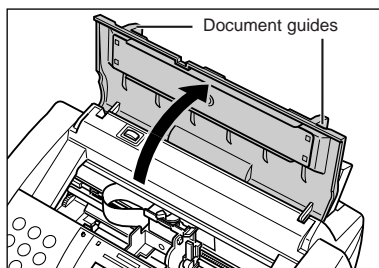

- 4 Press

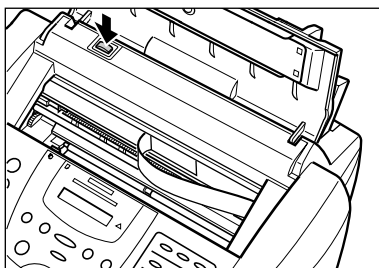




- Do not try to manually move or stop the cartridge holder since this may damage the unit.
- Do not touch the components shown or any metal parts since this may adversely affect operation of the unit and/or affect print quality.
- The unit has an automatic protection feature that helps keep it from overheating. If the cartridge holder does not move, unplug the unit and let it cool for several minutes. Then plug it in again and press  to move the cartridge holder.




The Colour BJ tank is on the left, and the Black BJ tank is on the right.

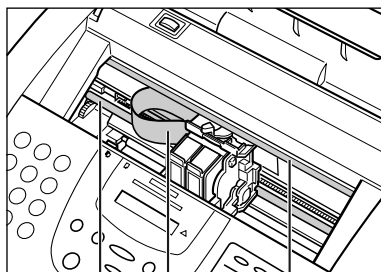

Round Shaft

Guide Rail


Ribbon Cable

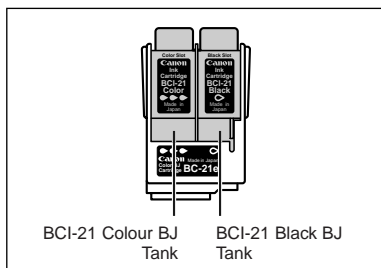


BCI-21 Colour BJ Tank

BCI-21 Black BJ Tank


- 5** Pull the tab on the BJ tank forward to release it, then remove the BJ tank from its slot.
- Do not remove the BJ cartridge from the unit.
 - Do not remove both BJ tanks together. Remove and replace each one individually to ensure that they are inserted in the correct slot. Inserting them in the wrong slot will cause colours to print incorrectly.
 - If a partially used BJ tank must be removed for some reason, keep the BJ tank installed in another Colour BJ cartridge. Otherwise the ink will dry and adversely affect print quality.
 - Discard the old BJ tank immediately according to the local laws and regulations for disposal of consumables. You may want to place it in a plastic bag to keep any residual ink from spilling.
 - Spilled ink can stain any surface; protect yourself and your work area.

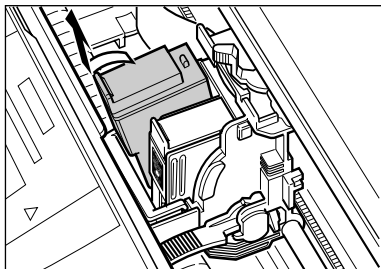


- 6 Remove the new BJ tank from its package, then remove the orange protective cap.
- Discard the cap. Never attempt to reattach it to the BJ tank.
 - Spilled ink can stain any surface; protect yourself and your work area.

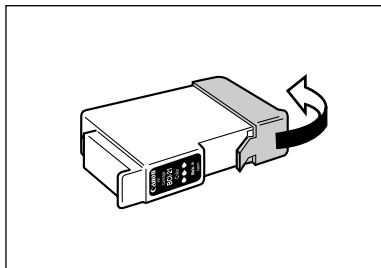


Do not touch the ink port on the BJ tank.

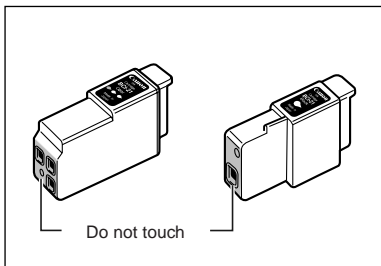


- 7 Insert the BJ tank into the empty slot in the Colour BJ cartridge, then press firmly on its tab until it clicks into position.

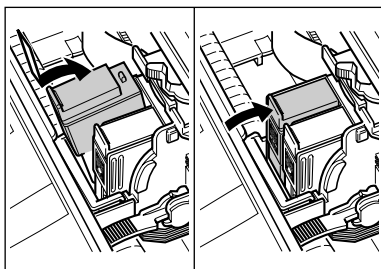

- 8 Press .
- The cartridge holder moves to its home position on the right side of the unit and begins cleaning the BJ cartridge print head. This process takes about 55 seconds.



Do not try to manually move or stop the cartridge holder since this may damage the unit.

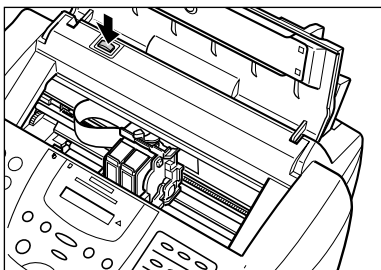

9 Close the printer cover.

10 Close the document tray (MultiPASS models only).



If you need to unplug the unit, wait until it is in standby mode (time and receive mode displayed in the LCD). Otherwise the cartridge holder may not be in its home position causing the BJ cartridge to remain uncapped and dry out.

Chapter 13

Troubleshooting

If You Cannot Solve the Problem	13-2
Clearing Jams	13-3
Jams in the ADF	13-3
Jams in the Multi-Purpose Tray	13-4
LCD Messages	13-5
Paper Feeding Problems	13-13
Faxing Problems	13-14
Sending Problems	13-14
Receiving Problems	13-16
Copying Problems	13-19
Telephone Problems	13-20
Print Quality Problems	13-20
Printing Problems	13-22
General Problems	13-24
If a Power Cut Occurs	13-26

If You Cannot Solve the Problem

If you have a problem with your unit and you cannot solve it by referring to the information in this chapter, contact your local authorised Canon dealer or the Canon help line.

Canon's support personnel are trained in the technical support of Canon's products and should be able to help you with your problem.



Attempting to repair the unit yourself may void the limited warranty.



If the unit makes strange noises, emits smoke or strange smells, unplug it immediately and contact your local authorised Canon dealer or the Canon help line. Do not attempt to disassemble or repair the unit yourself.

If you need to contact Canon directly, make sure you have the following information:

- **Product name**

MultiPASS C75, MultiPASS C80, MultiPASS C70, FAX-B215C, FAX-B230C, or FAX-B210C

- **Serial number**

The serial number is on the label located at the back of the unit.

- **Software version number**

→ *Software User's Guide*

- **Place of purchase**

- **Nature of problem**

- **Steps you have taken to solve the problem and the results**

Clearing Jams

Jams in the ADF


When a document jams or misfeeds in the ADF, the LCD displays **CHECK DOCUMENT**.

Follow this procedure to clear the document jam:



You do not need to unplug the unit when clearing document jams.


- 1 Press **Stop**.
- 2 Open the operation panel partially by gently pulling it towards you.
 - It only opens slightly.
 - Do not try to pull the document out without opening the operation panel since you may tear or smudge the document.

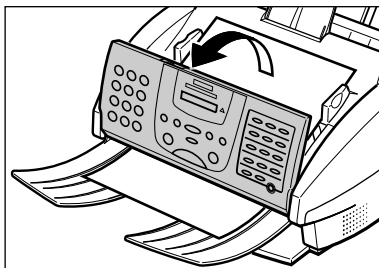

- 3 While holding the operation panel open, remove the document.
 - Pull it gently in either direction.
 - If a multipage document is loaded, remove the entire document from the ADF.



If the paper does not pull out easily, do not force it. Contact your local authorised Canon dealer or the Canon help line.

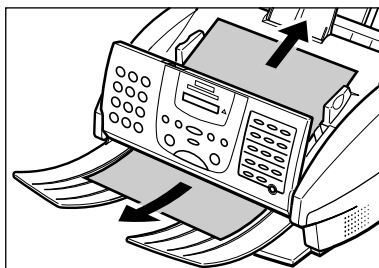

- 4 When you are finished, close the operation panel by pressing it down from the centre.
 - Be sure to close the operation panel until it locks into place, or the unit will not function properly.
- 5 Press **Resume** and start the operation again.

Jams in the Multi-Purpose Tray


If print media jams in the multi-purpose tray, the LCD displays **CLEAR PAPER JAM**.

Follow this procedure to clear the jam:



You do not need to unplug the unit when clearing paper jams.

- 1 Close the document tray if necessary (MultiPASS models only).
- 2 Gently pull any jammed paper out of the unit as shown.
 - You can hold the document tray up for easy access to the jammed paper (FAX models only).

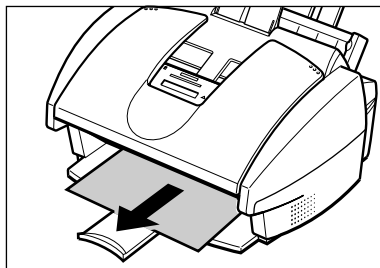

- 3 Remove the paper stack from the multi-purpose tray and reload it. (→ p. 2-17)
 - Make sure the stack does not exceed the paper limit mark (▶).
- 4 Press **Resume** to start the operation again.
 - If you are printing from a Windows® application, follow the instructions displayed by the software on your PC.







If the paper jam occurred while a fax was being received into the unit's memory, that fax will print automatically when the jam is cleared and you press **Resume**.

LCD Messages

The following messages are displayed in the LCD when the unit is performing a function or encounters an error. The error code appears in the ACTIVITY REPORT. (→ p. 11-3)

Message	Error Code	Cause	Action
AUTO REDIAL	—	The unit is waiting to redial the other party's number because the line was busy or the other party did not answer when you tried to send the document.	Wait for the unit to automatically redial the number. If you want to cancel automatic redialling, wait until the unit starts dialling the number, press Stop then ✕ . (→ p. 7-12)
BLACK INK EMPTY	—	The Black BJ tank in the Colour BJ cartridge is empty or its ink may have dried out.	Clean the BJ cartridge print head (→ p. 12-11). If the message remains in the LCD, replace the Black BJ tank (→ p. 12-15). The unit will then print automatically any faxes received in memory.
BUSY/NO SIGNAL	#005/018	The telephone number you dialled is busy.	Try sending the document at a later time.
		The fax number dialled was incorrect.	Check the fax number and dial again.
		The other party's fax machine is not working.	Contact the other party and have them check their fax machine.
		The other party is not using a G3 machine.	Contact the other party and ask them to send or receive the document using a G3 machine.
		The touch tone/rotary pulse setting on your unit is incorrect.	Set your unit to the setting that matches your telephone line. (→ p. 3-10)

Message	Error Code	Cause	Action
BUSY/NO SIGNAL (Continued)		The receiving fax machine did not answer within 55 seconds (after all automatic redialling attempts).	Contact the other party and have them check their fax machine. You can try to send the document using manual sending via the handset (→ p. 7-8). For an overseas call, add pauses to the registered number. (→ p. 9-2)
CARTRIDGE JAMMED	—	The cartridge holder cannot move. This is normally due to a paper jam.	Clear the paper jam or whatever is obstructing the cartridge holder and then press Resume . Do not attempt to move the cartridge holder manually.
CHANGE CARTRIDGE	—	You pressed  and the cartridge holder is moving to the centre of the unit.	Wait until the cartridge holder stops, then replace the BJ cartridge or tanks (→ pp. 12-12, 12-15). When you are finished, press  and close the printer cover. Wait for the unit to return to standby mode.
		The BJ cartridge is empty or its ink may have dried out.	Clean the BJ cartridge print head (→ p. 12-11). If the message remains in the LCD, replace the BJ cartridge (→ p. 12-12). The unit will then print automatically any faxes received in memory.
CHECK DOCUMENT	#001	The document is jammed in the ADF.	Remove the document you are trying to send or copy (→ p. 13-3) and start again.

Message	Error Code	Cause	Action
CHECK DOCUMENT (Continued)		The document feed lever is set to  (manual document feed) for a multipage document.	Set the document feed lever to  (automatic document feed). (→ p. 4-2)
CHECK PAPER SIZE	—	The size of the paper in the multi-purpose tray and that specified in the PAPER SIZE setting are different.	Load the correct paper size or change the PAPER SIZE setting. (→ p. 14-8)
CHECK PRINTER	—	There may be an obstruction that is not allowing the cartridge holder mechanism to move.	Check for any obstruction (paper clip, small object, etc.) and also that the orange protective cap and tape are removed from the BJ cartridge. Check also for a paper jam and clear the jam if necessary (→ p. 13-4). Then press Resume and start again.
		The BJ cartridge may be defective.	Press Resume . Reinstall the BJ cartridge (→ p. 2-13) and start again.
			In either case, if the error does not clear, try unplugging the unit. Wait several minutes, then plug it back in. Also, try replacing the BJ cartridge with a new one. (→ p. 12-12)
	##343	The waste ink tank (which holds the ink used for print head cleaning) may be full.	Contact your local authorised Canon dealer or the Canon help line to have the waste ink tank replaced immediately.
CLEAR PAPER JAM	—	There is a paper jam.	Clear the paper jam (→ p. 13-4) and reload paper in the multi-purpose tray. Press Resume .

Message	Error Code	Cause	Action
COLOUR INK EMPTY (COLOR INK EMPTY)	—	The Colour BJ tank in the Colour BJ cartridge is empty or its ink may have dried out.	Clean the BJ cartridge print head (→ p. 12-11). If the message remains in the LCD, replace the Colour BJ tank (→ p. 12-15). The unit will then print automatically any faxes received in memory.
CONVERT CLR>B&W?	—	The unit is confirming that it is all right to convert a colour document to black & white and print it with the Black BJ cartridge.	Press ✱ to convert the colour document to black & white and print, or press # to cancel.
DOC. TOO LONG	#003	The document is longer than 1 metre.	Use a copier to make a reduced copy of the document and then send the copy.
ECM RX	—	The unit is receiving a fax using Error Correction Mode (ECM).	ECM receptions may take longer than normal receptions. Turn off ECM if you need to receive quickly, or if you know your local lines are in good condition. (→ ECM RX, p. 14-7)
ECM TX	—	The unit is sending a fax using Error Correction Mode (ECM).	ECM transmissions may take longer than normal transmissions. Turn off ECM if you need to transmit quickly, or if you know your local lines are in good condition. (→ ECM TX, p. 14-7)
INSTALL BC-21e	—	You tried to make a colour copy with the installed Black BJ cartridge.	Replace the BJ cartridge with the Colour BJ cartridge. (→ p. 12-12)

Message	Error Code	Cause	Action
INSTALL BC-21e (Continued)		You tried to print a received colour fax with the installed Black BJ cartridge.	Replace the BJ cartridge with the Colour BJ cartridge (→ p. 12-12). If you do not have this BJ cartridge available, you can print the document with another BJ cartridge. (→ p. 7-18)
		You tried to print a received colour fax with the installed Photo BJ cartridge (PHOTO INK PRINT setting disabled in the MultiPASS C75/FAX-B215C).	Replace the BJ cartridge with the Colour BJ cartridge (→ p. 12-12). If you do not have this BJ cartridge available, you can print the document with another BJ cartridge. (→ p. 7-18) For the MultiPASS C75/FAX-B215C, you can alternatively enable the PHOTO INK PRINT setting. (→ p. 14-8)
INSTALL BC21/22e	—	You tried to make a colour copy with the installed Black BJ cartridge.	Replace the BJ cartridge with the Colour or Photo BJ cartridge. (→ p. 12-12)
INSTALL BC21e/20	—	You tried to make a black & white copy, print a received black & white fax, print a report, or print a black & white document in memory with the installed Photo BJ cartridge (PHOTO INK PRINT setting disabled in the MultiPASS C75/FAX-B215C).	Replace the BJ cartridge with the Colour or Black BJ cartridge (→ p. 12-12). For the MultiPASS C75/FAX-B215C, you can alternatively enable the PHOTO INK PRINT setting. (→ p. 14-8)

Message	Error Code	Cause	Action
LOAD PAPER	—	The multi-purpose tray is empty.	Load paper in the multi-purpose tray (→ p. 2-17). Make sure the stack is does not exceed the paper limit mark (▶). Then press Resume .
MEMORY FULL	#037	<p>The unit's memory is full because it has received too many documents, or a very long or detailed document.</p> <p>The unit's memory is full because you tried to send or copy too many pages at once, or a very long or detailed document.</p>	<p>Print any documents stored in memory (→ pp. 7-18, 8-11, 8-13). Then start again.</p> <p>Divide the document and send or copy each part separately. To free up space in the unit's memory, print or delete any documents in memory you no longer need. (→ pp. 7-18, 7-20, 8-11, 8-13)</p>
MEMORY USED <i>nn</i> %	—	Shows the percentage of memory currently in use.	If you need more space, wait for the unit to send any faxes. Also, print or delete any documents in memory you no longer need. (→ pp. 7-18, 7-20, 8-11, 8-13)
NO RX PAPER	#012	The other party's fax machine is out of paper or its memory is full.	Contact the other party and have them load paper in their fax machine or free up space in their fax machine's memory.
NO TEL #	#022	The one-touch speed dialling button or coded speed dialling code you entered has not been registered.	Register the one-touch speed dialling button or coded speed dialling code. (→ pp. 6-3, 6-6)

Message	Error Code	Cause	Action
NOT AVAILABLE	#025	In manual sending, you entered a speed dialling number that is assigned to a group.	Use regular dialling, or enter a one-touch speed dialling button or coded speed dialling code that only has one fax/telephone number registered.
PHOTO INK IN USE	—	The Photo BJ cartridge is installed in the unit.	Change to a different BJ cartridge type if necessary (→ p. 12-12)
PRINT W/ BC-22e?	—	The unit is confirming that it is all right to print a colour document in memory with the installed Photo BJ cartridge (PHOTO INK PRINT setting disabled in the MultiPASS C75/FAX-B215C).	Press ✳ to print the colour document with the Photo BJ cartridge, or press # to cancel printing. For the MultiPASS C75/ FAX-B215C, you can alternatively enable the PHOTO INK PRINT setting. (→ p. 14-8)
REC'D IN MEMORY	—	The unit received the fax in memory because paper or ink ran out, a paper jam occurred, or the incorrect BJ cartridge was installed.	Load paper in the multi-purpose tray (→ p. 2-17), replace the BJ cartridge or tank(s) (→ pp. 12-12, 12-15), clear the paper jam (→ p. 13-4), or install the correct BJ cartridge. (→ p. 12-12)
RECEIVED IN FILE (MultiPASS models only)	—	Your PC was off and a document was received in the unit's memory. The MultiPASS Status Monitor is not running.	Upload the document to your PC, or print the document. (→ p. 8-11) On the Windows® desktop, click Start and point to Programs. On the Programs menu, point to MultiPASS Suite, then click MultiPASS Status Monitor.

Message	Error Code	Cause	Action
TRY AGAIN IN B&W (TRY AGAIN IN B/W)	#085	You tried sending a colour document to a machine that does not support colour faxing.	Try sending again in black & white (→ p. 7-3). For the MultiPASS C75/ FAX-B215C, you can enable the COLOUR DIRECT TX setting that converts colour faxes to black & white if the other party's fax machine does not support colour faxing, thus enabling you to send colour documents to any fax machine without an error occurring. (→ p. 14-6)
TX/RX CANCELLED	—	You pressed Stop to cancel the transmission.	If required, try sending again.
TX/RX NO. <i>nnnn</i>	—	When the unit sends or receives a fax, it assigns it a unique identification number (<i>nnnn</i>).	Write the number down if you will need it later.
TX/RX NO. <i>nnnn</i> SCANNING P. <i>nnn</i> MEMORY FULL (Three messages toggle.)	—	The unit is sending a document and its memory is full.	The unit continues to send the document as memory becomes available.
WAIT COOLING	—	During printing, the BJ cartridge print head may have become too hot.	Allow the unit to cool down. The unit will resume printing when it has cooled down.

Paper Feeding Problems

■ Paper does not load.

The multi-purpose tray may contain too many sheets.

- Make sure the paper stack in the multi-purpose tray does not exceed the paper limit mark (▶). (→ p. 2-17)

Paper may not be loaded correctly.

- Make sure the paper stack is loaded properly in the multi-purpose tray, and that the paper guide is adjusted correctly. (→ p. 2-17)

■ Paper is loaded skewed. (Printing is skewed.)

Paper may not be loaded correctly.

- Make sure the paper stack is loaded properly in the multi-purpose tray, and that the paper guide is adjusted correctly. (→ p. 2-17)
- Make sure the right edge of the paper stack is aligned with the right side of the multi-purpose tray and the paper guide is aligned with the left edge of the stack. (→ p. 2-19)
- Make sure the paper exit path is clear.

■ Multiple sheets load into the unit at the same time.

Paper may not be loaded correctly.

- Make sure the paper stack is loaded properly in the multi-purpose tray, and that the paper guide is adjusted correctly. (→ p. 2-17)

Sheets of paper may be sticking together.

- Be sure to fan the paper stack before loading it in the multi-purpose tray. This keeps the sheets of paper from sticking together. (→ p. 2-19)

The multi-purpose tray may contain too many sheets.

- Make sure the paper stack in the multi-purpose tray does not exceed the paper limit mark (▶). (→ p. 2-17)
- Do not exceed the maximum loading capacity of the multi-purpose tray. (→ p. 5-2)
- Do not force the paper stack into the multi-purpose tray.

Different types of paper may be loaded in the multi-purpose tray.

- Load only one type of paper.
- Make sure you load paper that meets the paper requirements for the unit. (→ Chapter 5)

■ Transparencies or back print film do not feed correctly.

The transparencies or back print film may not be loaded correctly.

- Make sure they are loaded properly (→ p. 2-17). Do not load more than 50 transparencies or 10 back print film sheets in the multi-purpose tray.

■ Repeated paper jams occur.

The paper you are using may be causing the jams.

- Be sure to fan the paper stack before loading it in the multi-purpose tray. This keeps the sheets of paper from sticking together. (→ p. 2-19)
- Check that the paper you are using and your printing environment are within the specifications of the unit. (→ Chapter 5)

■ Envelopes do not load.

Envelopes may not be loaded correctly.

- Make sure the envelopes are loaded properly (→ p. 5-8). Do not load more than 10 envelopes in the multi-purpose tray.

The envelopes you are using may not meet the requirements for the unit.

- Envelopes must be European DL or U.S. Commercial No. 10 envelopes. (→ pp. 5-2, 5-4)



For additional troubleshooting, → *Software User's Guide*.

Faxing Problems

Sending Problems

■ You cannot send a fax.

The unit may have overheated.

- Unplug the unit and let it cool for several minutes. Then plug it back in and try sending again.

The unit may not be set for the type of telephone line in use (pulse/tone).

- Make sure the unit is set for the correct telephone line type. (→ p. 3-10)

The document may not have been loaded correctly into the ADF.

- Remove the document, stack it if necessary, and load it into the ADF correctly. (→ p. 4-4)
- Check that the document feed lever is set for the type of document you are sending. (→ p. 4-2)
- Make sure the operation panel is closed.

The one-touch speed dialling button or coded speed dialling code you entered may not be registered for the feature you want to use.

- Check the one-touch speed dialling button or coded speed dialling code and make sure it is registered correctly. (→ Chapter 6)

You dialled or have been provided with an incorrect number.

- Dial the number again, or check that you have the correct number.

The other party's fax machine may be out of paper.

- Call the other party and ask them to make sure paper is loaded in their fax machine.

You may have sent a document in colour to a fax machine that does not support colour faxing.

- If you attempt to send a colour document to a fax machine that does not support colour faxing, the document will not be sent and the LCD will display TRY AGAIN IN B&W (TRY AGAIN IN B/W). Try sending again in black & white. For the MultiPASS C75/FAX-B215C, you can enable the COLOUR DIRECT TX setting (→ p. 14-6) that converts colour faxes to black & white if the other party's fax machine does not support colour faxing, thus enabling you to send colour documents to any fax machine without an error occurring.

There may be other documents being sent from memory.

- Allow time for those documents to finish sending.

An error may have occurred during sending.

- Print an ACTIVITY REPORT and check for an error. (→ p. 11-3)

The telephone line may not be working properly.

- Make sure there is a dial tone when you press Hook or when you lift the handset of any external device connected to the unit. If there is no dial tone, contact your local telephone company.

The receiving fax machine may not be a G3 fax machine.

- Make sure the receiving fax machine is compatible with the unit (which is a G3 fax machine).

■ Faxes sent from the unit are spotted or dirty.

The receiving fax machine may not be working properly.

- Check the unit by making a copy (→ p. 10-2). If the copy is clear, the problem may be in the receiving fax machine. If the copy is spotted or dirty, clean the scanner components. (→ p. 12-5)

The document may not have been loaded correctly into the ADF.

- Remove the document, stack it if necessary, and load it into the ADF correctly. (→ p. 4-4)

■ Cannot send using Error Correction Mode (ECM).

The other party's fax machine may not support ECM.

- If the other party's fax machine does not support ECM, then the document is sent in normal mode without error checking.

ECM may be disabled.

- Make sure ECM is on. (→ ECM TX, p. 14-6)

■ Errors occur frequently while sending.

The telephone lines may be in poor condition, or you may have a bad connection.

- Lower the transmission speed. (→ TX START SPEED, p. 14-9)

Receiving Problems

■ Cannot receive a fax automatically.

The unit may not be set to receive automatically.

- For the unit to receive faxes automatically, the receive mode must be set to FAX ONLY MODE, Fax/Tel Mode, or ANS.MACHINE MODE (→ Chapter 8). If you have set ANS.MACHINE MODE, confirm that an answering machine is connected to the unit and that it is turned on with an outgoing message properly recorded. (→ p. 8-10)

The unit may have a document stored in memory.

- Print out any documents stored in memory. (→ pp. 7-18, 8-11, 8-13)

The MultiPASS Suite may have received the fax (MultiPASS models only).

- → *Software User's Guide*

An error may have occurred during reception.

- Check the LCD for an error message. (→ p. 13-5)
- Print an ACTIVITY REPORT and check for an error. (→ p. 11-3)

The multi-purpose tray may be empty.

- Make sure paper is loaded in the multi-purpose tray. (→ p. 2-17)

The telephone line may not be connected properly.

- Make sure all line connections are secure. (→ p. 2-6)

■ **The unit does not switch automatically between telephone and fax reception.**

The unit may not be set to switch automatically between telephone and fax reception.

- For the unit to switch automatically, the receive mode must be set to **Fax/Tel Mode** or **ANS.MACHINE MODE** (→ Chapter 8). If you have set **ANS.MACHINE MODE**, confirm that an answering machine is connected to the unit and that it is turned on with an outgoing message properly recorded. (→ p. 8-10)

An error may have occurred during reception.

- Check the LCD for an error message. (→ p. 13-5)
- Print an **ACTIVITY REPORT** and check for an error. (→ p. 11-3)

The multi-purpose tray may be empty.

- Make sure paper is loaded in the multi-purpose tray. (→ p. 2-17)

The sending fax machine may not send the CNG signal that tells the unit that the incoming signal is a fax.

- Some fax machines cannot send the CNG signal that tells your unit the incoming call is from a fax machine. In such cases, you will have to receive the fax manually. (→ p. 8-8)

■ **Cannot receive a document manually.**

You may have disconnected the call by pressing **Start (Start/Scan) or dialling the remote receiving ID after hanging up the handset.**

- Always press **Start (Start/Scan)** or dial the remote receiving ID *before* hanging up the handset. Otherwise you will disconnect the call.

■ **Print quality is poor.**

You may not be using the correct type of paper.

- Make sure you load paper that meets the paper requirements for the unit. (→ Chapter 5)

The BJ cartridge print head may need cleaning.

- Refer to the flow chart (→ p. 12-9) and clean the BJ cartridge print head if necessary. (→ p. 12-11)

The sending fax machine may not be functioning properly.

- The sending fax machine usually determines the fax's quality. Call the sender and have them make sure the top cover and scanning glass of their fax machine are clean.

Error Correction Mode (ECM) may be disabled.

- Make sure ECM is on. (→ ECM RX, p. 14-7)

■ **Faxes do not print.**

The BJ cartridge or tanks may not be installed properly.

- Make sure the BJ cartridge and tanks are installed properly. (→ pp. 2-13, 12-15)
- Be sure to remove the orange protective tape from the BJ cartridge before you install it. (→ p. 2-16)

The BJ cartridge print head may need cleaning.

- Refer to the flow chart (→ p. 12-9) and clean the BJ cartridge print head if necessary. (→ p. 12-11)

The BJ cartridge or tanks may need to be replaced.

- Determine if the problem is with the BJ cartridge or tanks (→ p. 12-8), and replace if necessary. (→ pp. 12-12, 12-15)

■ **Fax images print blotched or uneven.**

The telephone lines may be in poor condition, or you may have a bad connection.

- Error Correction Mode (ECM) sending/receiving should eliminate such problems. However, if the telephone lines are in poor condition, you may have to try again.

The sending fax machine may not be functioning properly.

- The sending fax machine usually determines the fax's quality. Call the sender and have them make sure the top cover and scanning glass of their fax machine are clean.

■ **Cannot receive using Error Correction Mode (ECM).**

The other party's fax machine may not support ECM.

- If the other party's fax machine does not support ECM, then the document is received in normal mode without error checking.

ECM may be disabled.

- Make sure ECM is on. (→ ECM RX, p. 14-7)

■ **Errors occur frequently while receiving.**

The telephone lines may be in poor condition, or you may have a bad connection.

- Lower the reception speed. (→ RX START SPEED, p. 14-9)

The sending fax machine may not be functioning properly.

- Call the sender and have them check that their fax machine is functioning properly.

Copying Problems

■ The unit will not make a copy.

The BJ cartridge or tanks may need to be replaced.

- Determine if the problem is with the BJ cartridge or tanks (→ p. 12-8), and replace if necessary. (→ pp. 12-12, 12-15)

You may be trying to make copies with the incorrect BJ cartridge installed in the unit.

- The unit cannot make copies in colour while the Black BJ cartridge is installed. Replace the BJ cartridge with the Colour BJ cartridge. (→ p. 12-12)
- You cannot make black & white copies with the Photo BJ cartridge (PHOTO INK PRINT setting disabled in the MultiPASS C75/FAX-B215C). Replace the Photo BJ cartridge with the Colour or Black BJ cartridge. For the MultiPASS C75/FAX-B215C, you can alternatively enable the PHOTO INK PRINT setting. (→ p. 14-8)

The document may not have been loaded correctly into the ADF.

- Remove the document, stack it if necessary, and load it into the ADF correctly. (→ p. 4-4)
- Check that the document feed lever is set for the type of document you are copying. (→ p. 4-2)
- Make sure the operation panel is closed.

The BJ cartridge or tanks may not be installed properly.

- Make sure the BJ cartridge and tanks are installed properly. (→ pp. 2-13, 12-15)

The unit may not be operating properly.

- Print the nozzle check pattern. (→ p. 12-10)

■ MEMORY FULL appears in the LCD when making multiple copies.

The unit's memory is full.

- Print or delete any documents stored in memory (→ pp. 7-18, 7-20, 8-11, 8-13) to free up space in the unit's memory, then start again.

The document you are copying may have too many graphics.

- If multiple pages are being copied, separate the pages into smaller stacks. If not, make the desired number of copies one at a time as needed.



For additional troubleshooting, → *Print Quality Problems*, p. 13-20.

Telephone Problems

■ You cannot dial.

The telephone line may not be connected properly.

- Make sure all line connections are secure. (→ p. 2-6)

The power cord may not be plugged in securely.

- Check that the power cord is plugged securely into the unit and into the wall outlet (→ p. 2-9). If the unit is plugged into a power strip, make sure the power strip is plugged in and turned on.

The unit may not be set for the type of telephone line in use (pulse/tone).

- Make sure the unit is set for the correct telephone line type. (→ p. 3-10)

■ The optional handset, telephone, or extension phone disconnects while you are talking.

The power cord may not be plugged in securely.

- Check that the power cord is plugged securely into the unit and into the wall outlet (→ p. 2-9). If the unit is plugged into a power strip, make sure the power strip is plugged in and turned on.

Print Quality Problems

■ The print quality is not what you expect; print is not clear, is splashed, has missing dots or white streaks.

The print media you are using may not be supported by the unit.

- Make sure you are using the recommended print media. (→ p. 5-2)

You may be printing on the wrong side of the paper.

- Some papers have a "right" side for printing. If the print quality is not as clear as you would like it to be, try turning the paper over and printing on the other side.

The nozzles on the BJ cartridge print head may be clogged.

- Refer to the flow chart (→ p. 12-9) and clean the BJ cartridge print head if necessary. (→ p. 12-11)

The BJ cartridge or tanks may not be installed properly.

- Make sure the BJ cartridge and tanks are installed properly. (→ pp. 2-13, 12-15)

The BJ cartridge or tanks may need to be replaced.

- Determine if the problem is with the BJ cartridge or tanks (→ p. 12-8), and replace if necessary. (→ pp. 12-12, 12-15)

The BJ cartridge print head may be worn out.

- Determine if the problem is with the BJ cartridge print head (→ p. 12-8) and replace the BJ cartridge if necessary. (→ p. 12-12)

■ The printout contains blurred or smudged ink.

The print media you are using may not be supported by the unit.


- Make sure you are using the recommended print media. (→ p. 5-2)

You may be printing on the wrong side of the paper.

- Some papers have a “right” side for printing. If the print quality is not as clear as you would like it to be, try turning the paper over and printing on the other side.

■ The print side is rubbed and stained.

The paper thickness lever is not set correctly.

- When you print images that contain large quantities of ink, the paper may curl and rub. Set the paper thickness lever to  (right). (→ p. 5-6)

■ The unit prints only in black. (You are printing from an application that supports colour printing but your output is black ink only.)

The BJ cartridge or tanks may not be installed properly.

- Make sure the BJ cartridge and tanks are installed properly. (→ pp. 2-13, 12-15)

The BJ cartridge print head may need cleaning.

- Refer to the flow chart (→ p. 12-9) and clean the BJ cartridge print head if necessary. (→ p. 12-11)

■ Colours are missing.

The BJ cartridge print head may need cleaning.

- Refer to the flow chart (→ p. 12-9) and clean the BJ cartridge print head if necessary. (→ p. 12-11)

■ Colours in a line are uneven or different from previous lines.

- Experiment with different settings and paper types.

■ Hue changes.

The nozzles on the BJ cartridge print head may be clogged.

- Refer to the flow chart (→ p. 12-9) and clean the BJ cartridge print head if necessary. (→ p. 12-11)

The BJ cartridge or tanks may need to be replaced.

- Determine if the problem is with the BJ cartridge or tanks (→ p. 12-8), and replace if necessary. (→ pp. 12-12, 12-15)



For additional troubleshooting, → *Software User's Guide*.

Printing Problems

■ The Alarm light comes on and the unit beeps while printing.

The unit may have a paper jam.

- Clear the paper jam. (→ p. 13-4)
- If the unit has no paper jam, unplug the unit and wait five seconds, then plug it in again. If the problem is fixed, the Alarm light will turn off, the cartridge holder will move to its home position on the right side of the unit, and the LCD will return to standby mode. If the Alarm light remains lit, contact your local authorised Canon dealer or the Canon help line.

■ Data from the PC is not printed.

The power cord may not be plugged in securely.

- Check that the power cord is plugged securely into the unit and into the wall outlet (→ p. 2-9). If the unit is plugged into a power strip, make sure the power strip is plugged in and turned on.

The printer cable may not be securely connected to the unit and PC.

- Check the printer cable connection. (→ p. 2-8)

The printer cable may not be the correct type.

- Make sure you have the correct printer cable type. (→ p. 2-8)

The unit may have been plugged in or the PC may have been turned on when you connected the printer cable.

- Unplug the unit and turn off the PC. Plug the unit back in and turn the PC back on again.
- If you are using a USB cable (MultiPASS C75/FAX-B215C only), make sure you connect it during software installation to ensure proper operation. (→ *Software User's Guide*)

The BJ cartridge or tanks may not be installed properly.

- Make sure the BJ cartridge and tanks are installed properly. (→ pp. 2-13, 12-15)
- Be sure to remove the orange protective tape from the BJ cartridge before you install it. (→ p. 2-16)

The BJ cartridge print head may need cleaning.

- Refer to the flow chart (→ p. 12-9) and clean the BJ cartridge print head if necessary. (→ p. 12-11)

The BJ cartridge or tanks may need to be replaced.

- Determine if the problem is with the BJ cartridge or tanks (→ p. 12-8), and replace if necessary. (→ pp. 12-12, 12-15)

■ The BJ cartridge moves, but ink does not appear.

The BJ cartridge or tanks may not be installed properly.

- Make sure the BJ cartridge and tanks are installed properly. (→ pp. 2-13, 12-15)
- Be sure to remove the orange protective tape from the BJ cartridge before you install it. (→ p. 2-16)

The nozzles on the BJ cartridge print head may be clogged.

- Refer to the flow chart (→ p. 12-9) and clean the BJ cartridge print head if necessary. (→ p. 12-11)

The BJ cartridge or tanks may need to be replaced.

- Determine if the problem is with the BJ cartridge or tanks (→ p. 12-8), and replace if necessary. (→ pp. 12-12, 12-15)

■ The printed output is not what you expected.

The printer cable may not be securely connected to the unit and PC.

- Check the printer cable connection. (→ p. 2-8)

The printer cable may not be the correct type.

- Make sure you have the correct printer cable type. (→ p. 2-8)

The printer cable may be too long.

- Make sure you have the correct length cable. (→ p. 2-8)

■ Printout does not match paper size.

Paper may not be loaded and aligned correctly in the multi-purpose tray.

- Make sure the paper is loaded and aligned correctly. (→ p. 2-17)



If the BJ cartridge print head prints on the platen, clean the ink off the platen by launching Notepad and setting the application to print 2 or 3 blank sheets of paper.

■ The unit suspends printing after each line.

The BJ cartridge print head may have become too hot. If this happens, the unit may be slowing its printing speed at the end of each line to protect the BJ cartridge print head.

- Stop your print operation and wait several minutes to allow the unit to cool. Then start your operation again.

■ The printout curls.

Your page may include a large amount of ink.

- Leave the page in the output tray for 30 to 60 seconds to allow the ink to dry. Then remove the page carefully without touching any surfaces.
- The paper you are using may be too thin. Printing dense graphics on light paper stock may cause the paper to curl. Try using heavier stock.

■ Your PC indicates a device time-out.

A device time-out occurs when the PC sends data to the unit, but the unit does not respond. The unit may be unplugged, not connected to the PC, or have a paper jam.

- Make sure the unit is plugged in (→ p. 2-9), and that the printer cable is securely connected to the unit and PC (→ p. 2-8). Clear any paper jams (→ p. 13-4), and make sure paper is loaded properly in the multi-purpose tray. (→ p. 2-17)



For additional troubleshooting, refer to *Print Quality Problems* (→ p. 13-20) and the *Software User's Guide*.

General Problems

■ The unit has no power.

The power cord may not be plugged in securely.

- Check that the power cord is plugged securely into the unit and into the wall outlet (→ p. 2-9). If the unit is plugged into a power strip, make sure the power strip is plugged in and turned on.

The power cord may not be supplying power.

- Check the power cord by substituting with another, or by using a voltmeter to test it for continuity.

■ The unit will not print reports.

The BJ cartridge or the Black BJ tank may need to be replaced.

- Determine if the problem is with the BJ cartridge or Black BJ tank (→ p. 12-8), and replace if necessary. (→ pp. 12-12, 12-15)

The Photo BJ cartridge is installed in the unit (PHOTO INK PRINT setting disabled in the MultiPASS C75/FAX-B215C).

- You cannot print reports with the Photo BJ cartridge. Replace the Photo BJ cartridge with the Colour or Black BJ cartridge. For the MultiPASS C75/FAX-B215C, you can alternatively enable the PHOTO INK PRINT setting. (→ p. 14-8)

■ Nothing appears in the LCD.

The power cord may not be plugged in securely.

- Check that the power cord is plugged securely into the unit and into the wall outlet (→ p. 2-9). If the unit is plugged into a power strip, make sure the power strip is plugged in and turned on. If the LCD remains blank, unplug the unit, wait five seconds, then plug it in again.

If a Power Cut Occurs

If power is suddenly lost due to an outage or accidental unplugging, a built-in battery retains the user data settings and the speed dialling settings. However, any sent or received documents stored in memory will be lost.

During a power cut, functions are limited as follows:

- You cannot make telephone calls from the optional handset. Also, depending on your telephone, you may not be able to make telephone calls.
- You cannot send, receive, or copy documents.
- You can only use the unit to receive voice calls if you connected the optional handset, a telephone, or an extension phone to your unit.

When power is restored to the unit, it will automatically print a list of documents that were stored in memory at the time of the power cut.

27/12 2001 17:23 FAX 123 4567


CANON

001

*** MEMORY CLEAR REPORT ***

MEMORY FILES DELETED

TX/RX NO	MODE	CONNECTION TEL/ID	PGS.	SET TIME
0023	B'CAST	[01] Canon CANADA [05] Canon OPTICS	3	27/12 16:03
0024	TRANSMIT COL	[* 32] Canon UK	1	27/12 16:08

 If there is no paper in the multi-purpose tray when power is restored, the LCD displays **LOAD PAPER**. If this occurs, press **Resume** to return to standby mode. (The **MEMORY CLEAR REPORT** will not be printed.)

Chapter 14

Summary of Settings

Understanding the Menu System	14-2
Accessing the Menus	14-2
User Settings Menu	14-4
Report Settings Menu	14-5
TX (Transmission) Settings Menu	14-6
RX (Reception) Settings Menu	14-7
Printer Settings Menu	14-8
System Settings Menu	14-9

Understanding the Menu System

The menu system allows you to customise the way your unit operates. It consists of six menus, each containing settings that control different functions of your unit.



- For MultiPASS models, if your unit is connected to a PC, we recommend using the MultiPASS Suite to adjust settings. (→ p. 3-2)
- Before adjusting any settings, you may want to print the USER'S DATA LIST to check the current settings. (→ p. 3-9)

Accessing the Menus

Follow this procedure to access the different menus:

1 Press **Function**.

2 Press **Data Registration**.

DATA REGISTRATION

3 Press **Set**.

USER SETTINGS

4 Use ∇ or \blacktriangle to select the menu you want.

- You can select from the following:
 - USER SETTINGS (→ p. 14-4)
 - REPORT SETTINGS (→ p. 14-5)
 - TX SETTINGS (→ p. 14-6)
 - RX SETTINGS (→ p. 14-7)
 - PRINTER SETTINGS (→ p. 14-8)
 - SYSTEM SETTINGS (→ p. 14-9)

Ex: RX SETTINGS

5 Press **Set** to access the settings under the menu you selected.

Ex: ECM RX

6 Refer to the appropriate table (→ following pages) and use these guidelines to select and register settings:

- Use **V** or **Λ** to scroll through the settings.
- To register a setting or access sub-settings, press **Set**.
- To return to a previous level, press **Data Registration**.
 - For your settings to be registered, be sure to press **Set** after making a selection or entering information.
 - If at any stage you wish to return to standby mode, press **Stop**.
 - If you pause for more than 60 seconds while accessing a menu, the unit will automatically return to standby mode.

7 When you are finished, press **Stop** to return to standby mode.

Ex:

15:00	FaxOnly
-------	---------

User Settings Menu

For details on accessing the settings below, → pp. 14-2, 14-3.

Setting	Description	Sub-Settings
DATE & TIME	Sets the current date. (→ p. 3-7)	–
UNIT TELEPHONE #	Enters the fax/telephone number you want to appear at the top of each fax page you send. (→ p. 3-7)	–
UNIT NAME	Enters the name or company name you want to appear at the top of each fax page you send. (→ p. 3-7)	–
TX TERMINAL ID	Sets the options for the identification header (TTI).	ON OFF
TTI POSITION	Selects the position of the identification header (outside or inside the image area).* (→ p. 3-6)	OUTSIDE IMAGE INSIDE IMAGE
TELEPHONE # MARK	Selects the prefix for the identification header number. (→ p. 3-6)	FAX TEL
SCAN CONTRAST	Selects the scanning contrast. (→ p. 7-5)	STANDARD DARKER LIGHTER
OFFHOOK ALARM	Enables/disables the off hook alarm that alerts you that the handset is not seated properly in its cradle.	ON OFF
VOLUME CONTROL	Sets the volume of the unit sounds.	–
CALLING VOLUME	Selects the ring volume when the unit detects a voice call.	1/2/3
KEYPAD VOLUME	Selects the keypad touch beep volume.	0 (off)/1/2/3
ALARM VOLUME	Selects the error alarm volume.	0 (off)/1/2/3
LINE MONITOR VOL	Selects the line monitor volume (sound during dialling).	0 (off)/1/2/3
RX CALL LEVEL	Selects the volume of incoming calls.	HIGH STANDARD
TEL LINE TYPE	Selects the dialling method the unit uses for your telephone line type. (→ p. 3-10)	TOUCH TONE ROTARY PULSE**
R-KEY SETTING	Enables dialling through a switchboard. If you select PBX, you can select additional sub-settings. (→ p. 3-11)	PSTN PBX
M-KEY SETTING*** (All models except the MultiPASS C75/FAX-B215C)	Selects the access and ID codes for an alternative long distance service. (→ p. 7-21)	OFF ON

(Default settings are shown in **bold** type.)

* Can only be adjusted for black & white transmissions. For colour transmissions, the TTI information is positioned inside the image area.

** The default setting for Ireland is **ROTARY PULSE**.

*** This setting is only available in the UK.

Report Settings Menu

For details on accessing the settings below, → pp. 14-2, 14-3.

Setting	Description	Sub-Settings
TX REPORT	Enables/disables automatic printing of a transmission report. (→ p. 11-4) PRINT ERROR ONLY: Prints a report only when a transmission error occurs. OUTPUT YES: Prints a report every time you send a document. OUTPUT NO: No report is printed.	PRINT ERROR ONLY OUTPUT YES OUTPUT NO
PRINT WITH IMAGE	If you select PRINT ERROR ONLY or OUTPUT YES above, enables/disables printing of the first page of the fax under the report (black & white faxes only).	ON OFF
RX REPORT	Enables/disables automatic printing of a reception report. (→ p. 11-5) OUTPUT NO: No report is printed. PRINT ERROR ONLY: Prints a report only when a reception error occurs. OUTPUT YES: Prints a report every time you receive a document.	OUTPUT NO PRINT ERROR ONLY OUTPUT YES
ACTIVITY REPORT	Sets the ACTIVITY REPORT option. (→ p. 11-3)	–
AUTO PRINT	Enables/disables automatic printing of an ACTIVITY REPORT after every 20 transactions.	ON OFF

(Default settings are shown in **bold** type.)

TX (Transmission) Settings Menu

For details on accessing the settings below, → pp. 14-2, 14-3.

Setting	Description	Sub-Settings
ECM TX	Enables/disables Error Correction Mode (ECM) during transmission.	ON OFF
MID PAUSE SET	Selects the length of the pause entered when you press ⏸/Pause .	4 SEC * (1 to 15)
AUTO REDIAL	Enables/disables automatic redialling if the other party's line is busy on the first attempt. (→ p. 7-11)	ON OFF
REDIAL TIMES	Selects the number of redial attempts.	2 TIMES (1 to 10)
REDIAL INTERVAL	Selects the period of time between redial attempts.	2 MIN. (1 to 99)
TIME OUT	Enables/disables automatic scanning of documents after the fax number is entered. ON: Scanning begins automatically five seconds after entering the fax number (10 seconds if sending to multiple destinations). OFF: Scanning does not start automatically. (You need to press Start (Start/Scan) to begin scanning.)	ON OFF
COLOUR DIRECT TX (MultiPASS C75/FAX-B215C only)	Enables/disables sending of colour documents to fax machines that do not have colour faxing capability. OFF: Colour documents cannot be sent to fax machines that do not support colour faxing. ON: Colour documents can be sent to fax machines that do not support colour faxing. (The document is converted to black & white.)	OFF ON

(Default settings are shown in **bold** type.)

* The default setting for Ireland is **2 SEC**.

RX (Reception) Settings Menu

For details on accessing the settings below, → pp. 14-2, 14-3.

Setting	Description	Sub-Settings
ECM RX	Enables/disables Error Correction Mode (ECM) during reception.	ON OFF
RX MODE	Selects the receive mode. (→ Chapter 8) If you select FAX/TEL AUTO SW, you can select additional sub-settings. (→ p. 8-6)	FAX ONLY MODE FAX/TEL AUTO SW
INCOMING RING	When the unit is set to FAX ONLY MODE or FAX/TEL AUTO SW, enables/disables ringing when it receives a call.*	OFF ON
RING COUNT**	Selects the number of incoming rings before the unit begins receiving.	2 TIMES (1 to 99)
MAN/AUTO SWITCH	When the unit is set to MANUAL MODE, determines if the unit switches to fax receive mode after it rings for a specified time.	OFF ON
F/T RING TIME**	If you select ON above, selects the length of time the unit rings before switching to fax receive mode.	15 SEC (1 to 99)
REMOTE RX	Enables/disables remote receiving.	ON OFF
REMOTE RX ID**	If you select ON above, selects the remote receiving ID.	25 (00 to 99)
MEMORY RX	Enables/disables memory reception of a document (e.g. when an error occurs).	ON OFF
COLOUR RX (COLOR RX)	Enables/disables colour fax reception. (→ p. 8-12)	ON OFF

(Default settings are shown in **bold** type.)

* Even if you have set INCOMING RING to ON, ringing will only occur if you have connected the optional handset, a telephone, or an extension phone to your unit.

** This setting is available in all models, but the setting names only appear in the MultiPASS C75/FAX-B215C.

Printer Settings Menu

For details on accessing the settings below, → pp. 14-2, 14-3.

Setting	Description	Sub-Settings
RX REDUCTION	Enables/disables reduction of faxes to fit on the paper loaded in the multi-purpose tray.	ON OFF
REDUCE DIMENSION	Selects the direction of the reduction.	VERTICAL ONLY HORIZ & VERTICAL
PAPER SIZE	Selects the size of the paper loaded in the multi-purpose tray.	A4 LTR LGL
ECONOMY PRT	Enables/disables economy printing for black & white printing with the Black BJ cartridge. Enabling this setting decreases ink consumption resulting in a longer Black BJ cartridge life.	OFF ON
COLOR COPY MEDIA (All models except the MultiPASS C75/ FAX-B251C)	Selects the paper type for colour copying. (→ p. 10-5)	PLAIN PAPER HIGH RES. PAPER
BOTTOM MARGIN	Selects the length of the bottom margin for colour copying and colour reception. (→ p. 10-6)	NORMAL SMALLER
PHOTO INK PRINT (MultiPASS C75/ FAX-B215C only)	Enables/disables printing of received faxes, documents in memory, reports, and black & white copying with the Photo BJ cartridge.	ON OFF

(Default settings are shown in **bold** type.)

System Settings Menu

For details on accessing the settings below, → pp. 14-2, 14-3.

Setting	Description	Sub-Settings
UN/LOCK PHONE	Enables/disables restriction of the unit. (→ p. 9-6)	–
PASSWORD	Enters a password to restrict access to the LOCK PHONE setting below.	0000 to 9999
LOCK PHONE	Enables/disables restriction of the unit to make calls and send faxes.	OFF ON
DATE SETUP	Selects the date format displayed in the LCD and printed on the faxes you send.	DD/MM/YYYY YYYY MM/DD MM/DD/YYYY
DISPLAY LANGUAGE	Selects the language of the LCD messages.	ENGLISH FRENCH SPANISH GERMAN ITALIAN DUTCH FINNISH PORTUGUESE NORWEGIAN SWEDISH DANISH SLOVENE CZECH HUNGARIAN
TX START SPEED	Selects the speed at which the unit starts transmitting.	14400 bps 9600bps 7200bps 4800bps 2400bps*
RX START SPEED	Selects the speed at which the unit starts receiving.	14400 bps 9600bps 7200bps 4800bps 2400bps*

(Default settings are shown in **bold** type.)

* MultiPASS C80/FAX-B230C: **33600**bps/14400bps/9600bps/7200bps/4800bps/2400bps

Appendix A

Specifications

General Specifications A-2

Facsimile A-3

Copier A-4

Telephone A-4

Printer A-4

BJ Cartridges A-5

Scanner (MultiPASS Models Only) A-5

General Specifications

Power Source

200–240 V/50–60 Hz

Power Consumption

– Maximum:

MultiPASS C75/FAX-B215C:

Approx. 42.9 W

MultiPASS C80/C70, FAX-B230C/B210C:

Approx. 46.2 W

– Standby:

MultiPASS C70/FAX-B210C:

Approx. 6.9 W

MultiPASS C75/C80, FAX-B215C/B230C:

Approx. 7.9 W

Weight

Approx. 5.1 kg (With components attached)

Environmental Conditions

– Temperature: 10°–32.5°C

– Humidity: 20%–85%

Liquid Crystal Display (LCD)

16 × 1

Display Languages

English/French/Spanish/German/Italian/
Dutch/Finnish/Portuguese/Norwegian/
Swedish/Danish/Slovene/Czech/Hungarian

Applicable Standards

– Electrical Safety: GS, FIMKO

– Radiation: CISPR Pub 22 Class B

– Other: PTT, Energy Star compliant, CE
Marking

ADF

→ p. 4-2

Multi-Purpose Tray Capacity

→ p. 5-2

Printable Areas


→ p. 5-3

Scanned Area


→ p. 4-3

Dimensions

– MultiPASS models:

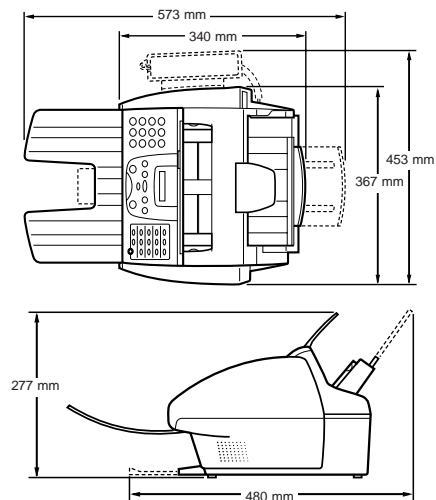

– FAX models:

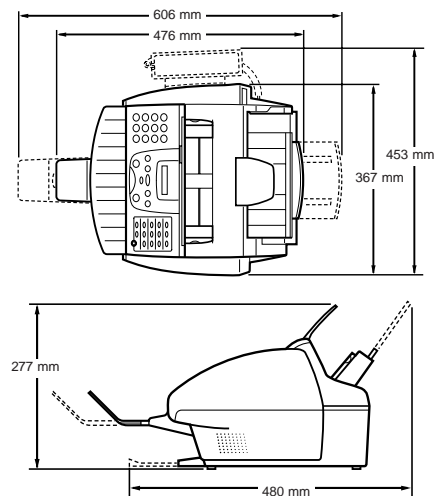

Facsimile

Applicable Line

Public Switched Telephone Network (PSTN)

Compatibility

G3

Data Compressing System

MH, MR, MMR, JBIG, JPEG

Modem Type

Fax modem

Modem Speed

- MultiPASS C75/C70, FAX-B215C/B210C:
14400/9600/7200/4800/2400 bps,
automatic fallback
- MultiPASS C80/FAX-B230C:
33600/14400/9600/7200/4800/2400 bps,
automatic fallback

Transmission Speed

- Black & White:
MultiPASS C75/C70, FAX-B215C/B210C:
Approx. 6 seconds/page* at 14.4 Kbps,
ECM-MMR, transmitting from memory
MultiPASS C80/FAX-B230C:
Approx. 3 seconds/page* at 33.6 Kbps,
ECM-MMR, transmitting from memory
- Colour:
MultiPASS C75/C70, FAX-B215C/B210C:
Approx. 2 minutes/page** at 14.4 Kbps,
ECM-JPEG, transmitting from memory
MultiPASS C80/FAX-B230C:
Approx. 1 minute/page** at 33.6 Kbps,
ECM-JPEG, transmitting from memory

Scanning Image Processing

- UHQ™ (Ultra High Quality) image
enhancement
- Halftones: 64 levels of grey
- Density adjustment: 3 levels

Transmission/Reception Memory

- MultiPASS C75/C70, FAX-B215C/B210C:
Up to approximately 42* pages
MultiPASS C80/FAX-B230C:
Up to approximately 426* pages

Fax Scanning Speed

5.8 seconds/page*

Fax Resolution

- Black & White:
FAX STANDARD: 8 pels/mm × 3.85 lines/mm
FAX FINE: 8 pels/mm × 7.7 lines/mm
FAX PHOTO: 8 pels/mm × 7.7 lines/mm
with halftones
- Colour:
FAX STANDARD: 200 × 200 dpi
FAX FINE: 200 × 200 dpi

Dialling

- Automatic dialling:
One-touch speed dialling (12 destinations)
Coded speed dialling (100 destinations)
Group dialling (Max. 111 destinations)
- Regular dialling (with numeric buttons)
- Automatic redialling
- Manual redialling
- Pause button
- Redial button
- MultiPASS C80/C70, FAX-B230C/B210C:
M button**
- D.T. button***

Networking

- Sequential broadcast (Max. 113
destinations)
- Automatic reception
- Automatic Fax/Tel switchover
- Remote reception by telephone (Default ID:
25)
- Non-ring reception
- ECM deactivation
- ACTIVITY REPORT (after every 20
transactions)
- Non-delivery report
- TTI (Transmit Terminal Identification)

Ink Saver

Economy mode for black & white printing
with the Black BJ cartridge

* Based on Canon FAX Standard Chart No. 1,
standard mode.

** Based on Canon COLOUR FAX TEST SHEET.

* Based on Canon FAX Standard Chart No. 1,
standard mode.

** This button is only available in the UK.

*** This button is not available in the UK or Ireland.

Copier

Scanning Resolution

- B&W TEXT: 360 × 360 dpi
- B&W PHOTO: 360 × 360 dpi with halftone
- COLOUR (COLOR) DRAFT: 360 × 180 dpi, full colour
- PLAIN PAPER*: 360 × 360 dpi, full colour
- HIGH. RES. PAPER*: 360 × 360 dpi, full colour
- COLOR FINE**: 360 × 360 dpi, full colour
- COLOUR (COLOR) SNAPSHOT: 360 × 360 dpi, full colour
- Black & White Direct Copy: 360 × 360 dpi
- Black & White Memory Copy: 8 pels/mm × 7.7 lines/mm

Printing Resolution

360 × 360 dpi

Reduction

70%, 80%, 90%

Enlargement

150%, 200% (COLOUR SNAPSHOT mode only) (MultiPASS C75/FAX-B215C Only)

Copy Speed

- Black & White:
 - A4 size: Approx. 3 pages/minute
- Colour:
 - COLOUR (COLOR) DRAFT, A4 size:
 - Approx. 3 minutes/page
 - PLAIN PAPER*, A4 size:
 - Approx. 9 minutes/page
 - HIGH RES. PAPER*, A4 size:
 - Approx. 9 minutes/page
 - COLOR FINE**, A4 size:
 - Approx. 9 minutes/page
 - COLOUR (COLOR) SNAPSHOT, 102 × 152 mm:
 - Approx. 3 minutes, 50 seconds/page

No. of Copies

- Black & White: Maximum 99 copies
- Colour: 1 copy

* MultiPASS C75/FAX-B215C only.

** MultiPASS C80/C70, FAX-B230C/B210C only.

Telephone

Connection

- Optional handset/telephone
- Extension phone/answering machine (CNG detecting signal)/data modem

Printer

Printing Method

Bubble Jet ink on-demand

Paper Handling

Automatic feed

Print Media Size and Weight

→ p. 5-2

Recommended Print Media

→ p. 5-4

Print Speed*

- BC-21e Colour BJ Cartridge:
 - Draft mode: Approx. 2 pages/minute
 - Standard mode: Approx. 1.5 pages/minute
- BX-20 Black BJ Cartridge:
 - Draft mode: Approx. 510 cps/10 cpi
 - Standard mode: Approx. 360 cps/10 cpi

Maximum Print Width

203.2 mm

Resolution

- Colour: 720 × 360 dpi
- Black: 720 × 360 dpi (with Smoothing)

* Based on Canon standard pattern.

BJ Cartridges

BC-21e Colour BJ Cartridge

- Print Head:
 - Black: 64 nozzles
 - Colour: 24 nozzles each (cyan, magenta, yellow)
- Print Head Life: Approx. 2,000 colour pages at 30% coverage
- BJ Tanks:
 - BCI-21 Colour (cyan, magenta, yellow)
 - BCI-21 Black
- Ink Colour: Black, cyan, magenta, yellow
- Cartridge Yield*: Approx. 80 pages**

BX-20 Black BJ Cartridge

- Print Head: 128 nozzles
- Ink Colour: Black
- Cartridge Yield*: Approx. 1000 pages**

BC-22e Photo BJ Cartridge

- Print Head:
 - Black: 64 nozzles
 - Colour: 24 nozzles each (cyan, magenta, yellow)
- Ink Colour: Black, cyan, magenta, yellow
- Cartridge Yield*: Approx. 22 pages***

Scanner (MultiPASS Models Only)

Scanning Method

Solid-state electronic scanning by contact image sensor

Scanning Image Processing

- Halftones: 256 levels of grey
- Colour: 16,777,216 colours

Resolution

- Optical: 300 dpi
- Enhanced: 30–600 dpi (set from within application)

Effective Scanning Width

214 mm

Compatibility

TWAIN

Scanning Speed

- B&W Text (30–150 dpi): 8.8 seconds/page
- B&W Text (151–300 dpi): 11.6 seconds/page
- B&W Text (301–600 dpi): 23.2 seconds/page
- Greyscale (30–150 dpi): 8.8 seconds/page
- Greyscale (151–300 dpi): 11.6 seconds/page
- Greyscale (301–600 dpi): 23.2 seconds/page
- Colour (30–150 dpi): 17.4 seconds/page
- Colour (151–300 dpi): 34.7 seconds/page
- Colour (301–600 dpi): 69.5 seconds/page

* 7.5% coverage

** Based on Canon FAX Standard Chart No. 1.

*** Based on Canon Multi Drop Head Standard Chart.

Appendix B Options

Optional Handset	B-2
Package Contents	B-2
Attaching the Handset to Your Unit	B-3
Maintaining Your Handset	B-4

Optional Handset


An optional handset is available for connection to your unit. Contact your local authorised Canon dealer for more information on purchasing this option.



Please note that the shape of your handset may differ from the one shown in this section. However, both handsets have exactly the same functions and performance.

Package Contents

Make sure your handset package includes the following items:

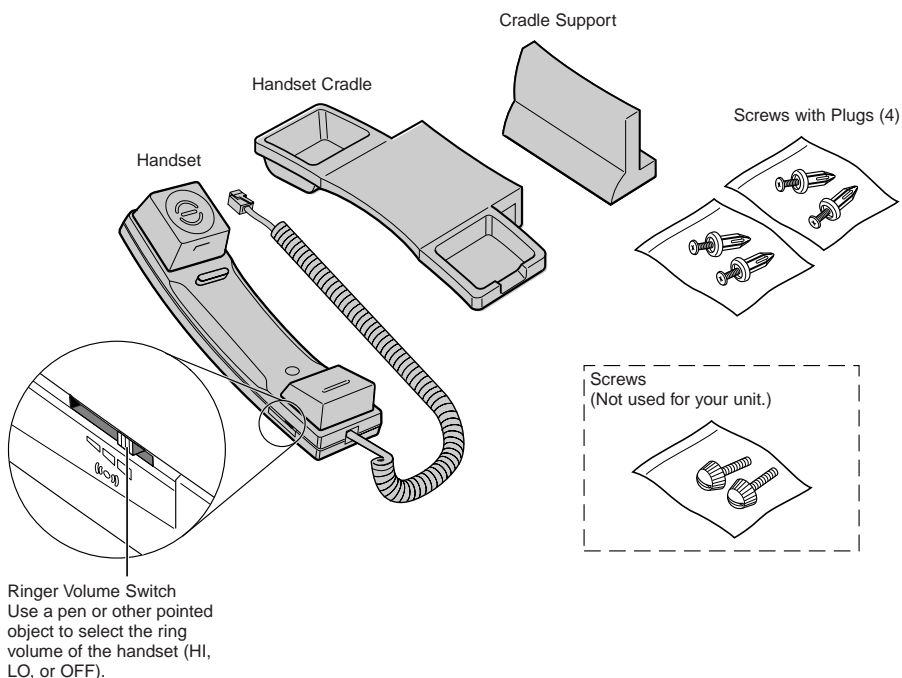

Ringer Volume Switch
Use a pen or other pointed object to select the ring volume of the handset (HI, LO, or OFF).

If anything is damaged or missing, notify your local authorised Canon dealer immediately.




Ringer Equivalence Number (R.E.N.) (UK only)

Your British Telecom line has a maximum R.E.N. capacity of 4. Your unit has an R.E.N. value of 1 (unless otherwise stated), and so does this handset. You can therefore use additional equipment with a total R.E.N. value of up to 2. If the R.E.N. value exceeds 4, the ringer volume will be reduced and one or more of the connected equipment may not function.


Attaching the Handset to Your Unit

Follow this procedure to attach the optional handset to your unit:


- 1** Use two of the screws provided to attach the handset cradle to the cradle support.
 - Push the screws in with your finger or use a cross-point screwdriver. Make sure the screws are inserted all the way in.

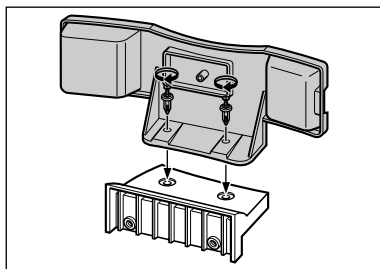


- 2** Before attaching the cradle support to your unit, remove the BJ cartridge.
 - To remove the cartridge follow steps 1 to 5 on pages 12-12 and 12-13.
 - Store the BJ cartridge in the BJ cartridge container provided with your unit.
- 3** Disconnect the power cord from your unit.
- 4** Turn the unit on its side and while supporting it, use a screwdriver to remove the two covers on the bottom of the unit.

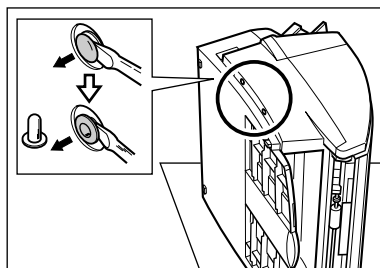

- 5** Support the unit and use the remaining two screws provided to attach the cradle support to the unit.
 - Push the screws in with your finger or use a cross-point screwdriver. Make sure the screws are inserted all the way in.
 - Make sure you support the unit when inserting the screws.

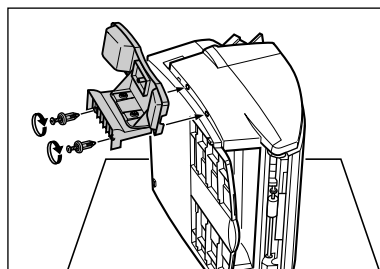

- 6** Return the unit to its upright position and place the handset in its cradle.
 - Make sure the cradle support rests on the table top along with the unit.
- 7** Connect the line from the handset to the  jack.
- 8** Reconnect the power cord.
- 9** Reinstall the BJ cartridge in the unit.
(→ p. 2-14)

Maintaining Your Handset

To maintain your handset in top working condition, be sure to follow these guidelines:

- Do not leave your handset exposed to direct sunlight.
- Do not install your handset in hot or humid conditions.
- Do not spray aerosol polishes on your handset since they may enter the holes on your handset and cause damage.
- Use a damp cloth to clean your handset.

Index

^ button: 2-12, 14-2
v button: 2-12, 14-2
< button: 2-12, 3-5
> button: 2-12, 3-4, 3-5
● (Redial)/Pause button: 2-11, 7-11, 9-2
1-TOUCH SPD DIAL LIST
 description: 11-2
 printing: 6-13
 sample: 6-14

A

Accessing, menus: 14-2, 14-3

ACTIVITY REPORT

 description: 11-2
 printing: 11-3
 sample: 11-3
 setting: 11-3, 14-5

Adaptor, B.T.

 connecting: 2-7

ADF: 2-10

 adding pages in: 4-6
 capacity: 4-2
 jams in: 13-3
 loading documents in: 4-4, 4-5

Alarm light: 2-11

ALARM VOLUME setting: 14-4

Alternative telephone network

 registering: 7-22, 7-23
 sending with: 7-23, 7-24
 using: 7-21 to 7-24

ANS.MACHINE MODE

 description: 8-2
 setting: 8-10
 using unit in: 8-10

AnsMode display (*See* ANS.MACHINE MODE)

Answering machine

 connecting: 2-6, 2-7
 using unit with: 8-10

Area

 printable: 5-3, 5-14
 scanned document: 4-3

Assembling, unit: 2-5

AUTO PRINT setting: 14-5

AUTO REDIAL

 message: 13-5
 setting: 7-13, 14-6

Automatic

 document feed: 4-2
 Document Feeder (*See* ADF)
 redialling (*See* Automatic redialling)

Automatic redialling

 cancelling: 7-12
 description: 7-11
 setting options for: 7-12, 7-13

B

B.T. adaptor

 connecting: 2-7

Back print film: 5-2, 5-5

Banner paper: 5-2, 5-4

 printing: 5-14 to 5-16

BJ

 cartridge (*See* BJ cartridge)
 cartridge container: 2-2, 12-13
 tank (*See* BJ tank)

BJ cartridge (*See also individual BJ cartridge names*)

 container: 2-2, 12-13
 guidelines: 2-13, 2-14
 installing: 2-13 to 2-16
 print head (*See* Print head)
 replacing: 12-12 to 12-14
 types: 12-7
 when to replace: 12-8, 12-9

BJ tank (*See also individual BJ tank names*)

replacing: 12-15 to 12-18

types: 12-7, 12-8

when to replace: 12-8, 12-9

Black

BJ cartridge: 2-2, 12-7

BJ tank: 2-2, 12-7

Black & white copying: 10-2 to 10-4

Black & white sending

setting: 7-3

setting resolution: 7-4

BLACK INK EMPTY message: 13-5

BOTTOM MARGIN setting: 10-6, 14-8

Broadcasting, sequential: 7-14 to 7-16

Bubble Jet paper: 5-2, 5-5

BUSY/NO SIGNAL message: 13-5, 13-6

Buttons: 2-11, 2-12 (*See also individual button names*)

numeric: 2-11, 3-3

one-touch speed dialling: 2-11, 2-12, 6-3, 6-12

special function: 2-11, 2-12

C

Cable

parallel: 2-8

USB: 2-8

CALLING VOLUME setting: 14-4

Cancelling

automatic redialling: 7-12

manual redialling: 7-11

receiving: 8-14

sending: 7-10

Canon specialty print media (*See Specialty print media*)

Cartridge (*See BJ cartridge*)

CARTRIDGE JAMMED message: 13-6

CHANGE CARTRIDGE message: 13-6

CHECK DOCUMENT message: 13-6, 13-7

CHECK PAPER SIZE message: 13-7

CHECK PRINTER message: 13-7

Cleaning

button: 2-12, 5-12, 12-10, 12-11

inside printer cover: 12-3, 12-4

periodic: 12-2 to 12-6

print head: 12-11

rollers: 5-11, 5-12, 12-6

scanner components: 12-5, 12-6

sheet: 5-11, 5-12

unit's exterior: 12-2

unit's interior: 12-3, 12-4

Clear button: 2-12, 3-5

CLEAR PAPER JAM message: 13-7

Coded Dial button: 2-11, 6-8, 6-12

CODED SPEED DIAL LIST

description: 11-2

printing: 6-13

sample: 6-14

Coded speed dialling

description: 6-2, 7-6

registering numbers for: 6-6, 6-7

using: 6-8

COLOR COPY MEDIA setting: 10-5, 14-8

COLOR INK EMPTY message: 13-8

COLOR RX setting: 8-12, 14-7

Color/B&W button: 2-11, 7-3, 7-4, 10-2

Colour

BJ cartridge: 2-2, 12-7

BJ tank: 12-8

copying (*See Colour copying*)

reception (*See Colour reception*)

sending (*See Colour sending*)

Colour copying: 10-2 to 10-4

setting length of bottom margin: 10-6

setting paper type: 10-5

COLOUR DIRECT TX setting: 14-6

COLOUR INK EMPTY message: 13-8

Colour reception

setting: 8-12

setting length of bottom margin: 10-6

COLOUR RX setting: 8-12, 14-7

Colour sending
 setting: 7-3
 setting resolution: 7-4
 Colour/B&W button: 2-11, 7-3, 7-4, 10-2
 Components, unit: 2-10 to 2-12
 Connecting
 answering machine: 2-6, 2-7
 data modem: 2-6, 2-7
 extension phone: 2-6, 2-7
 external device: 2-6, 2-7
 handset: 2-6, 2-7
 parallel cable: 2-8
 power cord: 2-9
 telephone: 2-6, 2-7
 telephone line: 2-6, 2-7
 unit to PC: 2-8
 USB cable: 2-8
 Connections: 2-6 to 2-9
 Connector, power cord: 2-9
 Container, BJ cartridge: 2-2, 12-13
 Contrast, setting scanning: 7-5
 Conventions, type: 1-2, 1-3
 CONVERT CLR>B&W? message: 13-8
 Copy button: 2-11, 10-2
 Copying: 10-2 to 10-4
 document requirements: 4-2, 4-3
 problems: 13-19
 setting scanning contrast: 7-5
 Cord, power: 2-2, 2-9
 Correcting mistake: 3-5
 Cover, printer: 2-10
 Customer support: 1-3

D

D.T. button: 2-12, 9-5
 Data modem, connecting: 2-6, 2-7
 Data Registration button: 2-12, 14-2
 Date, entering: 3-7
 DATE & TIME setting: 3-7, 14-4
 DATE SETUP setting: 14-9
 Delayed sending: 7-16
 Deleting document from memory: 7-20
 Dial tone, confirming: 9-5

Dialling
 coded speed: 6-2, 6-6 to 6-8, 7-6
 group: 6-2, 6-9 to 6-12, 7-6
 methods: 7-6
 one-touch speed: 6-2, 6-3 to 6-5, 7-6
 overseas number: 9-2, 9-3
 PC: 7-6
 regular: 7-6
 special: 9-2 to 9-5
 speed (See Speed dialling)
 switching temporarily to tone: 9-4
 through switchboard: 3-11, 3-12
 with pauses: 9-2, 9-3

DISPLAY LANGUAGE setting: 14-9

DOC. MEMORY LIST

description: 11-2
 printing: 7-17
 sample: 7-17

DOC. TOO LONG message: 13-8

Document

adding pages in ADF: 4-6
 deleting from memory: 7-20
 feed (See Document feed)
 feed lever: 2-11, 4-2
 guides: 2-10
 in memory: 7-17 to 7-20
 loading: 4-4, 4-5
 printing document in memory: 7-18, 7-19
 printing list of documents in memory: 7-17
 problem: 4-3
 problems with multipage: 4-6
 quantity: 4-2
 requirements: 4-2, 4-3
 scanned area: 4-3
 size: 4-2
 support: 2-2, 2-5, 2-10
 thickness: 4-2
 tray: 2-2, 2-5, 2-10
 type: 4-2
 weight: 4-2
 Document feed
 automatic: 4-2
 manual: 4-2
 Documentation: 2-2
 using: 1-2, 1-3

E

ECM RX
 message: 13-8
 setting: 14-7
ECM TX
 message: 13-8
 setting: 14-6
ECONOMY PRT setting: 14-8
Envelopes: 5-2, 5-4
 loading: 5-8, 5-9
 printable area: 5-3
ERROR TX REPORT, sample: 11-4
Extension: 2-2
 output tray: 2-10
Extension phone, connecting: 2-6, 2-7
External device, connecting: 2-6, 2-7

F

F/T RING TIME setting: 14-7
Fabric sheet: 5-2, 5-5
 printing: 5-13
FAX (*See Unit*)
FAX ONLY MODE
 description: 8-2
 setting: 8-3, 8-4, 14-7
FAX Suite Software User's Guide: 1-2
FAX/TEL AUTO SW setting: 8-5, 14-7
Fax/Tel Mode
 description: 8-2
 setting: 8-5
 setting options for: 8-6, 8-7
FaxOnly display (*See FAX ONLY MODE*)
FaxTel display (*See Fax/Tel Mode*)
Feed lever, document: 2-11, 4-2
Feeding, paper problems: 13-13, 13-14
Film (*See individual film names*)
Function
 button: 2-12
 light: 2-12

G

Glossy photo paper: 5-2, 5-4
GROUP DIAL LIST
 description: 11-2
 printing: 6-13
 sample: 6-14
Group dialling
 creating groups: 6-9 to 6-11
 description: 6-2, 7-6
 using: 6-12
Guide
 document: 2-10
 paper: 2-10
 paper output: 2-10, 5-11, 5-15

H

Handling, safety instructions: 1-4, 1-5
Handset
 connecting: 2-6, 2-7
 manual sending via: 7-8, 7-9
High gloss film: 5-2, 5-5
High resolution paper: 5-2, 5-4
 cleaning sheet: 5-11, 5-12
 printing: 5-11
Hook button: 2-11, 7-9, 9-4
HORIZ & VERTICAL setting: 14-8

I

Image Quality button: 2-11, 7-4, 10-2
INCOMING RING setting: 14-7
INSIDE IMAGE setting: 14-4
INSTALL BC-21e message: 13-8, 13-9
INSTALL BC21/22e message: 13-9
INSTALL BC21e/20 message: 13-9
Installing, BJ cartridge: 2-13 to 2-16

J

- Jack: 2-6, 2-7
- Jams
 - clearing: 13-3, 13-4
 - in ADF: 13-3
 - in multi-purpose tray: 13-4

K

- KEYPAD VOLUME setting: 14-4
- Kit
 - photo: 5-5
 - starter: 5-5

L

- LCD: 2-11
 - messages: 13-5 to 13-12 (*See also individual message names*)
- Letters, entering: 3-3, 3-4
- Lever
 - document feed: 2-11, 4-2
 - paper thickness: 5-2, 5-6, 5-7
- Light
 - Alarm: 2-11
 - Function: 2-12
- Limited warranty card: 2-2
- Line, telephone: 2-2, 2-6, 3-10
- LINE MONITOR VOL setting: 14-4
- List (*See individual list names*)
- LOAD PAPER message: 13-10
- Loading
 - documents: 4-4, 4-5
 - envelopes: 5-8, 5-9
 - paper: 2-17 to 2-19, 5-7
- Location, safety instructions: 1-5, 1-6
- LOCK PHONE setting: 9-6, 9-7, 14-9
- Lowercase letter mode: 3-3, 3-4

M

- M button: 7-22, 7-23, 7-24
 - registering speed dialling with: 7-24
- M-KEY SETTING: 7-22, 14-4
- Maintenance, safety instructions: 1-4, 1-5
- MAN/AUTO SWITCH setting: 14-7
- Manual display (*See MANUAL MODE*)
- Manual document feed: 4-2
- MANUAL MODE
 - description: 8-2
 - receiving in: 8-8, 8-9
 - setting: 8-8
- Manual redialling: 7-11
 - cancelling: 7-11
- Manual sending via the handset: 7-8, 7-9
 - cancelling: 7-10
- Margin, setting bottom: 10-6
- Memory
 - deleting document from: 7-20
 - documents in: 7-17 to 7-20
 - printing document in: 7-18, 7-19
 - printing list of documents in: 7-17
 - receiving when problem occurs: 8-13
 - Reference button: 2-12, 7-17, 7-18, 7-20, 8-11
 - sending (*See Memory sending*)
- MEMORY CLEAR REPORT
 - description: 11-2
 - sample: 13-26
- MEMORY FULL message: 13-10
- MEMORY RX setting: 14-7
- Memory sending: 7-7, 7-8
 - cancelling: 7-10
- MEMORY USED *nn%* message: 13-10
- Menu system, understanding: 14-2, 14-3
- Menus (*See also individual menu names*)
 - accessing: 14-2, 14-3
- Messages, LCD: 13-5 to 13-12 (*See also individual message names*)

MID PAUSE SET setting: 14-6
 Mistake, correcting: 3-5
 MULTI TX/RX (Transaction) REPORT: 11-2, 11-5
 Multi-purpose tray: 2-10
 capacity: 5-2
 jams in: 13-4
 loading paper in: 2-19
 MultiPASS (See Unit)
 MultiPASS Suite
 receiving faxes to: 8-2, 8-11
 registering information via: 3-2
 Software User's Guide: 1-2

N

NO RX PAPER message: 13-10
 NO TEL # message: 13-10
 NOT AVAILABLE message: 13-11
 Nozzle check pattern
 printing: 12-10
 when to print: 12-9
 Number mode: 3-3, 3-4
 Numbers, entering: 3-3, 3-4, 3-5
 Numeric buttons: 2-11

O

OFFHOOK ALARM setting: 14-4
 One-touch speed dialling
 buttons: 2-11, 2-12, 6-3, 6-12
 description: 6-2, 7-6
 registering numbers for: 6-3, 6-4
 using: 6-5
 Operation panel: 2-10, 2-11, 2-12
 registering information via: 3-2
 Optional handset (See Handset)
 Output tray: 2-10
 extension: 2-10
 OUTSIDE IMAGE setting: 14-4
 Overseas number, dialling: 9-2, 9-3

P

Paper: 5-2, 5-4 (*See also individual paper names*)
 feeding problems: 13-13, 13-14
 guide: 2-10
 guidelines: 2-17, 2-18
 loading: 2-17 to 2-19, 5-7
 output guides: 2-10, 5-11, 5-15
 plain (See Plain paper)
 printable area: 5-3
 rest: 2-10
 thickness lever (See Paper thickness lever)
 type, setting: 10-5
 PAPER SIZE setting: 14-8
 Paper thickness lever
 position: 5-2
 setting: 5-6, 5-7
 Parallel cable: 2-8
 PASSWORD setting: 9-6, 9-7, 14-9
 Pauses, dialling with: 9-2, 9-3
 PBX setting: 3-11, 14-4
 PC
 connecting to unit: 2-8
 dialling: 7-6
 when off: 8-11
 Photo BJ cartridge: 12-7
 PHOTO INK IN USE message: 13-11
 PHOTO INK PRINT setting: 14-8
 Photo kit: 5-5
 Plain paper: 5-2, 5-4
 Power
 cord (See Power cord)
 cut: 13-26
 supply, safety instructions: 1-6
 Power cord: 2-2
 connecting: 2-9
 Print head
 cleaning: 12-11
 testing: 12-10

Print media (*See also individual print media names*)

- Canon specialty: 5-10 to 5-16
- quantity: 5-2
- requirements: 5-2
- selecting: 5-4, 5-5
- size: 5-2
- specialty: 5-10 to 5-16
- type: 5-2
- weight: 5-2

Print quality problems: 13-20, 13-21

PRINT W/ BC-22e? message: 13-11

PRINT WITH IMAGE setting: 14-5

Printer

- cover: 2-10
- Settings menu: 14-8

Printing

- 1-TOUCH SPD DIAL LIST: 6-13, 6-14
- ACTIVITY REPORT: 11-3
- area of banner paper: 5-14
- area of envelopes: 5-3
- area of paper: 5-3
- banner paper: 5-14 to 5-16
- CODED SPEED DIAL LIST: 6-13, 6-14
- DOC. MEMORY LIST: 7-17
- document in memory: 7-18, 7-19
- fabric sheet: 5-13
- GROUP DIAL LIST: 6-13, 6-14
- high resolution paper: 5-11
- list of documents in memory: 7-17
- list of information in unit: 3-9
- nozzle check pattern: 12-10
- problems: 13-22 to 13-24
- speed dialling lists: 6-13, 6-14
- USER'S DATA LIST: 3-9

Problems

- cannot solve: 13-2
- copying: 13-19
- document: 4-3
- general: 13-24, 13-25
- multipage documents: 4-6
- paper feeding: 13-13, 13-14
- print quality: 13-20, 13-21
- printing: 13-22 to 13-24
- receiving: 13-16 to 13-18
- receiving in memory when: 8-13
- sending: 13-14 to 13-16
- telephone: 13-20

PSTN setting: 3-11, 14-4

Q

Quality

- adjusting: 7-3 to 7-5
- print problems: 13-20, 13-21

Quantity

- document: 4-2
- print media: 5-2

R

R button: 2-12, 3-11

- registering: 3-11, 3-12

R-KEY SETTING: 3-11, 14-4

REC'D IN MEMORY message: 13-11

Receive Mode button: 2-11

RECEIVED IN FILE message: 13-11

Receiving (*See also individual receive modes*)

- cancelling: 8-14
- colour: 8-12
- in memory when problem occurs: 8-13
- methods: 8-2
- problems: 13-16 to 13-18
- to MultiPASS Suite: 8-2, 8-11
- when PC off: 8-11
- while performing other tasks: 8-13

REDIAL INTERVAL setting: 7-13, 14-6

REDIAL TIMES setting: 7-13, 14-6

Redialling

- automatic: 7-11 to 7-13
- manual: 7-11

REDUCE DIMENSION setting: 14-8

Registering

- alternative telephone network: 7-22, 7-23
- coded speed dialling: 6-6, 6-7
- information in unit: 3-2
- methods: 3-2
- one-touch speed dialling: 6-3, 6-4
- R button: 3-11, 3-12
- sender information: 3-6 to 3-8
- speed dialling with M button: 7-24
- unit name: 3-7, 3-8
- unit number: 3-7, 3-8
- via MultiPASS Suite: 3-2
- via operation panel: 3-2

- Regular dialling: 7-6
- REMOTE RX ID setting: 14-7
- REMOTE RX setting: 14-7
- Replacing
 - BJ cartridge: 12-12 to 12-14
 - BJ tank: 12-15 to 12-18
- Report (*See also individual report names*)
 - button: 2-12, 3-9, 6-13, 11-3
 - Settings menu: 14-5
- Resolution
 - button: 2-11, 7-4, 10-2
 - setting scanning: 7-4
- Rest, paper: 2-10
- Restricting use of unit: 9-6 to 9-8
- Resume button: 2-12, 13-3, 13-4
- RING COUNT setting: 14-7
- Rollers, cleaning: 5-11, 5-12, 12-6
- ROTARY PULSE setting: 3-10, 14-4
- RX (Reception)
 - REPORT: 11-2, 11-5
 - Settings menu: 14-7
- RX CALL LEVEL setting: 14-4
- RX MODE setting: 8-3, 8-5, 14-7
- RX REDUCTION setting: 14-8
- RX REPORT setting: 14-5
- RX START SPEED setting: 14-9

S

- Safety instructions
 - handling: 1-4, 1-5
 - location: 1-5, 1-6
 - maintenance: 1-4, 1-5
 - power supply: 1-6
- SCAN CONTRAST setting: 7-5, 14-4
- Scanned area, document: 4-3
- Scanner components, cleaning: 12-5, 12-6
- Scanning
 - contrast, setting: 7-5
 - document requirements: 4-2, 4-3
 - resolution, setting: 7-4
- Sender information
 - description: 3-6
 - printing list to check: 3-9
 - registering: 3-6 to 3-8
 - sample: 3-6

- Sending
 - alternative telephone network: 7-23, 7-24
 - cancelling: 7-10
 - delayed: 7-16
 - document requirements: 4-2, 4-3
 - manual via the handset: 7-8, 7-9
 - memory: 7-7, 7-8
 - methods: 7-7 to 7-9
 - preparing for: 7-3 to 7-6
 - problems: 13-14 to 13-16
 - sequential broadcasting: 7-14 to 7-16
 - setting for black & white: 7-3
 - setting for colour: 7-3
 - setting scanning contrast: 7-5
 - setting scanning resolution: 7-4
 - timer (*See Delayed sending*)
 - to more than one destination: 7-14, 7-15
 - using coded speed dialling: 6-8
 - using group dialling: 6-12
 - using one-touch speed dialling: 6-5
- Sequential broadcasting: 7-14 to 7-16
- Set button: 2-12, 14-2
- Settings, list: 3-9
- Sheet
 - cleaning: 5-11, 5-12
 - fabric: 5-2, 5-5, 5-13
- Shipping materials, removing: 2-3, 2-4
- Size
 - document: 4-2
 - print media: 5-2
- Software: 2-2
 - FAX Suite User's Guide: 1-2
 - MultiPASS Suite User's Guide: 1-2
- Space button: 2-12, 3-4, 3-5
- Special
 - dialling: 9-2 to 9-5
 - function buttons: 2-11, 2-12 (*See also individual button names*)
- Specialty print media: 5-10 to 5-16 (*See also individual print media names*)
 - guidelines: 5-10
- Speed dialling
 - coded: 6-2, 6-6 to 6-8, 7-6
 - description: 6-2
 - group dialling: 6-2, 6-9 to 6-12, 7-6
 - lists: 6-13, 6-14
 - methods: 6-2
 - one-touch: 6-2, 6-3 to 6-5, 7-6
 - registering M button with: 7-24

Start button: 2-11
 Start/Scan button: 2-11
 Starter kit: 5-5
 Stop button: 2-11
 Support
 customer: 1-3
 document: 2-2, 2-5, 2-10
 Switchboard, dialling through: 3-11, 3-12
 Symbols, entering: 3-3, 3-5
 System Settings menu: 14-9

T

TEL LINE TYPE setting: 3-10, 14-4
 Telephone
 connecting: 2-6, 2-7
 line (See Telephone line)
 problems: 13-20
 TELEPHONE # MARK setting: 14-4
 Telephone line: 2-2
 connecting: 2-6, 2-7
 setting type: 3-10
 Testing
 BJ cartridge print head: 12-10
 unit: 2-20
 Thickness
 document: 4-2
 lever, paper: 5-2, 5-6, 5-7
 Time, entering: 3-7
 TIME OUT setting: 14-6
 Timer sending (See Delayed sending)
 Tone dialling, switching to: 9-4
 Tone/+ button: 2-12, 3-8, 9-4
 TOUCH TONE setting: 3-10, 14-4
 Transparencies: 5-2, 5-5
 Tray
 document: 2-2, 2-5, 2-10
 multi-purpose: 2-10, 2-19, 5-2, 13-4
 output: 2-10
 TRY AGAIN IN B&W message: 13-12
 TRY AGAIN IN B/W message: 13-12
 TTI POSITION setting: 14-4
 TX (Transmission)
 REPORT: 11-2, 11-4
 Settings menu: 14-6
 TX REPORT setting: 14-5
 TX START SPEED setting: 14-9
 TX TERMINAL ID setting: 14-4
 TX/RX CANCELLED message: 13-12

TX/RX NO. *nnnn*, SCANNING P.*nnn*,
 MEMORY FULL message: 13-12
 TX/RX NO. *nnnn* message: 13-12
 Type conventions, this guide: 1-2, 1-3

U

UN/LOCK PHONE setting: 9-6, 9-7, 14-9
 Unit: 2-2
 assembling: 2-5
 cleaning: 12-2 to 12-6
 components: 2-10 to 2-12
 connecting to PC: 2-8
 name, registering: 3-7, 3-8
 number, registering: 3-7, 3-8
 registering information in: 3-2
 restricting use: 9-6 to 9-8
 Suite (See MultiPASS Suite)
 testing: 2-20
 unpacking: 2-2 to 2-4
 User's Guide (this guide): 1-2
 weight: 1-5
 UNIT NAME setting: 3-8, 14-4
 UNIT TELEPHONE # setting: 3-8, 14-4
 Unpacking unit: 2-2 to 2-4
 Uppercase letter mode: 3-3, 3-4
 USB cable: 2-8
 User Settings menu: 14-4
 USER'S DATA LIST
 description: 11-2
 printing: 3-9
 sample: 3-9
 User's Guide
 FAX Suite Software: 1-2
 MultiPASS Suite Software: 1-2
 this guide: 1-2

V

VERTICAL ONLY setting: 14-8
 Volume
 ALARM VOLUME setting: 14-4
 CALLING VOLUME setting: 14-4
 KEYPAD VOLUME setting: 14-4
 LINE MONITOR VOL setting: 14-4
 RX CALL LEVEL setting: 14-4
 VOLUME CONTROL setting: 14-4
 VOLUME CONTROL setting: 14-4

W

WAIT COOLING message: 13-12

Warranty card, limited: 2-2

Weight

document: 4-2

print media: 5-2

unit: 1-5