


imageCLASS MF4100 Series

Basic Guide

- What Can I Do with This Machine?
 - Before Using the Machine
- Document Handling
- Print Media
- Sending Faxes (MF4140/MF4150 Only)
- Receiving Faxes (MF4140/MF4150 Only)
- Copying
- Printing
- Scanning
- PC Faxing (MF4140/MF4150 Only)
- Maintenance
- Troubleshooting
- Machine Settings
 - Appendix

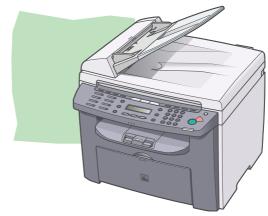

Please read this guide before operating this product. After you finish reading this guide, store it in a safe place for future reference.

ENG

Manuals for the Machine

- Machine Set-Up
- Software Installation

Starter Guide

- Basic Features
- Maintenance
- Machine Settings
- Specifications

Basic Guide (This Document)

- Advanced Features
- System Monitor
- Reports and Lists

Advanced Guide



Scanning Features

Scanner Driver Guide





Indicates the manual is supplied in PDF format in the accompanying CD-ROM.

- To view the manual in PDF format, Adobe Reader/Adobe Acrobat Reader is required. If Adobe Reader/Adobe Acrobat Reader is not installed on your system, please download it from the Adobe Systems Incorporated website.
- Considerable effort has been made to ensure that this manual is free of inaccuracies and omissions. However, as we are constantly improving our products, if you need an exact specification, please contact Canon.
- The machine illustration on the cover may differ slightly from your machine.

 
What Can I Do with This Machine?

Fax Features (MF4140/MF4150 Only)

Specify a recipient with a single key

One-Touch Speed Dialing


 \rightarrow p. 4-7

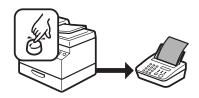

Specify a recipient with a two-digit code

Coded Dialing

 
→ p. 4-14

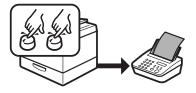

Specify multiple recipients with a single key

Group Dialing

 
→ p. 4-21

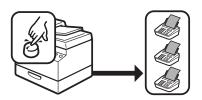

Look up a particular recipient

Using Address Book

 → Advanced Guide

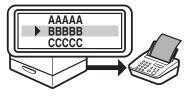

Redial when the line is busy

Redialing

 
→ Advanced Guide



Send a fax to multiple recipients

Broadcasting


→ Advanced Guide

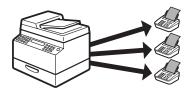

Receive faxes in memory without printing out

Memory Reception

 
→ Advanced Guide

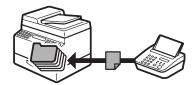

Reject faxes without their numbers

Reception Restriction

 → Advanced Guide

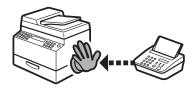

Copy Features

Select a scan mode depending on the type of image

Image Quality

→ p. 6-3



Adjust the density level of scanned images

Density

 
→ p. 6-4



Enlarge or reduce copied images

Zoom Ratio


 \rightarrow p. 6-6

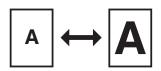

Sorts copies by page order

Collate Copy

 → Advanced Guide

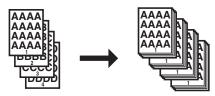

Make two-sided copies

Two-Sided Copying

→ Advanced Guide



Copy two documents on one sheet

2 on 1 Combination

→ Advanced Guide

 


Printer Feature

Print a document from a PC

Printing

→ Online Help

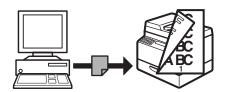


Scanner Feature

Specify detailed scanning options to suit various images

Scanning

 → Scanner Driver Guide

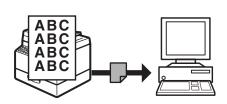


PC Fax Feature (MF4140/MF4150 Only)

Send a fax from a PC

PC Faxing

  \rightarrow Online Help

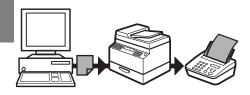

Contents

| | Manuals for the Machine | İ |
|----------|---|----|
| | What Can I Do with This Machine?i | i |
| | Fax Features (MF4140/MF4150 Only)iv Copy Features | / |
| | Contentsvi | İ |
| | How to Use This Guidexi | i |
| | Symbols Used in This Manualxi | |
| | Legal Noticesxiv | / |
| | Trademarksxiv Copyrightxiv Disclaimersxiv | / |
| | Users in New Zealandxv | / |
| | Caution (New Zealand Only)xv | / |
| 1 Before | e Using the Machine1-1 | |
| | Machine Components1-1 | |
| | Operation Panel1-4 | ļ. |
| | Main Operation Panel1-4 Facsimile Operation Panel (MF4140/MF4150 Only)1-8 | |

| | LCD (Standby Mode) | 1-9 |
|---------|--|------|
| | Fax Mode (MF4140/MF4150 Only) Copy Mode Scan Mode | 1-9 |
| | Optional Handset (MF4140/MF4150 Only) | 1-10 |
| | Maintaining the Handset | 1-10 |
| | Toner Cartridge | 1-11 |
| | Maintaining the Toner Cartridge Checking the toner level | |
| | Timer Settings | 1-14 |
| | Setting the Sleep Mode Setting Daylight Saving Time | |
| | (MF4140/MF4150 Only) | 1-17 |
| 2 Docu | ment Handling | 2-1 |
| | Document Requirements | 2-1 |
| | Scanning Area | |
| | Loading Documents | 2-4 |
| | On the Platen GlassIn the ADF (MF4150 Only) | |
| 3 Print | Media | 3-1 |
| | Paper Requirements | 3-1 |
| | Printable Area | |
| | Paper Guidelines | 3-3 |
| | | |

| Luau | ing Paper | 3-4 |
|---------------------------|--|-----------------|
| | Into the Multi-Purpose tray | 3-4 |
| Setti | ng Paper Size and Type | 3-7 |
| 4 Sending Fa | xes (MF4140/MF4150 Only) | 4-1 |
| Scan | Settings | 4-3 |
| | Image Quality Density | 4-3 |
| Spee | d Dialing | 4-6 |
| | Registering Recipients for Speed Dialing Using Speed Dialing | |
| Manu | ual Sending (MF4150 Only) | 4-32 |
| | | |
| 5 Receiving | Faxes (MF4140/MF4150 Only) | 5-1 |
| | Faxes (MF4140/MF4150 Only) | |
| 6 Copying | | 6-1 |
| 6 Copying | | 6-16-36-3 |
| 6 Copying Scan | Settings Image Quality Density | 6-16-36-36-4 |
| 6 Copying Scan 7 Printing | Settings Image Quality Density Zoom Ratio | 6-16-36-36-46-6 |

| 10 Ma | aintenance | 10-1 |
|--------|--|--------------|
| | Cleaning the Machine | 10-1 |
| | Exterior | 10-2 10-4 |
| | Replacing the Toner Cartridge | 10-8 |
| | Redistributing TonerReplacing the Toner Cartridge with a New C | |
| | Transporting the Machine | 10-12 |
| 11 Tro | oubleshooting | 11-1 |
| | Clearing Jams | 11-1 |
| | Document Jams (MF4150 Only)Paper Jams | |
| | LCD Messages | 11-9 |
| | CommonFacsimile (MF4140/MF4150 Only)Printer | 11-16 |
| | Error Codes (MF4140/MF4150 Only) | 11-20 |
| | If You Cannot Solve a Problem | 11-22 |

| 12 Machine Set | tings | 12-1 |
|----------------|--|--|
| Machine | e Settings | 12-1 |
| | Printing User's Data List (MF4140/MF4150 Only). Accessing the Setting Menu | 12-1 |
| Setting | Menu | 12-5 |
| | PAPER SETTINGS | 12-5 12-6 12-7 12-8 12-12 12-13 |
| 13 Appendix | | 13-1 |
| Specific | cations | 13-1 |
| | General Copier Printer Facsimile (MF4140/MF4150 Only) Telephone (MF4140/MF4150 Only) | 13-3 13-4 13-5 |
| Index | | 13-6 |

How to Use This Guide

Symbols Used in This Manual

The following symbols are used throughout the manuals for the machine and indicate the warnings, cautions and notes you should keep in mind when using the machine.

MARNING

Indicates a warning that may lead to death or serious injury if not observed.

A CAUTION

Explains how to avoid actions that could injure you or damage your machine.

NOTE

Explains operating restrictions and how to avoid minor difficulties.

In addition, this guide uses distinctive notations to identify keys and information in the LCD:

- The keys you press appear in square brackets: [Stop/Reset].
- Information in the LCD appears in angle brackets: <LOAD PAPER>.

The numbers that point to the keys on the operation panel diagram correspond to the order of steps to take in the procedure.

Illustrations Used in This Manual

Unless otherwise mentioned, illustrations used in this manual are those taken when no optional equipment is attached to the MF4150.



The model MF4150 is used for illustration purposes in this manual. When there is any difference among MF4122, MF4140, MF4150, it is clearly indicated in the text, e.g., "MF4150 Only."

Legal Notices

Trademarks

Canon, the Canon logo, and imageCLASS are trademarks of Canon Inc. All other product and brand names are registered trademarks, trademarks or service marks of their respective owners.

Copyright

Copyright © 2006 by Canon Inc. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of Canon Inc.

Disclaimers

The information in this document is subject to change without notice.

CANON INC. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, EITHER EXPRESS OR IMPLIED, EXCEPT AS PROVIDED HEREIN, INCLUDING WITHOUT LIMITATION, THEREOF, WARRANTIES AS TO MARKETABILITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OF USE OR NON-INFRINGEMENT. CANON INC. SHALL NOT BE LIABLE FOR ANY DIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY NATURE, OR LOSSES OR EXPENSES RESULTING FROM THE USE OF THIS MATERIAL.


Users in New Zealand


Caution (New Zealand Only)

This equipment does not fully meet Telecom's impedance requirements. Performance limitations may occur when used in conjunction with some parts of the network. Telecom will accept no responsibility should difficulties arise in such circumstances.

Before Using the Machine


Machine Components

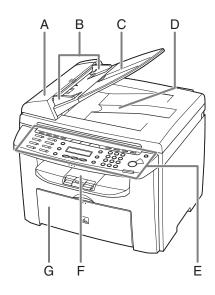

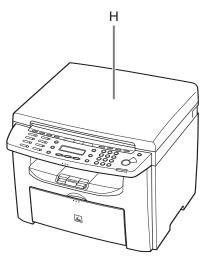


- A ADF (Automatic Document Feeder)*
 Holds documents and feeds them
 automatically into the scanning area.
 * MF4150 Only
- B Slide guides
 Adjust to the width of the document.
- C Document feeder tray Holds documents.
- D Document delivery tray Receives documents.
- E Operation panel Controls the machine.
- F Output tray
 Receives copies, prints and faxes.
- G Paper feeding tray Loads the paper supply.
- H Platen glass cover*
 Open this cover when placing a document on the platen glass.

 * MF4122/MF4140 Only

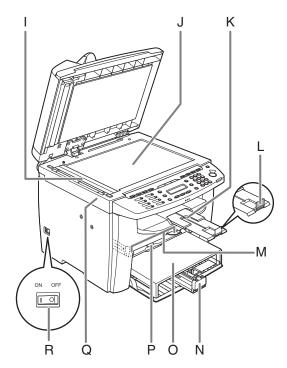

- I Scanning area Scans documents from the ADF.
 - J Platen glass
 Place documents.
- K Output tray extension Extension for the output tray.
- Paper stopper
 Prevents the paper from falling off the output tray.
 Open the paper stopper from its original position for A4 paper.
- M Slide guides for multi-purpose tray Adjusts to the width of the paper.
- N Paper guide rail Holds the paper supply.
- O Dust cover
 Protects the paper supply in the paper feeding tray from the dirt and dust.
- P Multi-purpose tray
 Feeds paper when you insert one by one manually.
- Q Scanning platform open this platform when replacing the toner cartridge or clearing paper jams.
- R Main power switch
 Turn the power on or off.

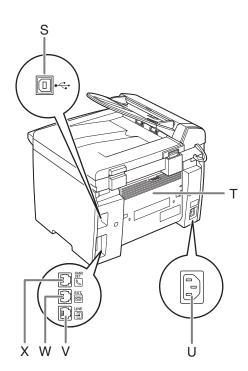


- S USB port Connect the USB (Universal Serial Bus) cable.
- T Rear cover Open this cover when clearing paper jams.
- U Power socket Connect the power cord.
- V Telephone line jack*
 Connect the external telephone cable.
- W External device jack*
 Connect the external device.
- X Handset jack*
 Connect an optional handset cable.

*MF4140/MF4150 Only

Operation Panel

Main Operation Panel

● MF4140/MF4150

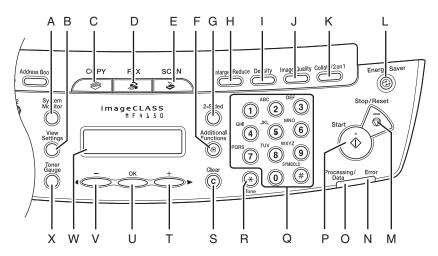

- A [System Monitor] key
 Press to check print status, fax status, print
 and scan counts, remaining memory, or print
 transmission/reception results.
- B [View Settings] key
 Press to confirm settings of the copy function.
- C [COPY] key
 Press to switch to the Copy mode.
- D [FAX] key
 Press to switch to the Fax mode.
- E [SCAN] key
 Press to switch to the Scan mode.
- F [Additional Functions] key
 Press to select or cancel the modes in
 Additional Functions.


- G [2-Sided] key
 Press to set two-sided copying.
- H [Enlarge/Reduce] key
 Press to enlarge or reduce copy ratio.
- I [Density] keyPress to adjust copy or fax density.
- J [Image Quality] key
 Press to select image quality for copy or fax.
- K [Collate/2 on 1] key Press to collate copies, or press to set 2 on 1 copying.
- L [Energy Saver] key
 Press to set or cancel the Sleep mode
 manually. The key lights green when the
 Sleep mode is set, and goes off when the
 mode is canceled.

M [Stop/Reset] key Press to stop a current job. Also, press to return the machine to the standby mode.

- N Error indicator
 Flashes when an error has occurred.
- O Processing/Data indicator
 Flashes during sending or receiving faxes.
 Lights when the machine has waiting jobs and stores the data in memory.
- P [Start] key
 Press to start copying, scanning and sending faxes.
- Q Numeric keys
 Enter letters and numbers.
- R [Tone] key
 Press to switch from rotary pulse to tone dialing.

- S [Clear] key
 Press to clear entered alphanumeric
 characters.
- T [+▶] key
 Press to increase the value for various
 settings. Also press to see the next item in
 the menu.
- U [OK] key
 Press to accept a set function or mode.
- V [◄-] key
 Press to decrease the value for various
 settings. Also press to see the previous item
 in the menu.
- W LCD display
 Displays messages and prompts during
 operation. Displays selection, text, and
 numbers when adjusting the settings.
- X [Toner Gauge] key
 Press to check the toner remaining in the
 toner cartridge.

MF4122

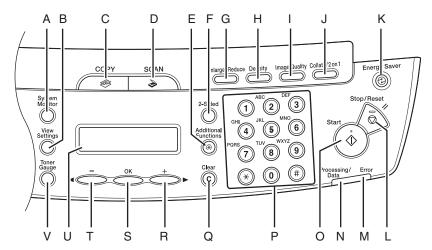

- A [System Monitor] key
 Press to check print status, print and scan
 counts.
- B [View Settings] key
 Press to confirm settings of the copy function.
- C [COPY] key
 Press to switch to the Copy mode.
- D [SCAN] key
 Press to switch to the Scan mode.
- E [Additional Functions] key
 Press to select or cancel the modes in
 Additional Functions.
- F [2-Sided] key
 Press to set two-sided copying.

- G [Enlarge/Reduce] key
 Press to enlarge or reduce copy ratio.
- H [Density] key Press to adjust copy.
- I [Image Quality] key
 Press to select image quality for copy.
- J [Collate/2 on 1] key
 Press to collate copies, or press to set 2 on 1
 copying.
- K [Energy Saver] key Press to set or cancel the Sleep mode manually. The key lights green when the Sleep mode is set, and goes off when the mode is canceled.
- L [Stop/Reset] key
 Press to stop a current job. Also, press to
 return the machine to the standby mode.

- M Error indicator
 Flashes when an error has occurred.
- N Processing/Data indicator Lights when the machine has waiting jobs.
- O [Start] key
 Press to start copying and scanning.
- P Numeric keys Enter numbers.
- Q [Clear] key
 Press to clear entered alphanumeric characters.

R [**+**►] key

Press to increase the value for various settings. Also press to see the next item in the menu.

S [OK] key

Press to accept a set function or mode.

T [**⊲–**] key


Press to decrease the value for various settings. Also press to see the previous item in the menu.

U LCD display

Displays messages and prompts during operation. Displays selection, text, and numbers when adjusting the settings.

V [Toner Gauge] key
Press to check the toner remaining in the
toner cartridge.

Facsimile Operation Panel (MF4140/MF4150 Only)

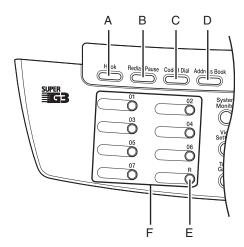


- A [Hook] key
 Press when you want to dial without lifting up
 the optional handset or the handset of the
 external telephone.
- B [Redial/Pause] key
 Press to redial the last dialed number when
 fax is standing by, or press to insert a pause
 when entering a fax number.
- C [Coded Dial] key
 Press to perform coded dialing.

- D [Address Book] key
 Press to search pre-registered destinations
 under one-touch speed dialing keys or coded
 dialing numbers by name.
- E [R] key
 Press to dial an outside line access number
 or an extension number when the unit is
 connected through a switchboard (PBX).
- F One-Touch Speed Dial keys
 Press to use one-touch speed dialing (Preregistered frequently used numbers or group
 dialing).


LCD (Standby Mode)

Fax Mode (MF4140/MF4150 Only)

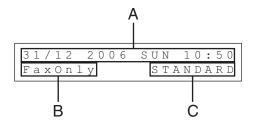

- A Date & Time
- B Receive mode
- C Image quality

Copy Mode

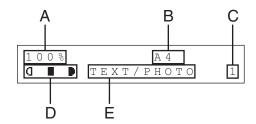

- A Zoom ratio
- B Paper size
- C Quantity
- D Density
- E Image quality

Scan Mode

 
SCANNING MODE

 
∅ NOTE

 
- Depending on your needs, you can change the standby display which appears when the main power switch is turned on. For details, see "Setting Menu," on p. 12-5.
- When the main power switch is turned on, the LCD displays <PLEASE WAIT> first, and then displays <INITIALIZING...> until the standby display appears. It is also possible to see the standby display without having
 INITIALIZING...> shown.
- If the machine remains idle for one minute, the display returns to the standby mode (Auto Clear Function).

Optional Handset (MF4140/MF4150 Only)

If you want to use the machine as a telephone and a fax machine, or if you want to receive faxes manually, install the optional handset available from your local authorized Canon dealer or the Canon help line.

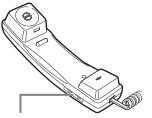

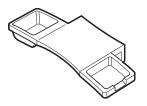

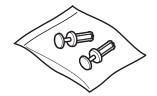

Use a sharp object (i.e., pen) to select the ring volume of the handset.



M NOTE

For how to install the handset, see "Connect Telephone Cables and Install Handset," in the Starter Guide.

Maintaining the Handset

 
- Do not leave the handset exposed to direct sunlight.
- Do not install the handset in hot or humid conditions.
- Do not spray aerosol polish on the handset as it may cause damage.
- Use a damp cloth to wipe clean the handset.

Toner Cartridge

The lifetime of the Canon genuine starter toner cartridge included in this machine is approximately 1,000 pages, the Canon genuine replacement toner cartridge is approximately 2,000 pages. The page counts are on the basis of "ISO/IEC 19752"* when printing A4 size paper with the default print density setting. The level of toner consumption varies depending on the type of documents printed. If your average document contains a lot of graphics, tables, or charts, the life of the toner cartridge will be shorter as they consume more toner. To purchase the Canon genuine replacement toner cartridge, contact your local authorized Canon dealer or Canon help line.

* "ISO/IEC 19752" is the global standard related to "Method for the determination of toner cartridge yield for monochromatic electrophotographic printers and multi-function devices that may contain printer components" issued by ISO (International Organization for Standardization).

Toner Cartridge name: Canon FX9 Cartridge

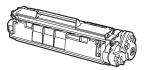

| Model Name | Туре | Supported Canon Genuine Cartridge | Print Yield |
|------------------|-------------|--------------------------------------|---------------------|
| MF4122 | Bundled | Canon FX9 S-Cartridge | Approx. 1,000 pages |
| MF4140 MF4150 | Replacement | Canon FX9 Cartridge | Approx. 2,000 pages |

Maintaining the Toner Cartridge

- Keep the toner cartridge away from computer screens, disk drives, and floppy disks. The magnet inside the toner cartridge may harm these items.
- Avoid locations subject to high temperature, high humidity, or rapid changes in temperature.
- Do not expose the toner cartridge to direct sunlight or bright light for more than five minutes.
- Store the toner cartridge in its protective bag. Do not open the bag until you are ready to install the toner cartridge in the machine.
- Save the toner cartridge's protective bag in case you need to repack and transport the toner cartridge at a later date.
- Do not store the toner cartridge in a salty atmosphere or where there are corrosive gases such as from aerosol sprays.
- Do not remove the toner cartridge from the machine unnecessarily.
- Do not open the drum protective shutter on the toner cartridge. Print quality may deteriorate if the drum surface is exposed to light or is damaged.
- Always hold the toner cartridge by its handle to avoid touching the drum protective shutter.
- Do not stand the toner cartridge on end, and do not turn it upside down. If toner becomes caked in the toner cartridge, it may become impossible to free it even by shaking the toner cartridge.



CAUTION

Do not place the toner cartridge in fire. Toner powder is flammable.

Checking the toner level

You can check the amount of toner remaining in the toner cartridge by pressing the [Toner Gauge] key. The toner level is displayed in the LCD at four levels. If the toner gauge indicates that the toner is empty, it is recommended that the toner cartridge be replaced.(See "Replacing the Toner Cartridge," on p. 10-8.)

Toner full



Toner high



Toner low



Toner empty






To return to the standby mode, press [Stop/Reset].


Timer Settings

Setting the Sleep Mode

When the machine remains idle for a certain period of time, it automatically enters the Sleep mode.

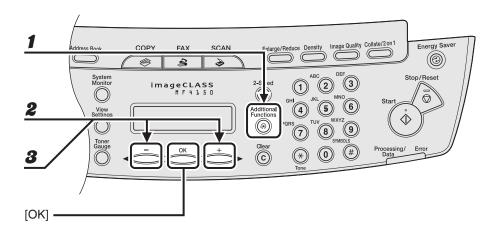

- **1** Press [Additional Functions].
- Press [◄-] or [+▶] to select <TIMER SETTINGS>, then press [OK].
- **3** Press [◄–] or [+▶] to select <AUTO SLEEP>, then press [OK].

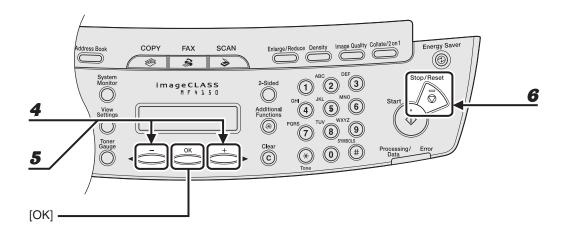

- Press [◄-] or [+►] to select <ON>, then press [OK].
- **5** Press [◄–] or [+▶] to select the desired interval, then press [OK].

You can set the interval from 3 to 30 minutes (in one-minute increments). You can also enter values with the numeric keys.


6 Press [Stop/Reset] to return to the standby mode.



- To resume the normal mode from the Sleep mode, press [Energy Saver] on the operation panel.
- To enter the Sleep mode manually, press [Energy Saver] on the operation panel.
- The machine will not enter the Sleep mode when:
 - the machine is in operation
 - the Processing/Data indicator lights or flashes
 - · an error code or message appears on the display and the Error indicator flashes
 - no paper is loaded in the paper feeding tray
 - paper is loaded in the multi-purpose tray
 - a paper jam occurs in the machine
- The machine will leave the Sleep mode when:
 - you press [Energy Saver] on the operation panel
 - · a fax is received
 - · the optional handset or the handset of the external telephone is off the hook
 - a print job is sent from a computer, and the print is started

Setting Daylight Saving Time (MF4140/MF4150 Only)

In some countries or areas, time is advanced throughout the summer season. This is called "Daylight Saving Time."

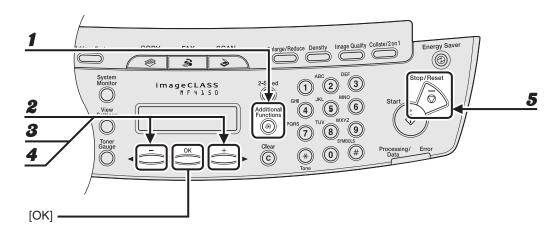

- 1 Press [Additional Functions].
- **2** Press [◄–] or [+►] to select <TIMER SETTINGS>, then press [OK].
- Press [◄–] or [+▶] to select <DAYLIGHT SV.TIME>, then press [OK].
- Press [◄-] or [+►] to select <ON>, then press [OK].
- **5** Press [Stop/Reset] to return to the standby mode.



Document Handling

Document Requirements

| | Platen Glass | ADF (MF4150 Only) |
|--------------|---|---|
| Туре | Plain paper Thick documents Photographs Small documents (e.g., index cards) Special types of paper (e.g., tracing paper*1, transparencies*1, etc.) Book (Height: max. 24 mm) | Plain paper (Multipage documents of the same size, thickness and weight or one page documents.) |
| Size (W x L) | Max. 216 × 296 mm | Max. 216 × 356 mm Min. 105 × 148.5 mm |
| Weight | Max. 2 kg | 40 to 105 g/m ² |
| Quantity | 1 sheet | Max. 35 sheets*2 |


^{*1} When copying a transparent document such as tracing paper or transparencies, use a piece of plain white paper to cover the document after placing it face-down on the platen glass.

^{*2 80} g/m² paper

- Do not place the document on the platen glass or in the ADF until the glue, ink or correction fluid on the document is completely dry.
- Remove all fasteners (staples, paper clips, etc.) before loading the document in the ADF.
- To prevent document jams in the ADF, do not use any of the following:
 - Wrinkled or creased paper
 - Carbon paper or carbon-backed paper
 - Curled or rolled paper
 - Coated paper
 - Torn paper
 - Onion skin or thin paper
 - Documents with staples or paper clips attached
 - Paper printed with a thermal transfer printer
 - Transparencies

Scanning Area


Make sure your document's text and graphics fall within the shaded area in the following diagram. Note that the margin widths listed are approximate and there may be slight variations in actual use.

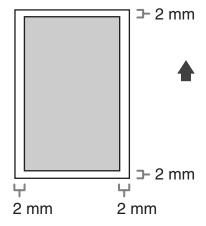


Loading Documents

On the Platen Glass


1 Lift up the ADF/platen glass cover.

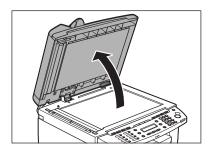

Place your document face down.

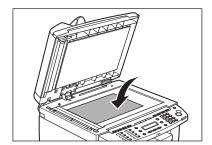


Align the document with the appropriate paper size marks.

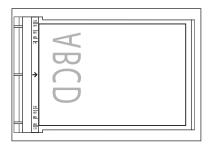

If your document does not match any of the paper size marks, align the center of your document with the arrow mark.

Gently close the ADF/platen glass cover.

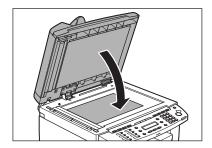

The document is ready for scanning.

CAUTION


- When closing the ADF/platen glass cover, be careful not to get your fingers caught, as this may result in personal injury.
- Do not press down the ADF/platen glass cover forcefully, as this may damage the platen glass and cause personal injury.




Remove the document from the platen glass when scanning is complete.

In the ADF (MF4150 Only)

1 Fan the document stack and even the edges.

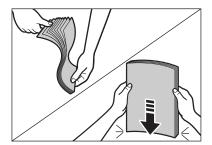


2 Adjust the slide guides to the width of the documents.

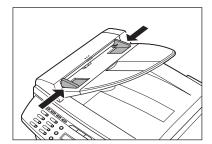

Neatly place the documents face up in the document feeder tray.

When enlarging A5 or B5 originals to A4 paper, place your originals horizontally.

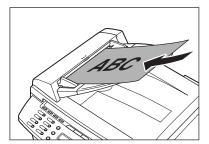

The document is ready for scanning.



- Do not add or remove documents while they are being scanned.
- When scanning is complete, remove the documents from the document delivery tray to avoid paper jams.
- Avoid using ADF to scan the same document more than 30 times. When scanned repeatedly, documents can become folded or torn, which may cause paper jams.
- If the feeder rollers are soiled from scanning a document written in pencil, clean them. (See "Cleaning the Machine," on p. 10-1.)

B Print Media

Paper Requirements


| | Paper feeding tray | Multi-purpose tray | | |
|--------------|--|--------------------|--|--|
| Size (W × L) | A4, B5, A5, Executive, Envelope (COM10, Monarch, DL, ISO-C5), Oficio, Brazil-Oficio, Mexico-Oficio, Folio, Government-LTR, Government-LGL, Foolscap, LTR, LGL (76 × 127 to 216 × 356 mm) | | | |
| Weight | 60 to 163 g/m ² | | | |
| Quantity | Max. 250 sheets (Height: max. 25 mm) | Max. 1 sheet | | |
| Туре | Plain Paper, Plain Paper L, Heavy Paper, Heavy Paper H, Transparency | | | |

⊘ NOTE

The default paper size is A4. If you use a different paper size, you must change the paper size settings. (See "Setting Paper Size and Type," on p. 3-7.)

Printable Area

The shaded area indicates the approximate printable area of A4 paper and envelope. Note that the margin widths listed are approximate and there may be slight variations in actual use.

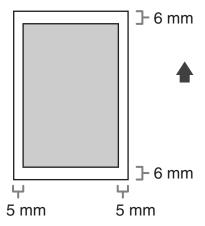

Paper Guidelines

- To prevent paper jams, do not use any of the following:
 - Wrinkled or creased paper
 - Curled or rolled paper
 - Coated paper
 - Torn paper
 - Damp paper
 - Very thin paper
 - Paper which has been printed on using a thermal transfer printer (Do not copy on the reverse side.)
- The following types of paper do not print well:
 - Highly textured paper
 - Very smooth paper
 - Shiny paper
- Make sure the paper is free from dust, lint, and oil stains.
- Be sure to test paper before purchasing large quantities.
- Store all paper wrapped and on a flat surface until ready for use. Keep opened packs in their original packaging in a cool, dry location.
- Store paper at 18°C-24°C, 40%-60% relative humidity.
- Use only the transparencies designed for laser printers. Canon recommends you to use Canon type transparencies with this machine.


Loading Paper

To load paper in the paper feeding tray, see "Set Up the Paper Trays and Load Paper," in the Starter Guide.


Into the Multi-Purpose tray

Use the multi-purpose tray when you want to copy or print on the different paper which is in the paper feeding tray. Load paper one by one in the multi-purpose tray.

- The paper in the multi-purpose tray is fed prior to the paper in the paper feeding tray.
- The recommended envelopes are COM10, MONARCH, DL, and ISO-C5. Using other envelopes may affect the quality of the printout.
- Make sure to set the correct paper size in the printer driver. (See Online Help.)
- When printing received documents, it is possible to feed paper only from the paper feeding tray. If paper is loaded into the multi-purpose tray, <REMOVE MP PAPER> appears.
- Spread the paper guides a little wider than the actual paper width.

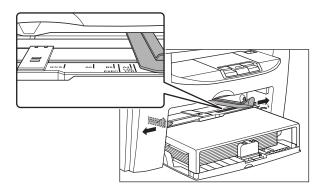


2 When setting a paper, gently insert the paper into the multi-purpose tray with the print side up.

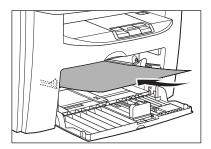


When you load paper with a logo on, position the paper with the print side up (logo side) and insert it so that the top of the paper feeds first in the multi-purpose tray.



When setting an envelope, gently insert the envelope into the multipurpose tray with the print side up and the right edge (i.e., closer to the stamp) first.

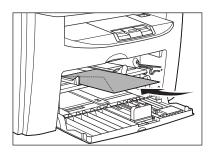

Slide the paper guides so that they fit to both sides of the paper.

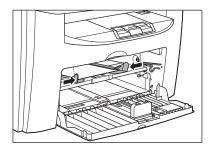

If the paper guides are not adjusted correctly for the size of the paper, the quality of your printouts may be adversely affected.


Specify the size and the type of the paper you load.

For details on how to specify the paper size and type, see "Setting Paper Size and Type," on p. 3-7.


Setting Paper Size and Type

The default setting is <A4> and <PLAIN PAPER>. When you place other sizes and/or types of paper, follow this procedure to change the settings.

The procedure is same for the paper feeding tray and multi-purpose tray except for selecting the paper feeding tray or multi-purpose tray in step 3 and 6.

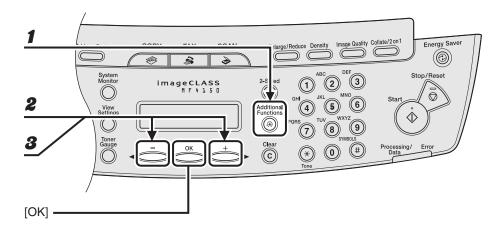

- 1 Press [Additional Functions].
- Press [◄-] or [+►] to select <PAPER SETTINGS>, then press [OK].
- Press [◄-] or [+►] to select <CASSETTE> or <MP TRAY>, then press [OK].

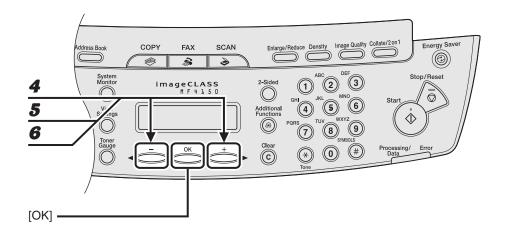


- Press [◄-] or [+►] to select <PAPER SIZE>, then press [OK].
- **5** Press [◄–] or [+▶] to select the paper size, then press [OK].

<A4>, <B5>, <A5>, <EXECUTIVE>, <COM10>, <MONARCH>, <DL>, <ISO-C5>, <OFICIO>, <BRAZIL-OFICIO>, <MEXICO-OFICIO>, <FOLIO>, <GOVERNMENT-LETTER>, <GOVERNMENT-LEGAL>, <FOOLSCAP>, <LTR>, <LGL>

⊘ NOTE

The paper sizes available will vary depending on the country where the unit was purchased.

6 Press [◄-] or [+►] to select <CASSETTE> or <MP TRAY>, then press [OK].

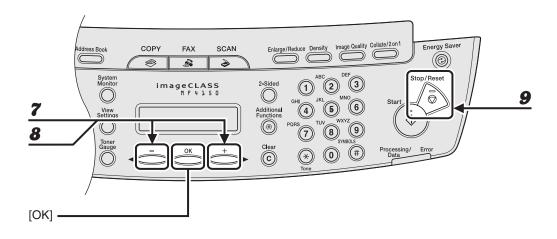

7 Press [◄–] or [+▶] to select <PAPER TYPE>, then press [OK].

⊘ NOTE

If you select <B5>, <A5>, <EXECUTIVE>, <COM10>, <MONARCH>, <DL> or <ISO-C5> for the paper size in step 5, you cannot select the <PAPER TYPE>. Skip to step 9.

8 Press [-] or [+ -] to select the paper type, then press [OK].

You can select from the following paper types:

- <PLAIN PAPER> or <PLAIN PAPER L>*1 for Plain paper (64 g/m² to 90 g/m²)
- <HEAVY PAPER> or <HEAVY PAPER H> *2 for Heavy paper (Paper feeding tray: 105 g/m 2 to 128 g/m 2 , Multi-purpose tray:105 g/m 2 to 163 g/m 2)
- <TRANSPARENCY> for Transparency
- *1 If paper curls excessively when printed with <PLAIN PAPER> selected, select <PLAIN PAPER I >.
- ^{*2} If print fixing is not sufficient when printed with <HEAVY PAPER> selected, select <HEAVY PAPER H>.
- **9** Press [Stop/Reset] to return to the standby mode.


4


Sending Faxes

(MF4140/MF4150 Only)


Follow this procedure to send a fax.

For advanced sending features, see Chapter 1, "Advanced Fax Features (MF4140/MF4150 Only)," in the Advanced Guide.

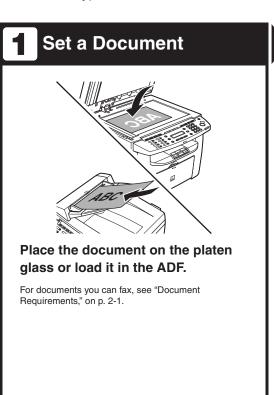

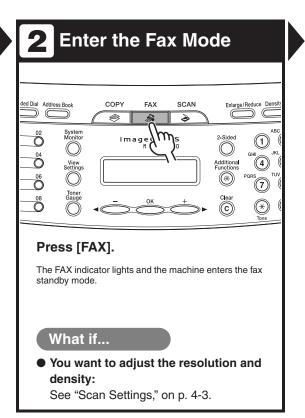

3 Enter the Fax Number

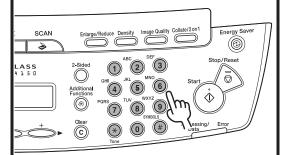

Dial the recipient's fax number with the numeric keys.






What if...

◆ You enter a wrong number: Go back to the wrong digit with [◄-], then press [Clear] to delete it. Or press and hold [Clear] to delete the entire entry. Then try again.

4 Send the Document

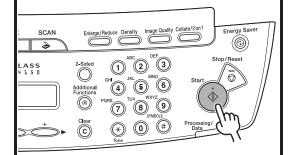

Press [Start].

When you set the document on the platen glass, press [Start] for each document. When scanning is complete, press [OK].

If <CONFIRM NEW DEST.> is set to <ON> in the <TX SETTINGS> of the <FAX SETTINGS> menu, you need to enter the fax number again after pressing [Start].

What if...


 You press [Stop/Reset] to cancel a job during scanning documents or after scanning documents:

The <CANCEL DURING TX/RX?> message appears. Press [◄-] to select <Yes>.


Scan Settings

You can adjust the image quality and density of the document you send. The higher image quality you set, the better the output will be, but the longer the transmission will take. Adjust the scan settings according to the type of document you are sending.

Image Quality

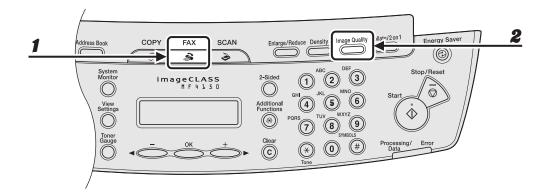


- **1** Press [FAX].
- **2** Press [Image Quality].

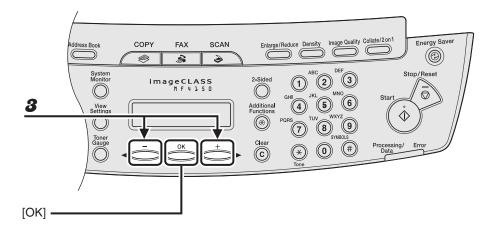

Press [◄-] or [+►] to select the resolution, then press [OK].

- <STANDARD> for most text-only documents. (200 x 100 dpi)
- <FINE> for fine-print documents (the resolution is twice that of <STANDARD>). (200 \times 200 dpi) <PHOTO> for documents that contain photographs (the resolution is twice that of <STANDARD>). (200 \times 200 dpi)
- <SUPER FINE> for documents that contain fine print and images (the resolution is four times that of $\langle STANDARD \rangle$). (200 \times 400 dpi)

Density

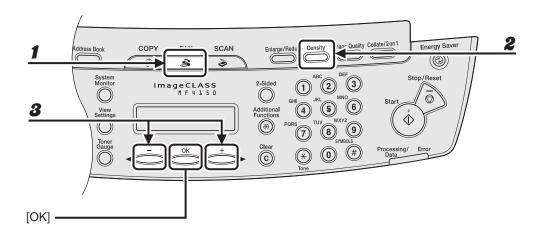

- Press [FAX].
- **2** Press [Density].

EX. DENSITY -LT JOOODBOOD DK+

[+▶]: to make light documents darker [◄-]: to make dark documents lighter

Speed Dialing

Speed dialing allows you to dial fax/telephone numbers by simply pressing one or a few keys. The following speed dialing methods are available:


- One-Touch Speed Dialing (p. 4-7)
 - Register a fax/telephone number for one-touch speed dialing, then to dial the number, simply press the one-touch speed dialing key assigned to that number.
 You can register up to 7 one-touch speed dialing keys, including group dialing.
- Coded Dialing (p. 4-14)
 - Register a fax/telephone number for coded dialing, then to dial the number, simply press [Coded Dial] and enter the two-digit code assigned to that number.
 You can register up to 100 coded dialing codes.
- Group Dialing (p. 4-21)
 - Register a group of fax numbers (must be registered for one-touch speed dialing and/or coded dialing) for group dialing, then to send a document to all numbers in that group, simply press the one-touch speed dialing key assigned to that group.
 You can register up to 50 destinations into a one-touch speed dialing key as a group.

Registering Recipients for Speed Dialing

For each recipient, you can register:


- Name
- Fax number (required)

Registering One-Touch Speed Dialing

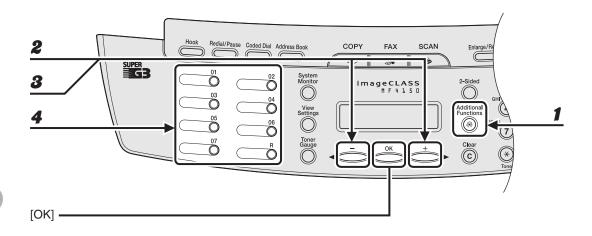

- **1** Press [Additional Functions].
- **2** Press [◄-] or [+▶] to select <ADDRESS BOOK SET.>, then press [OK].
- Press [◄-] or [+▶] to select <1-TOUCH SPD DIAL>, then press [OK].
- Press a one-touch speed dialing key (01 to 07) for which you want to register the fax number, then press [OK].

You can also select a one-touch speed dialing number with [◄-] or [+►].

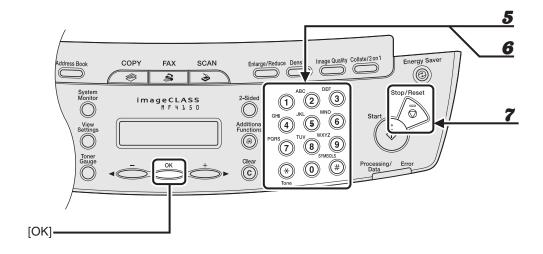

5 Enter the destination name (max. 20 characters, including spaces) with the numeric keys, then press [OK].



6 Enter the fax number you register (max. 50 digits, including spaces and pauses) with the numeric keys, then press [OK].


EX.

TEL NUMBER ENTRY
012XXXXXXX_


To register another one-touch speed dialing key, repeat the procedure from step 4.

7 Press [Stop/Reset] to return to the standby mode.

• Editing One-Touch Speed Dialing

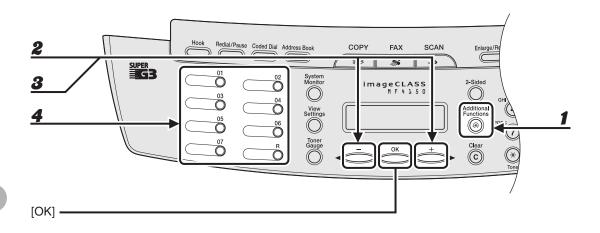


- 1 Press [Additional Functions].
- **2** Press [◄–] or [+▶] to select <ADDRESS BOOK SET.>, then press [OK].
- **3** Press [◄—] or [+▶] to select <1-TOUCH SPD DIAL>, then press [OK].
- Press the one-touch speed dialing key (01 to 07) you want to edit, then press [OK].

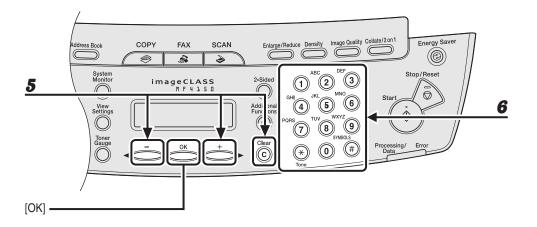

Press [◄–] or [+▶] repeatedly to go to the wrong character, then press [Clear] to delete it.

To delete the entire name, press and hold [Clear].

6 Enter a new character with the numeric keys, then press [OK].

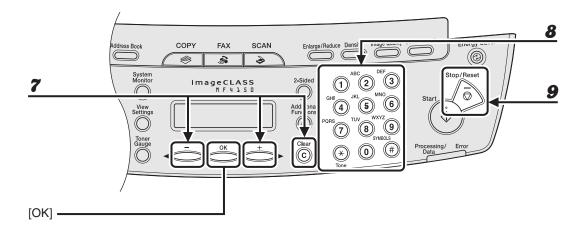


Press [◄-] or [+►] repeatedly to go to the wrong number, then press [Clear] to delete it.


To delete all numbers, press and hold [Clear].

- **8** Enter a new number with the numeric keys, then press [OK].
- **9** Press [Stop/Reset] to return to the standby mode.

Deleting One-Touch Speed Dialing

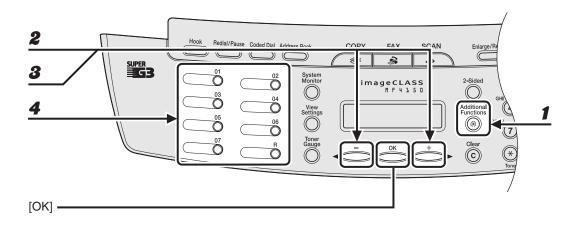

- 1 Press [Additional Functions].
- Press [◄-] or [+▶] to select <ADDRESS BOOK SET.>, then press [OK].
- Press [◄-] or [+▶] to select <1-TOUCH SPD DIAL>, then press [OK].
- Press the one-touch speed dialing key (01 to 07) you want to delete, then press [OK].

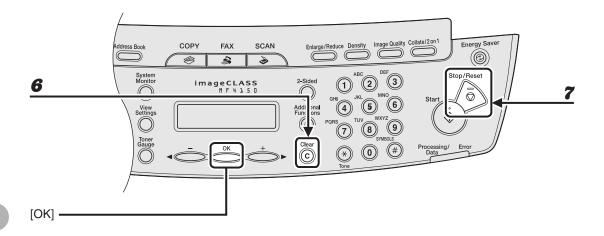


- **5** Press [OK].
- 6 Press and hold [Clear] to delete all numbers, then press [OK].
 - **⊘** NOTE

When deleting all numbers, the registered name is cleared automatically.


7 Press [Stop/Reset] to return to the standby mode.

Registering Coded Dialing

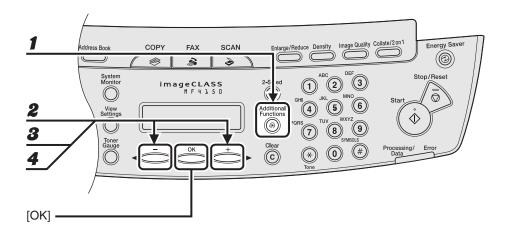

- 1 Press [Additional Functions].
- Press [◄-] or [+►] to select <ADDRESS BOOK SET.>, then press [OK].
- Press [◄-] or [+►] to select <CODED DIAL>, then press [OK].
- Press [◄-] or [+►] to select a coded dialing code (00 to 99), then press [OK].

You can also enter a coded dialing code with the numeric keys after pressing [Coded Dial].

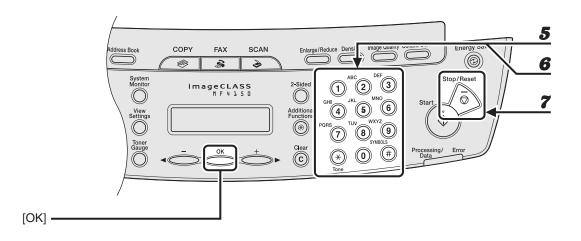

5 Enter the destination name (max. 20 characters, including spaces) with the numeric keys, then press [OK].

| Ex. | | | | | | | | | |
|---------------------|-------|--|--|--|--|--|--|--|--|
| NAME CA <u>N</u> | [A] | | | | | | | | |


6 Enter the fax number you register (max. 50 digits, including spaces and pauses) with the numeric keys, then press [OK].

| Ex | ۲. | | | | | | | | | | | |
|----|----|---|---|---|---|---|---|---|---|---|-------|--|
| I | Γ | Ε | L | | N | U | М | В | Ε | R | ENTRY | |
| C |) | 1 | 2 | Χ | Χ | Χ | Χ | Χ | Χ | Χ | _ | |

If you register another coded dialing number, repeat the procedure from step 4.


7 Press [Stop/Reset] to return to the standby mode.

Editing Coded Dialing

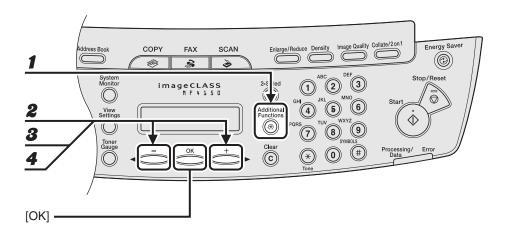

- 1 Press [Additional Functions].
- **2** Press [**4**−] or [**+**▶] to select <ADDRESS BOOK SET.>, then press [OK].
- Press [◄-] or [+►] to select <CODED DIAL>, then press [OK].
- Press [◄-] or [+►] to select the coded dialing code (00 to 99) that you want to edit, then press [OK].


You can also enter a coded dialing code with the numeric keys after pressing [Coded Dial].

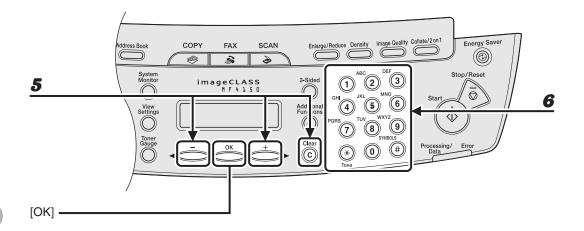

Fress [◄-] or [+►] repeatedly to go to the wrong character, then press [Clear] to delete it.

To delete the entire name, press and hold [Clear].

6 Enter a new character with the numeric keys, then press [OK].

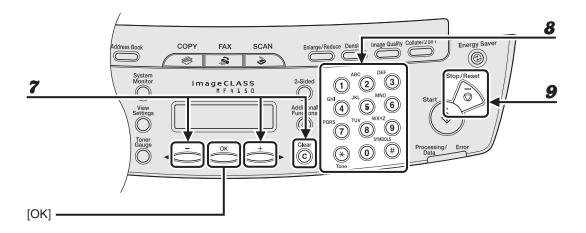


Press [◄-] or [+►] repeatedly to go to the wrong number, then press [Clear] to delete it.

To delete all numbers, press and hold [Clear].


- **8** Enter a new number with the numeric keys, then press [OK].
- **9** Press [Stop/Reset] to return to the standby mode.

Deleting Coded Dialing

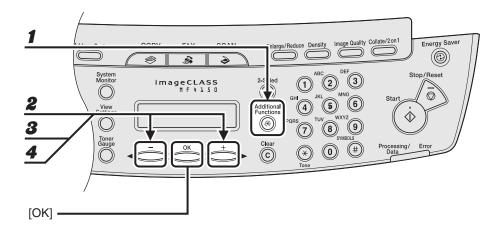

- 1 Press [Additional Functions].
- **2** Press [◄–] or [+▶] to select <ADDRESS BOOK SET.>, then press [OK].
- **3** Press [◄–] or [+▶] to select <CODED DIAL>, then press [OK].
- Press [◄-] or [+►] to select the coded dialing code (00 to 99) that you want to delete, then press [OK].

You can also enter a coded dialing code with the numeric keys after pressing [Coded Dial].

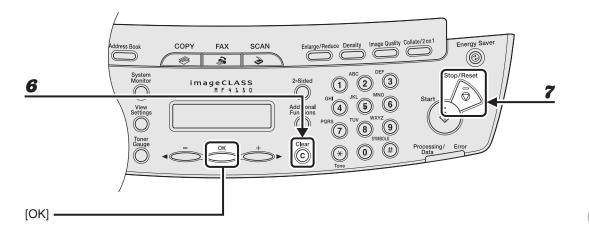


- **5** Press [OK].
- 6 Press and hold [Clear] to delete all numbers, then press [OK].
 - **⊘** NOTE

When deleting all numbers, the registered name is cleared automatically.


7 Press [Stop/Reset] to return to the standby mode.

Registering Group Dialing

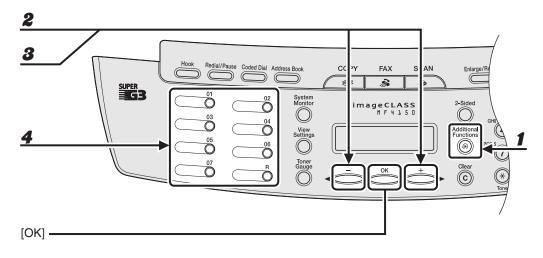

- **1** Press [Additional Functions].
- **2** Press [◄–] or [+▶] to select <ADDRESS BOOK SET.>, then press [OK].
- **3** Press [◄–] or [+▶] to select <GROUP DIAL>, then press [OK].
- Specify an empty one-touch speed dialing key that you want to set as the group dial, then press [OK].

For details on selecting a one-touch speed dialing key, see "Registering One-Touch Speed Dialing," on p. 4-7.

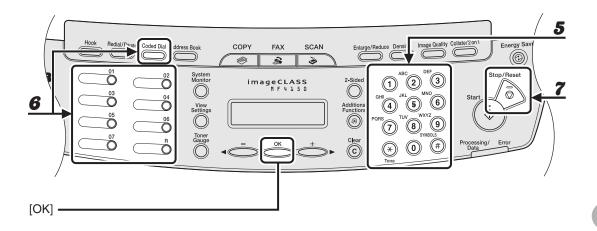

5 Enter the group name (max. 20 characters, including spaces) with the numeric keys, then press [OK].



Select the speed dialing numbers you want to register in the group (max. 50 destinations) until all destinations are registered, then press [OK].

The speed dialing number refers to the one-touch dialing number or coded dialing code under which the fax/telephone number is registered.

To enter a number stored under a one-touch speed dialing key, press the desired one-touch speed dialing key(s).


To enter a number stored under a coded dialing code, press [Coded Dial], then enter the two-digit code for the number with the numeric keys. For multiple entries, press [Coded Dial] between each entry.



You can review the destinations which have been already entered with [◄-] or [+►].

7 Press [Stop/Reset] to return to the standby mode.

Adding New Destination to Group

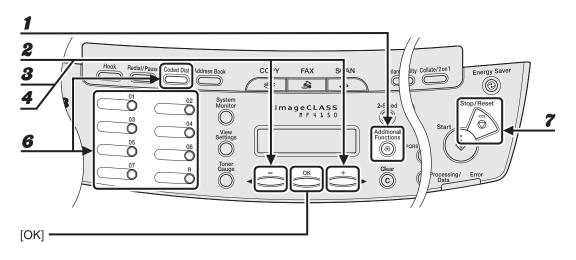


- **1** Press [Additional Functions].
- **2** Press [**4**−] or [**+**▶] to select <ADDRESS BOOK SET.>, then press [OK].
- **3** Press [◄-] or [+▶] to select <GROUP DIAL>, then press [OK].
- Press [◄-] or [+►] to select a group dial to edit, then press [OK].
 The group name appears.
- **5** Press [OK].
- 6 Select the speed dialing number you want to add to the group, then press [OK].


For details on entering the speed dialing number, see "Registering Group Dialing," on p. 4-21.

7 Press [Stop/Reset] to return to the standby mode.

Deleting Destination from Group

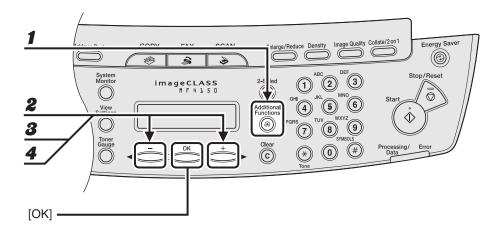


- 1 Press [Additional Functions].
- Press [◄-] or [+▶] to select <ADDRESS BOOK SET.>, then press [OK].
- **3** Press [◄-] or [+▶] to select <GROUP DIAL>, then press [OK].
- Press [◄-] or [+►] to select a group dial to delete, then press [OK].
 The group name appears.
- **5** Press [OK].

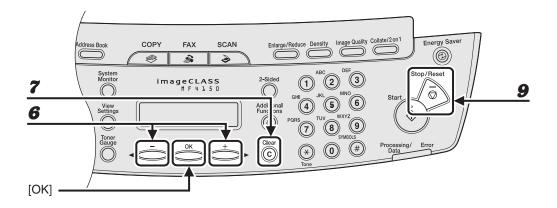


- 6 Press [◄-] or [+►] to display the speed dial number you want to delete from the group.
- **7** Press [Clear].
- **8** Repeat steps 6 and 7 if you want to delete another speed dialing number, then press [OK].
- **9** Press [Stop/Reset] to return to the standby mode.

● Changing Group Name

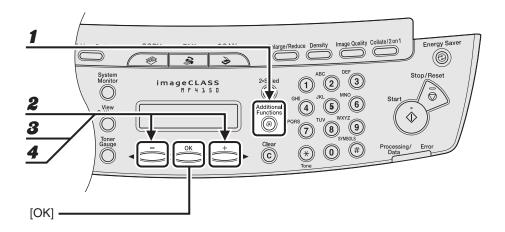

- 1 Press [Additional Functions].
- **2** Press [◄-] or [+▶] to select <ADDRESS BOOK SET.>, then press [OK].
- **3** Press [◄–] or [+▶] to select <GROUP DIAL>, then press [OK].
- **4** Press [**4**−] or [**+**▶] to select a group dial to edit, then press [OK].

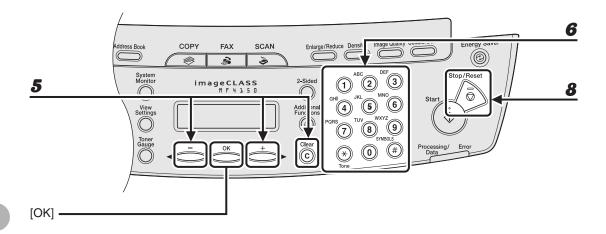


Press [◄—] or [+▶] repeatedly to go to the wrong character, then press [Clear] to delete it.


To delete the entire character, press and hold [Clear].

- **6** Enter a new name with the numeric keys, then press [OK].
- **7** Press [OK].
- Press [Stop/Reset] to return to the standby mode.

Deleting Group Dialing

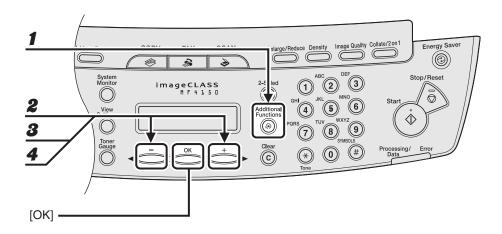

- 1 Press [Additional Functions].
- Press [◄-] or [+▶] to select <ADDRESS BOOK SET.>, then press [OK].
- **3** Press [◄-] or [+▶] to select <GROUP DIAL>, then press [OK].
- Press [◄—] or [+►] to select a group dial to delete, then press [OK].
 The group name appears.
- **5** Press [OK].

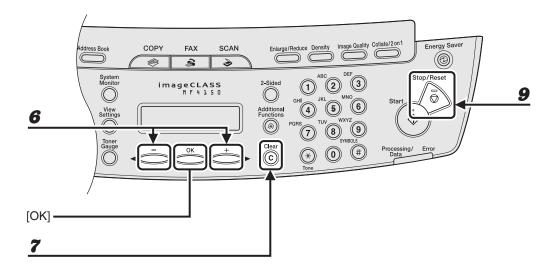

- 6 Press [◄-] or [+▶] to display a speed dial number.
- **7** Press [Clear].
- Repeat steps 6 and 7 until all speed dial numbers are deleted, then press [OK].


When deleting all speed dial numbers, the group name is cleared automatically.

9 Press [Stop/Reset] to return to the standby mode.

Using Speed Dialing

Follow the procedure below to send faxes to registered recipients using speed dialing. For easy reference, print out the list of recipients registered for speed dialing. (See Chapter 4, "Reports and Lists (MF4140/MF4150 Only)," in the Advanced Guide.)

Using One-Touch Speed/Group Dialing

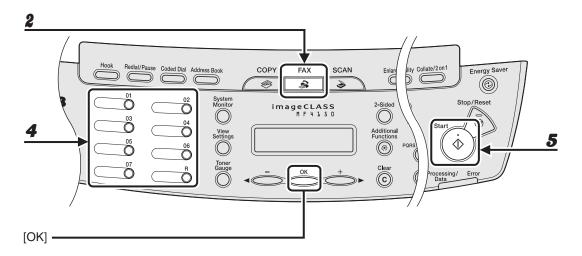


- 1 Place the document on the platen glass or load it in the ADF.
- **2** Press [FAX].
- **3** Adjust any necessary settings for your document.

For details, see "Scan Settings," on p. 4-3.

- Press the desired one-touch speed or group dialing key (01 to 07).
- **5** Press [Start].

When you set the document on the platen glass, press [Start] for each document. When scanning is complete, press [OK].

Using Coded Dialing

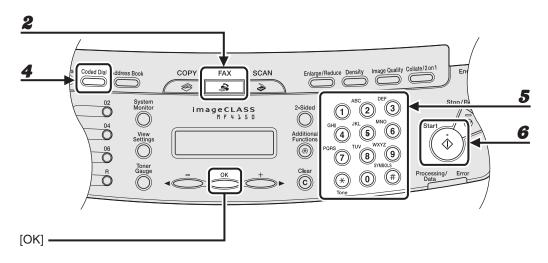

- Place the document on the platen glass or load it in the ADF.
- **2** Press [FAX].
- **3** Adjust any necessary settings for your document.

For details, see "Scan Settings," on p. 4-3.

- Press [Coded Dial].
- 5 Enter the desired two-digit code (00 to 99) with the numeric keys.

Ex.

= 0 1 2 X X X X X X X [* 0 1] C A N O N


6 Press [Start].

When you set the document on the platen glass, press [Start] for each document. When scanning is complete, press [OK].

Manual Sending (MF4150 Only)

Use manual sending when you want to talk to the recipient before sending a document, or if the recipient does not have a fax machine that can receive automatically.

- You cannot use the platen glass for manual sending.
- You cannot use group dialing for manual sending.

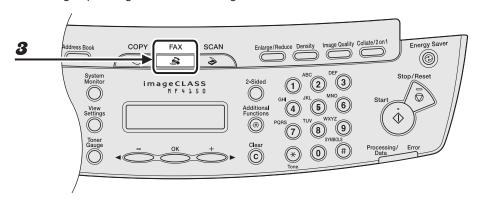


Connect an optional handset or an external telephone to the machine if you want to talk to the recipient before sending a document.

For details on how to connect an optional handset or an external telephone to the machine, see "Connect Telephone Cables and Install Handset (MF4140/MF4150 Only)," in the Starter Guide.

- **2** Load the document in the ADF.
- 3 Press [FAX].
- **4** Adjust any necessary settings for your document.

For details, see "Scan Settings," on p. 4-3.

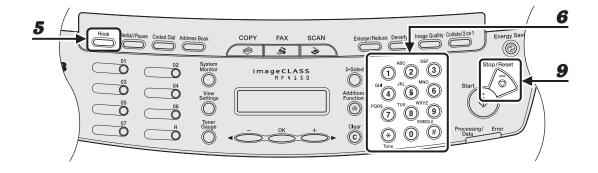

- **5** Press [Hook] or pick up the optional handset or the handset of your external telephone.
- 6 Dial the recipient's fax/telephone number.

MOTE

Make sure to confirm the dial tone before entering a fax number. If you enter the number before the dial tone can be heard, the call may not connect, or the wrong number may be dialed.


7 Talk through the handset to the recipient.


If you press [Hook] in step 5, you can pick up the handset when you hear the recipient's voice. If you hear a high-pitched signal instead of the recipient's voice, go to step 9.

- **8** Ask the recipient to set their fax machine to receive faxes.
- **9** When you hear a high-pitched signal, press [Start], then hang up the handset.


Receiving Faxes (MF4140/MF4150 Only)

Follow this procedure to set the machine for receiving faxes. For advanced receiving features, see Chapter 1, "Advanced Fax Features (MF4140/MF4150 Only)," in the Advanced Guide.

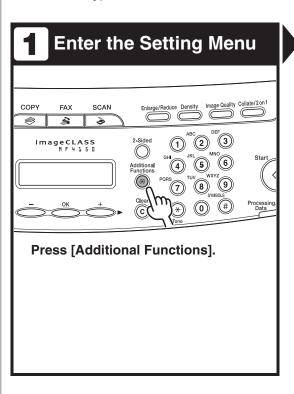

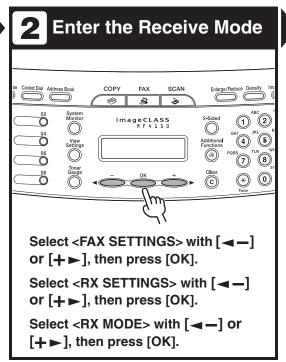



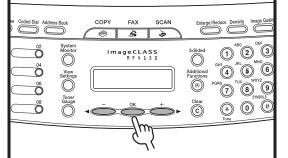


Select the receive mode with $[\blacktriangleleft -]$ or $[+ \blacktriangleright]$, then press [OK].

- <FaxOnly>: Answers all calls as faxes.
- <AnsMode>: Receives faxes automatically and records voice messages.
- <NET SWITCH>: Distinguishes between fax and voice calls.
- <FaxTel>: Switches between fax and voice calls automatically if the optional handset or an external telephone is connected to the machine.
- <MANUAL>: Does not answer any calls. You have to manually receive faxes.
- For details on these settings, See Chapter 1, "Advanced Fax Features (MF4140/MF4150 Only)," in the Advanced Guide.

∅ NOTE

- For <AnsMode>, make sure an answering machine is connected to the machine.
- The <NET SWITCH> mode is available for certain countries only and requires subscription to a network switch service.



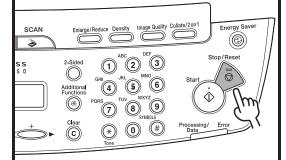

Press [Stop/Reset] to return to the standby display.

What if...

You press [Stop/Reset] to cancel a job:

The <CANCEL DURING TX/RX?> message appears. Press [◄-] to select <Yes>. The job is canceled, and the display returns to the standby mode.


 The <OUT OF TONER/CHANGE TONER> message appears:


The toner cartridge is almost empty. Replace the toner cartridge. For details on this error message, see "LCD Messages," on p. 11-9.




Follow this procedure to make a copy.

For advanced copying features, see Chapter 2, "Advanced Copy Features," in the Advanced Guide.

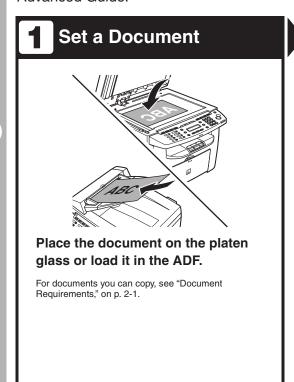

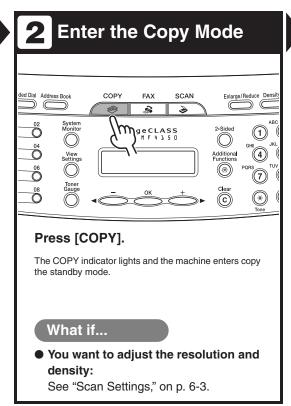



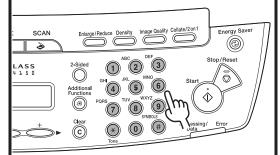

Enter the copy quantity (1 to 99) with the numeric key.


Ex.

100% A4 **1** TEXT/PHOTO 3

What if...

You enter a wrong number:
Press [Clear] and enter a new number.



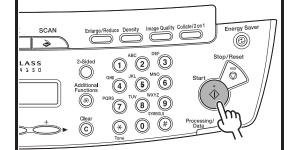

Press [Start].

What if...


- You press [Stop/Reset] to cancel a job while scanning documents:
 - The job is canceled immediately, and the copy quantity is reset.
- You press [Stop/Reset] to cancel a job while printing:

The <CANCEL COPYING?> message appears. Press [◄-] to select <YES>.

Scan Settings

Before pressing [Start] to begin copying, you can adjust scan settings to better suit the document to be scanned. These settings return to the default values if Auto Clear function is activated or if you press [Stop/Reset].

Image Quality

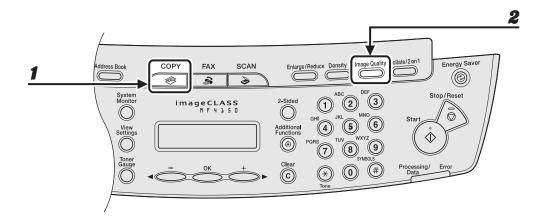

- 1 Press [COPY].
- **2** Press [Image Quality] repeatedly to select the document type.
 - <TEXT/PHOTO>: For documents that contain text and photos.
 - <TEXT>: For text documents.
 - <PHOTO>: For documents that contain fine text or photos.
 - <TEXT/PHOTO+>: For documents that contain fine text and photos.


∅ NOTE

Copy density automatically changes to the manual mode when <TEXT/PHOTO>, <PHOTO>, or <TEXT/PHOTO+> is set.

Density

You can adjust the density to the most appropriate level for the document either automatically or manually.


Adjusting Automatically

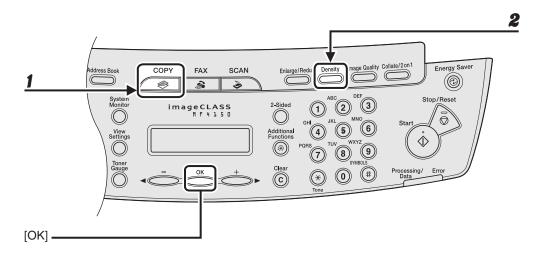

- 1 Press [COPY].
- **2** Press [Density] repeatedly until <AUTO> appears, then press [OK].

The image quality is automatically set to <TEXT>.

Adjusting Manually

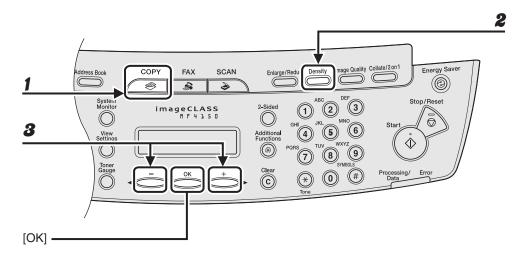

- Press [COPY].
- **2** Press [Density] repeatedly to select the manual mode.

EX.

DENSITY
-LT GOODBOOD DK+


3 Press [◄ -] or [+ ▶] to adjust the copy density, then press [OK].

[+▶]: to make light documents darker [◄▶]: to make dark documents lighter

Zoom Ratio

Preset Zoom

You can enlarge or reduce documents from one standard paper size to another.

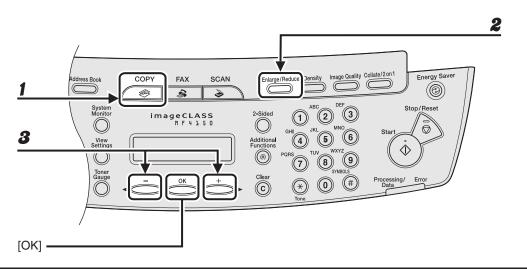

- 1 Press [COPY].
- **2** Press [Enlarge/Reduce].
- Press [◄-] or [+►] to select the copy ratio, then press [OK].
 - 200% MAX.
 - 141% A5 \rightarrow A4
 - $\ 122\% \ A5 \rightarrow B5$
 - 115% B5 \rightarrow A4
 - 100%
 - 86% A4 → B5
 - 81% B5 → A5
 - $-70\% A4 \rightarrow A5$
 - 50% MIN.




When <PAPER SIZE GROUP> in the <COPY SETTINGS> menu is set to <INCHES> or <AB>, the preset copy ratios change as follows:

INCHES: 50%, 64%, 78%, 100%, 129%, 200%

A: 50%, 70%, 100%, 141%, 200%

Zoom Designation

You can reduce or enlarge images by any copy ratio, in 1 % increments. The available copy ratios are from 50 % to 200 %.

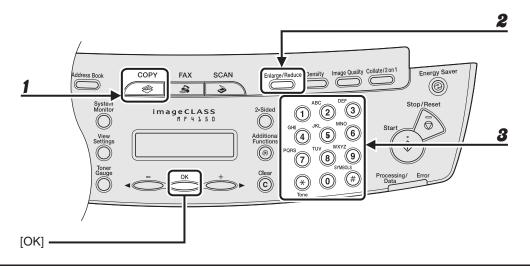

- 1 Press [COPY].
- 2 Press [Enlarge/Reduce] twice.
- **3** Enter the copy ratio with the numeric keys, then press [OK].

You can also use $[\blacktriangleleft -]$ or $[+ \blacktriangleright]$ to adjust the zoom ratio. To increase the zoom ratio, press $[+ \blacktriangleright]$. To decrease the copy ratio, press $[\blacktriangleleft -]$.


To return the copy ratio to 100%, press [Stop/Reset].


Printing

Follow this procedure to print a document from your computer.

Make sure that the printer driver is installed.

For details on printer driver settings, see Online Help.

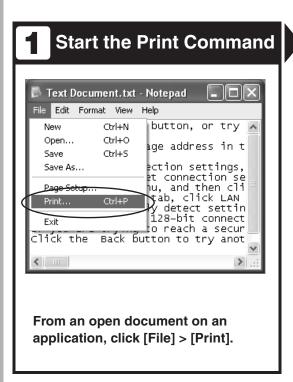

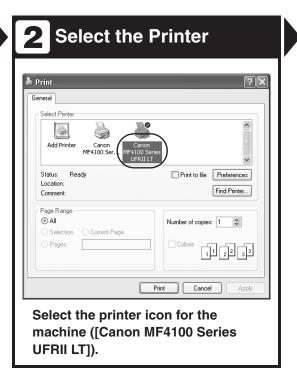


3 Adjust Preferences



Click [Preferences] or [Properties] to open the dialog box. After finished, click [OK].

4 Print the Document

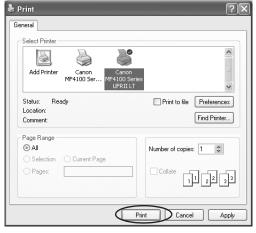

Click [Print] or [OK].

What if...


 You want to cancel printing:
 See Chapter 3, "System Monitor," in the Advanced Guide.


Scanning

Follow this procedure to scan a document to your computer.

Make sure that the scanner driver is installed.

For details on scanner driver settings, see the Scanner Driver Guide (in the User Software CD).

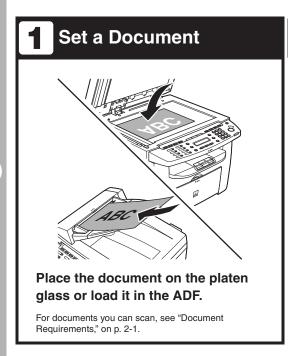

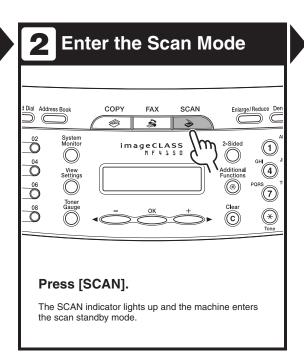


3 Set Scan Function



Start MF Toolbox, then set the scanning format.

The mark will be displayed above the button you select. For details on the MF Toolbox Settings, see Chapter 2, "Scanning a Document," in the Scanner Driver Guide.

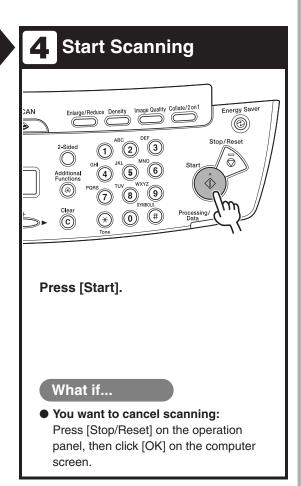


PC Faxing (MF4140/MF4150 Only)

Follow this procedure to send a fax from your computer.

Make sure that the fax driver is installed.

For details on fax driver settings, see Online Help.



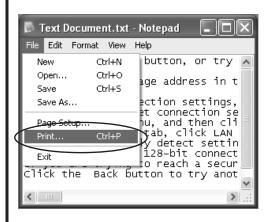

From an open document on an application, click [File] > [Print].

2 Select the Fax




Select the fax icon ([Canon MF4100 Series(FAX)]), then click [Print] or [OK].

What if...

You want to adjust the fax properties:
 Click [Preferences] or [Properties] and adjust the settings.

3 Set the Destination

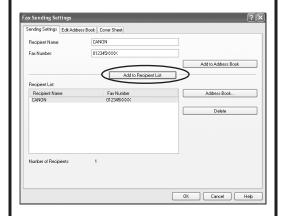


Specify the name and fax number in [Sending Settings], then click [Add to Recipient List].

What if...

You want to send a fax with the cover sheet:

Click the [Cover Sheet] tab and set the format for the cover sheet attachment.

4 Send the Document

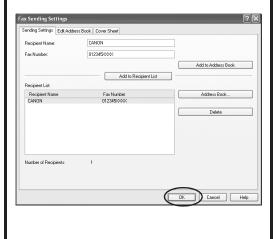

Click [OK] in the Fax Sending Settings.

What if...

 You want to cancel sending a fax: See Chapter 3, "System Monitor," in the Advanced Guide.

Maintenance

Cleaning the Machine

Note the following before cleaning your machine:

- Make sure no document is stored in memory, then turn off the main power switch, and disconnect the power cord.
- Use a soft cloth to avoid scratching the components.
- Do not use tissue paper, paper towels, or similar materials for cleaning; they can stick to the components or generate static charges.

A CAUTION

Never use volatile liquids such as thinners, benzene, acetone, or any other chemical cleaner to clean the machine. These can damage the machine components.


Exterior

- Turn off the main power switch and disconnect the power cord.
- Wipe the machine's exterior with a clean, soft, lint-free cloth dampened with water or diluted dishwashing detergent solution.
- Wait for the machine to dry, then reconnect the power cord and turn on the main power switch.


Interior

Clean the machine's print area periodically to prevent toner powder and paper dust from accumulating inside.

- Turn off the main power switch and disconnect the power cord.
- Lift the scanning platform until it is locked (A), and open the printer cover (B).

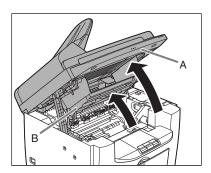

Remove the toner cartridge.

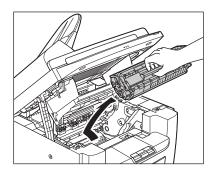

CAUTION

- To avoid exposing the toner cartridge to light, place it in its protective bag or wrap it in a thick cloth.
- Do not open the drum protective shutter on the toner cartridge. Print quality may deteriorate if the drum surface is exposed to light or is damaged.




MOTE

Always hold the toner cartridge by its handle.

Use a clean, soft, dry, lint-free cloth to remove any toner or paper debris from the machine's interior.

A CAUTION


- Do not touch the fixing assembly (A) as it becomes very hot during use.
- Do not touch the transfer roller (B) as this can damage the machine.

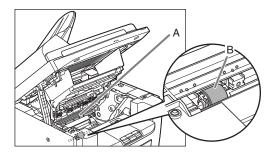

 If loose toner comes into contact with your skin or clothing, wash with cold water. Warm water will set the toner.


Hold the toner cartridge by its handle (A).

The arrow (A) on the toner cartridge should be facing away from you and pointing down.

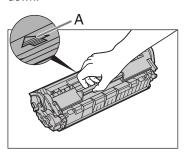


Insert the toner cartridge into the machine as far as it will go.


Align the guide (A) on the left side of the toner cartridge with the groove inside the machine.

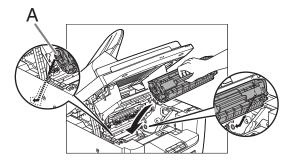

Push the toner cartridge to make sure it is properly set in the machine.

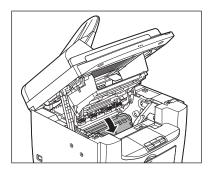

Close the printer cover and lower the scanning platform.

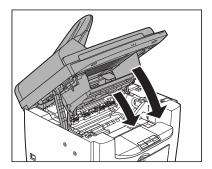

CAUTION

Be careful not to get your fingers caught.

9 Reconnect the power cord and turn on the main power switch.


Fuser Roller

If black streaks appear with printing, the fuser roller in the main unit may be dirty. Should this occur, clean the fusing roller in the following procedure. The roller should also be cleaned each time the toner cartridge is replaced. Load a sheet of blank A4 paper into the multi-purpose tray and start cleaning.

⊘ NOTE

Cleaning the roller takes approximately 130 seconds.

- **1** Press [Additional Functions].
- Press [◄-] or [+►] to select
 <ADJUST./CLEANING>, then
 press [OK].
- Load a sheet of blank A4 paper in the multi-purpose tray.

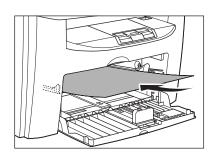

Press [◄-] or [+►] to select <FIX. UNIT CLEANING>, then press [OK].

Cleaning starts. When finished, the display returns to the standby mode.




- Use standard paper as the cleaning paper.
- Throw away the cleaning paper after use.

Scanning area


Keep the scanning area clean to avoid dirty copies or faxes to be sent.

Platen glass

Open the ADF/platen glass cover.

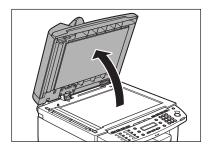


Clean the platen glass and the underside of the ADF/platen glass cover with a cloth dampened with water. Then, wipe the area with a soft, dry cloth.

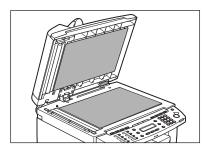



Do not dampen the cloth too much, as this may tear the document or damage the machine.

Close the ADF/platen glass cover.

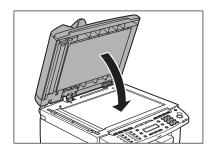


A CAUTION

Be careful not to get your fingers caught.


● ADF (M4150 Only)

If your documents have black streaks or appear dirty after copying them using the ADF, this may be caused by pencil lead rubbing off the documents and onto the roller. Clean the ADF scanning area, film, and roller.

- Turn off the main power switch and disconnect the power cord.
- **2** Open the ADF cover.

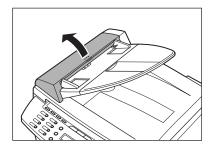


Clean the rollers (A) inside the ADF with a cloth dampened with water. Then wipe the area with a soft, dry cloth.

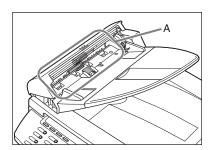

MOTE

Do not dampen the cloth too much, as this may tear the document or damage the machine.


Close the ADF cover.

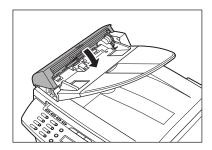


CAUTION

Be careful not to get your fingers caught.


Open the ADF/plate glass cover.

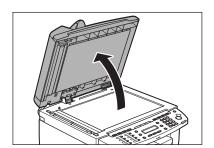

Clean the ADF scanning area (on the left side of the platen glass) and the document feeding roller with a cloth dampened with water. Then wipe the area with a soft, dry cloth.

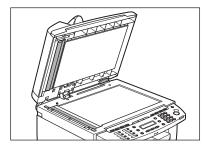

Close the ADF/plate glass cover.

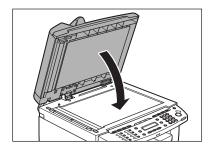

A CAUTION

Be careful not to get your fingers caught.

Reconnect the power cord and turn on the main power switch.


Replacing the Toner Cartridge

On MF4140/MF4150, when the LCD displays <OUT OF TONER/CHANGE TONER>, or toner level is low by pressing [Toner Gauge], redistribute toner in the toner cartridge. If the message persists, replace the toner cartridge.


On MF4122, when the printout has vertical white streaks, or toner level is low by pressing [Toner Gauge], redistribute the toner inside the cartridge. If the problem persists, replace the cartridge.

Redistributing Toner


Lift the scanning platform until it is locked (A), and open the printer cover (B).

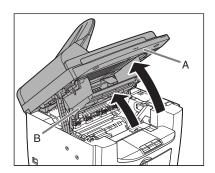

2 Remove the toner cartridge.

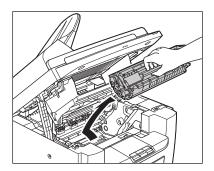


Gently rock the toner cartridge five or six times to distribute toner evenly.

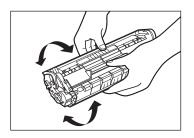

Hold the toner cartridge by its handle (A).

The arrow (A) on the toner cartridge should be facing away from you and pointing down.

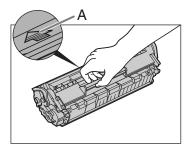

A CAUTION

- Do not open the drum protective shutter on the toner cartridge. Print quality may deteriorate if the drum surface is exposed to light or is damaged.




MOTE


- Always hold the toner cartridge by its handle.

Insert the toner cartridge into the machine as far as it will go.


Align the guide (A) on the left side of the toner cartridge with the groove inside the machine.

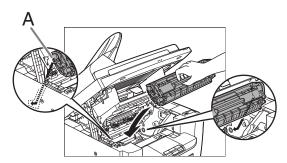

Push the toner cartridge to make sure it is properly set in the machine.

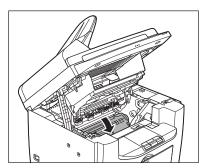

Close the printer cover and lower the scanning platform.

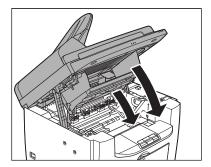




A CAUTION


Be careful not to get your fingers caught.

Replacing the Toner Cartridge with a New One


1 Lift the scanning platform until it is locked (A), and open the printer cover (B).

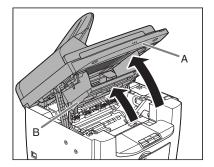

Remove the toner cartridge.

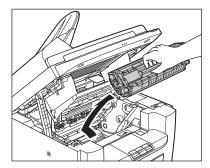


Remove the new toner cartridge from the protective bag.

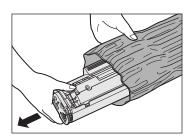




Save the protective bag. You may need it later when you remove the toner cartridge from the machine.

Gently rock the toner cartridge five or six times to distribute toner inside.

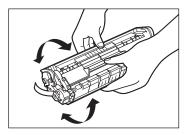


Hold the toner cartridge with one hand, and pull out the seal completely.

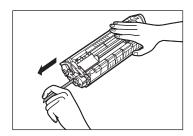

Do not pull out the seal at an angle.

Hold the toner cartridge by its handle.

The arrow (A) on the toner cartridge should be facing away from you and pointing down.

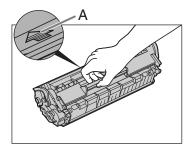

CAUTION

Do not open the drum protective shutter on the toner cartridge. Print quality may deteriorate if the drum surface is exposed to light or is damaged.




MOTE


Always hold the toner cartridge by its handle.

Insert the toner cartridge into the machine as far as it will go.


Align the guide (A) on the left side of the toner cartridge with the groove inside the machine.

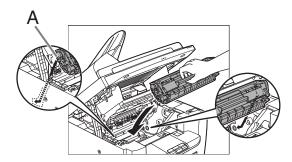

Push the toner cartridge to make sure it is properly set in the machine.

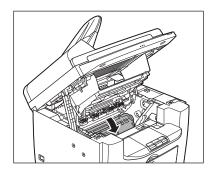

Close the printer cover and lower the scanning platform.

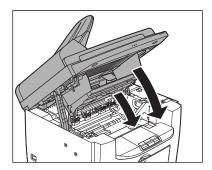




A CAUTION

Be careful not to get your fingers caught.


Transporting the Machine

Follow this procedure to avoid vibration damage to the machine when transporting it over a long distance.

- **1** Turn off the main power switch.
- **2** Disconnect the power cord and all the cables from the back of the machine.
- **3** Lift the scanning platform until it is locked (A), and open the printer cover (B).

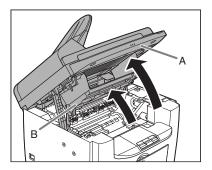

Remove the toner cartridge.

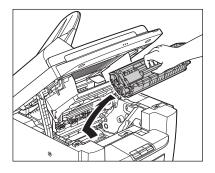

A


CAUTION

- To avoid exposing the toner cartridge to light, place it in its protective bag or wrap it in a thick cloth.
- Do not open the drum protective shutter on the toner cartridge. Print quality may deteriorate if the drum surface is exposed to light or is damaged.



Always hold the toner cartridge by its handle.

Close the printer cover and lower the scanning platform.

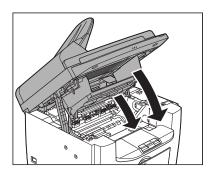





CAUTION

Be careful not to get your fingers caught.


6 Remove the dust cover from the paper feeding tray.

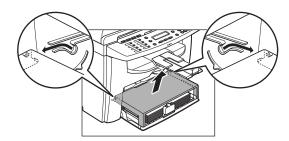


Remove the paper from the paper feeding tray.

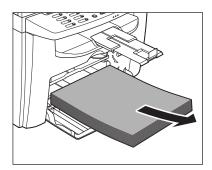


Store the dust cover inside the machine.

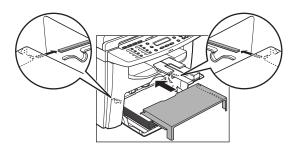


Push the paper guide rail, and then close the paper feeding tray.

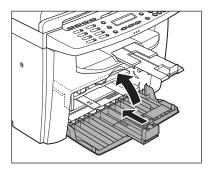


10 Detach the Document feeder tray (MF4150 Only).

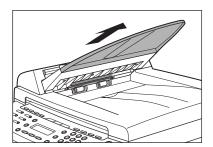

11 Fold the paper stopper, and then push the output tray extension into the machine.

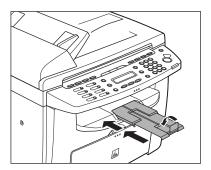

- **12** Make sure all the covers are closed.
- 18 Grip the handles on both sides of the machine and lift it carefully, as shown in the illustration below.

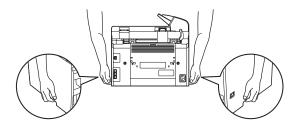

A CAUTION

- Do not lift the machine by any of its attachments. Dropping the machine can cause personal injury.
- If you have a back problem, make sure to check the weight of this machine before carrying. (See "Specifications," on p. 13-1.)

Troubleshooting

Clearing Jams

When <CHECK DOCUMENT>, <PAPER JAM> or <PAPER JAM/OPEN REAR COVER> appears on the LCD display, remove jammed paper from the machine first, then from the paper feeding tray or multi-purpose tray if necessary. Check the following if you experience repeated paper jams:

- Fan and tap the paper stack on a flat surface before loading it in the machine.
- Check that the paper you are using meets the requirements for use. (See "Print Media," on p. 3-1.)
- Make sure you have removed any scraps of paper from the inside of the machine.

A CAUTION

- When removing jammed documents or paper, take care not to cut your hands on the edges of the document or paper.
- When removing jammed paper or when inspecting the inside of the machine, do not allow necklaces, bracelets, or other metal objects to touch the inside of the machine, as this may result in burns or electrical shock.
- If you tear the paper, remove any torn pieces to avoid further jams.
- If loose toner comes into contact with your skin or clothing, wash with cold water. Warm water will set the toner.


⊘ NOTE

Do not force a jammed document or paper out of the machine. Contact your local authorized Canon dealer or the Canon help line for assistance if needed.


Document Jams (MF4150 Only)

When <CHECK DOCUMENT> appears on the LCD display, remove a jammed document from the ADF.

1 Open the ADF cover.

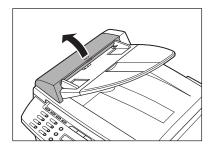


Hold both sides of any jammed documents and gently pull them out straight upward.

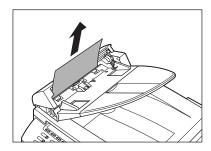


M NOTE

Do not pull the document forcefully as it may tear.

Hold both sides of any jammed documents and gently pull them out.

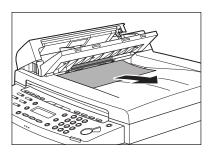


4 Close the ADF cover.

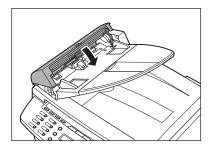


CAUTION

Be careful not to get your fingers caught.

Open the ADF/platen glass cover, and then hold both sides of any jammed documents and gently pull them out.

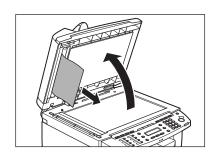

6 Close the ADF/platen glass cover.

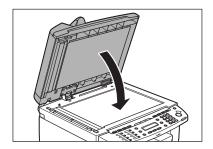


A CAUTION

Be careful not to get your fingers caught.


Paper Jams

When <PAPER JAM> or <PAPER JAM/ OPEN REAR COVER> appears on the LCD display, remove jammed paper from the inside of the machine first, then from the paper feeding tray or multi-purpose feeder if necessary.

1 Remove the dust cover from the paper feeding tray.

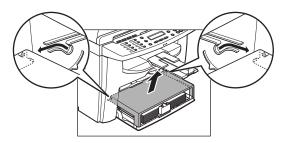


2 Remove the paper in the paper feeding tray.

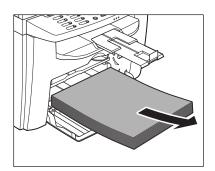


Open the rear cover.


This operation is required only when <PAPER JAM/OPEN REAR COVER> appears on the LCD display.

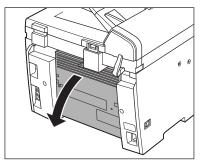

Lift the scanning platform until it is locked (A), and open the printer cover (B).

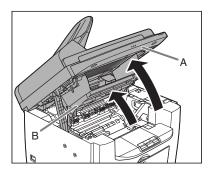

5 Remove the toner cartridge from the machine.

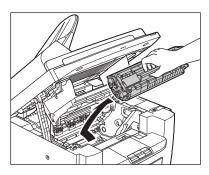


CAUTION

- Remove watches and any bracelets or rings when touching the inside of the machine. These items might be damaged if they come into contact with the parts inside of the machine.
- To avoid exposing the toner cartridge to light, place it in its protective bag or wrap it in a thick cloth.
- Do not open the drum protective shutter on the toner cartridge. Print quality may deteriorate if the drum surface is exposed to light or is damaged.



MOTE


Always hold the cartridge by its handle.

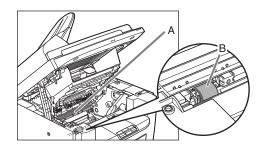


A

CAUTION

- Do not touch the fixing assembly (A) as it becomes very hot during use.
- Do not touch the transfer roller (B) as this can damage the machine.
- 6 Hold both sides of the jammed paper and gently pull it out.

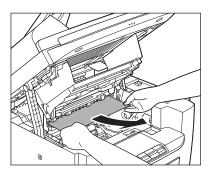


Gently pull the jammed paper between the fixing assembly (A) and transfer roller (B) until the leading edge emerges from the machine.

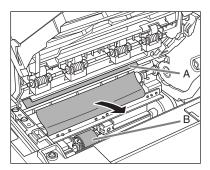

A


CAUTION

- Do not touch the fixing assembly (A) as it becomes very hot during use.
- Do not touch the transfer roller (B) as this can damage the machine.
- Hold both sides of the jammed paper and carefully pull it out.

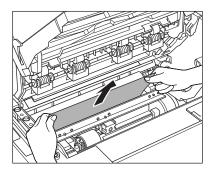


Hold both sides of the jammed paper and gently pull it out upward.

This operation is required only when <PAPER JAM/OPEN REAR COVER> appears on the LCD display.

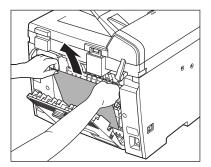


If the jammed paper is badly folded, similar to the folds of an accordion, ease the jammed paper loose and then pull it out from the machine.

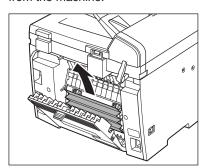


10 Hold both sides of the jammed paper and slowly pull it out in the direction of the arrow.

When feeding paper from the paper feeding tray:

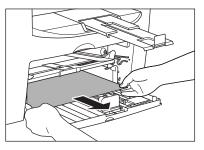


 When feeding paper from the multipurpose tray:

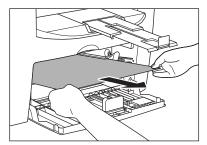

11 Hold the toner cartridge by its handle.

The arrow (A) on the toner cartridge should be facing away from you and pointing down.

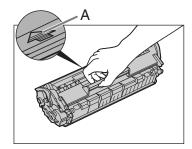

CAUTION

Do not open the drum protective shutter on the toner cartridge. Print quality may deteriorate if the drum surface is exposed to light or is damaged.




MOTE


Always hold the toner cartridge by its handle.

12 Insert the toner cartridge into the machine as far as it will go.


Align the guide (A) on the left side of the toner cartridge with the groove inside the machine.

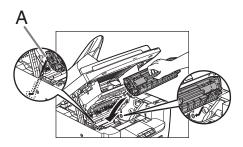

18 Push down the toner cartridge to make sure it is properly set in the machine.

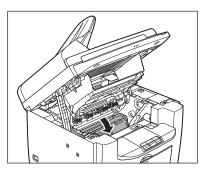

14 Close the printer cover and lower the scanning platform.

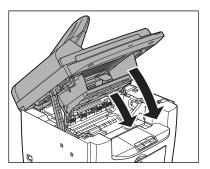


CAUTION

Be careful not to get your fingers caught.

15 Close the rear cover.


This operation is required only when <PAPER JAM/OPEN REAR COVER> appears on the LCD display.

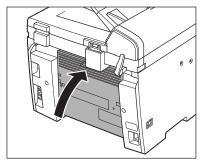


A CAUTION

Be careful not to get your fingers caught.

16 Load the paper into the paper feeding tray.

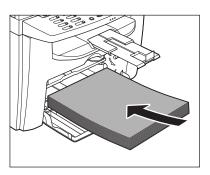

17 Set the dust cover on the paper feeding tray.

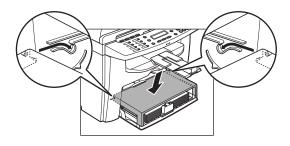

⊘ NOTE

After all the procedures are completed, the machine should be ready for operating. If the machine returns to the standby mode, troubleshooting has been successful. If the machine does not return to the standby mode, check if jammed paper is still left in the machine.

LCD Messages

See the table below when the LCD displays error messages.

Common

| Message | Description | Action |
|--------------------|--|---|
| CANCEL: STOP/RESET | Appears alternately with other messages. | Varies by the message that appears. For details, see the explanation for the message (i.e., <load correct="" paper="">). To cancel copy jobs, press [Stop/Reset], then press [◄-].</load> |

| Message | Description | Action |
|-------------------------------------|---|--|
| CHANGE REG'D SIZE -> PAPER SETTINGS | The paper size selected in <cassette> or <mp tray=""> of the <paper settings=""> menu is not correct.</paper></mp></cassette> | For printing received documents, reports, or lists, set the paper size to <a4>, <oficio>, <brazil-oficio>, <mexico-oficio>, <folio>, <government-let-ter>, <government-legal>,<foolscap>, <ltr> or <lgl> in <cassette> of the <paper settings=""> menu. (See "Setting Paper Size and Type," on p. 3-7.)</paper></cassette></lgl></ltr></foolscap></government-legal></government-let-ter></folio></mexico-oficio></brazil-oficio></oficio></a4> For the two-sided printing for faxing, set the paper size to <a4> or <ltr> in <cassette> of the <paper settings=""> menu. (See "Setting Paper Size and Type," on p. 3-7.)</paper></cassette></ltr></a4> For the two-sided printing for faxing, set the paper size to <a4> or <ltr> in <cassette> of the <paper settings=""> menu. (See "Setting Paper Size and Type," on p. 3-7.)</paper></cassette></ltr></a4> For the two-sided copying, set the paper size to <a4> or <ltr> in <cassette> or <mp tray=""> of the <paper set-tings=""> menu. (See "Setting Paper Size and Type," on p. 3-7.)</paper></mp></cassette></ltr></a4> |
| CHECK DOCUMENT* | A document jam may have occurred in the ADF. | Remove the jammed document. |

^{*} MF4150 Only

| Message | Description | Action |
|--|--|--|
| CLOSE COVER PRINTER COVER | The printer cover is not closed completely. | Check the printer cover, and make sure that it is completely closed. |
| LIFT PANEL TO OPEN OPEN PRINTER COVER | Appears alternately with other messages. | Varies by the message that appears. For details, see the explanation for the message (i.e., <out change="" of="" toner="">).</out> |
| LOAD CORRECT PAPER | The size of the paper in the paper feeding tray or multi-purpose tray is different from that of the paper specified in <cassette> or <mp tray=""> of the <paper settings=""> menu.</paper></mp></cassette> | Load the correct paper size or change the paper size in <cassette> or <mp tray=""> of the <paper settings=""> menu. For more information, see "Setting Paper Size and Type," on p. 3-7.</paper></mp></cassette> If you are trying to print a report or list, set the paper size to <a4>, <oficio>, <brazil-oficio>, <mexico-oficio>, <folio>, <govern-ment-letter>, <gov-ernment-letter>, <foolscap>, <ltr> or <lgl> and then load paper of the same size. Then press [OK] to continue printing.</lgl></ltr></foolscap></gov-ernment-letter></govern-ment-letter></folio></mexico-oficio></brazil-oficio></oficio></a4> |

| Message | Description | Action |
|-------------|---|---|
| LOAD PAPER | No paper is loaded in the paper feeding tray or multipurpose tray, or not inserted correctly. | Load paper in the paper feeding tray or multi-purpose tray. (See "Loading Paper," on p. 3-4.) Make sure the paper stack in the paper feeding tray does not exceed the capacity of the paper feeding tray. Load paper in the multi-purpose tray one by one. If you load paper while making copies, do not load a different paper size. On the second line in the LCD the message <cassette> or <mp tray=""> and the paper size may appear. In this case, load the corresponding paper in the paper feeding tray or multi-purpose tray.</mp></cassette> |
| LOST IMAGE* | The data in memory was lost when the machine was turned on. | The error is automatically released after two seconds, and the machine automatically prints out the lost report that shows the records still existing in the activity report. |

| Message | Description | Action |
|----------------------------|---|---|
| MEMORY FULL | The number of the scanned document that can be stored in memory reached the maximum. The machine's memory is full of scanned documents when you use the sort copy function. | Divide the document and copy each part separately. |
| OUT OF TONER CHANGE TONER* | The toner cartridge is almost empty. If <cont. printing=""> is set to <off> in the <printer settings=""> of the <fax settings=""> menu, the Fax printing and printing reports are interrupted when the <out change="" of="" toner=""> appears.</out></fax></printer></off></cont.> | Replace with a new toner cartridge. If you want to continue printing without replacing the toner cartridge, set <cont. printing=""> to <on> in the <printer settings=""> of the <fax settings=""> menu. However, the toner cartridge is almost empty, so you should replace the toner cartridge with a new one.</fax></printer></on></cont.> |
| PAPER JAM | Paper jams have occurred in the machine. | Clear the paper jam (See "Clearing Jams," on p. 11-1.) and reload paper in the paper feeding tray or multipurpose tray. Then reset the machine by opening the printer cover and then closing it. |

| Message | Description | Action | |
|---------------------------|---|--|--|
| PAPER JAM OPEN REAR COVER | Paper jams have occurred in the machine when making two-sided coping or two-sided printing. | Clear the paper jam (See "Clearing Jams," on p. 11-1.) and reload paper in the paper feeding tray or multipurpose tray. Then reset the machine by opening the printer cover and then closing it. | |
| PLEASE WAIT | This message appears when the main power switch is turned on or when the machine is not ready for printing. | Wait until the message disappears. | |
| REMOVE MP PAPER* | Paper is loaded in the multi- purpose tray. | Remove the paper from the multi-purpose tray. The machine will not print faxes, reports, or lists when paper is loaded in the multi-purpose tray. They will be stored in memory. | |
| RESUME : OK | Appears alternately with other messages. | Varies by the message that appears. For details, see the explanation for the message (i.e., <load paper="">).</load> | |

^{*}MF4140/MF4150 Only

| Message | Description | Action | | | |
|-------------------------------|---|---|--|--|--|
| SYSTEM ERROR EXXX | A system error has occurred. XXXX> will be a three-digit code that indicates a particular type of error. Turn off the main power switch. Wait for at least seconds, and then turn again. If the message persists, contact your leauthorized Canon deal the Canon help line. | | | | |
| TONER IS NOT SET INSERT TONER | A toner cartridge is not installed or not installed correctly. | Install the toner cartridge correctly. (See "Replacing the Toner Cartridge," on p. 10-8.) | | | |
| WRONG NUMBER ENTRY* | An invalid number was entered in the <date&time setting=""> of the <timer settings=""> menu.</timer></date&time> | Enter a correct date or time. | | | |

Facsimile (MF4140/MF4150 Only)

| Message | Description | Action |
|---------------------|--|---|
| ALREADY REGISTERED | The same recipient was entered twice. | Select a different recipient. |
| CANNOT REGIST MORE | Maximum number of recipients (123) were entered for broadcasting. Maximum number of recipients (50) were registered for group dialing. | Resend the document to other recipients if necessary. Register a different onetouch speed dialing key for group dialing. |
| CANNOT USE THIS KEY | Redialing is not available with [Redial/Pause]. This message appears when <restrict redial=""> is set to <on> in the <tx settings=""> of the <fax settings=""> menu.</fax></tx></on></restrict> | Dial the number manually. |
| CHECK TEL NUMBER | The fax number entered at the second time is different from the one entered at the first time. This message appears when <confirm dest.="" new=""> is set to <on> in the <tx settings=""> of the <fax settings=""> menu.</fax></tx></on></confirm> | Check if the fax number is correct, then enter the same fax number as the first one after pressing [Start]. |
| HANG UP PHONE | The optional handset or external telephone is off the hook. | Hang up the optional handset or the external telephone. |

| Message | Description | Action |
|---------------|--|--|
| MEMORY FULL | The memory becomes full during sending or receiving the fax. The number of fax jobs that can be stored in memory reached the maximum. | When sending the document, divide it into a few parts or select a lower fax resolution. If you need more space, wait for the machine to send any remaining faxes. The machine memory can store up to 256 fax jobs including sending and receiving jobs. (Based on the condition that the other party sends the fax by the imageCLASS MF4100 Series with ITU-T Standard Chart No.1, standard mode); Wait for the machine to send any faxes in memory. Also print or delete any documents in memory. |
| NOT AVAILABLE | You pressed the one-touch speed dialing key that has already been registered, when you specify a one-touch speed dialing key as the group dial. | Check the information registered under the one-touch speed dialing before using. |

| Message | Description | Action |
|---------------------------------|--|--|
| NOT REGISTERED | No recipient is registered in the selected speed dialing key or code. | Select a registered key or code. For more information, "Registering One-Touch Speed Dialing," on p. 4-7 or "Registering Coded Dialing," on p. 4-14. |
| RECEIVED IN MEMORY | The received fax documents or the reports are in memory because paper or toner ran out, paper jams occurred, or incorrect paper size was loaded. | Load correct paper size in the paper feeding tray, replace the toner cartridge, or clear the paper jams. For more information, see the following: - "Loading Documents," on p. 2-4. - "Replacing the Toner Cartridge with a New One," on p. 10-10. - "Clearing Jams," on p. 11-1. |
| REGISTERING KEY CANNOT REGISTER | The selected one-touch speed dialing key is already used as the group dialing key it is being assigned to. | Select a different one-touch speed dialing key. |

Printer

| Message | Description | Action |
|-------------------------------------|--|---|
| CANCEL: SYS.MONITOR | Appears alternately with other messages. | Varies by the message that appears. For details, see the explanation for the message (i.e., <load correct="" paper="">). To cancel printing from a computer, see Chapter 3, "System Monitor," in the Advanced Guide.</load> |
| PRINTER DATA ERROR CHECK PRINTER | The data from the PC was not printed. Check if the softwar installed properly or printer cable is proportion. | |
| PRINTING | The printer is processing a print job. | No action required. Wait for printing to finish. |

Error Codes (MF4140/MF4150 Only)

An error code is a four-digit code displayed in the bottom row of a TX Report or an RX Report when an error occurs.

Ex.

| JOB NO. | TYPE | NO. | DESTINATION TEL/ID | DATE | TIME | PAGE | TIME USE | MODE | RESULT |
|---------|----------------|-----|--------------------|-------|-------|------|----------|------|--------|
| 0001 | TX | 001 | WEST-1 | 04/10 | 16:00 | 002 | 02'21 | ECM | NG |
| | | | 5555555 | | | | | | |
| | 00AQ TX CANCEL | | | | | | | | |
| | Error Code | | | | | | | | |

For details on TX Report and RX Report, see Chapter 4, "Reports and Lists (MF4140/MF4150 Only)," in the Advanced Guide.

See the table below for individual error codes.

| Error Code | Description | Action |
|------------|--|---|
| 0001 | The sender may not be using a G3 fax machine. | Make sure the sender's machine is compatible with your machine. |
| 0070 | Reception was manually canceled on the machine. | Ask the sender to resend the document if necessary. |
| 0071 | The machine's memory is full. | Print, send, or delete any documents stored in memory. |
| 0800 | The recipient's machine did not respond within 35 seconds. | Resend the document. Ask the other party to check their machine. If you are making an overseas call, add a pause to the number. |
| 008D | The recipient's machine has run out of paper. | Ask the recipient to make sure that paper is loaded in their machine. |

| Error Code | Description | Action |
|------------|--|---|
| 00A0 | Transmission was manually canceled on the machine. | Resend the document if necessary. |
| 00A1 | There is a document jam. | Clear the document jam. |
| 00FF | All redialing attempts have failed. | Check if the recipient's number is correct or the telephone cable is properly connected, and try again. |

If You Cannot Solve a Problem

If you cannot solve the problem after having referred to the information in this chapter, contact your local authorized Canon dealer or the Canon help line. Please have the following information ready when you contact Canon:

- Product name (imageCLASS MF4122/MF4140/MF4150)
- Serial number (On the label located at the back of the machine)
- Place of purchase
- Nature of problem
- Steps you have taken to solve the problem and the results



CAUTION

If the machine makes strange noises, emits smoke or odd odor, turn off the main power switch immediately, disconnect the power cord, and contact your local authorized Canon dealer or the Canon help line. Do not attempt to disassemble or repair the machine yourself.




Attempting to repair the machine yourself may void the limited warranty.

Machine Settings


Machine Settings

You can adjust the machine settings from the Setting Menu to customize the way the machine works. To see the list of current settings, print out User's Data List.

Printing User's Data List (MF4140/MF4150 Only)

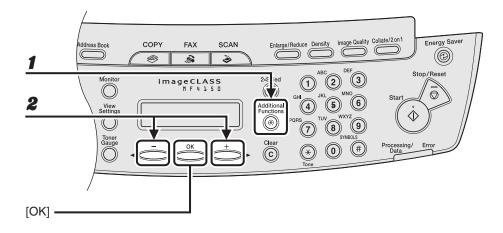


- **1** Press [Additional Functions].
- **2** Press [◄-] or [+►] to select <REPORT SETTINGS>, then press [OK].

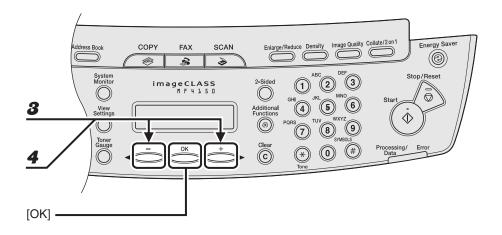


- Press [◄-] or [+►] to select <LIST PRINT>, then press [OK].
- **4** Press [**¬**] or [**+** ▶] to select **¬**USER'S DATA LIST>, then press [OK].

Accessing the Setting Menu

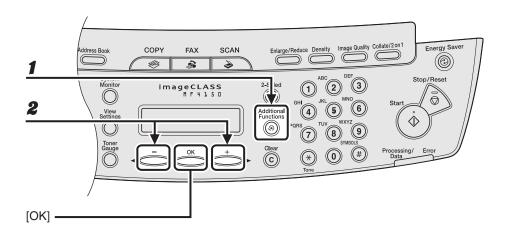

- 1 Press [Additional Functions].
- Press [◄-] or [+►] to select the menu you want to access, then press [OK].
 - <PAPER SETTINGS>
 - <COMMON SETTINGS>
 - <COPY SETTINGS>
 - <TIMER SETTINGS>
 - <FAX SETTINGS>*
 - <BROADCAST>*
 - <ADDRESS BOOK SET.>*
 - <ADJUST./CLEANING>
 - <REPORT SETTINGS>*
 - * MF4140/MF4150 Only

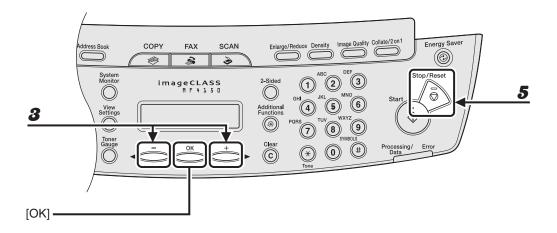

- Press [◄–] or [+▶] to select a submenu, then press [OK].
- **4** To register the settings or go to a submenu item, press [OK].
- 5 When finished, press [Stop/Reset] to return to the standby mode.

⊘ NOTE

Press [Stop/Reset] to exit from the menu. If you press [Stop/Reset] before pressing [OK], the setting will not be registered.

Setting Menu

⊘ NOTE

- Depending on the country of purchase, some settings may not be available.
- The menus described in this section are based on the model MF4150. Depending on the model of your machine, some settings may not be available and the number on the top of each menu may vary.

| PAPER SETTINGS | | |
|----------------|---|--|
| Setting Item | Description | |
| 1 CASSETTE | Sets the paper type and size on the paper feeding tray. (See "Setting Paper Size and Type," on p. 3-7.) | |
| 2 MP TRAY | Sets the paper type and size on the multi-purpose tray. (See "Setting Paper Size and Type," on p. 3-7.) | |

| COMMON SETTINGS | | |
|--------------------|--|--|
| Setting Item | Description | |
| 1 DEFAULT SETTINGS | Selects which standby display appears when the main power switch is turned on. - COPY - FAX* - SCAN | |
| 2 TONER SAVER MODE | Sets whether to reduce toner consumption. - OFF - ON | |
| 3 DISPLAY LANGUAGE | Selects the language on the display. (See "Specifications," on p. 13-1.) | |

| COMMON SETTINGS | | |
|-------------------|---|--|
| 4 VOLUME CONTROL* | Sets volumes for machine beeps in four levels. - NORMAL - HIGH - OFF - LOW | |
| CALLING TONE | Sets the calling volume. | |
| MONITOR VOL. CTRL | Sets the line monitor volume. | |
| ENTRY TONE | Sets the keypad volume. | |
| ERROR TONE | Sets the alarm volume. | |

^{*}MF4140/MF4150 Only

| COPY SETTINGS | | |
|---------------------|--|--|
| Setting Item | Description | |
| 1 STANDARD SETTINGS | Sets the default setting for copying. | |
| DENSITY | Sets the density for copying. - MANUAL (1-9) - AUTO* * When <auto> is set, the Image Quality mode is automatically set to <text>.</text></auto> | |
| IMAGE QUALITY | Sets the document type for copying. - TEXT/PHOTO* - TEXT - PHOTO* - TEXT/PHOTO+* * When <text photo="">, <photo>, or <text photo+=""> is set, the Density mode is automatically set to <manual>.</manual></text></photo></text> | |
| AUTO COLLATE | Sets whether to collate the copies automatically. - OFF - ON | |

| COPY SETTINGS | |
|--------------------|--|
| 2 - SIDED | Sets the type of two-sided printing. OFF ON |
| 2 PAPER SIZE GROUP | Selects a paper size group for your machine.* - AB - INCHES - A * If the paper size group is changed, the available preset copy ratios will also change. |

| TIMER SETTINGS | |
|----------------------|--|
| Setting Item | Description |
| 1 AUTO SLEEP | Sets the auto sleep mode when the machine remains idle for a certain period of time. (3MIN30MIN.) (See "Setting the Sleep Mode," on p. 1-14.) - ON - OFF |
| 2 DATE&TIME SETTING* | Sets the current date and time. (See "Connect Power Cord," in the Starter Guide.) |
| 3 DATE TYPE SELECT* | Sets the date format. - DD/MM YYYY - YYYY MM/DD - MM/DD/YYYY |
| 4 DAYLIGHT SV. TIME* | Sets the daylight saving time mode. (See "Setting Daylight Saving Time (MF4140/MF4150 Only)," on p. 1-17.) – ON – OFF |

^{*}MF4140/MF4150 Only

| FAX SETTINGS (MF4140/MF4150 Only) | |
|-----------------------------------|--|
| Setting Item | Description |
| 1 BASIC SETTINGS | Registers your fax number, name, and country. |
| UNIT TELEPHONE # | Registers your fax number. (See "Set the Machine for Sending Faxes (MF4140/MF4150 Only)," in the Starter Guide.) |
| UNIT NAME | Registers your name/company name. (See "Set the Machine for Sending Faxes (MF4140/MF4150 Only)," in the Starter Guide.) |
| COUNTRY SELECT | Registers your country. |
| TX TERMINAL ID | Sets whether to show the sender information on each page sent. ON* OFF *When <on> is set, the information registered in <unit #="" telephone=""> and <unit name=""> are shown on each page sent.</unit></unit></on> |
| STANDARD SETTINGS | Sets the default setting for faxing. |
| DENSITY | Sets the default density for faxing. (1-9) |
| IMAGE QUALITY | Sets the default image quality for faxing. - STANDARD - FINE - PHOTO - SUPER FINE |

| FAX SETTINGS (MF4140/MF4150 Only) | |
|-----------------------------------|--|
| 2 TX SETTINGS | Sets the transmission functions. |
| AUTO REDIAL | Sets whether to redial automatically when the other line is busy or a transmission error occurs. (See Chapter 1, "Advanced Fax Features (MF4140/MF4150 Only)," in the Advanced Guide.) |
| ON | Customizes the redial operation. |
| REDIAL TIMES | Sets the number of retries. (1 TIMES-10 TIMES) |
| REDIAL INTERVAL | Sets period of time before redialing. (2 MIN99 MIN.) |
| OFF | After the first attempt at dialing fails, redialing is not attempted. |
| DIALING LINE CHCK | Sets whether to check the telephone line condition. - OFF - ON |
| RESTRICT REDIAL | Sets whether to disable the redial function of the [Redial/ Pause] key. OFF ON |
| CONFIRM NEW DEST. | Sets whether to prompt you to enter the fax number again after pressing [Start] key. OFF ON |

| FAX SETTINGS (MF4140 | 0/MF4150 Only) |
|----------------------|---|
| 3 RX SETTINGS | Sets the reception functions. |
| INCOMING RING | Sets whether the telephone rings when it receives a voice call, enabling you to answer the call. This function is only available when the <rx mode=""> is set to <faxonly>.</faxonly></rx> |
| OFF | The telephone does not ring when it receives a voice call. |
| ON | The telephone rings when it receives a voice call if the optional handset or an external telephone is connected. |
| RING COUNT | Sets the number of incoming ring before the machine answers. (1 TIMES-16 TIMES) |
| RX PRINT | Sets whether to store all received pages in memory before printing them out or print each page as it is received. (See Chapter 1, "Advanced Fax Features (MF4140/MF4150 Only)," in the Advanced Guide.) |
| MEMORY RX | Print after all the pages of the document are received. |
| PRINT RX | Print each page as it is received. |
| RX MODE | Selects the receive mode. (See Chapter 1, "Advanced Fax Features (MF4140/MF4150 Only)," in the Advanced Guide.) - FaxOnly - AnsMode - NET SWITCH - FaxTel - MANUAL |
| RX TERMINAL ID | Sets whether to insert the machine's fax number and the sender information on received faxes. OFF ON |

| FAX SETTINGS (MF4140/MF4150 Only) | |
|-----------------------------------|---|
| RX RESTRICTION | You can reject faxes from senders with no fax/telephone number in their sender information. (See Chapter 1, "Advanced Fax Features (MF4140/MF4150 Only)," in the Advanced Guide.) |
| OFF | All receptions are conducted. |
| ON | Receives the fax only from the sending fax machine that sends the TSI signal. |
| REMOTE RX | Sets whether to use remote receiving. (See Chapter 1, "Advanced Fax Features (MF4140/MF4150 Only)," in the Advanced Guide.) ON OFF |
| 4 PRINTER SETTINGS | Sets the printer functions. |
| RX REDUCTION | Sets whether to reduce or truncate the image when a faxed page is larger than the size of paper loaded. (See Chapter 1, "Advanced Fax Features (MF4140/MF4150 Only)," in the Advanced Guide.) |
| ON | Reduces the image to fit on the size of paper loaded. |
| OFF | Retains the original size of the image. |
| CUT | The image that is larger than 1-page record area is cut and not recorded. |
| CONT. PRINTING | Sets whether to continue printing when toner has run out. This function is only for Fax printing and printing reports. (See Chapter 5, "Troubleshooting," in the Advanced Guide.) OFF ON |

| FAX SETTINGS (MF4140/MF4150 Only) | |
|-----------------------------------|---|
| 2 - SIDED PRINT | Sets the type of two-sided printing for faxing. (See Chapter 1, "Advanced Fax Features," in the Advanced Guide.) OFF ON |
| 5 COMMUNICATIONS | Sets the communication setting. |
| TEL LINE TYPE | Selects the telephone line type. (See "Set the Machine for Sending Faxes (MF4140/MF4150 Only)," in the Starter Guide.) |
| TOUCH TONE | The telephone line is set for touch tone dialing. |
| ROTARY PULSE | The telephone line is set for rotary pulse dialing. |
| R-KEY SETTING | Registers the [R] key to access an outside line easily. (See Chapter 1, "Advanced Fax Features (MF4140/MF4150 Only)," in the Advanced Guide.) - PSTN - PBX |

| BROADCAST (MF4140/MF4150 Only) | |
|--------------------------------|--|
| Setting Item | Description |
| BROADCAST | Registers destinations for broadcasting. |

| ADDRESS BOOK SET. (MF4140/MF4150 Only) | |
|--|---|
| Setting Item | Description |
| 1 1-TOUCH SPD DIAL | Registers the information on one-touch speed dialing. Up to 7 destinations can be registered. (See "Registering One-Touch Speed Dialing," on p. 4-7.) |
| NAME | Registers the recipient's name (max. 20 characters, including spaces). |
| TEL NUMBER ENTRY | Registers the recipient's fax number (max. 50 digits, including spaces). |
| 2 CODED DIAL | Registers the information on coded dialing. Up to 100 destinations can be registered. (See "Registering Coded Dialing," on p. 4-14.) |
| NAME | Registers the recipient's name (max. 20 characters, including spaces). |
| TEL NUMBER ENTRY | Registers the recipient's fax number (max. 50 digits, including spaces). |
| 3 GROUP DIAL | Registers the information on group dialing. Up to 50 destinations can be registered. (See "Registering Group Dialing," on p. 4-21.) |
| NAME | Registers the group name (max. 20 characters, including spaces). |

| ADJUST./CLEANING | |
|---------------------|--|
| Setting Item | Description |
| 1 FIX.UNIT CLEANING | Cleans the fuser roller. (See "Fuser Roller," on p. 10-4.) |
| 2 SPECIAL MODE T | Sets whether to prevent blur from appearing on the printouts. When this setting is set to <on>, the density of printouts may become light. OFF ON</on> |
| 3 SPECIAL MODE U | Select to improve print quality in high temperature and high humidity conditions or in low temperature and low humidity conditions. |
| OFF | Select in normal condition. |
| MODE1 | Select to improve print quality in low temperature and low humidity conditions, or when using thick paper or an envelope. |
| MODE2 | Select to improve print quality in high temperature and high humidity conditions. |
| 4 SPECIAL MODE V | Sets whether to prevent small size paper (B5, A5, EXECUTIVE, etc) from being curled. - OFF - ON |

| REPORT SETTINGS (MF4140/MF4150 Only) | |
|--------------------------------------|---|
| Setting Item | Description |
| 1 SETTINGS | Sets the report functions. (See Chapter 4, "Reports and Lists (MF4140/MF4150 Only)," in the Advanced Guide.) |
| TX REPORT | Sets whether the fax transmission report prints out. - PRINT ERROR ONLY - OUTPUT NO - OUTPUT YES |
| RX REPORT | Sets whether the fax reception report prints out. OUTPUT NO OUTPUT YES PRINT ERROR ONLY |
| ACTIVITY REPORT | Sets whether to automatically print the fax transaction report. - OUTPUT YES - OUTPUT NO |
| 2 LIST PRINT | Prints reports/lists. |
| TX REPORT | Prints the fax transmission report manually. |
| RX REPORT | Prints the fax reception report manually. |
| ACTIVITY REPORT | Prints the fax transaction report manually. |
| MEMORY DATA LIST | Prints the list of the reserved jobs in memory. |
| MEMORY IMAGE PRNT | Prints the information and image of the first page of the reserved job. |
| 1-TOUCH LIST | Prints the list of fax/telephone numbers and names registered for one-touch speed dialing. |
| CODED DIAL LIST | Prints the list of fax/telephone numbers and names registered for coded dialing. |
| GROUP DIAL LIST | Prints the list of groups registered for group dialing. |
| USER'S DATA LIST | Prints the setting list registered in the menu. (See "Printing User's Data List (MF4140/MF4150 Only)," on p. 12-1.) |

Appendix

Specifications

| General | |
|-------------------|--|
| • Туре | Personal Desktop |
| Power Source | 220-240V, 50/60 Hz (Power requirements differ depending on the country in which you purchased the product.) |
| Power Consumption | Max: Less than 710 W |
| ● Warm-up Time | Less than 9.0 sec.* (temperature: 20°C, humidity: 65%; from when the main power switch is turned on until standby display appears) * Warm-up time may differ depending on the condition and environment of the machine. |
| ● Weight | MF4150: Approx. 13.4 kg (including toner cartridge) MF4122/MF4140: Approx. 12.4 kg (including toner cartridge) |

| General | |
|--|--|
| • Dimensions | MF4150: 390 mm (W) \times 432 mm (D) \times 370 mm (H) (with the document feeder tray attached) MF4122/MF4140: 390 mm (W) \times 432 mm (D) \times 303 mm (H) |
| ● Installation Space | MF4150: 673 mm (W) × 855 mm (D) (including optional handset) MF4140: 673 mm (W) × 830 mm (D) (including optional handset) MF4122: 590 mm (W) × 830 mm (D) |
| Environmental Conditions | Temperature: 7.5°C–35°C Humidity: 5%–90% RH |
| ● Display Languages | ENGLISH / GERMAN / FRENCH / SPANISH / ITALIAN / SWEDISH / NORWEGIAN / DUTCH / FINNISH / DANISH / PORTUGUESE / CZECH / SLOVENE / HUNGARIAN / RUSSIAN / TURKISH / POLISH |

| General | |
|--|-----------|
| Acceptable Documents | » p. 2-1. |
| Acceptable Paper Stock | » p. 3-1. |
| Printable Area | » p. 3-2. |
| Scanning Area | » p. 2-3. |

| Copier | |
|-----------------------|---|
| Scanning Resolution | TEXT/PHOTO mode: 300 dpi × 300 dpi TEXT mode, PHOTO mode, TEXT/PHOTO+ mode: 600 dpi × 600 dpi |
| ● Printing Resolution | 600 dpi × 600 dpi |
| Magnification | 1 ± 1.0%, 1:2.00, 1:1.41, 1:0.70, 1:0.50 Zoom 0.50 - 2.00, 1% increments |
| ● First Copy Time | Platen glass: less than 9 sec. (A4) |
| ● Copy Speed | Direct: A4 20 cpm |
| ● No. of Copies | Max. 99 copies |

| Printer | |
|-----------------------|---|
| ● Printing Method | Indirect electrostatic method (On-demand fixing) |
| Paper Handling | Paper feeding tray: 250 sheets(Height: max. 25 mm)Multi-purpose tray: 1 sheet |
| Paper Delivery | 100 sheets (64 to 80 g/m ²) |
| ● Print Speed | See "Copy Speed," on p. 13-3. |
| ● Printing Resolution | 600 dpi × 600 dpi |
| ● Number of Tones | 256 |
| ● Toner Cartridge | » p. 1-11. |

| Facsimile (MF4140/MF4150 Only) | |
|--|--|
| Applicable Line | Public Switched Telephone Network (PSTN)*1 |
| Compatibility | G3 |
| Data CompressionSchemes | MH, MR, MMR |
| ● Modem Speed | 33.6 Kbps Automatic fallback |
| ● Transmission Speed | Approx. 3 seconds/page*2 at 33.6 Kbps, ECM-MMR, transmitting from the memory |
| Transmission/ Reception Memory | Maximum approx. 256 pages*2 (total pages of transmission/reception) |
| ● Fax Resolution | STANDARD: 8 pels/mm × 3.85 lines/mm FINE: 8 pels/mm × 7.7 lines/mm PHOTO: 8 pels/mm × 7.7 lines/mm SUPER FINE: 8 pels/mm × 15.4 lines/mm |

| Facsimile (MF4140/MF4150 Only) | | |
|--------------------------------|--|--|
| Dialing | - Speed dialing | |
| | One-touch speed dialing (7 destinations) | |
| | Coded dialing (100 destinations) | |
| | Group dialing (50 destinations) | |
| | Address Book dialing (with Address Book key) | |
| | Regular dialing (with numeric keys) | |
| | Automatic redialing | |
| | Manual redialing (with Redial/Pause key) | |
| | Sequential broadcast (123 destinations) | |
| | Automatic reception | |
| | - Remote reception by telephone (Default ID: 25) | |
| | - ACTIVITY REPORT (after every 60 transactions) | |
| | - TX (Transmission)/RX (Reception) REPORT | |
| | - TTI (Transmit Terminal Identification) | |

| Telephone (MF4140/MF4150 Only) | |
|--------------------------------|---|
| Connection | - Optional handset |
| | External telephone/answering machine/data modem |

- *1 The Public Switched Telephone Network (PSTN) currently supports 28.8 Kbps modem speed or lower, depending on telephone line conditions.
- *2 Based on ITU-T Standard Chart No. 1, MMR standard mode.



Specifications are subject to change without notice.

Index

| Symbols & Numerics | [Coded Dial] key 1-8, 4-31 |
|--|---|
| [2-Sided] key 1-4, 1-6 | Coded dialing 4-6 |
| A Accessing Setting menu 12-3 [Additional Functions] key 1-4, 1-6 [Address Book] key 1-8 ADDRESS BOOK SET. 12-3, 12-13 ADF 2-6 ADF (Automatic Document Feeder) 1-1 ADJUST./CLEANING 12-3, 12-14 | Deleting 4-19 Editing 4-16 Registering 4-14 Using 4-31 [Collate/2 on 1] key 1-4, 1-6 COMMON SETTINGS 12-3, 12-5 [COPY] key 1-4, 1-6 Copy Mode 1-9 COPY SETTINGS 12-3, 12-6 Copying 6-1 |
| B BROADCAST 12-3, 12-12 C CHANGE TONER message 10-8 Cleaning machine 10-1 Exterior 10-1 Fuser roller 10-4 Interior 10-2 Scanning area 10-5 [Clear] key 1-5, 1-7 Clearing Jams 11-1 Document jams 11-1 | D Daylight saving time 1-17 Density Copying 6-4 Faxes 4-5 [Density] key 1-4, 1-6 Document Jams 11-1 Loading 2-4 Requirements 2-1 Document delivery tray 1-1 Document feeder tray 1-1 Dust cover 1-2 |
| Paper jams 11-3 | |

| E | l |
|---|--|
| [Energy Saver] key 1-4, 1-6 | If You cannot solve a problem 11-22 |
| [Enlarge/Reduce] key 1-4, 1-6 | Image quality |
| Error codes 11-20 | Copying 6-3 |
| Error indicator 1-5, 1-7 | Faxes 4-3 |
| Error messages | [Image Quality] key 1-4, 1-6 |
| Common 11-9 Facsimile 11-16 Printer 11-19 | J Jams |
| External device jack 1-3 | Document 11-1 Paper 11-3 |
| F | |
| [FAX] key 1-4 | L |
| Fax Mode 1-9 | LCD 1-5, 1-7, 1-9 |
| FAX SETTINGS 12-3, 12-8 | Messages 11-9 |
| Faxes | Loading |
| Receiving 5-1 Sending 4-1 | Document 2-4 Envelopes 3-4 Paper 3-4 |
| G | |
| Group dialing 4-6 | М |
| Adding destination 4-23 | Machine components 1-1 |
| Changing name 4-26 | Machine settings 12-1 |
| Deleting destination 4-24 | Main power switch 1-2 |
| Deleting group 4-28 Registering 4-21 | Maintaining |
| Using 4-30 | Toner cartridge 1-12 |
| C . | Maintenance 10-1 |
| Н | Manual Sending 4-32 |
| Handset 1-10 | Menu |
| Handset jack 1-3 | Accessing 12-3 Setting 12-5 |
| [Hook] key 1-8, 4-33 | Multi-purpose tray 1-2, 3-4 |

| N | Platen glass 1-2, 2-4 |
|---|--|
| Numeric keys 1-5, 1-7 | Platen glass cover 1-1 |
| | Power socket 1-3 |
| 0 | Printing 7-1 |
| [OK] key 1-5, 1-7 | Processing/Data indicator 1-5, 1-7 |
| One-Touch Speed Dial keys 1-8 | _ |
| One-touch speed dialing 4-6 Deleting 4-12 Editing 4-9 Registering 4-7 Using 4-30 Operation panel 1-1, 1-4 OUT OF TONER message 10-8 Output tray 1-1 Output tray extension 1-2 | R [R] key 1-8 Rear cover 1-3 Receiving faxes 5-1 [Redial/Pause] key 1-8 Redistributing toner 10-8 Registering speed dialing 4-6 Replacing toner cartridge 10-8 REPORT SETTINGS 12-3, 12-15 RX SETTINGS 12-10 |
| Paper Guidelines 3-3 Jams 11-3 Loading 3-4 Printable area 3-2 Requirements 3-1 Size and type 3-7 Paper feeding tray 1-1 Paper guide rail 1-2 PAPER JAM message 11-3 PAPER SETTINGS 12-3, 12-5 Paper stopper 1-2 PC Faxing 9-1 | S [SCAN] key 1-4, 1-6 Scan Mode 1-9 Scan settings Copying 6-3 Faxes 4-3 Scanning 8-1 Scanning area 1-2, 2-3 Scanning platform 1-2 Sending faxes 4-1 Setting Menu 12-5 Accessing 12-3 |

| Sleep Mode 1-14 | U |
|--------------------------------------|------------------------------|
| Slide guides 1-1, 2-6 | USB port 1-3 |
| for multi-purpose tray 1-2 | User's Data List 12-1 |
| Specifications 13-1 | Printing 12-1 |
| Copier 13-3 | Using speed dialing 4-30 |
| Facsimile 13-4 | |
| General 13-1 Printer 13-4 | V |
| Telephone 13-5 | [View Settings] key 1-4, 1-6 |
| Speed dialing 4-6 | |
| Standby mode | Z |
| Copy 1-9 | Zoom ratio 6-6 |
| Fax 1-9 | Preset zoom 6-6 |
| Scan 1-9 | Zoom designation 6-7 |
| [Start] key 1-5, 1-7 | |
| [Stop/Reset] key 1-5, 1-6 | |
| [System Monitor] key 1-4, 1-6 | |
| Т | |
| - | |
| Telephone line jack 1-3 | |
| TIMER SETTINGS 12-3, 12-7 | |
| Timer settings 1-14 | |
| [Tone] key 1-5 | |
| Toner cartridge 1-11 | |
| Checking the toner level 1-13 | |
| Maintaining 1-12 Redistributing 10-8 | |
| Replacing 10-10 | |
| [Toner Gauge] key 1-5, 1-7 | |
| Transporting machine 10-12 | |
| Troubleshooting 11-1 | |
| TX SETTINGS 12-9 | |
| | |

Canon

CANON INC.

30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan

CANON U.S.A., INC.

One Canon Plaza, Lake Success, NY 11042, U.S.A.

CANON CANADA INC.

6390 Dixie Road Mississauga, Ontario L5T 1P7, Canada

CANON EUROPA N.V.

Bovenkerkerweg 59-61 1185 XB Amstelveen, The Netherlands

CANON FRANCE S.A.S.

17, quai du Président Paul Doumer 92414 Courbevoie Cedex, France

CANON COMMUNICATION & IMAGE FRANCE S.A.S.

12, rue de l'Industrie 92414 Courbevoie Cedex, France

CANON (U.K.) LTD.

Woodhatch, Reigate, Surrey, RH2 8BF, United Kingdom

CANON DEUTSCHLAND GmbH

Europark Fichtenhain A10, 47807 Krefeld, Germany

CANON ITALIA S.p.A.

Via Milano, 8 20097 San Donato Milanese (MI) Italy

CANON ESPAÑA, S.A.

c/ Joaquín Costa 41, 28002 Madrid, Spain

CANON LATIN AMERICA, INC.

703 Waterford Way Suite 400, Miami, Florida 33126 U.S.A.

CANON AUSTRALIA PTY. LTD

1 Thomas Holt Drive, North Ryde, Sydney, N.S.W. 2113, Australia

CANON CHINA CO., LTD

15F Jinbao Building No.89 Jinbao Street, Dongcheng District, Beijing 100005, China

CANON SINGAPORE PTE. LTD.

1 HarbourFront Avenue #04-01 Keppel Bay Tower, Singapore 098632

230V



FT5-0274 (010) © CANON INC. 2006