 


Starter Guide

 
 
 
**Please read this guide before operating this product.
After you finish reading this guide, store it in a safe place for future reference.**

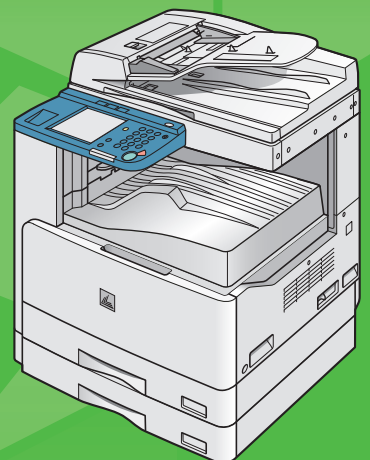


Set Up the Machine

Unpacking the Machine

Remove all shipping tape and packing material from the machine.

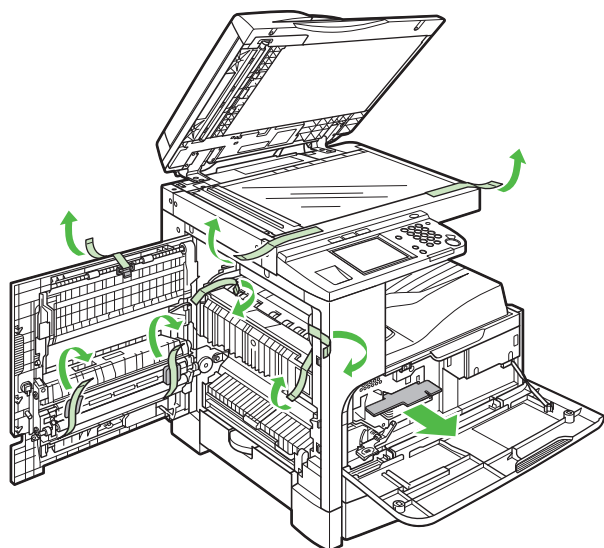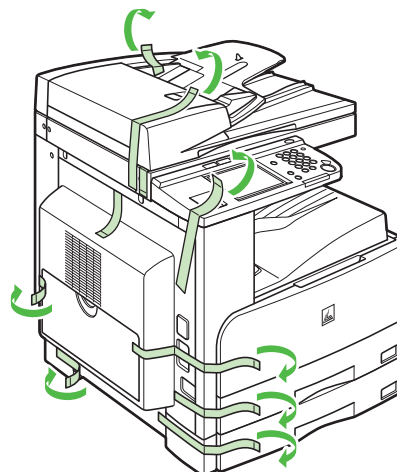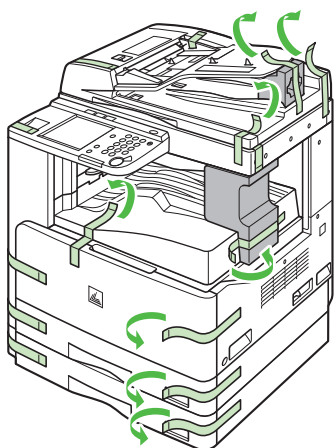


 Remove the vinyl-tie and label attached on the metal plate in each paper cassette.

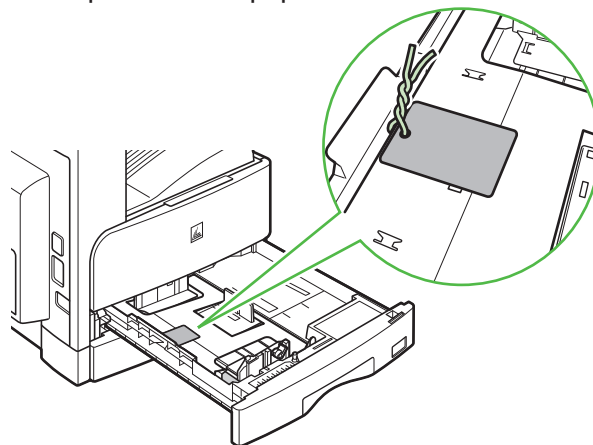


Before Setting Up the Machine

 - When carrying the machine, be sure that it is carried by two or more people holding the parts indicated below.

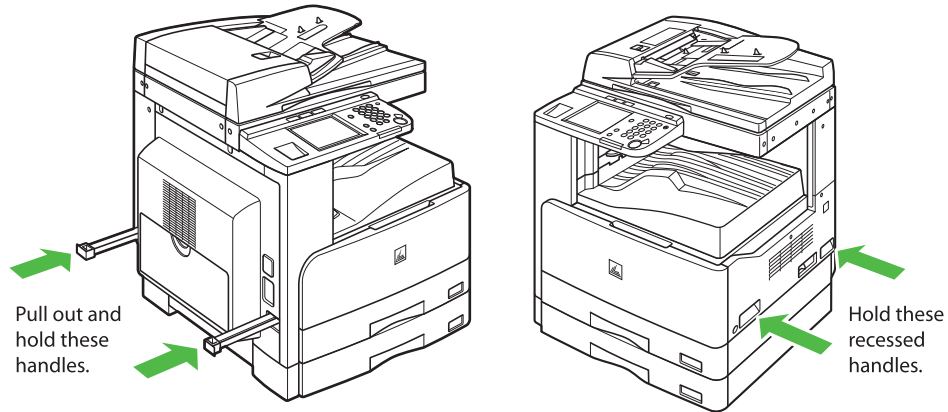


- The shapes of your machine and supplies may differ slightly from those illustrations listed in this manual.

 
Do You Have Everything?

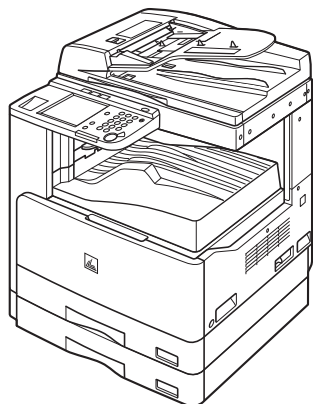


● Machine

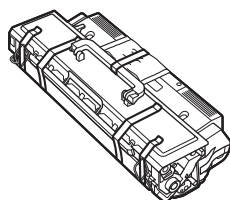 

● Cartridge

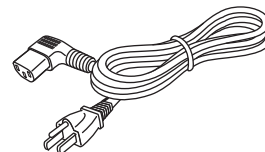 


● Power Cord

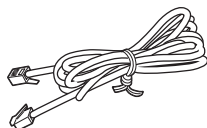 

● Telephone Cable



 ● Ferrite Core for USB Cable



● Document Size Label

- Starter Guide
- Basic Operation Guide
- UFR II LT/FAX User Software CD-ROM
- PCL User Software CD-ROM*
- Manual CD-ROM

- Limited Warranty Notice
- Cartridge Warranty Notice
- Registration Card

- Paper Size Label
- Stamp Cartridge
- Tweezers

* MF7480/MF7470 only

Manuals for the Machine

 
- Starter Guide (This Document): Machine set-up and software installation
- Basic Operation Guide: Basic features, maintenance, trouble shooting, and specifications
- Reference Guide (located on the Manual CD-ROM): Total operation features, network and remote user interface, system settings, reports and lists, and trouble shooting
- Color Network ScanGear User's Guide (located on the User Software CD-ROM): Color Network ScanGear installation and instructions
- PCL Driver Guide (MF7480/MF7470 only. Located on the User Software CD-ROM): PCL printer driver installation and instructions
- UFR II Driver Guide (located on the User Software CD-ROM): UFR II LT printer driver installation and instructions
- Fax Driver Guide (located on the User Software CD-ROM): Fax driver installation and instructions

Assistance:

If you have a problem with your machine and you cannot solve it by referring to the manuals listed above, please contact our Canon Authorized Service Facilities or the Canon Customer Care Center at 1-800-828-4040 between the hours of 8:00 A.M. to 8:00 P.M. EST Monday through Friday and 10:00 A.M. to 8:00 P.M. on Saturday.


Install Cartridge

1

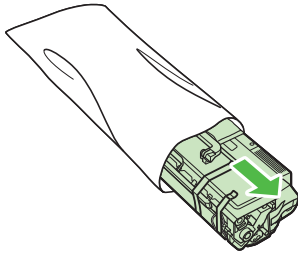


Remove the cartridge from the bag.

 2

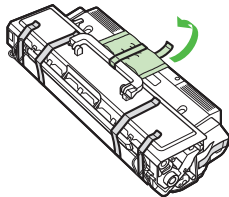


Remove the desiccant bag and the shipping tape.

 3

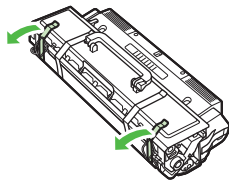


Remove the short shipping tape.

 4

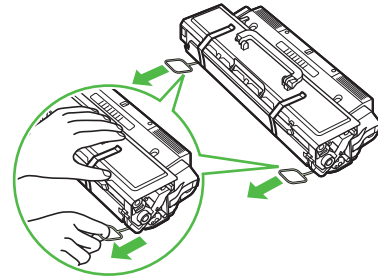


Remove the packing materials.

 5

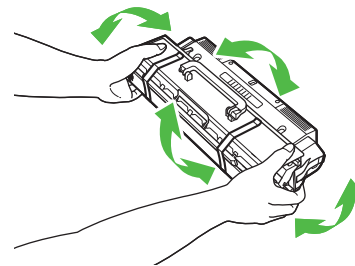

Gently rock the cartridge several times to evenly distributed the toner inside.

 6

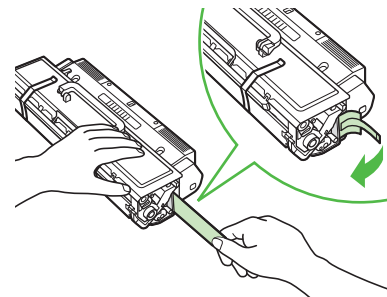


Place the cartridge on a flat surface and pull the seal completely out.



NOTE


Do not pull out the seal at an angle.

 7

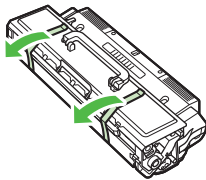


Remove the long shipping tape.

 8

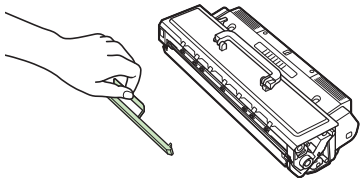


Remove the protective cover.

 9

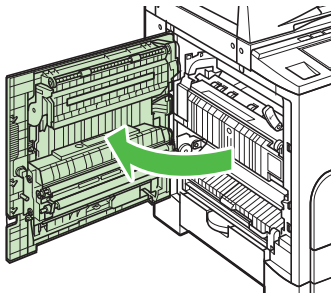


Push the release button on the left cover of the main unit to open the left cover.

 10

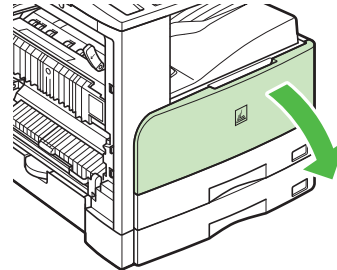


Open the front cover.

 11

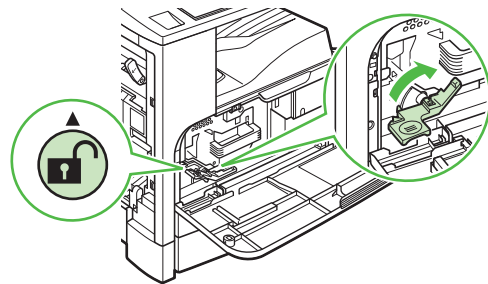


Rotate the unlock lever until it clicks.

 12

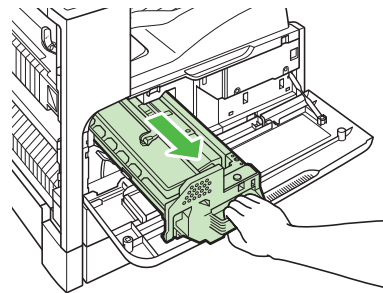


While grasping the handle of the cartridge holder, pull the cartridge holder out of the machine until it stops.

 13

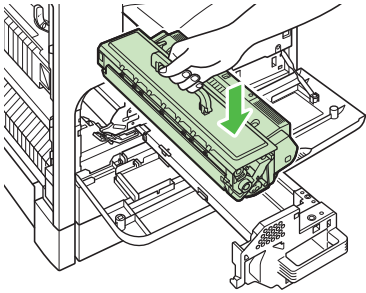


Hold the cartridge by its handle, then insert it into the cartridge holder.

 14

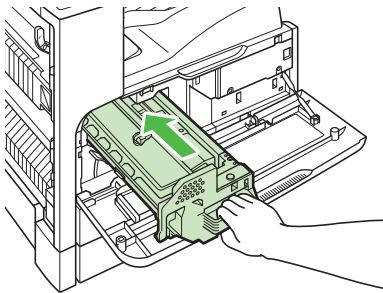


Push the cartridge holder into the machine as far as it will go.

 15

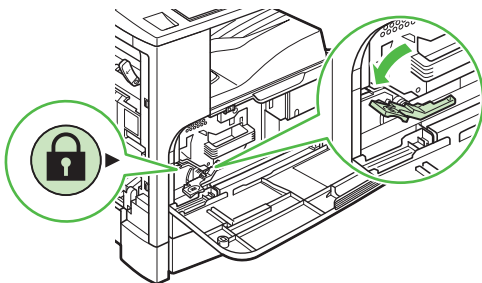

Rotate the lever to the locked position.

 16

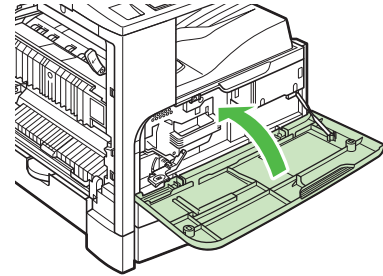


Close the front cover.



NOTE

Be careful not to get your fingers caught.

 17

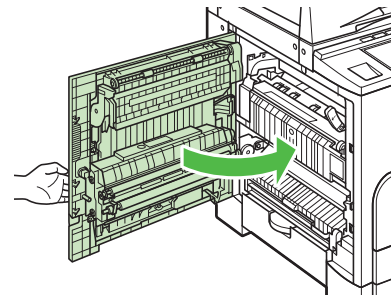

Gently close the left cover until it clicks.

 


NOTE

Be careful not to get your fingers caught.


Load Paper

1

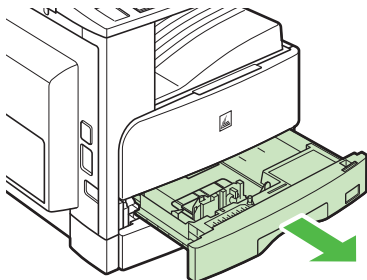

Pull out the paper drawer until it stops.

 2

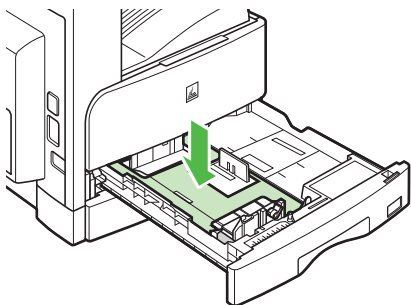


Push down the metal plate to lock.



NOTE


If you load LTR size paper, go to step 6, or otherwise go to step 3.

 3

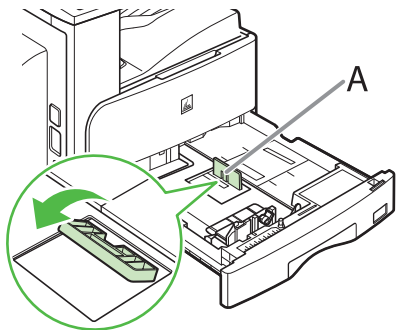


Detach the end guide (A) by pressing it down. Reattach the end guide into the desired paper size slots and tilt it backwards to its original upright position.

 4

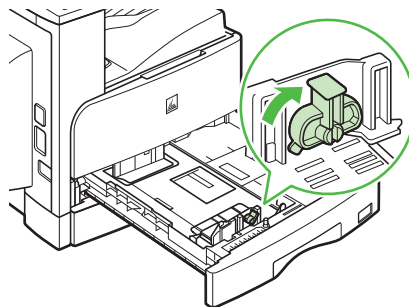

Lift the lock lever on the side guide to the upright position and slide the side guide to the groove marked for the desired paper size.

 5

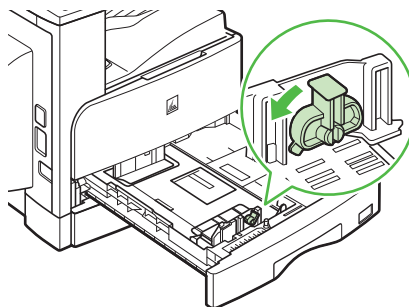


Lower the lock lever to the left to lock the side guide.



NOTE


Be sure to set the lock lever correctly. If the lock lever is positioned incorrectly, the wrong paper type will be shown on the touch panel display. This may also cause paper jams, dirty prints, etc.

 6

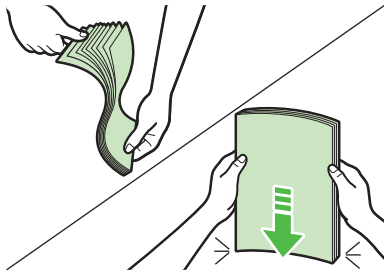

Fan the paper stack and even the edges.

 7

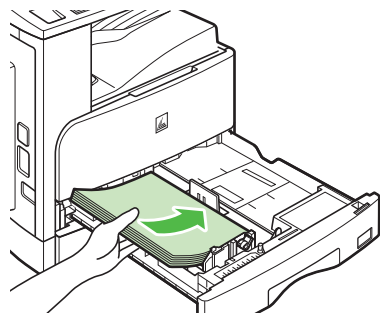


Load the paper stack of the appropriate size with the print side facing up.



NOTE

 
When loading paper, be careful not to cut your fingers at the edges of the paper.

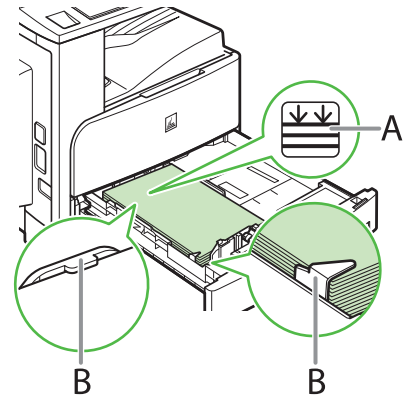

NOTE

- Make sure the paper stack does not exceed the load limit mark (A) and it is loaded under the small fins (B) on the paper guides.
- Each paper drawer holds approximately 250 sheets of paper (22 lb bond (80 g/m²)).

 8

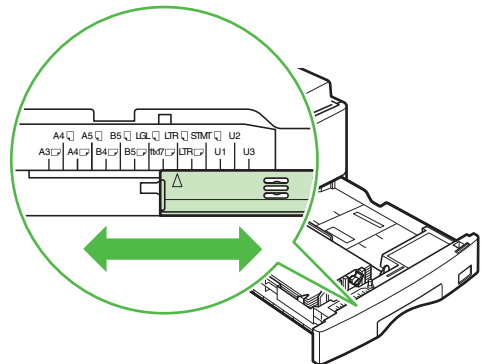


Set the paper-size detecting lever, located on the left side of the paper drawer, to match the size of the paper being loaded.



NOTE


Be sure to set the paper-size detecting lever correctly. If the lever is positioned incorrectly, the wrong paper type will be shown on the touch panel display. This may also cause paper jams, dirty prints, etc.

 9

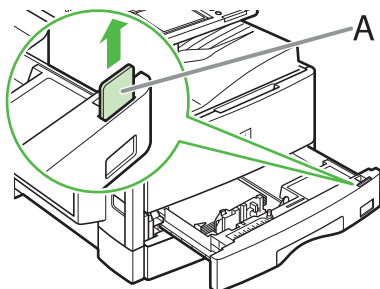


Pull out the paper size plate (A) from the paper drawer.

 10

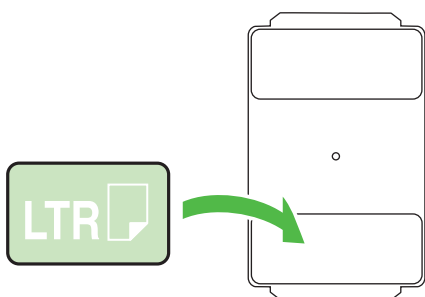


Stick the appropriate paper size label on the paper size plate.

 11

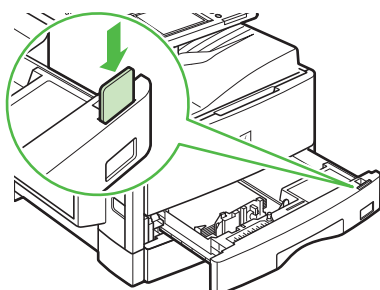

Reinsert the paper size plate into the paper drawer.

 12

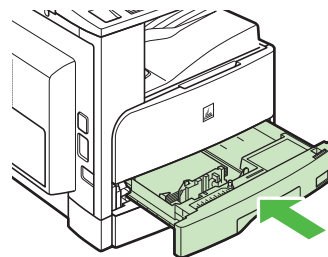

Push the paper drawer into the machine as far as it will go.

 


- Be careful not to get your fingers caught.
- For loading paper in the stack bypass, see Chapter 2, “Original and Paper,” in the Reference Guide.

Affix Labels


Affix the supplied document size label to the specified location.

1

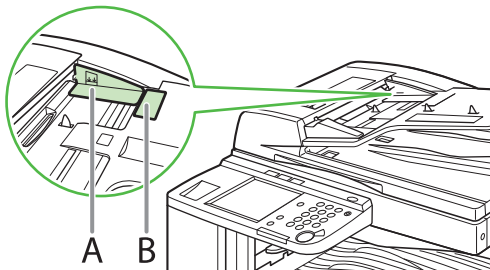

Align the slide guide (A) to the original size mark "A4/A3" (B).

 
2

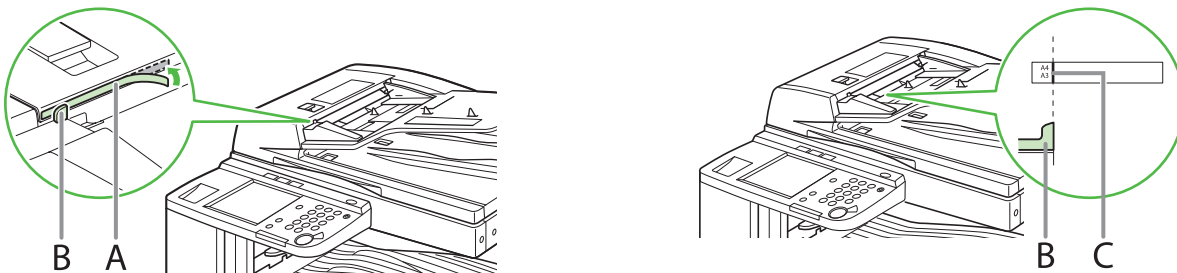

Affix the document size label (A) to the feeder cover so that both indicators (B and C) on the side guide and the document size label are aligned properly, as shown on the right.


Connect the Power Cord and Turn On the Machine

 1

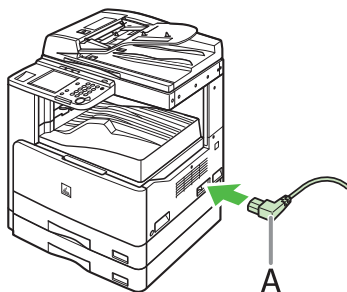


Connect the supplied power cord (A) in to the socket and the wall outlet.

 
2

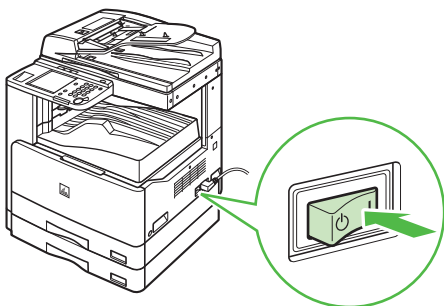

 Press the main power switch to "I" side.

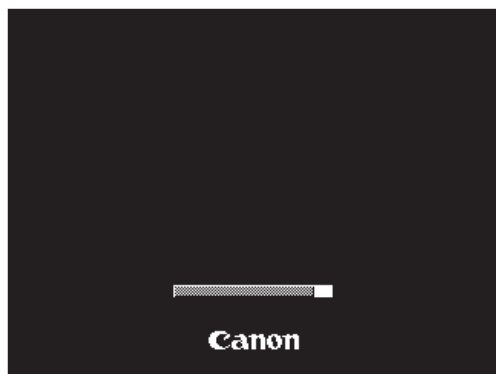

 The Start Up screen is displayed until the machine comes to the ready mode.

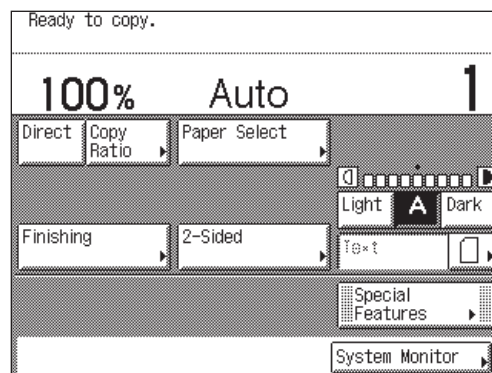


The Basic Features screen is displayed when the machine is ready to scan.

What if...

- **<Close the left or front cover.> is displayed:**
Make sure that the left or front cover is closed properly. (See "Install Cartridge," on p. 5.)
- **<Load paper.> is displayed:**
Make sure that paper is loaded in the machine. (See "Load Paper," on p. 8.)
- **<Insert the toner.> is displayed:**
Make sure that the cartridge is installed properly. (See "Install Cartridge," on p. 5.)

 Connect Telephone Cables

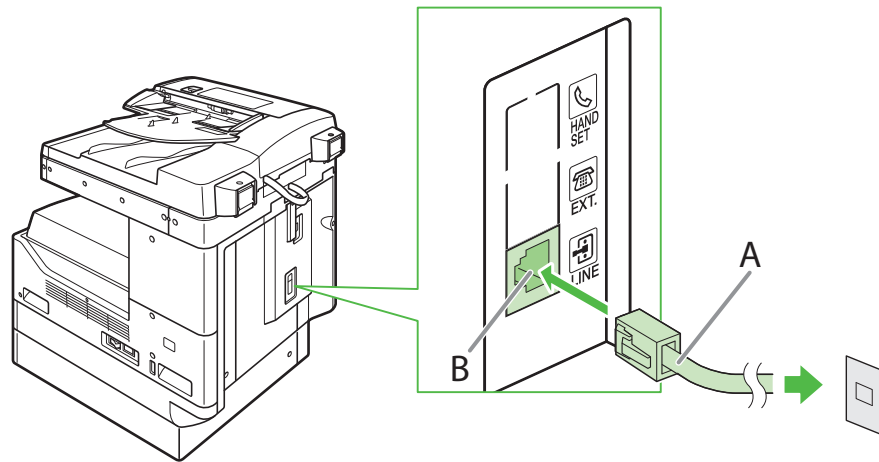


Connect the supplied telephone cable (A) to the line jack (B) on the back side of the machine and the wall jack.

Set the Date and Time

Before using the machine, you **MUST** set the current date and time. The current date and time settings are used as standard timer settings for functions that require them.


Use the keys both on the touch panel display and the control panel to enter information.

 - Press **[Additional Functions]** to specify additional functions.
- Use **[0-9]** (Numeric Keys) to enter characters.
- Press **[Clear]** to delete the entire entry.
- The settings screen for each function is shown on the touch panel display. Press the appropriate keys in accordance with the messages displayed on this display.

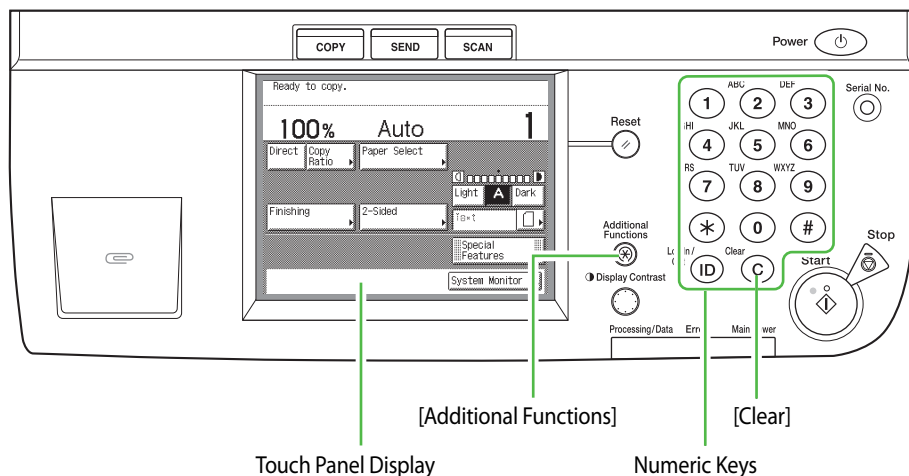


1 Press **Ⓢ** (Additional Functions).

 
2 Press [Timer Settings].

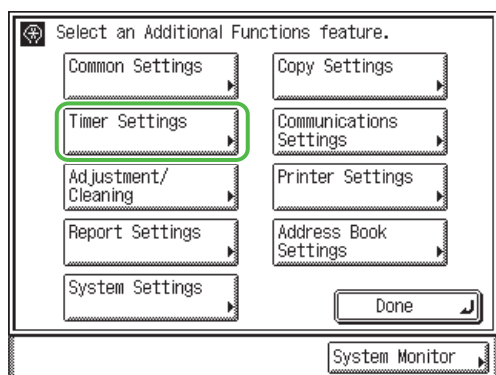

3 Press [Date & Time Settings].

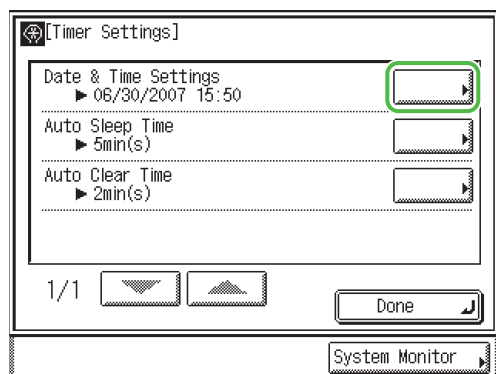 

 4 Use **0-9** (Numeric Keys) to enter the date (month/day/year) and time (in 24-hour/military time format), then press [OK].

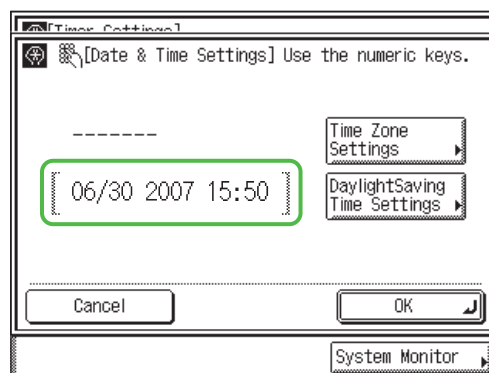

Enter the month and the day using four digits (including zeros).

Enter all four digits of the year, and the time in 24-hour notation, as four digits (including zeros) without a space.


Examples:

May 6	→	0506
9:05 a.m.	→	0905
4:18 p.m.	→	1618


NOTE

- If you make a mistake when entering values, press **Ⓢ** (Clear) then enter the values again, starting with the month.
- If you want to set the Time Zone, go to step 5.
- If you want to set Daylight Saving Time without setting the Time Zone, go to step 7.

 5 Press [Time Zone Settings].

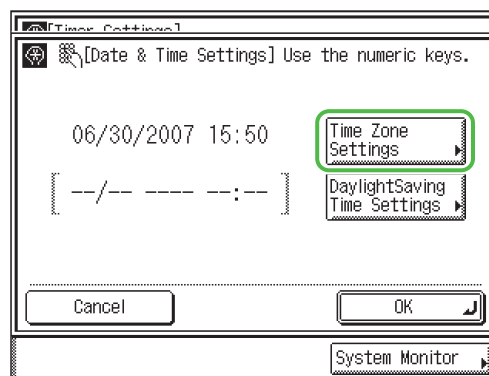

 
- 6** Select the time zone in which the machine is located, then press [OK].

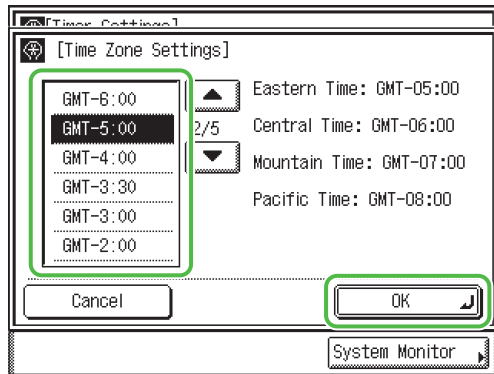

NOTE

- The standard time zones of the world are expressed globally in terms of the difference in hours (up to 12 hours) from GMT (0 hours). A time zone is a region throughout which this time difference is the same.
- The time at the Greenwich Observatory in England is called GMT (Greenwich Mean Time).
- The default setting is 'GMT-5:00'.
 - Eastern time (US/Canada): GMT-5:00
 - Central time (US/Canada): GMT-6:00
 - Mountain time (US/Canada): GMT-7:00
 - Pacific time (US/Canada): GMT-8:00
- If the desired time zone is not displayed, press [▲] or [▼] to scroll through the list.
- If you want to set Daylight Saving Time, go to step 7.

 
- 7** Press [DaylightSaving Time Settings].

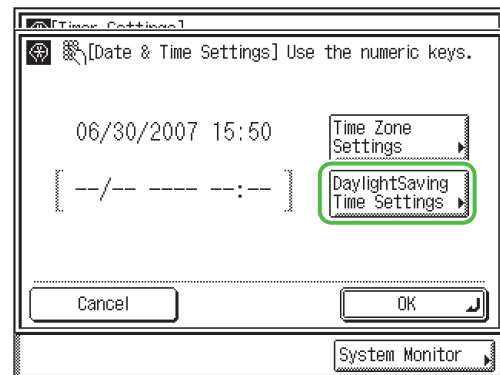


NOTE

- In some countries, time is advanced throughout the summer season. The period in which this is applied is called "Daylight Saving Time."
- If you set Daylight Saving Time, the machine automatically sets the standard time of the machine one hour forward at 2:00 am on the specified date.
- The default setting is 'Off'.

 
- 8** Press [On], then press [Start Date].

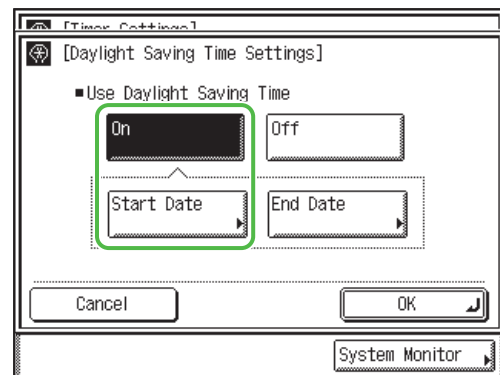

 
- 9** Select the month and day from the Month and Day drop-down lists, then press [OK].

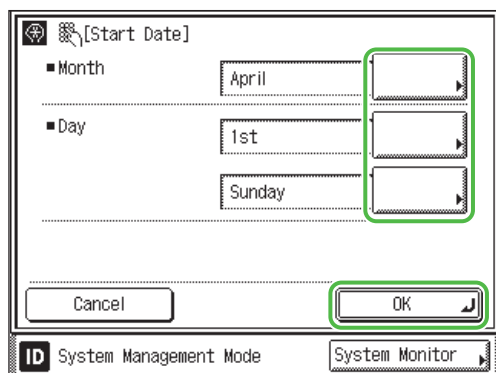


- 10** Press [End Date].

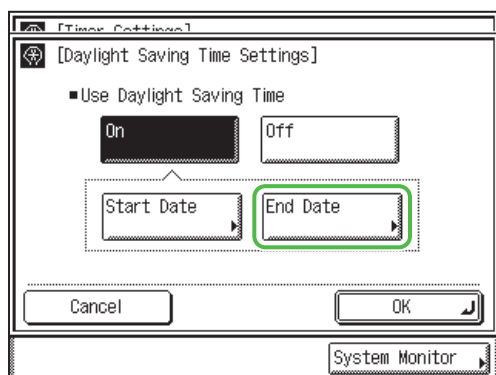 

 
- 11** Select the month and day at which Daylight Saving Time ends then press [OK].

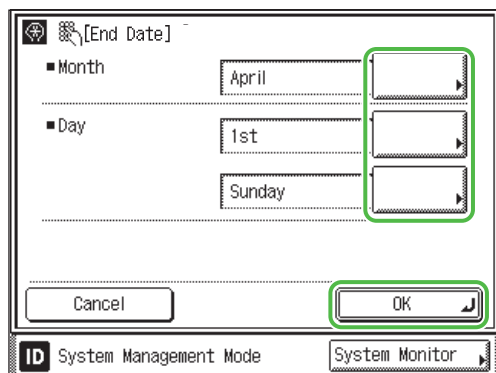

- 12** Press [OK].

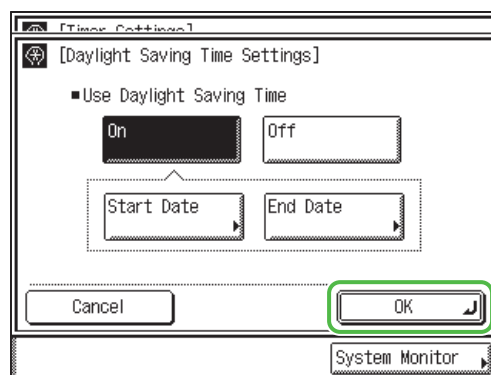 

- 13** Press [OK].

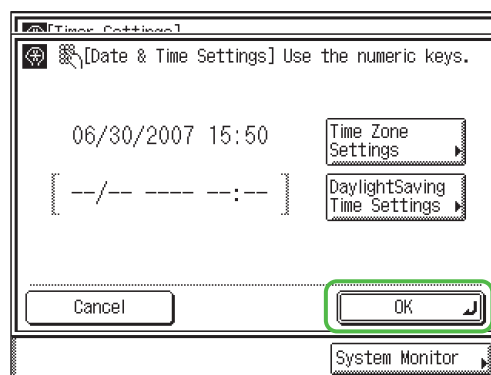 


The selected mode is set.

- 14** Press [Done] repeatedly until the Send Basic Features screen appears.


Set the Telephone Line Type

1 Press  (Additional Functions).

 
2 Press [Communications Settings].

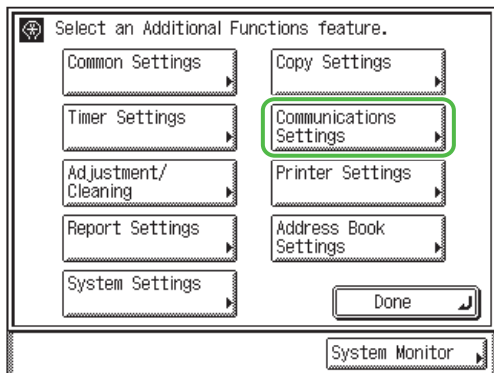

 
3 Press [User Settings] under <Fax Settings>.

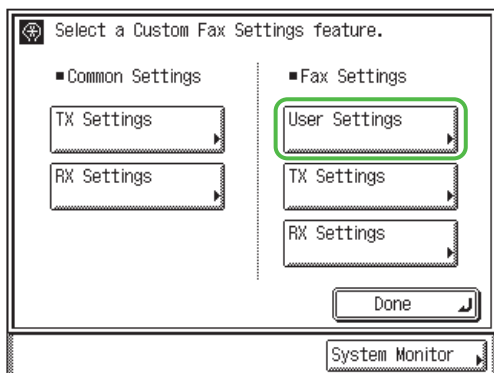

4 Press [Tel Line Type].

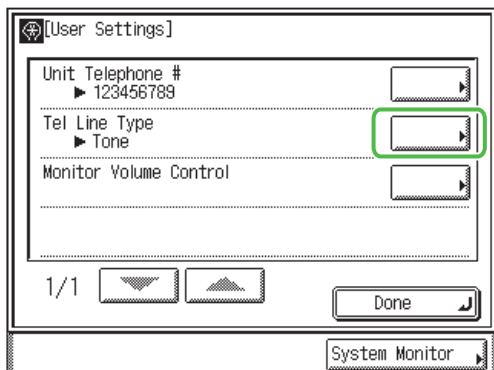 

 5 Select the telephone line type, then press [OK].

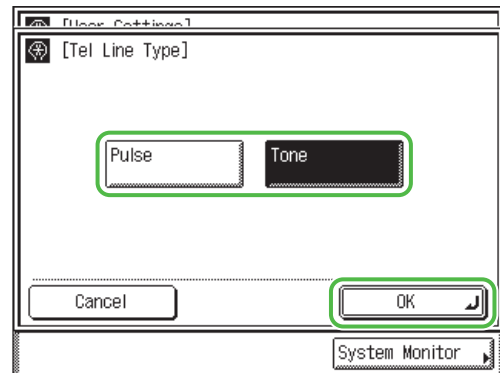

<Tone>: Tone dialing
<Pulse>: Pulse dialing

NOTE

 
If you do not know the type of telephone line you use, contact your local telephone company.

6 Press [Done] repeatedly to return to the Basic Features screen.

Set the Machine for Sending Documents

Guidelines for Entering Information

Before sending documents, you **MUST** register your fax number, and user name (unit name) in the machine. The sender information you register in the machine appears in the header of each page received by your recipient.

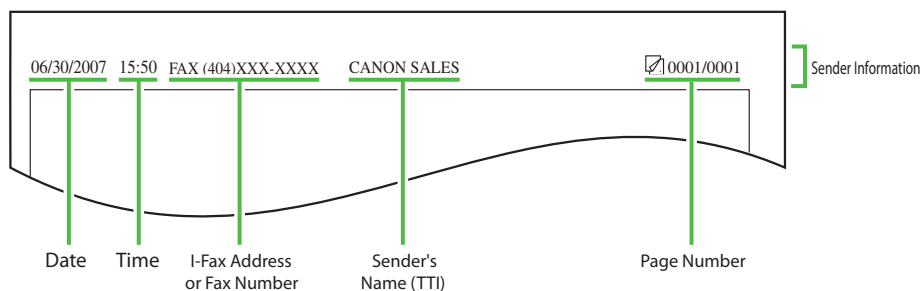


Register Sender Information

You must store your machine's fax number. This number is printed on the top of every document you send to the recipient.


Your machine's telephone number may also be displayed on the touch panel display of the recipient's machine, depending on their type of machine.

1 Press **[Additional Functions]**.

 
2 Press **[Communications Settings]**.

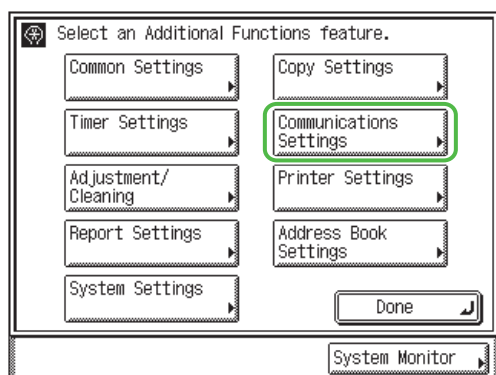

 
3 Press **[User Settings]** under <Fax Settings>.

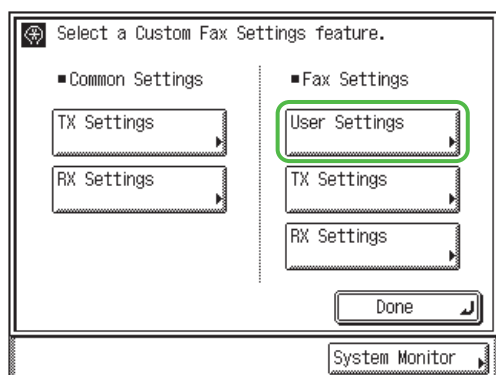

4 Press **[Unit Telephone #]**.

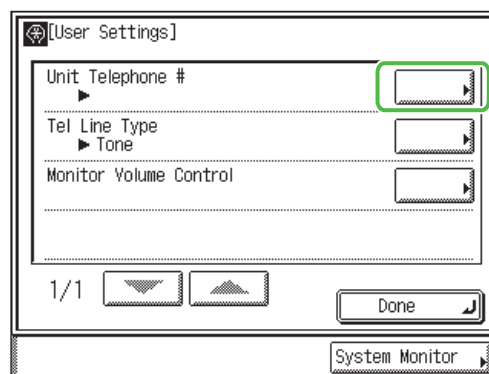 

 5 Use **[0-9]** (Numeric Keys) to enter your fax number (up to 20 digits), then press **[OK]**.

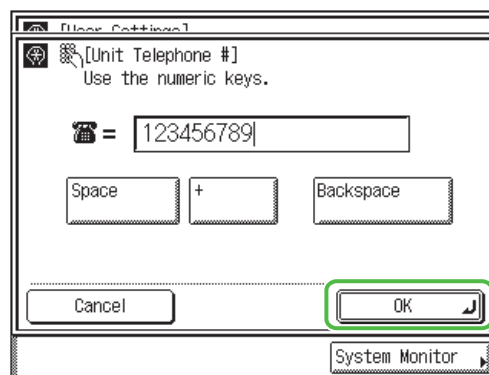

[Space]: Inserts a space between the area code and the local fax number (optional).

[+]: Inserts a country code. Press [+] after the country code, and before the fax number.

 
[Backspace]: Deletes the last number entered.

NOTE


If you make a mistake when entering the number, press **[Clear]** (Clear) then enter the correct number.

6 Press [Done].

7 Press [TX Settings] under <Common Settings>.

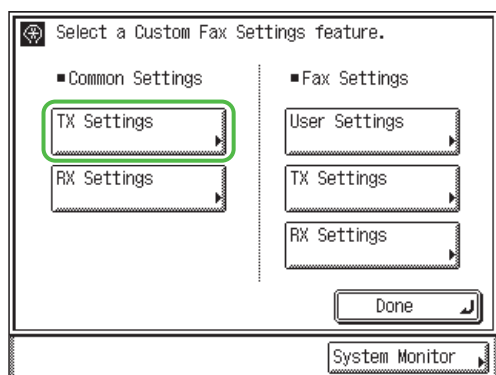

8 Press [Unit Name].

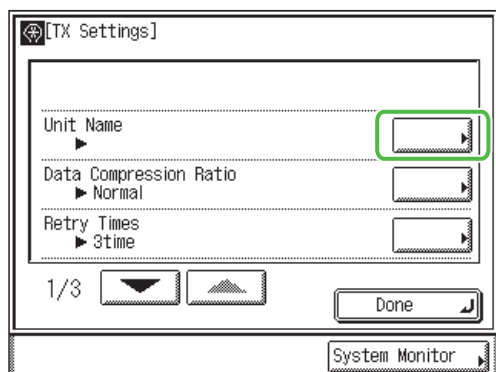 

Enter your name or company name (and department name if possible) as the unit name.

When you send a document, the recipient's machine will print this unit name as the sender information on the recording paper.

Some fax models also display sender information on the touch panel display during transmission.

 
Examples of a unit name:

- Your name: John Smith
- Company name: Canon
- Company name and department: Canon-Accounting Dept.

 NOTE

If the desired setting is not displayed, press [▼] or [▲] to scroll to the desired setting.

9 Use 0-9 (Numeric Keys) to enter the username (up to 24 characters), then press [OK].

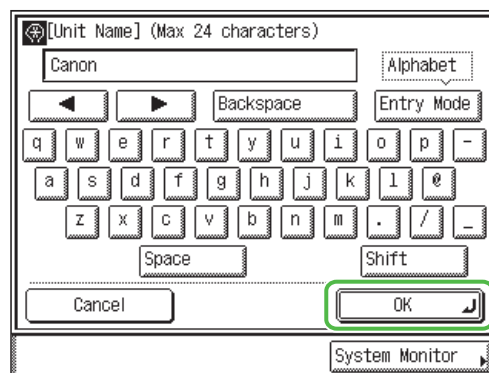

 NOTE

- You can register only one unit name.
- To delete all the entered characters, press ☺ (Clear).

 
10 Press [Done] repeatedly to return to the Basic Features screen.

Set the Machine for Network Usage (imageCLASS MF7480/MF7470 Only)

Connect the Machine to a Network

This machine has a USB connector and LAN connector. If the machine is connected to a network using a LAN cable, you can print the documents sent from a computer. The imageCLASS MF7480 can also send documents as e-mail attachments, send i-faxes, and send documents to a file server via the network.

- 1 Connect a Category 5 twisted pair LAN cable to the 10Base-T/100Base-TXport on the back of the machine. Connect the other end of the cable to a network router or a hub.

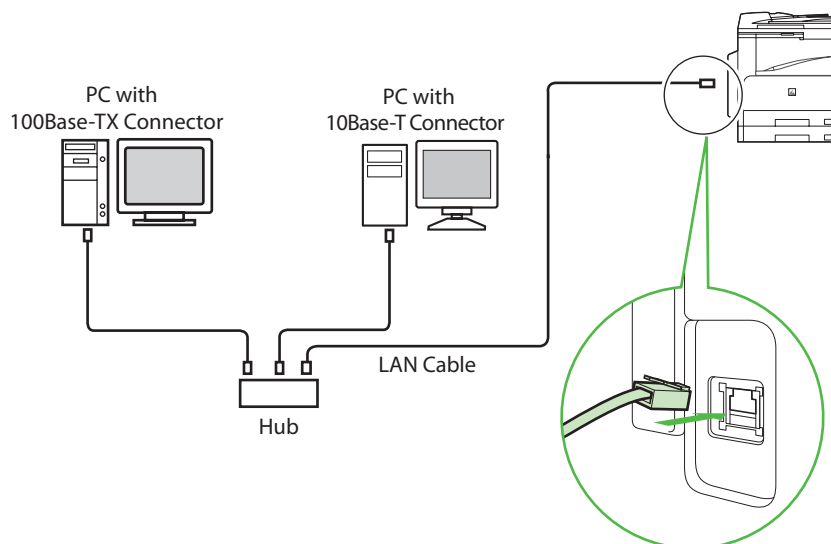

NOTE

- The machine does not come with a LAN cable.
- If you use the machine as a local printer, connect the machine directly to a computer using a USB cable. (See "Installing Software," on p. 24.)

Specify the IP Address Settings

 
An IP address must be specified in order to enable communication between the machine and computer.

NOTE


- It is recommended that the network administrator perform the following procedures.
- Before performing the following procedure, make sure that the machine is turned on and connected to a network.
- This machine is set by default to automatically draw an IP address using DHCP. If your network server or router is configured to provide a DHCP address, all you need to do is connect a network cable and turn on the machine. The machine will draw an IP address automatically.
- This machine also supports automatic IP addresses using BOOTP and RARP protocols. If you use these protocols, select [DHCP] at step 7 of the following procedures.
- This machine supports IPv6. (See Chapter 6, “Network,” in the Reference Guide)

1 Press **Ⓢ** (Additional Functions).


2 Press [System Settings].

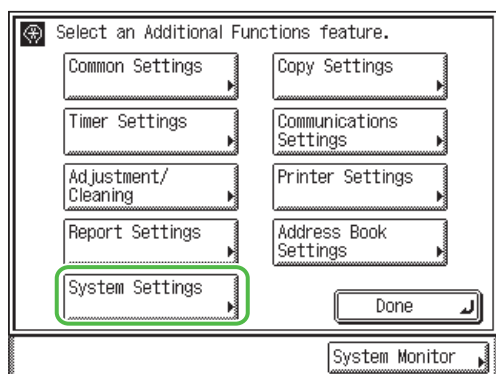


3 Press [Network Settings].

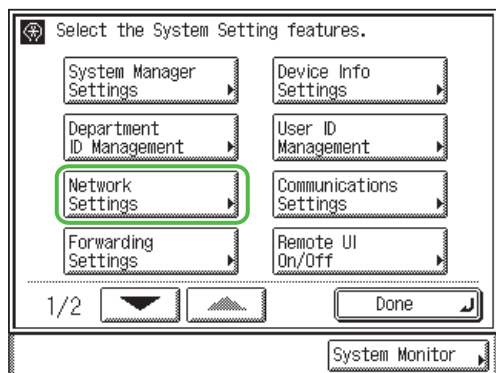 

4 Press [TCP/IP Settings].

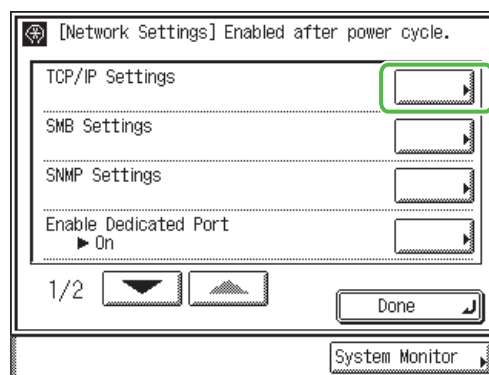 


5 Press [IPv4 Settings].

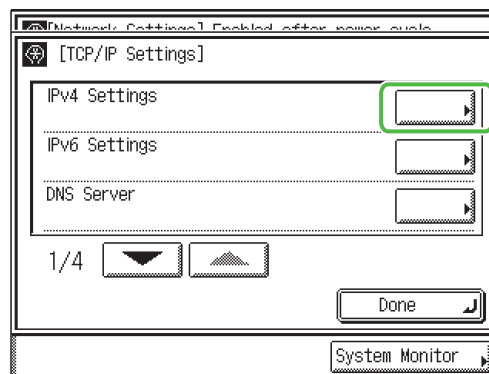 


NOTE

To set up an IPv6 address, see Chapter 6, “Network,” in the Reference Guide.

 
6 Press [IP Address Settings].

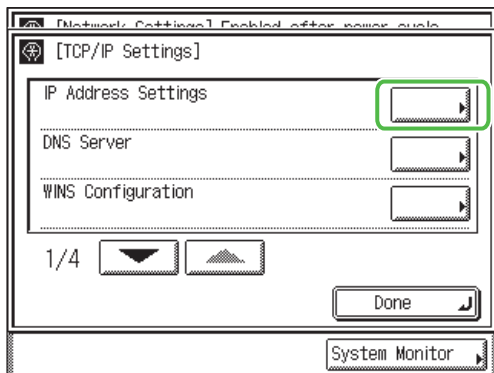

9 Press [OK].

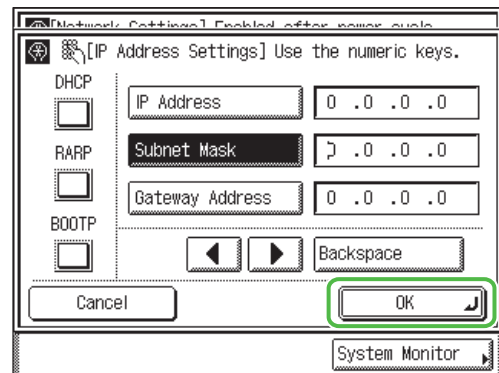 

 
7 Press [IP Address], then enter the IP address using 0-9 (Numeric Keys).

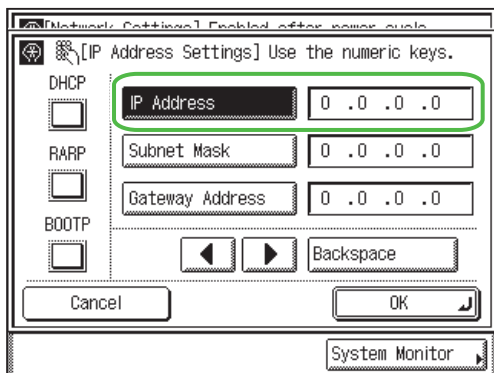

10 Press the main power switch on the right side of the machine to "I" side, wait at least 10 seconds, and then press the main power switch to "I" side.

If you specify an IP address using DHCP, BOOTP, or RARP, press [DHCP], [BOOTP], or [RARP]. One of the DHCP, BOOTP, or RARP settings can be selected at any one time.

 8 Press [Subnet Mask] and [Gateway Address] and specify the settings in the same way.

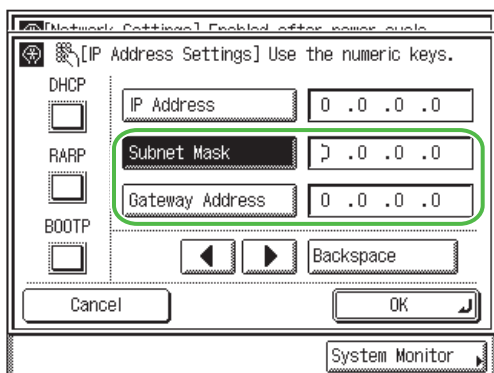

Installing Software

Perform the following procedure to install the printer and fax drivers. If you install these drivers, you can print and fax from your computer. Printer drivers are divided into two types: PCL and UFR II LT.

- **PCL:** This is the Hewlett-Packard's PCL printer driver, which includes the PCL5c, PCL5e, and PCL6 drivers. The PCL5c printer driver is for color printers, while the PCL5e and PCL6 printer drivers are for black-and-white printers. PCL6 is an advanced version of PCL5e and offers superior printing quality and speed. This machine supports the PCL5e and PCL6 printer drivers.
- **UFR II LT:** This is the Canon UFR II LT printer driver. Using this driver, the various data processing tasks conventionally executed within the printer are appropriately divided between the host PC and the printer to greatly reduce the overall printing time. The workload can be delegated to match the output data, thus realizing a significant increase in speed through optimization.

NOTE

- imageCLASS MF7460 does not come with PCL User Software CD-ROM.
- The following procedures is an example for installing all the drivers for the machine, using the installer on the UFR II LT/FAX User Software CD-ROM and PCL User Software CD-ROM.
- If you want to install only the PCL Printer Driver with USB connection, select [PCL5e], [PCL6] in [Additional Functions]-[System Settings]-[PDL Selection (PnP)] on the machine before the installation. Next, follow steps 1 through 12 in p. 25, except insert the PCL User Software CD-ROM instead of the UFR II LT/FAX User Software CD-ROM in step 1.
- If you want to install only the PCL Printer Driver with network connection, see Chapter 2, "Getting Started," in the PCL Driver Guide.
- If you want to install only the Fax driver, see Chapter 2, "Getting Started," in the Fax Driver Guide.

Before Installation:

- **Do not connect the USB cable before installing the software. If you connect the USB cable before installing the software and the Found New Hardware Wizard screen appears, click [Cancel].**
- **For Windows 2000/XP/Server 2003/Vista, log on as Administrator to install the software.**
- **Make sure the machine is turned on before connecting the USB cable.**
- **On the screen shown at each step, click on the circled button to proceed.**
- **The machine does not come with a USB cable.**

System Requirements

Microsoft Windows 98/98SE

CPU: Intel 80486DX/66MHz or faster
Memory: 24MB or more

Microsoft Windows Me

CPU: Intel Pentium/150MHz or faster
Memory: 32MB or more

Microsoft Windows 2000 Professional/Server

CPU: Intel Pentium/133MHz or faster
Memory: 64MB or more (Server: 128MB or more)

Microsoft Windows XP Professional/Home Edition

CPU: Intel Pentium/233MHz or faster
Memory: 64MB or more

Microsoft Windows Server 2003

 
CPU: Intel Pentium/133MHz or faster
Memory: 128MB or more

Microsoft Windows Vista

CPU: Intel Pentium/800MHz or faster
Memory: 512MB or more

Installation Procedure for USB Connection

1

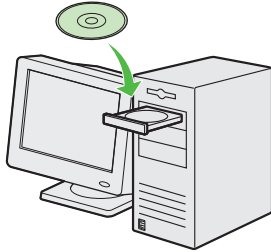


Insert the UFR II LT/FAX User Software CD-ROM.

2




If the CD-ROM Setup screen is not displayed, click [start] on the Windows task bar → [My Computer].
Windows Vista: click [start] on the Windows task bar → [Computer].
Windows 98/Me/2000: double-click [My Computer] on the Windows desktop.
Open the CD-ROM icon, then double-click [MInst] ([MInst.exe]).

 3

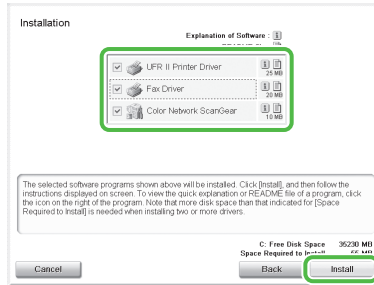


Select the UFR II Printer Driver, FAX Driver and Color Network ScanGear.

 
4

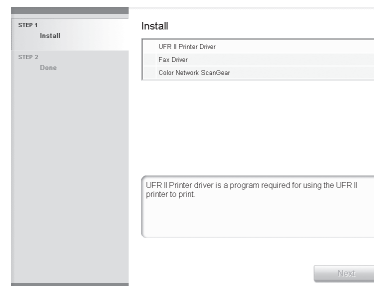


5

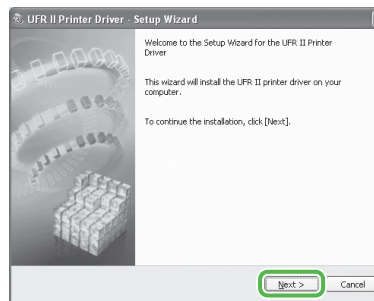 


6

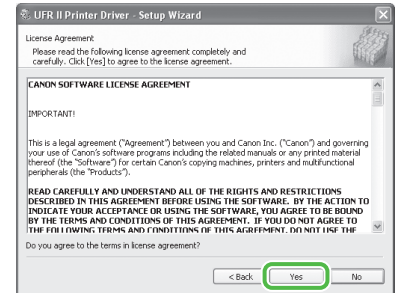 

7

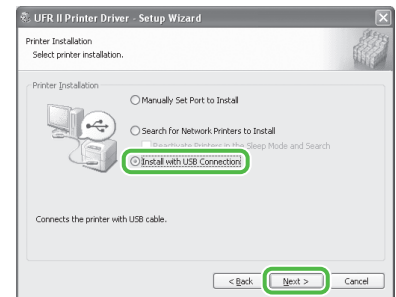 


8

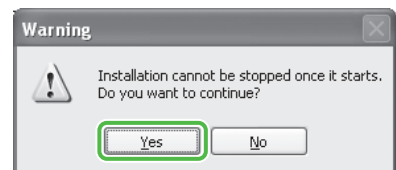 


9



 
10

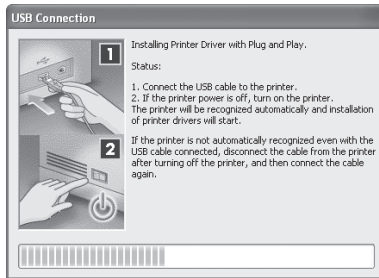


13

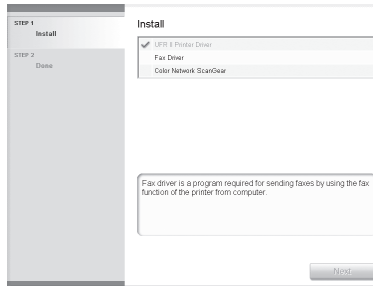 

16

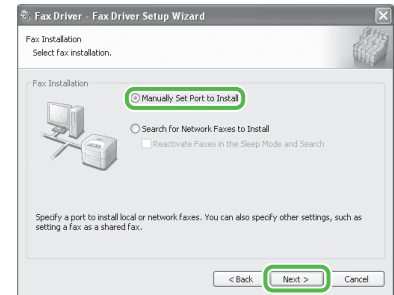 


11

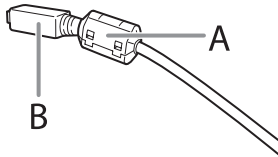 


Attach the ferrite core (A) as close as possible to the B-type side (square) of the USB cable (B).

 
14

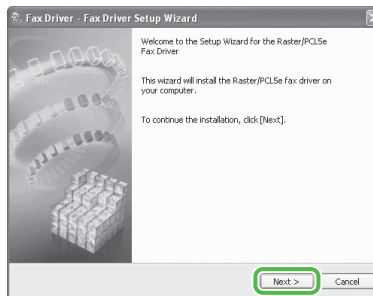

17

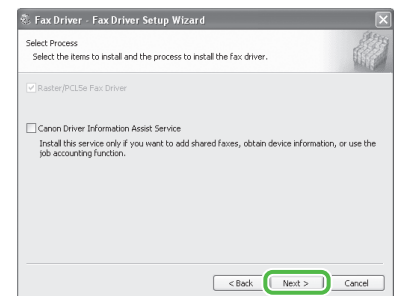 

12

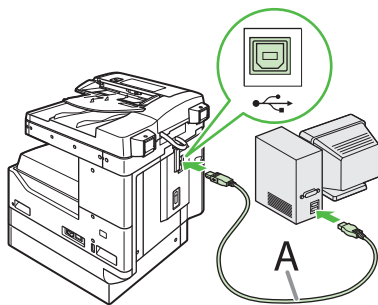 


Connect the machine and your computer with a USB cable (A).

**NOTE**

 If you are using Windows XP, [Found New Hardware Wizard] dialog box appears. Select [Install Software Automatically (Recommended)] then click [Next].


15

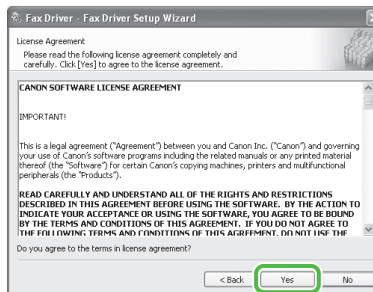


A [Process to Install Fax Driver] dialog box will appear if drivers that can be installed with this Installer are already installed.

Select the desired installation and then click [Next].

 
18

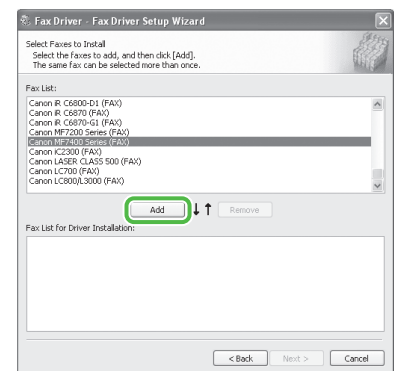

19

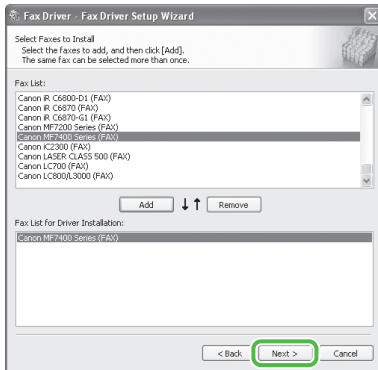 


20

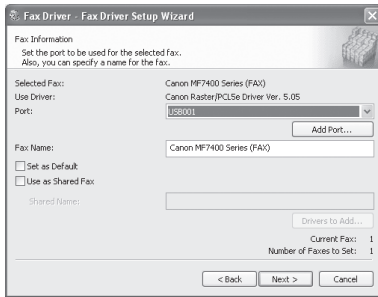 


Select the USB port you want to use from [Port]. If you want to add a port, click [AddPort] and then select the USB port you want to add.

 
21

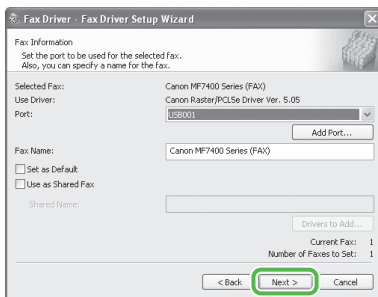


22

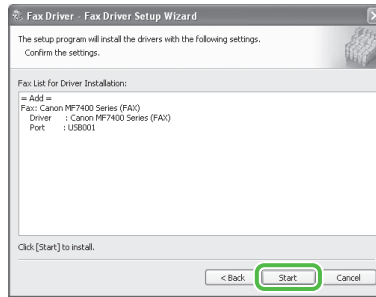 


23

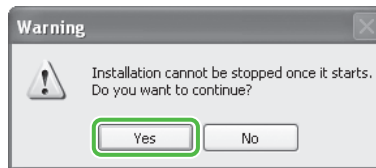 

24

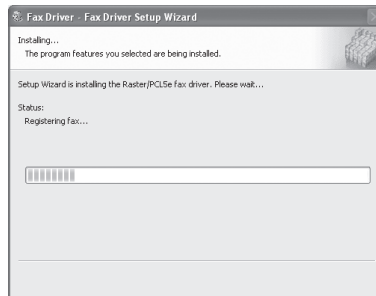 

25

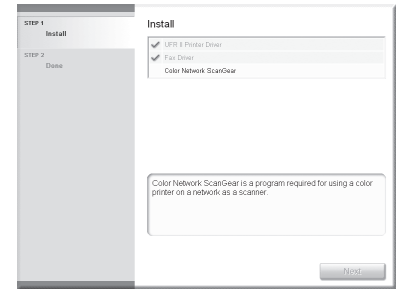 


The Color Network ScanGear installation screen appears. Follow the on-screen instructions.




If you are using MF7460, skip the Color Network ScanGear installation.

 
26

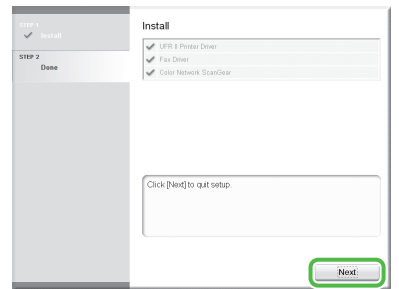

27

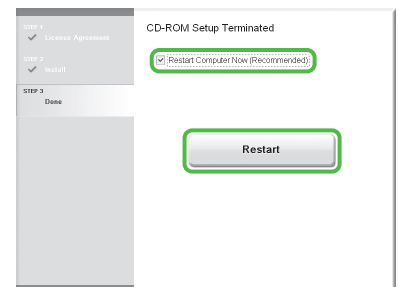 

28

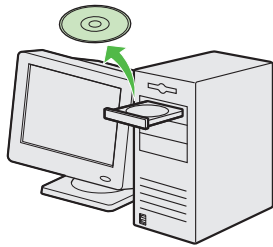 


Remove the UFR II LT/FAX User Software CD-ROM.



NOTE


If you are using MF7460, you have now completed installation.

 29

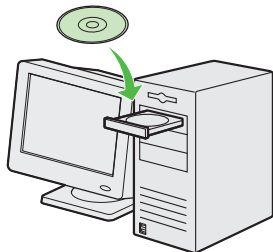

Insert the PCL User Software CD-ROM.
(MF7480/MF7470 Only)

 30

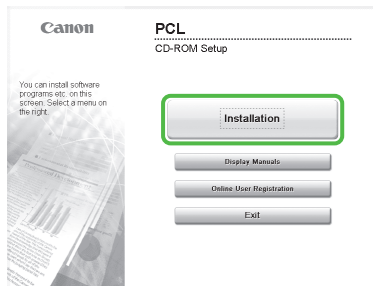


If the CD-ROM Setup screen is not displayed, click [start] on the Windows task bar → [My Computer].

Windows Vista: click [start] on the Windows task bar → [Computer].

Windows 98/Me/2000: double-click [My Computer] on the Windows desktop.


Open the CD-ROM icon, then double-click [MInst] ([MInst.exe]).

 31

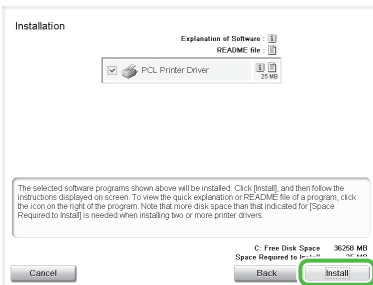


Select the PCL Printer Driver.

 
32

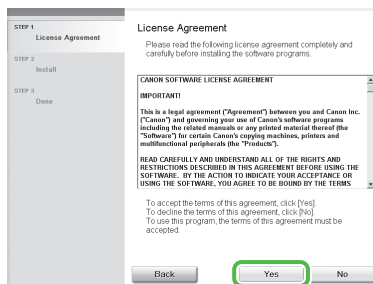


33

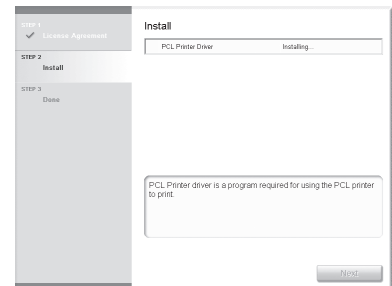 


34

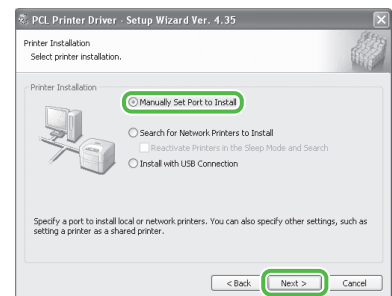 

35

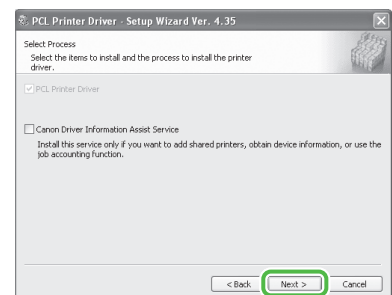 


36

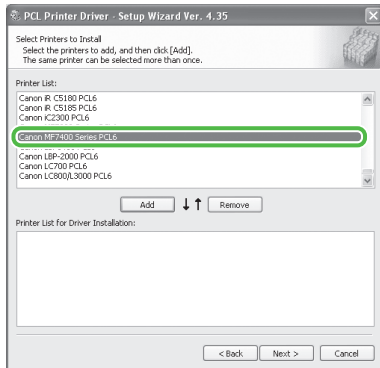 


Select [Canon MF7400 Series PCL5e]
or [Canon MF7400 Series PCL6] .

 37

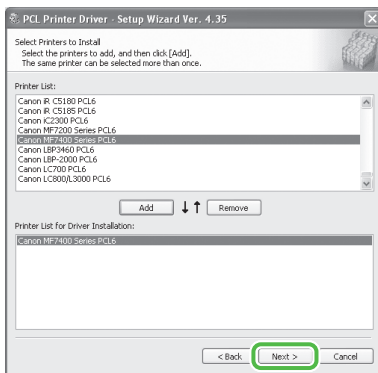


38

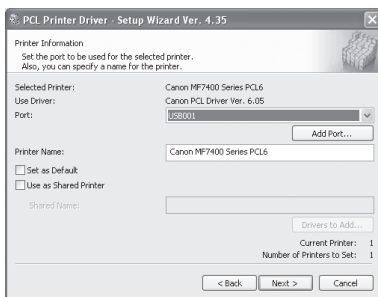 


Select the USB port you want to use
from [Port]. If you want to add a port,
click [Add Port] and then select the
printer port you want to add.

 
39

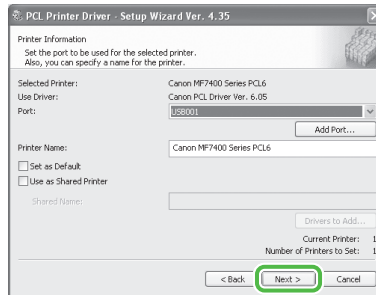


40

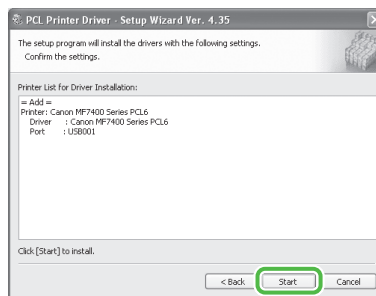 


41

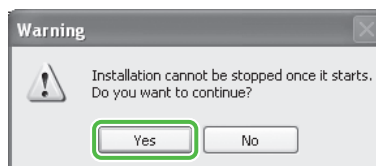 


42

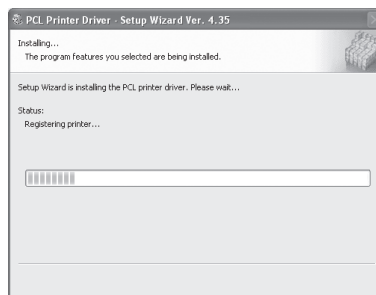 


43

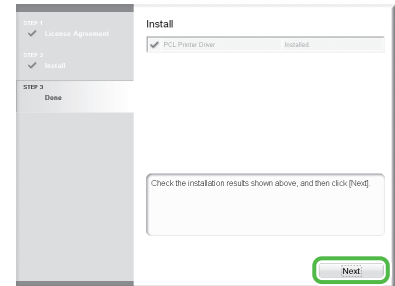 

44

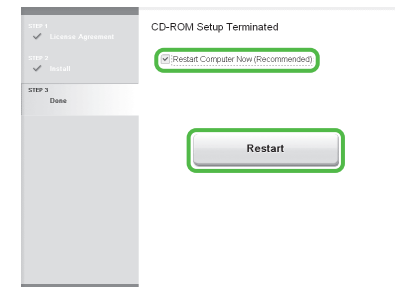 

45

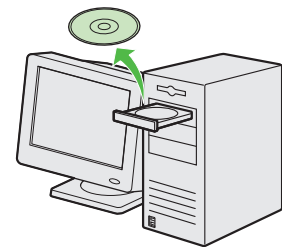 


Remove the PCL User Software CD-
ROM. You have now completed
installation.

Installation Procedure for Network Connection (imageCLASS MF7480/MF7470 Only)

1


Connect the machine to the network correctly, and confirm that the power is on.

 2

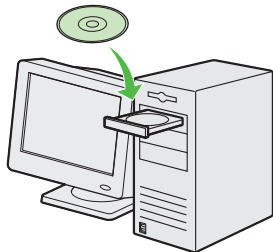


Insert the UFR II LT/FAX User Software CD-ROM.

 3

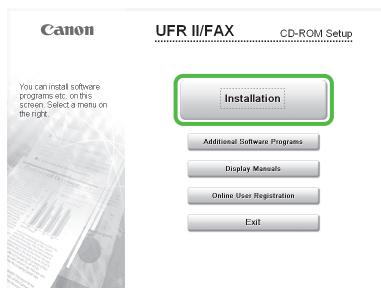


If the CD-ROM Setup screen is not displayed, click [start] on the Windows task bar → [My Computer].
Windows Vista: click [start] on the Windows task bar → [Computer].
Windows 98/Me/2000: doubleclick [My Computer] on the Windows desktop.
Open the CD-ROM icon, then doubleclick [MInst] ([MInst.exe]).

 4

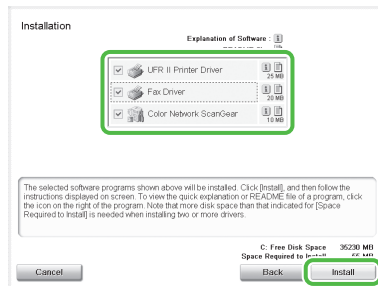


Select the UFR II Printer Driver, FAX Driver and Color Network ScanGear.

 
5

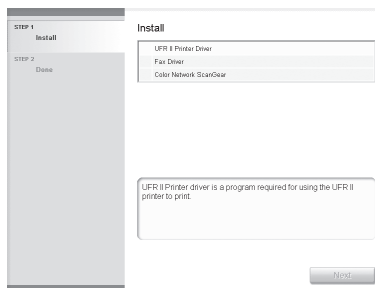


6

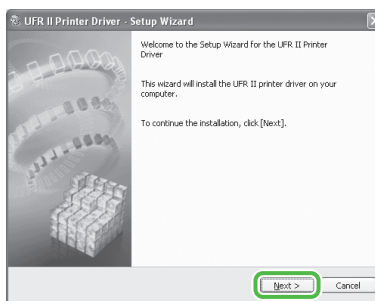 


7

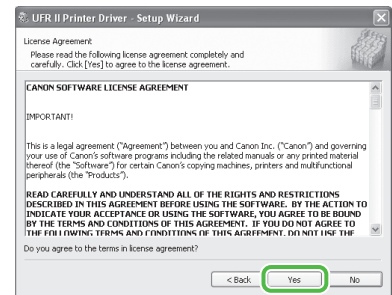 

8

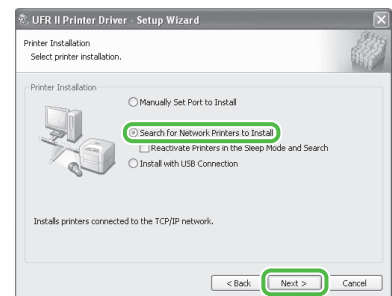 


9

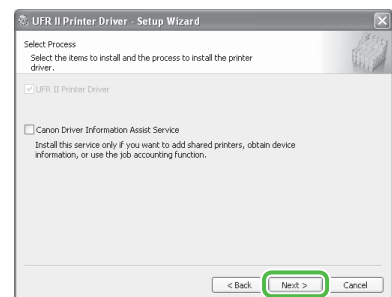 


A [Process to Install Fax Driver] dialog box will appear if drivers that can be installed with this Installer are already installed.
Select the desired installation and then click [Next].

 
10

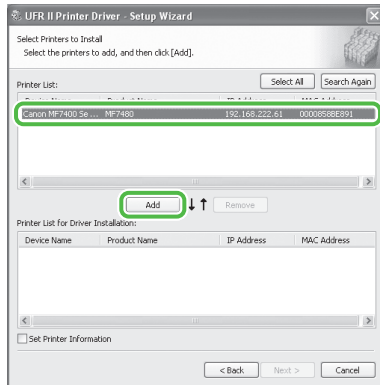


11

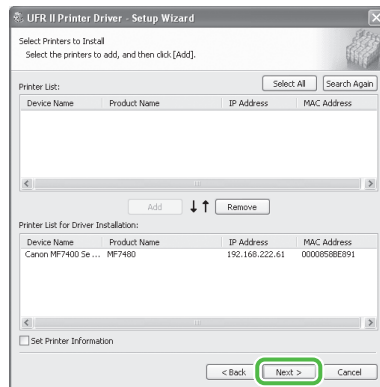 


12

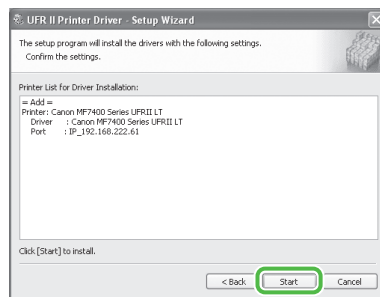 


13

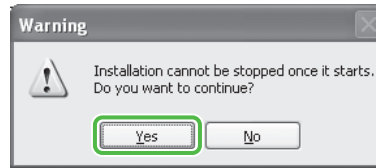 


14

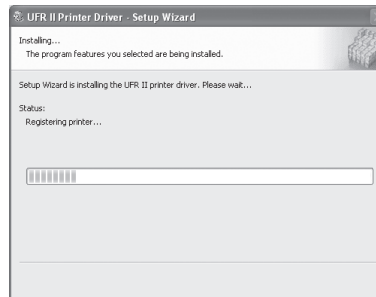 


15

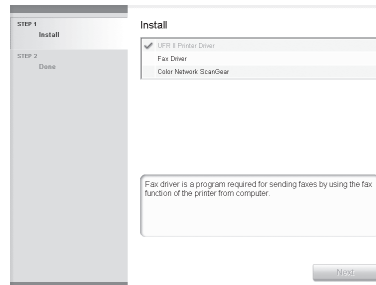 


16

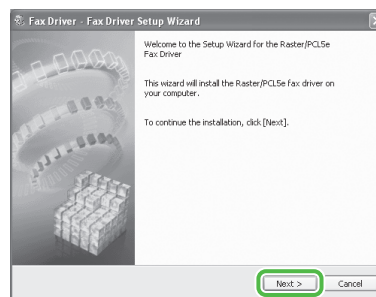 


17

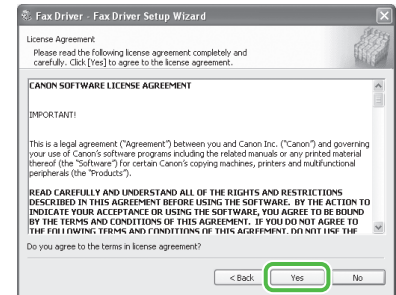 

18

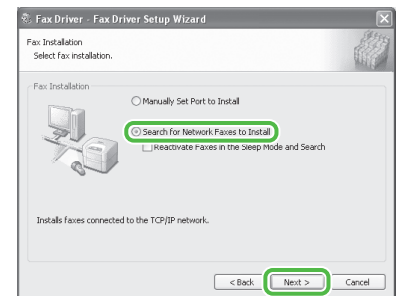 


19

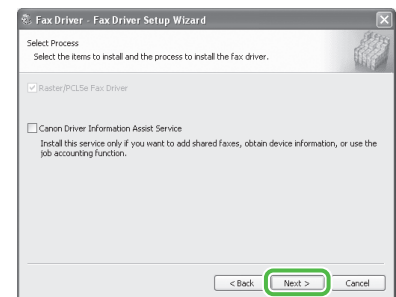 


A [Process to Install Fax Driver] dialog box will appear if drivers that can be installed with this Installer are already installed.
Select the desired installation and then click [Next].

 
20

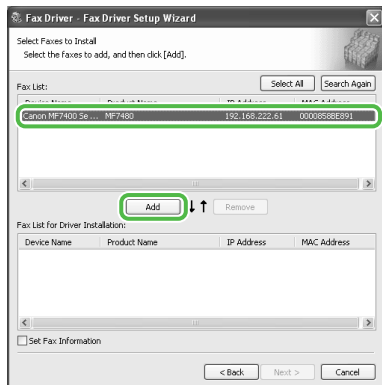


21

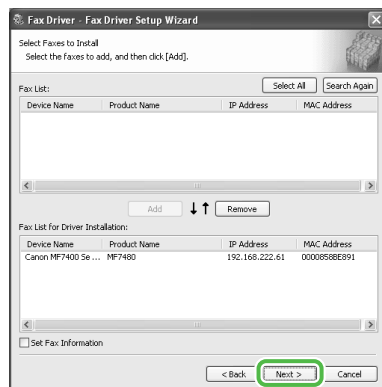 


22

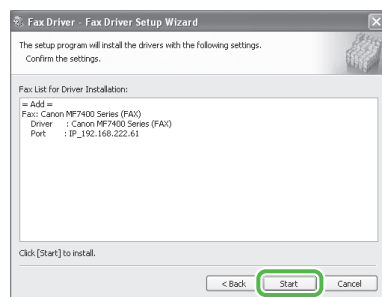 


23

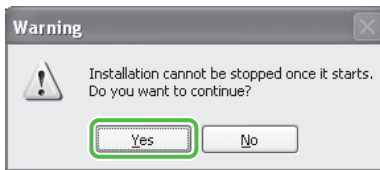 

24

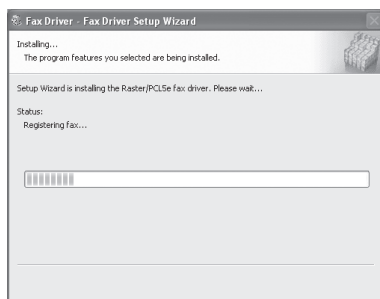 


25

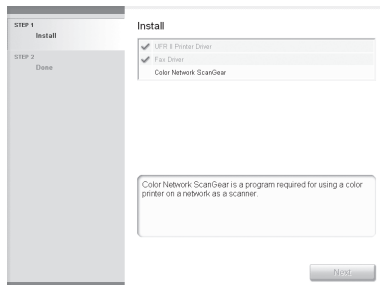 


The Color Network ScanGear installation screen appears. Follow the on-screen instructions.

 
26

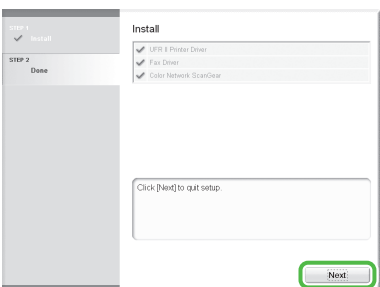

27

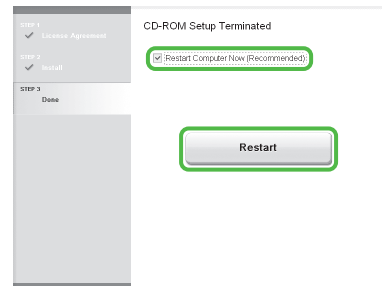 


28

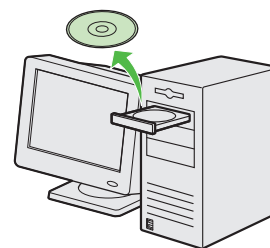 

Remove the UFR II LT/FAX User Software CD-ROM.

 29

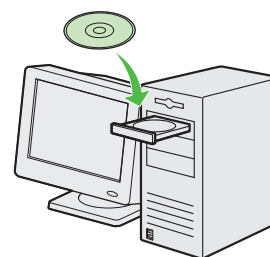


Insert the PCL User Software CD-ROM.

30




If the CD-ROM Setup screen is not displayed, click [start] on the Windows task bar → [My Computer].
 Windows Vista: click [start] on the Windows task bar → [Computer].
 Windows 98/Me/2000: double-click [My Computer] on the Windows desktop.
 Open the CD-ROM icon, then double-click [MInst] ([MInst.exe]).

 31

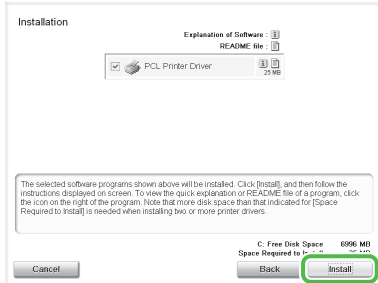


Select the PCL Printer Driver.

 
32

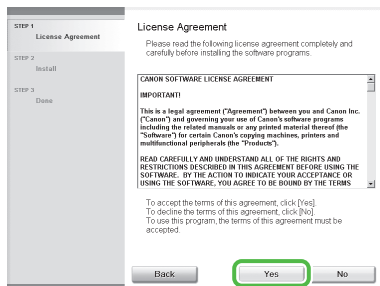


33

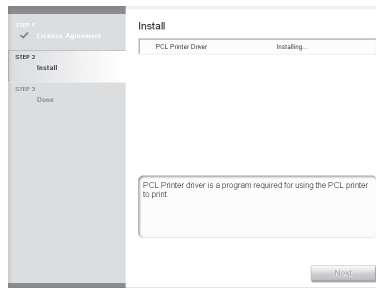 


34

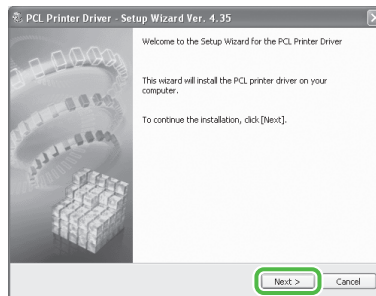 

35

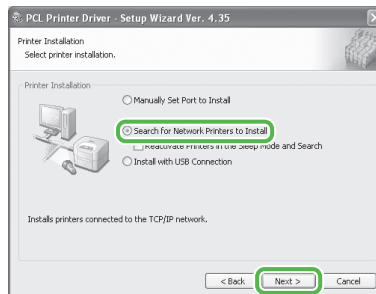 


36

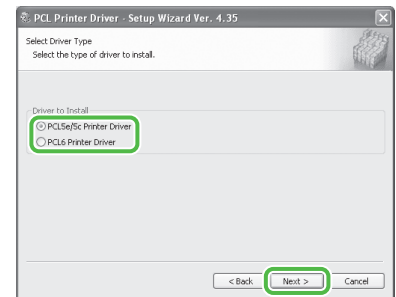 


Select [PCL5e/5c Printer Driver] or [PCL Printer Driver].

 
37

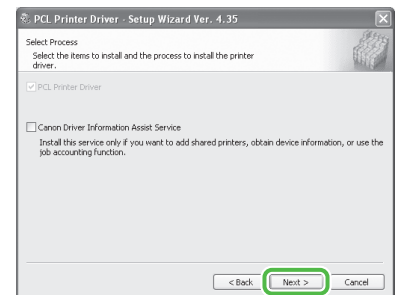


38

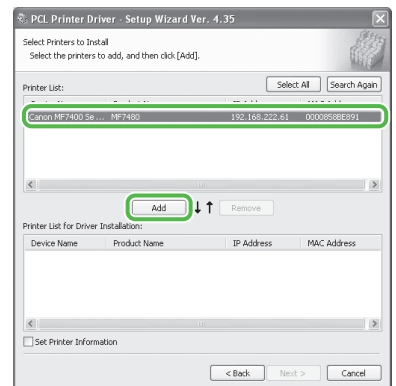 


39

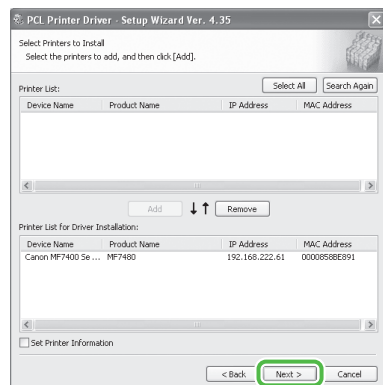 


43

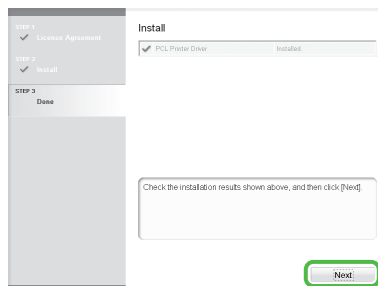 


44

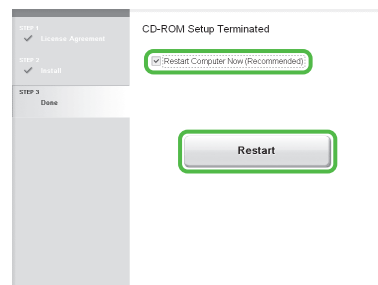 



40

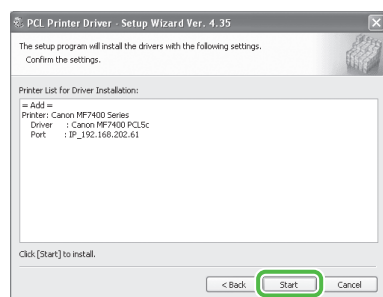 

41

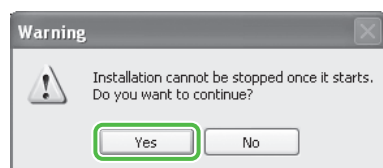 

42

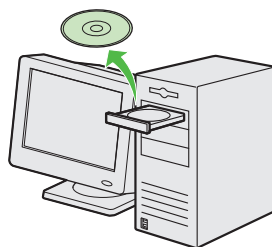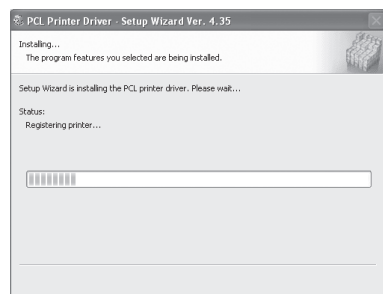  

Remove the PCL User Software CD-ROM. You have now completed installation.

Checking the Installation

Check if the drivers are installed successfully and that the machine is selected as the default printer.



NOTE

If your machine is selected in the [Printer] area when you open the [Print] dialog box from an application, your machine is set as the default printer.

1 Open the [Printers and Faxes] folder (Windows 98/2000: the [Printers] dialog box).

Windows XP/Server2003: Click [start] on the Windows task bar → select [Printers and Faxes].

Windows Vista: Click [start] on the Windows task bar → select [Control Panel] → [Hardware and Sound] → double-click → [Printer].

Windows 98/Me/2000: [Start] → [Settings] → [Control Panel] → double-click [Printers].

Make sure the corresponding printer driver icon is displayed.

2 Set as default printer.

Click the printer icon of this machine. Click [Set as Default Printer] from [File] menu.

3 Open the [Scanners and Cameras] folder (Windows 98/2000: the [Scanners and Cameras Properties] dialog box).

Windows XP/Server2003: Click [start] on the Windows task bar → select [Control Panel] → [Printers and Other Hardware] → [Scanners and Cameras].

Windows Vista: Click [start] on the Windows task bar → select [Control Panel] → [Hardware and Sound] → double-click → [Scanners and Cameras].

Windows 98/Me/2000: [Start] → [Settings] → [Control Panel] → double-click [Scanners and Cameras].

Make sure the corresponding scanner driver icon is displayed.

4 Check if the [Color Network ScanGear] appears in the program list.

Windows XP/Server2003: Click [start] on the Windows task bar → select [All Programs].

Windows Vista: Click [start] on the Windows task bar → select [All Programs].

Windows 98/Me/2000: [Start] → [Programs].

Make sure the [Color Network ScanGear] is listed in [All Programs] (or [Programs]).

Manual CD-ROM Menu

The Manual CD-ROM Menu is software that enables you to select and view PDF Manuals included on the CD-ROM via your computer screen. Follow the instructions below to use the Manual CD-ROM Menu.

System Requirements

The Manual CD-ROM Menu can be used in the following system environments.

Operation System

Microsoft Windows 98/98SE

Microsoft Windows Me

Microsoft Windows 2000 Professional/Server(Service Pack 4 or later)

Microsoft Windows XP (Service Pack 1a or later)

Microsoft Windows Server 2003

Microsoft Windows Vista

Mac OS 9.x

Mac OS X*

* Only in Classic environment.

Computer

- Any computer that can run the operating system listed above.
- A display with a resolution of 1024 x 768 pixels or higher.



 
NOTE

Depending on the configuration of your computer, some functions may not operate correctly. If the PDF manual does not open from the CD-ROM Menu, open the PDF file directly from the [us english] folder on the Manual CD-ROM.

Using the CD-ROM Menu

This section describes how to use the CD-ROM Menu.

When you insert the User Manual CD-ROM provided into the CD-ROM drive, the Language Selection screen is displayed. Clicking  on this screen displays the following menu.

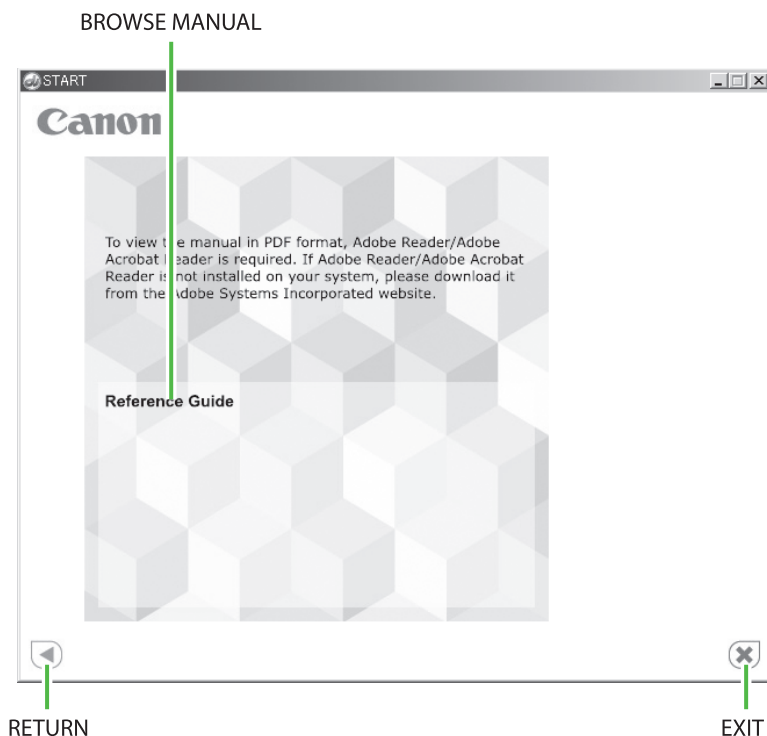

- Click [Reference Guide] to read the Reference Guide. After clicking on the guide, Acrobat Reader starts, and the PDF manual is displayed.
- Click  to return to the Language Selection screen.
- Click  to exit the CD-ROM menu.

Trademarks

Canon, the Canon logo and imageCLASS are trademarks of Canon Inc.

Microsoft, Windows, Windows Server and Windows Vista are trademarks or registered trademarks of Microsoft Corporation in the U.S. and/or other countries.

Adobe and Adobe Acrobat are trademarks of Adobe Systems Incorporated.

Mac OS is a registered trademark of Apple Inc.

Ethernet is a trademark of Xerox Corporation.

All other product and brand names are registered trademarks, trademarks or service marks of their respective owners.

Specifications subject to change without notice.

Copyright

Copyright © 2010 by Canon Inc. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of Canon Inc.

Disclaimers

The information in this document is subject to change without notice.

CANON INC. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, EITHER EXPRESS OR IMPLIED, EXCEPT AS PROVIDED HEREIN, INCLUDING WITHOUT LIMITATION, THEREOF, WARRANTIES AS TO MARKETABILITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OF USE OR NON-INFRINGEMENT. CANON INC. SHALL NOT BE LIABLE FOR ANY DIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY NATURE, OR LOSSES OR EXPENSES RESULTING FROM THE USE OF THIS MATERIAL.

**CANON INC.**

30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan

CANON U.S.A., INC.

One Canon Plaza, Lake Success, NY 11042, U.S.A.

CANON CANADA INC.

6390 Dixie Road Mississauga, Ontario L5T 1P7, Canada

CANON EUROPA N.V.

Bovenkerkerweg 59-61 1185 XB Amstelveen, The Netherlands

CANON FRANCE S.A.S.

17, quai du Président Paul Doumer 92414 Courbevoie Cedex, France

CANON COMMUNICATION & IMAGE FRANCE S.A.S. (Pour les utilisateurs de l'imprimante laser uniquement)

12, rue de l'Industrie 92414 Courbevoie Cedex, France

CANON (U.K.) LTD.

Woodhatch, Reigate, Surrey, RH2 8BF, United Kingdom

CANON DEUTSCHLAND GmbH

Europark Fichtenhain A10, 47807 Krefeld, Germany

CANON ITALIA S.p.A.

Via Milano, 8 20097 San Donato Milanese (MI) Italy

CANON ESPAÑA, S.A.

c/ Joaquín Costa 41, 28002 Madrid, Spain

CANON LATIN AMERICA, INC.

703 Waterford Way Suite 400 Miami, Florida 33126 U.S.A.

CANON AUSTRALIA PTY. LTD.

1 Thomas Holt Drive, North Ryde, Sydney, N.S.W. 2113, Australia

CANON CHINA CO., LTD.

15F Jinbao Building No.89 Jinbao Street, Dongcheng District, Beijing 100005, China

CANON SINGAPORE PTE. LTD.

1 HarbourFront Avenue #04-01 Keppel Bay Tower, Singapore 098632

CANON HONGKONG CO., LTD.

19/F., The Metropolis Tower, 10 Metropolis Drive, Hunghom, Kowloon, Hong Kong

120V