

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


# COOKTOP PARTS

For Models: KICU568SBL0  
(Black)

<b>Illus.</b>	<b>Part</b>	
<b>No.</b>	<b>No.</b>	<b>DESCRIPTION</b>
1		Literature Parts
	W10098720	Instruct, Install
	W10098710	Owners Manual
2	W10122346	Cooktop, Glass
3	W10122355	Bracket, Mntg(Kit)
4	W10122356	Bracket, Mntg(Kit)
5	W10122347	Seal
6	W10122332	Hotplate (180-180)
7	W10122353	Harness, Wire
8	W10122348	Spring
9	W10134544	Box, Burner
10	W10122333	Cover (Mica 180)
11	W10122335	Hotplate (210-150)
12	W10122340	Display
13	W10122351	Bracket, Mounting
14	W10122337	Cover (Mica 210)
15	W10122338	Cover (Mica 80)
16	W10122349	Harness, Wire
17	W10122354	Harness, Wire
18	W10122341	Display (Lock)
19	W10122344	Display (Clock)
20	W10122343	Display (Timer)
21	W10122342	Display (Power ON)
22	W10122336	Cover (Mica 280)
23	W10122350	Hotplate (280)

# INTERIOR PARTS

For Models: KICU568SBL0  
(Black)

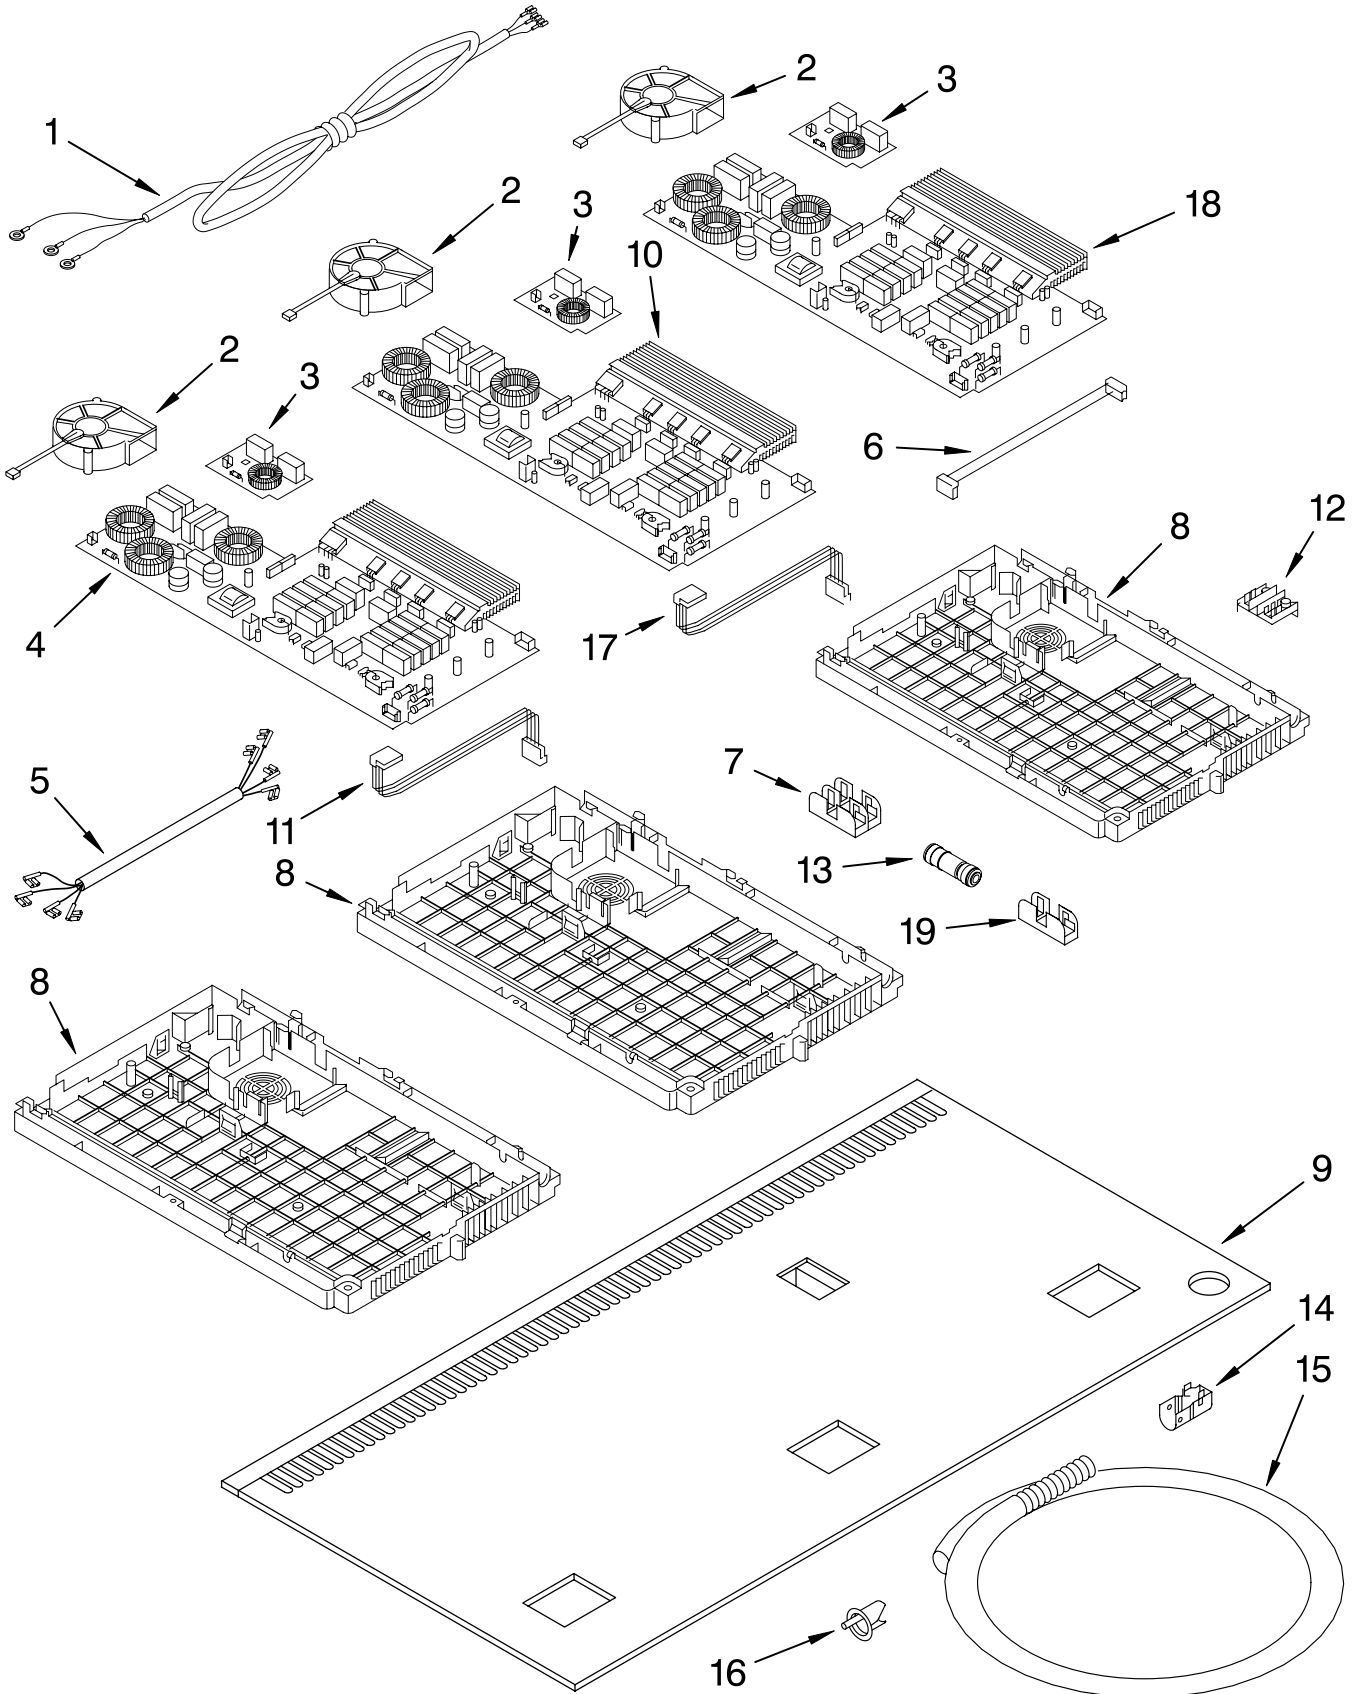

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# INTERIOR PARTS

For Models: KICU568SBL0  
(Black)

<b>Illus.</b>	<b>Part</b>	
<b>No.</b>	<b>No.</b>	<b>DESCRIPTION</b>
1	W10122358	Cord, Power
2	W10122363	Fan, Blower
3	W10134543	Control, Elec
4	W10122364	Control, Elec
5	W10134545	Harness, Wire
6	W10122361	Harness, Wire
7	W10122375	Block, Fuse
8	W10122362	Bracket, Control
9	W10122369	Cover, Bottom
10	W10122366	Control, Elec
11	W10122376	Harness, Wire (T Control)
12	W10122379	Block, Terminal
13	W10122374	Fuse
14	W10122370	Bracket, Mounting
15	W10122371	Conduit
16	W10122372	Bushing
17	W10122378	Harness, Wire
18	W10122367	Control, Elec
19	W10122373	Block, Fuse