


COOKTOP PARTS

For Models: MER7765WW0, MER7765WB0, MER7765WS0
(White on White) (Black) (Stainless Steel)

30" ELECTRIC CERAN
FREESTANDING RANGE
SELF CLEAN OVEN

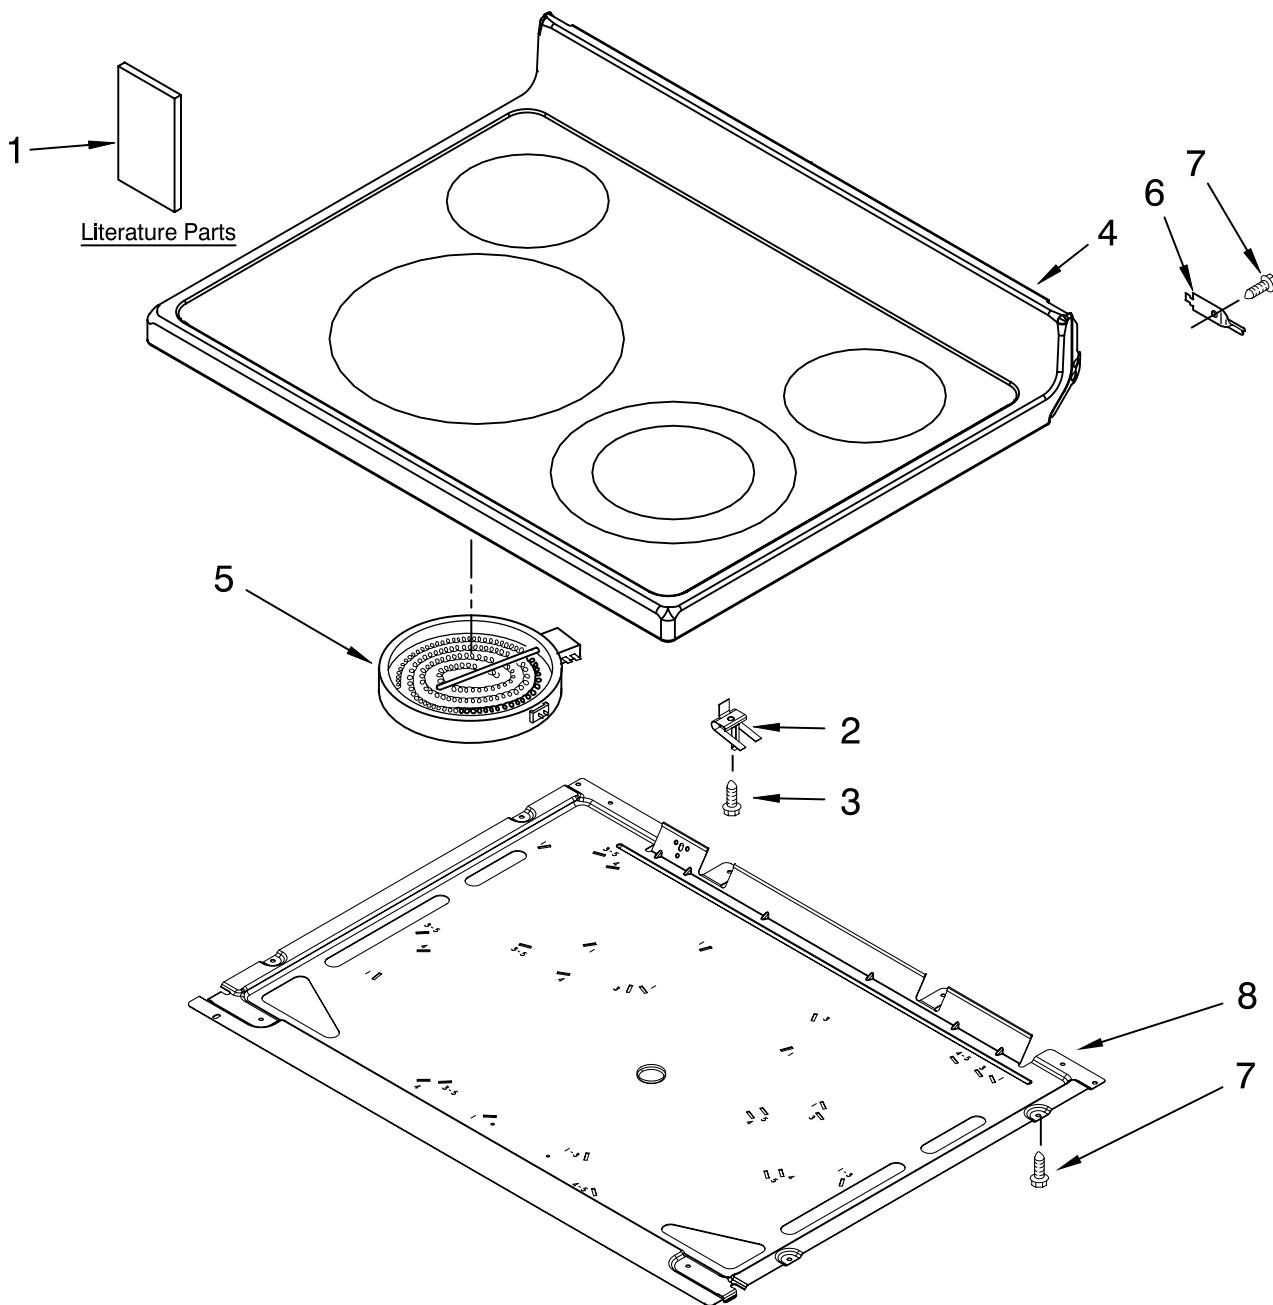

Illus. No.	Part No.	DESCRIPTION
1	W10196158	Literature Instructions, Installation
	9757142	Template, Anti-Tip English/Spanish
	9757143	English/French
	W10234645	Owners Manual
	W10237514	Tech Sheet
	9762761	Safer Cooking Tips


Illus. No.	Part No.	DESCRIPTION
2	W10162042	Spring, Locator
3	3196170	Screw
4	W10211392	Cooktop White
	W10211393	Black

Illus. No.	Part No.	DESCRIPTION
5	W10162040	Element, Surface 3000/1900W – LF
	W10169799	3000/1400W – RF
	8523698	1200 W – LR & RR
6	3195060	Hinge, Pin/Cooktop
7	3196169	Screw
8	W10170526	Pan, Radiant Elmt

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: MER7765WW0, MER7765WB0, MER7765WS0
(White on White) (Black) (Stainless Steel)

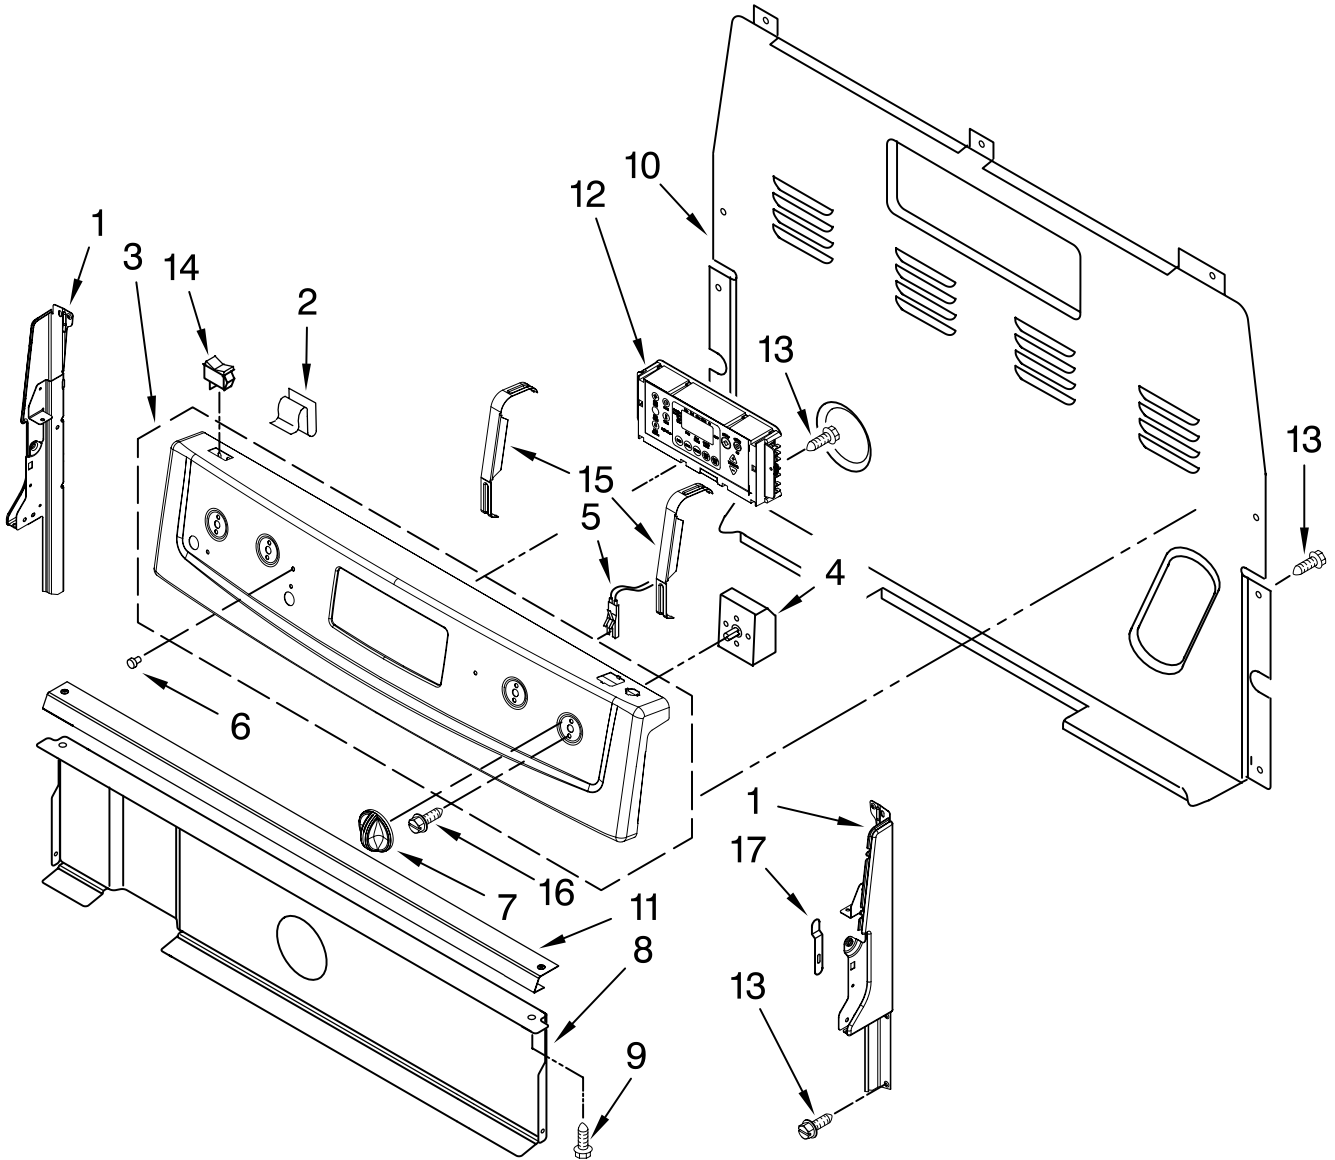

Illus. No.	Part No.	DESCRIPTION
1		Endcap
	W10184433	White Left Hand
	W10184434	White Right Hand
	W10184437	Black Left Hand
	W10184438	Black Right Hand
2	8273564	Clip
3		Panel, Control
	W10225543	White
	W10225544	Black
	W10225545	Stainless Steel
4		Switch, Infinite
	W10149355	LF,RF
	3148951	LR,RR

Illus. No.	Part No.	DESCRIPTION
5	8523265	Light, Ind. (2)
6	3196068	Lens, Light (2)
7		Knob, Infinite (4)
	W10211371	White
	W10211372	Black
8	W10134247	Shield, Heat
9		Screw
	3196166	White
	3196168	Black
10	8272473	Cover, Upper
11	W10182322	Brkt-Mntg, Console


Illus. No.	Part No.	DESCRIPTION
12		Control, Range
	W10173521	White
	W10173522	Black
13	3196178	Screw
14		Switch, Rocker
	3149360	White
	3148564	Black
15	W10138683	Brkt-Mntg, EOC
16	3400882	Screw
17	3196200	Clip, Spring

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: MER7765WW0, MER7765WB0, MER7765WS0

(White on White) (Black) (Stainless Steel)

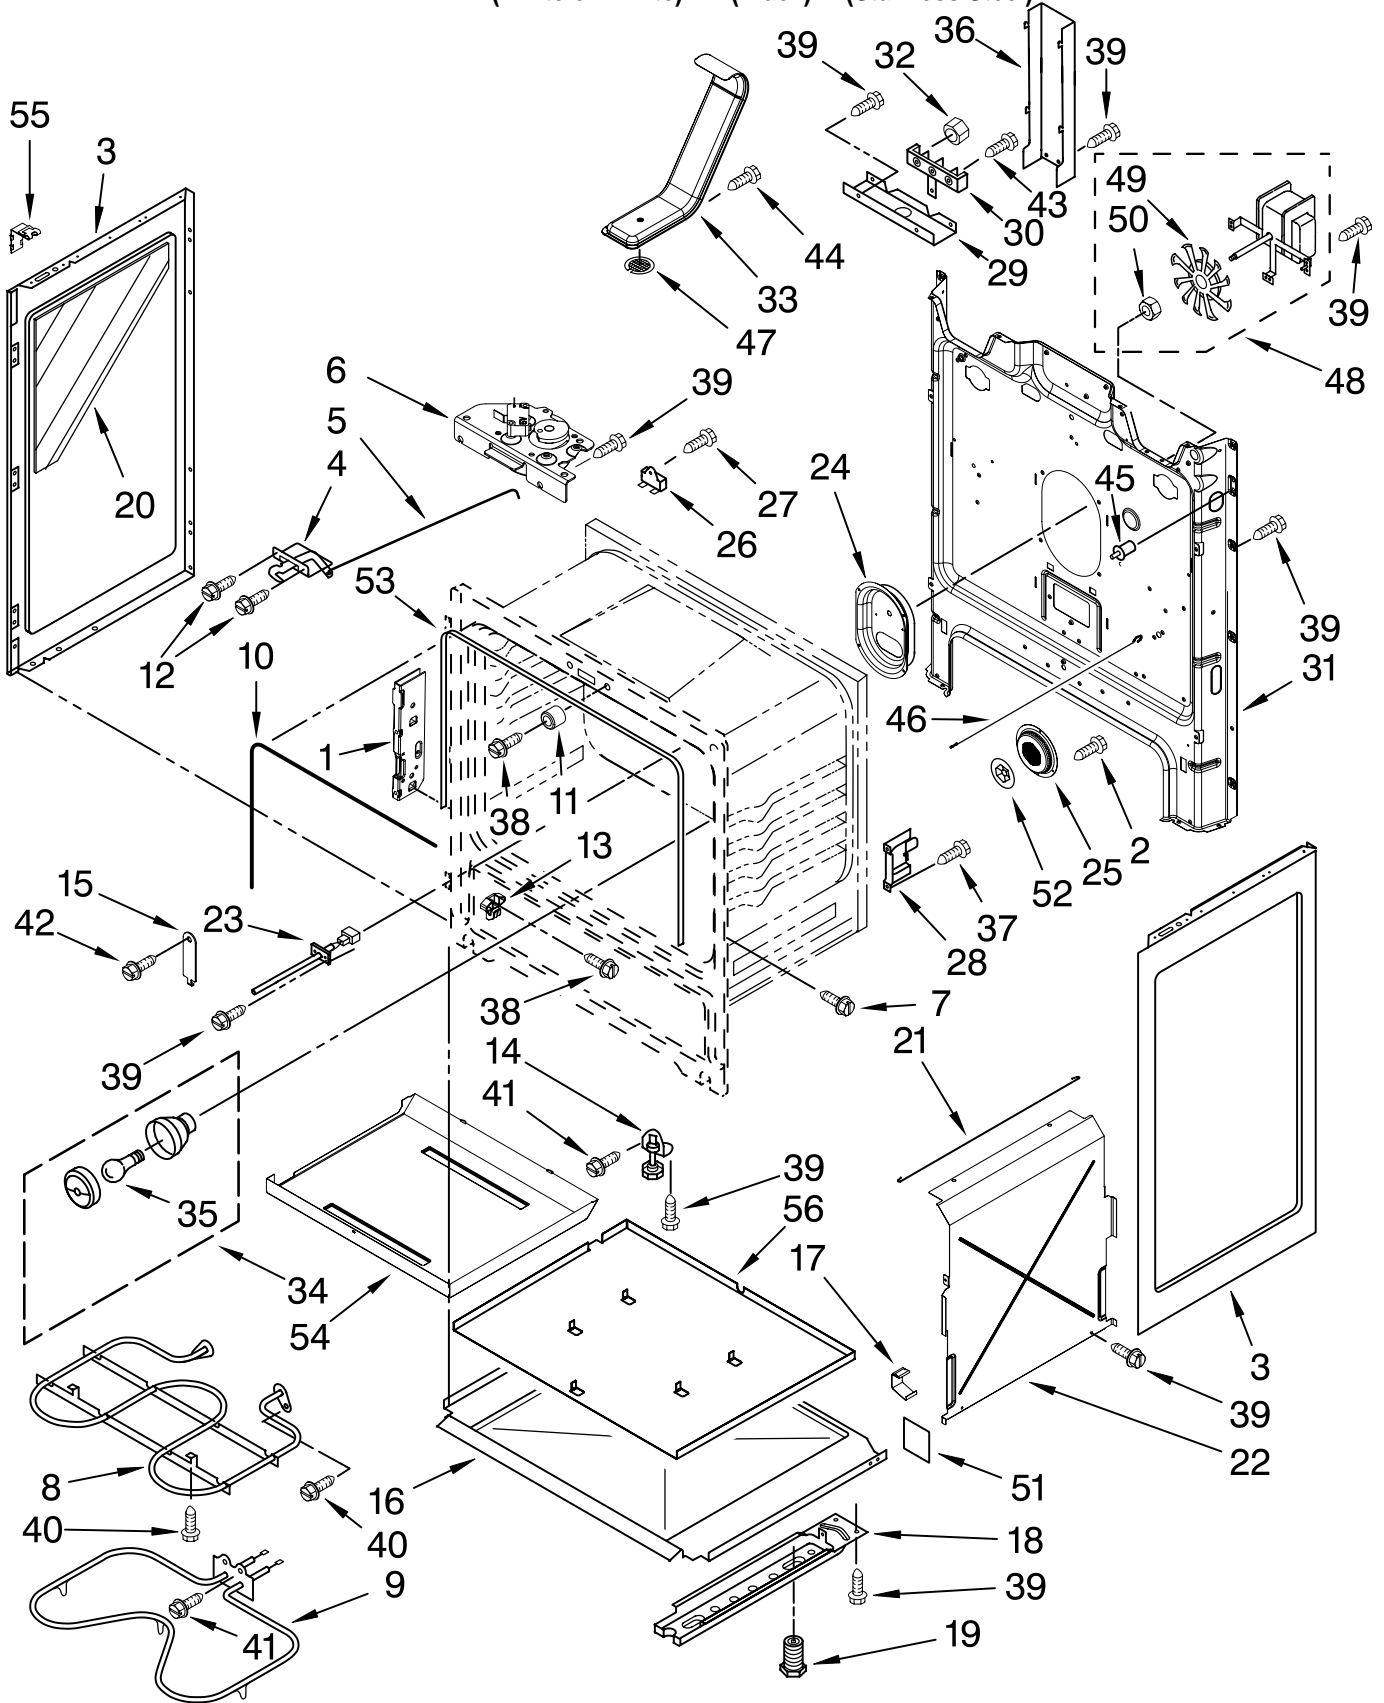

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS


For Models: MER7765WW0, MER7765WB0, MER7765WS0
(White on White) (Black) (Stainless Steel)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	9760407	Brkt-Mntg,Dr Hnge	20	W10182346	Insulation, Side	41	3196179	Screw
2	4449809	Screw	21	W10196451	Rod, Insl Retainer	42	W10031780	Screw
3		Panel, Side (2)	22	9758238	Retainer, Side (2)	43	3400016	Screw
	8053830	White-Textured	23	W10181986	Sensor, Oven	44	3196566	Screw
	8053832	Black	24	W10134126	Bracket, Fan	45	9757238	Switch - Door
4	9761013	Latch, Door	25	W10134124	Cover, Fan	46	9757239	Rod - Door Switch Rear Mount
5	W10078380	Rod, Latch	26	3196548	Fuse, Thermal	47	9761301	Screen - Catalyst
6	W10107830	Latch Asy, Rear	27	3196172	Screw	48	W10167917	Fan, Motor Cnvctn
7	W10067840	Screw	28	3186116	Support, Oven (2)	49	W10116351	Blade, Fan
8	9757340	Element, Broil	29	3186034	Bracket, Service	50	W10116349	Nut
9	9755770	Element, Bake	30	9761958	Block, Terminal	51	9759689	Card, Insulator
10	8522416	Seal, Oven Door	31	9757029	Back, Main	52	3400968	Nut
11	9758701	Spacer, Door	32	7103P027-60	Nut (3)	53	W10183712	Tray-Bake, Hidden
12	3196560	Screw	33	W10134285	Vent Tube Asm	54	W10010350	Oven Seal, Flange
13	W10114344	Glide, Drawer (2)	34	3196701	Light Socket Assy	55	W10183541	Clip, Spring
14	3196037	Foot, Front (2)	35	311255	Bulb, Oven Light	56	W10134125	Shield, Heat
15	9761517	Clip,Door Mntg(2)	36	9758283	Cover, Box	INSULATION		
16	W10134121	Tray, Insulation	37	3196165	Screw	W10208653		Insulation, Wrap
17	W10137382	Clip, Panel (6)	38	3196168	Screw	W10219986		Insulation, Back
18	9760314	Rail, Base (2)	39	3196178	Screw	8272613		Insulation, Vent
19	W10058460	Foot, Rear (2)	40	3196174	Screw			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRAWER & BROILER PARTS

For Models: MER7765WW0, MER7765WB0, MER7765WS0
 (White on White) (Black) (Stainless Steel)

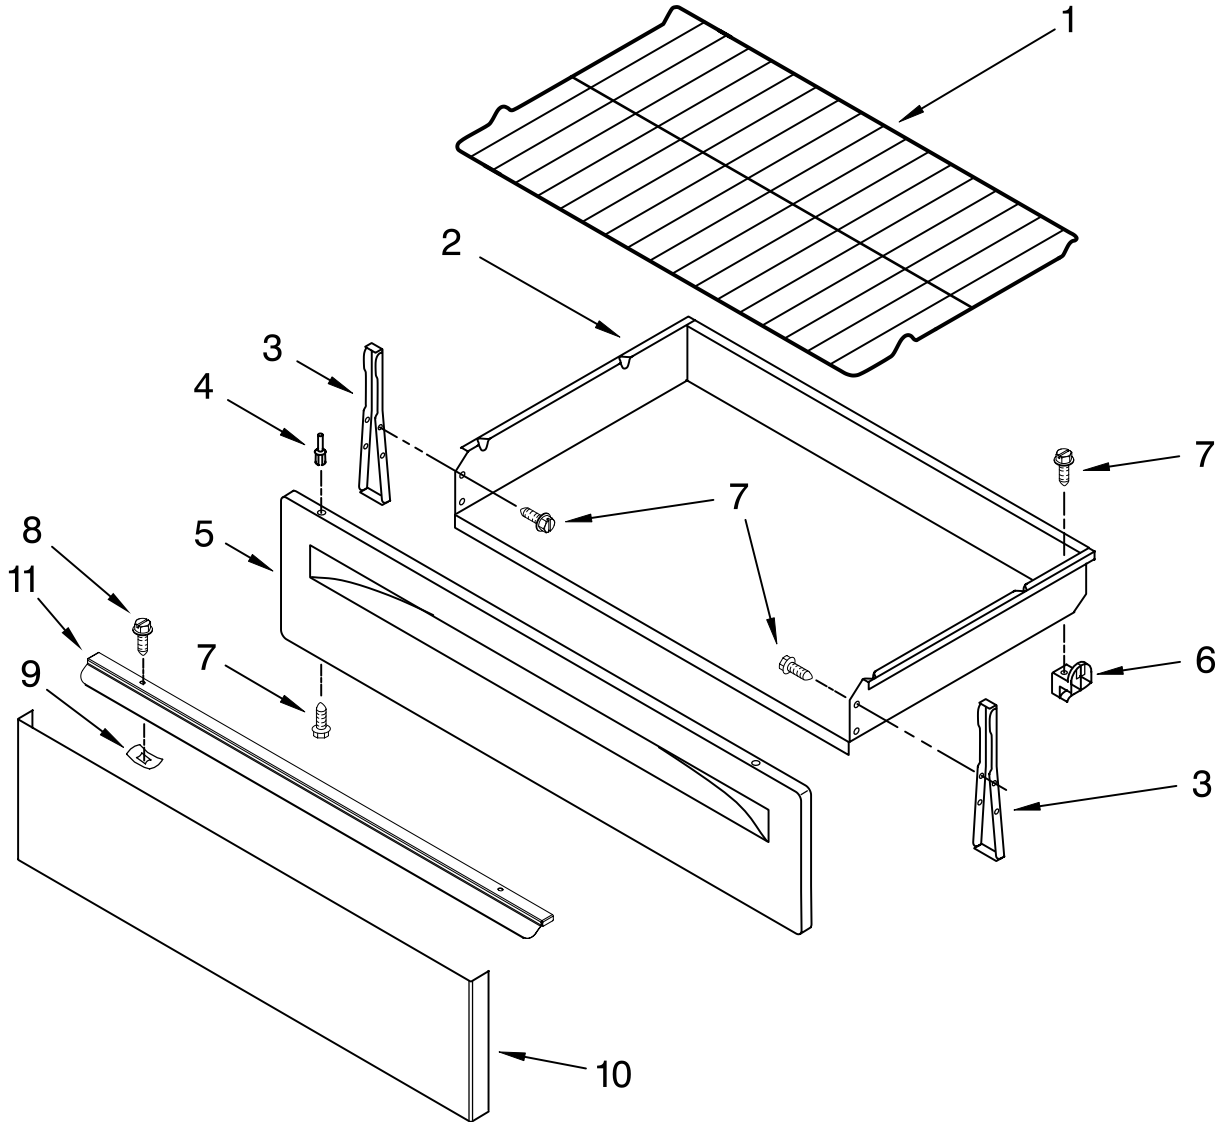


Illus. No.	Part No.	DESCRIPTION
1	W10179196	Rack, Oven (2)
2	9761031	Drawer, Storage
3	W10174396	Bracket, Drawer(2)
4		Rivet, Push (2)
	3196814	White
	3196813	Black
5		Drawer Front
	8053339	White
	8053341	Black
6	8053334	Glide, Drawer (2)
7	3196168	Screw
8	W10031790	Screw(Stls.Model)
9	9781235	Clip(Stls.Model)
10	W10133363	Panel(Stls.Model)
11	W10197980	Handle(Stls.Model)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: MER7765WW0, MER7765WB0, MER7765WS0
 (White on White) (Black) (Stainless Steel)

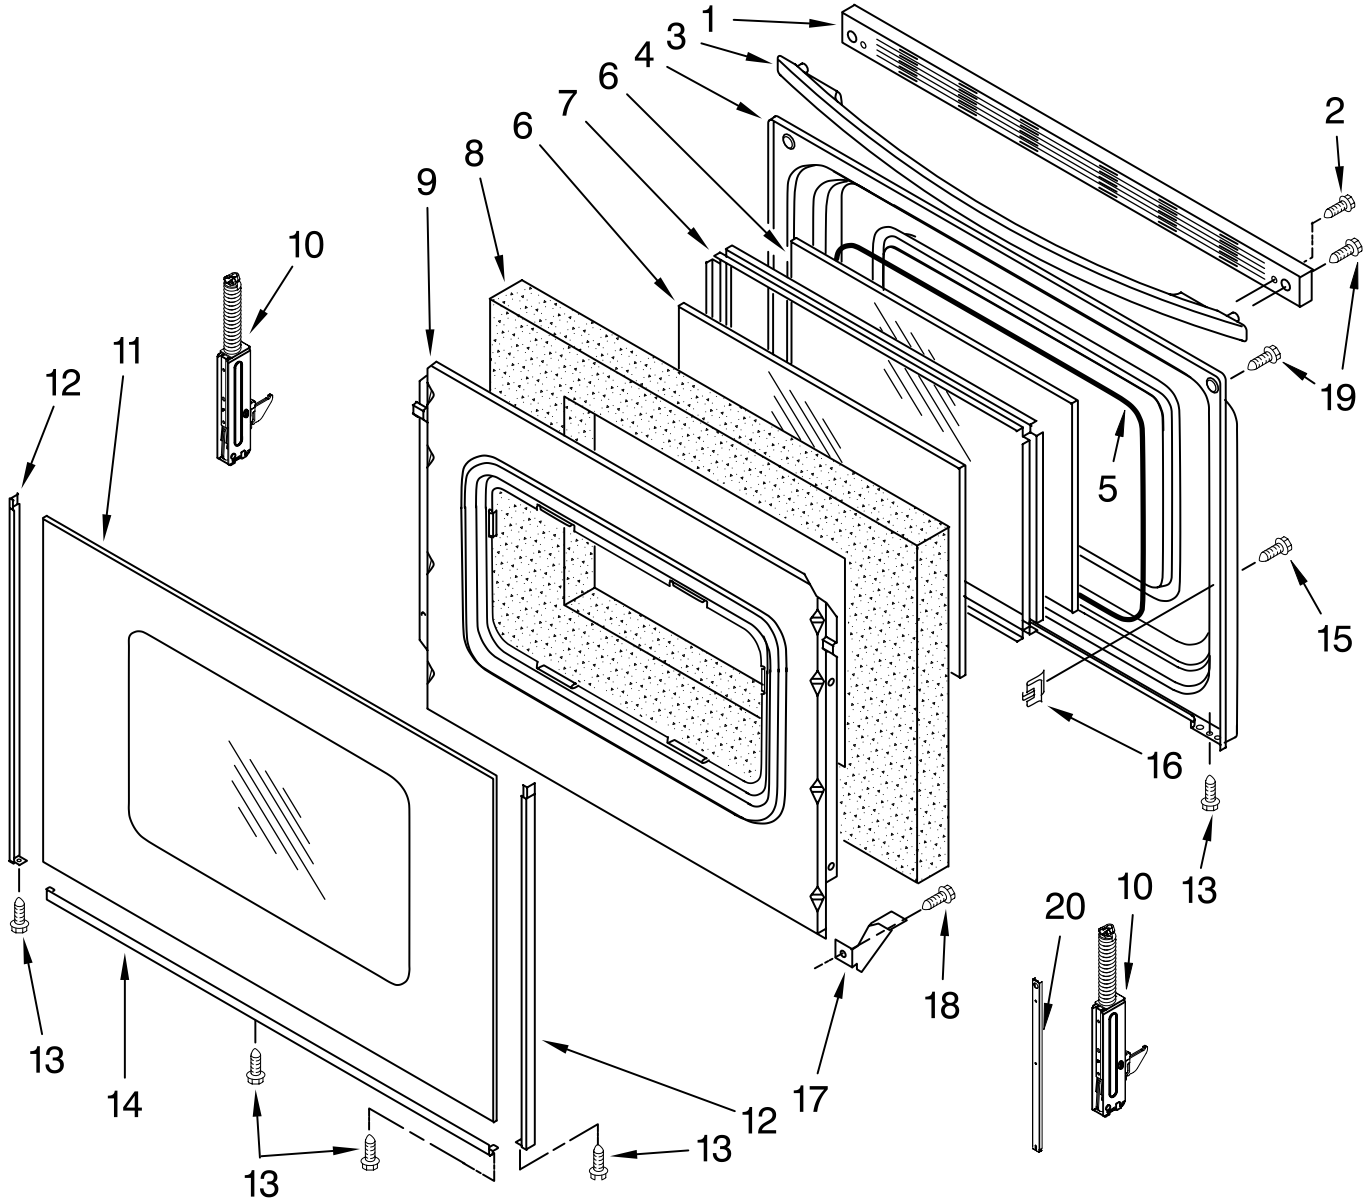

Illus. No.	Part No.	DESCRIPTION
1	W10144869	Trim, Top
	W10144870	Black
2	W10200660	Screw
3	W10111309	Handle, Door
	W10111310	White
	W10117150	Black
	W10171750	Stainless Steel
4	9761344	Liner, Door
5	W10238912	Seal, Window
6	9758162	Glass, Inner (2)
7	3186289	Frame, Glass
8	8272618	Insulation, Door

Illus. No.	Part No.	DESCRIPTION
9	9761357	Retainer, Insln
10	9761493	Hinge, Door (2)
11	W10106404	Glass, Outer Door
	W10106405	White
	W10181749	Black
	W10181749	Stainless Steel
12	8523172	Trim, Side
	8523172	White Left Hand
	8523166	White Right Hand
	8523171	Black Left Hand
	8523165	Black Right Hand
	W10113926	Stainless LH
	W10113925	Stainless RH

Illus. No.	Part No.	DESCRIPTION
13	3196160	Screw
14	8523175	Trim, Lower
	8523177	White
	8523177	Black
15	W10031790	Screw
16	9761517	Clip, Dr Mntg (2)
17	W10137382	Clip, Panel (2)
18	3196165	Screw
19	W10031780	Screw
20	W10113759	Strap, Door

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models: MER7765WW0, MER7765WB0, MER7765WS0
(White on White) (Black) (Stainless Steel)

Illus. No.	Part No.	DESCRIPTION
Parts Not Illustrated and Optional Parts (Not Included)		

REFINISHING MATERIAL

242756 Touch-Up
Self-Clean(1/2 Pt)

INSULATION

261514 Insulation,
Fiberglass (1-1/2"
x 24" x 120")
240132 Insulation,
Fiberglass (2-1/2"
x 22" x 120")

Illus. No.	Part No.	DESCRIPTION
<u>PAINT, TOUCH-UP (1/2oz.)</u>		
	72017	White
	511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930 White
285006 Superior Black
206922 Primer (White)

PAINT, BULK (1 qt.)

799344 White (Uncut)

ACCESSORY PARTS

241430 Foil, Aluminum
Oven (18" x 25')
3191048 Cleaner, Glass

Illus. No.	Part No.	DESCRIPTION
<u>ANTI-TIP KIT</u>		
	W10017440	Anti-Tip Kit

WIRING HARNESS PARTS

W10174429 Harness, Wire
(Cooktop Left)
W10170247 Harness, Wire
(Cooktop Right)
W10174428 Harness, Wire
(Sensor/Dr Switch)
W10174460 Harness, Wire
(Warm Zone)
W10237609 Harness, Wire
(Main)
9757339 Harness, Wire
(Bake, Hidden)
8523279 Wire, Ground
313660 Clip, Ground Wire
3196173 Screw
3196154 Screw, Ground

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST