

*Thinking of you*

 **Electrolux**

USER MANUAL

EFA9620



**EN**

RECOMMENDATIONS AND SUGGESTIONS	6
CHARACTERISTICS	7
USE	12
MAINTENANCE	14

EN

## **Welcome to the world of Electrolux**

Thank you for choosing a first class product from Electrolux, which hopefully will provide you with lots of pleasure in the future. The Electrolux ambition is to offer a wide variety of quality products that make your life more comfortable. You find some examples on the cover in this manual. Please take a few minutes to study this manual so that you can take advantage of the benefits of your new machine. We promise that it will provide a superior User Experience delivering Ease-of-Mind. Good luck!



# RECOMMENDATIONS AND SUGGESTIONS

## Installation

- The manufacturer will not be held liable for any damages resulting from incorrect or improper installation.
- The minimum safety distance between the cooker top and the extractor hood is 650 mm.
- Check that the mains voltage corresponds to that indicated on the rating plate fixed to the inside of the hood.
- For Class I appliances, check that the domestic power supply guarantees adequate earthing.

Connect the extractor to the exhaust flue through a pipe of minimum diameter 120 mm. The route of the flue must be as short as possible.

- Do not connect the extractor hood to exhaust ducts carrying combustion fumes (boilers, fireplaces, etc.).
- If the extractor is used in conjunction with non-electrical appliances (e.g. gas burning appliances), a sufficient degree of aeration must be guaranteed in the room in order to prevent the backflow of exhaust gas. The kitchen must have an opening communicating directly with the open air in order to guarantee the entry of clean air.

## Use

- The extractor hood has been designed exclusively for domestic use to eliminate kitchen smells.
- Never use the hood for purposes other than for which it has been designed.
- Never leave high naked flames under the hood when it is in operation.

- Adjust the flame intensity to direct it onto the bottom of the pan only, making sure that it does not engulf the sides.
- Deep fat fryers must be continuously monitored during use: overheated oil can burst into flames.
- Do not flambè under the range hood; risk of fire
- The hood should not be used by children or persons not instructed in its correct use.

## Maintenance


- Switch off or unplug the appliance from the mains supply before carrying out any maintenance work.
- Clean and/or replace the Filters after the specified time period.
- Clean the hood using a damp cloth and a neutral liquid detergent.



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

# CHARACTERISTICS

## Dimensions

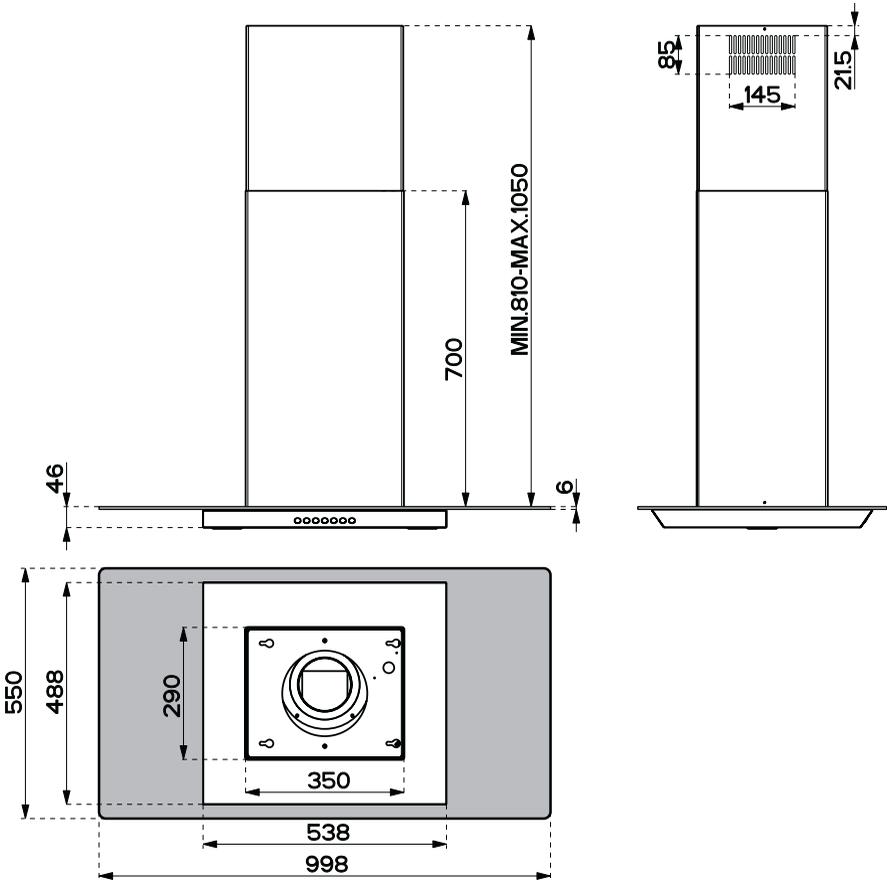

## Components

### Ref. Q.ty Product Components


<b>1</b>	1	Hood Body, complete with: Controls, Light, Blower, Filters
<b>2</b>	1	Telescopic Chimney comprising:
<b>2.1</b>	1	Upper Section
<b>2.2</b>	1	Lower Section
<b>7.1</b>	1	Telescopic frame complete with extractor, consisting of:
<b>7.1a</b>	1	Upper frame
<b>7.1b</b>	1	Lower frame
<b>9</b>	1	Reducer Flange $\varnothing$ 150-120 mm
<b>10</b>	1	Flange $\varnothing$ 150
<b>15</b>	1	Air Outlet Connection
<b>24</b>	1	Junction box
<b>25</b>	2	Pipe clamps

### Ref. Q.ty Installation Components

<b>11</b>	4	Wall Plugs $\varnothing$ 10
<b>12c</b>	6	Screws 2,9 x 6,5
<b>12e</b>	2	Screws 2,9 x 9,5
<b>12f</b>	4	Screws M6 x 10
<b>12g</b>	4	Screws M6 x 80
<b>12h</b>	4	Screws 5,2 x 70
<b>21</b>	1	Drilling template
<b>22</b>	4	6.4 mm int. dia washers
<b>23</b>	4	M6 nuts

### Q.ty Documentation


<b>1</b>	1	Instruction Manual
----------	---	--------------------

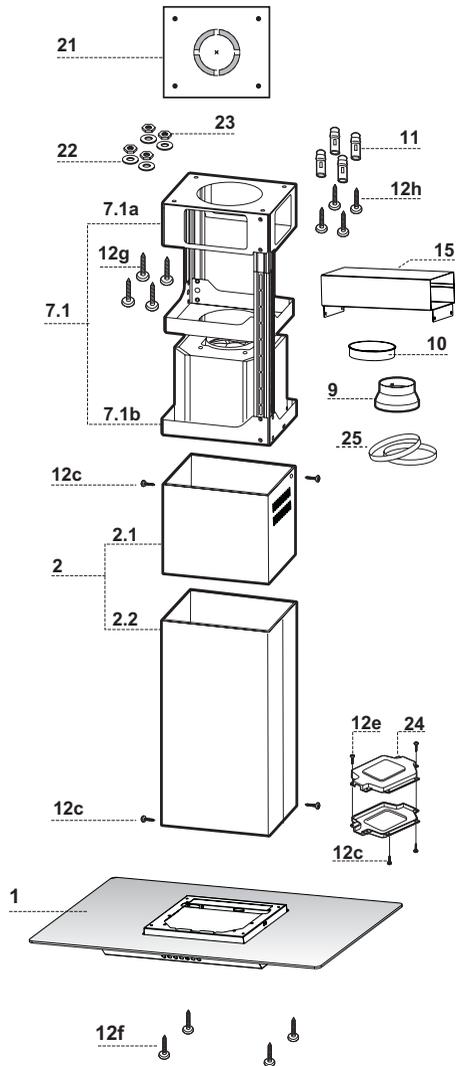

# INSTALLATION

## Drilling the Ceiling/shelf

- Use a plumb line to mark the centre of the hob on the ceiling/support shelf.
- Place the drilling template **21** provided on the ceiling/support shelf, making sure that the template is in the correct position by lining up the axes of the template with those of the hob.
- Mark the centres of the holes in the template.
- Drill the holes at the points marked:
  - for concrete ceilings, drill for plugs appropriate to the screw size.
  - for hollow brick ceilings with wall thickness of 20 mm: drill  $\varnothing$  10 mm(immediately insert the Dowels **11** supplied).
  - for wooden beam ceilings, drill according to the wood screws used.
  - for wooden shelf, drill  $\varnothing$  7 mm.
  - for the power supply cable feed, drill  $\varnothing$  10 mm.
  - for the air outlet (Ducted Version), drill according to the diameter of the external air exhaust duct connection.
- Insert two screws of the following type, crossing them and leaving 4-5 mm from the ceiling:
  - for concrete ceilings, use the appropriate plugs for the screw size (not provided).
  - for Cavity ceiling with inner space, with wall thickness of approx. 20 mm, Screws **12h**, supplied.
  - for wooden beam ceilings, use 4 wood screws (not provided).
  - for wooden shelf, use 4 screws **12g** with washers **22** and nuts **23**, provided.

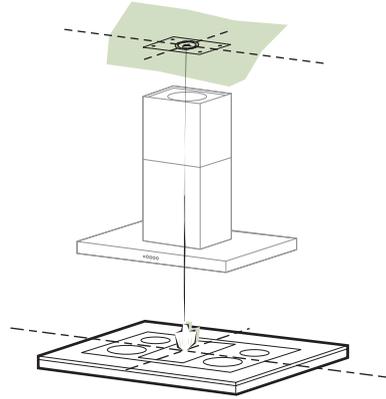

## Fixing the frame

- Loosen the two screws fastening the lower chimney and remove this from the lower frame.
- Loosen the two screws fastening the upper chimney and remove this from the upper frame.

If you wish to adjust the height of the frame, proceed as follows:



- Unfasten the eight metric screws joining the two columns, located at the sides of the frame.
- Adjust the frame to the height required, then replace all the screws removed as above.
- Insert the upper chimney stack from above, and leave it running free on the frame.
- Lift up the frame, fit the frame slots onto the screws up to the slot end positions.
- Tighten the two screws and fasten the other two screws provided with the hood.

Before tightening the screws completely it is possible to adjust the frame by turning it. Make sure that the screws do not come out of their seats in the slotted holes.

- The frame mountings must be secure to withstand the weight of the hood and any stresses caused by the occasional side thrust applied to the device.

On completion, check that the base is stable, even if the frame is subjected to bending.


- In all cases where the ceiling is not strong enough at the suspension point, the installer must provide strengthening using suitable plates and backing pieces anchored to the structurally sound parts.

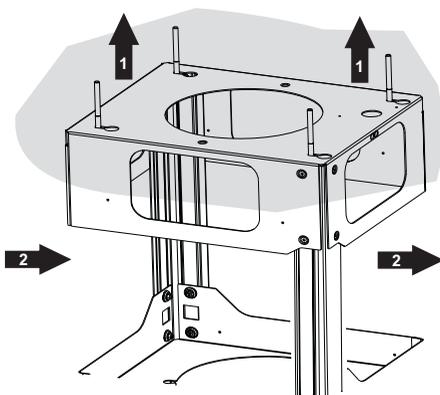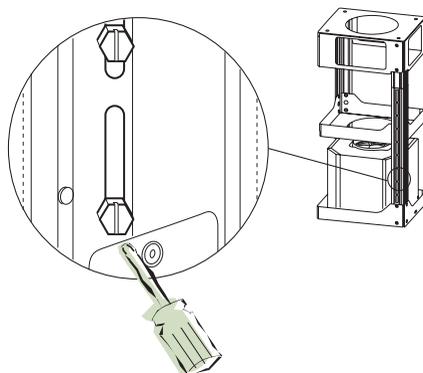

### Connection in Ducting Version


When installing the ducting version, connect the hood to the chimney using either a flexible or rigid pipe  $\varnothing$  150 or 120 mm, the choice of which is left to the installer.

- To install a  $\varnothing$  120 mm air exhaust connection, insert the reducer flange **9** on the hood body outlet.
- Fix the pipe using the pipe clamps **25** provided.
- Remove charcoal filters, if present.

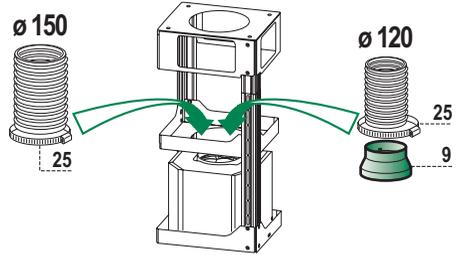

### Connection in Recycling Version

- Fix the connection **15** to the frame using the 4 screws provided.
- Fix the flange **10** to the lower opening of the connection **15**.
- Connect the hood air outlet to the flange in the lower part of the junction using a rigid or flexible  $\varnothing$  150 tube (by installer's choice).
- Ensure that the charcoal filters have been fitted.

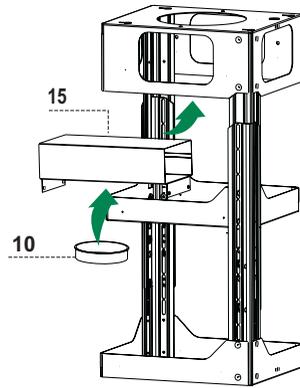


### Chimney assembly / Mounting the hood body

- Position the upper chimney section and fix the upper part to the frame using the 2 screws **12c** (2,9 x 6,5) provided.
- Similarly, position the lower chimney section and fix the lower part to the frame using the 2 screws **12c** (2,9 x 6,5) provided.


Before fixing the hood body to the frame:

- Remove the grease filters from the hood body.
- Remove charcoal filters, if present.
- From below, use the 4 screws **12f** (M6 x 10) provided to fix the hood body to the frame.

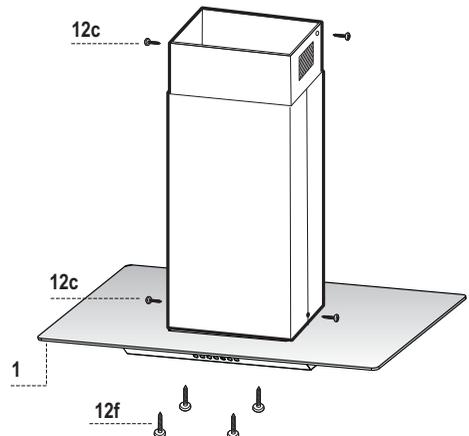


## Electrical Connection

- Connect the hood to the mains through a two-pole switch having a contact gap of at least 3 mm.
- Remove the grease filters (see paragraph Maintenance) being sure that the connector of the feeding cable is correctly inserted in the socket placed on the side of the fan.
- Connect the control connector **Cmd.**
- Connect the lights connector **Lux.**
- Place the connectors in the junction box **24** and close it using the 2 screws **12e** (2,9 x 9,5) provided.
- Fix the junction box to the hood body using the 2 screws **12c** (2,9 x 6,5) provided.
- For the recirculation version, fit the activated carbon odour filter.
- Replace the grease filters.

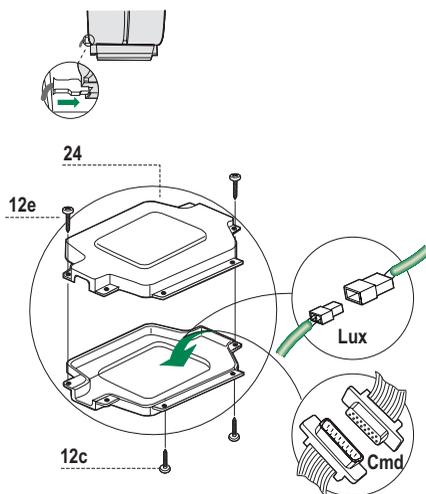

## USE

The hood can be switched on pushing directly onto the requested speed without firstly having to select 0/1 button

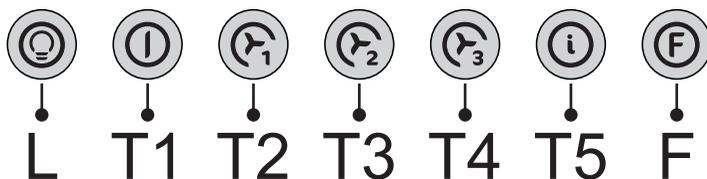


Touch control	Basic functions	Indicator lights	
	<i>Dual Function</i>		
<b>L</b>	When briefly pressed it switches the lighting system on and off.	Touch control unlit	Lights off
	<i>When pressed for 2 seconds it starts the lighting system in "courtesy light" mode. The lamps are fed at a reduced power of approximately 5W. Such function can be stopped by pressing the touch control for 2 seconds or just by pressing it shortly in order to return to the normal lighting mode. In courtesy light mode the touch control is not lit.</i>	Touch control lit	Lights on
		<i>Touch control unlit</i>	<i>Courtesy light on</i>
<b>T1</b>	When pressed the motor is stopped, regardless of the speed it is set to.	Touch control lit	Motor on
		Touch control unlit	Motor off
<b>T2</b>	When pressed the motor is set to the first speed	Touch control lit	
<b>T3</b>	By a brief pressing the motor is set to the second speed.	Touch control lit	Second speed on
	<i>By pressing the touch control for approximately 2 seconds the <b>Delay</b> function is enabled, i.e delayed shutdown of the appliance ensuring a complete elimination of the residual odours. This function can be activated at OFF-position and at 1°, 2° and 3°speeds. It can be stopped in advance by pressing any of the touch controls (<b>T</b>) with the exception of T3. The Delay function works according to the following scheme:</i> 1°speed / OFF = 20 minutes 2°speed = 15 minutes 3°speed = 5 minutes	<i>Flashing touch control</i>	<i>Delay function on</i>
<b>T4</b>	When pressed the motor is set to the third speed	Touch control lit	
<b>T5</b>	When pressed the motor is set to the intensive speed timed to 5 minutes. At the end of 5 minutes of intensive speed the hood starts again at the speed it was set to previously. In case the hood is set to the intensive speed directly from OFF-state it will then start from the first speed after 5 minutes of intensive speed.	Touch control lit	
<b>F</b>	When pressed for 4 seconds it resets the filter alarm signal indicated by flashing of the touch control <b>T1</b> . This procedure can be carried out only when the motor is stopped.	Touch control lit	Metal grease filters saturation alarm. Metal grease filters need to be washed. The alarm starts up after 100 working hours.
		Flashing touch control	Charcoal filter saturation alarm. Charcoal filter has to be replaced and metal grease filters washed. The alarm starts up after 200 working hours. (Activation; check the paragraph "Charcoal filter")

## MAINTENANCE

### Cleaning the Comfort Panels

- Pull the Comfort Panel to open it.
- Disconnect the panel from the hood canopy by sliding the fixing pin lever.
- The comfort panel must never be washed in a dishwasher.
- Clean the outside using a damp cloth and neutral liquid detergent.
- Clean the inside as well using a damp cloth and neutral detergent; do not use wet cloths or sponges, or jets of water; do not use abrasive substances.
- When the above operation has been completed, hook the panel back to the hood canopy and close it by turning the knob in the opposite direction.

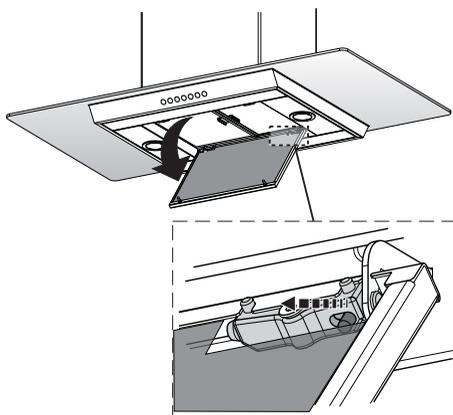


### Cleaning of the Metal Cassette Filters

#### Alarm reset

- Stop the motor.
- Press the **F** -touch control for at least 4 seconds until the **T1** -touch control flashes.

#### Cleaning the filters

- Filters can be washed in the dish machine. They need to be washed every 2 months or even more frequently in case of particularly intensive use of the hood.
- Pull the Comfort Panel to open it.
- Remove the filters one by one pushing them laterally and simultaneously pulling downwards.
- Any kind of bending of the filters has to be avoided when washing them. Before fitting them again into the hood make sure that they are completely dry (The colour of the filter surface may change throughout the time but this has no influence to the filter efficiency).
- When fitting the filters into the hood pay attention that they are placed in correct position and that the handle faces outwards.
- Close the comfort panel.

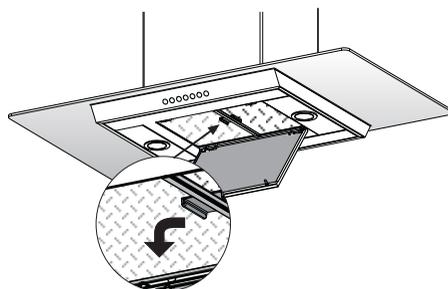


## Replacing the Charcoal Filter

This filter cannot be washed or regenerated, and must be replaced when the F touch control starts to flash, or at least once every 4 months. The alarm is only triggered when the motor is on.

### Enabling/Disabling the alarm signal

- In Recirculation Version Hoods, the Filter saturation Alarm must be enabled at the time of installation or later.
- Switch off the lights and the motor.
- Disconnect the mains power supply to the hood by removing the motor unit power supply cable connector, switching off the power supply at the Mains or turning the Main switch off.
- Restore the connection, pressing and holding **T2**.
- Release the touch control, touch controls **L**, **T2** and **F** will light up normally.
- **Within 3 seconds** press the touch control **F** until the key itself flashes to confirm as follows:
  - 2 flashes – Charcoal Filter saturation Alarm ENABLED
  - 1 flash - Charcoal Filter saturation Alarm DISABLED

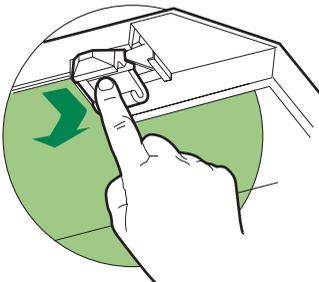

## Reset the alarm signal

- Stop the motor.
- Press the touch control **F** for at least 4 seconds, until the touch control **T1** flashes.


## Replace the Filter

- Pull the Comfort Panel to open it.
- Remove the metal grease filters.
- Remove the saturated charcoal filter, turning the fasteners provided.
- Fit the new filter and fasten it its correct position.
- Put the metal grease filters in their seats.
- Close the comfort panel.

## Light replacement

### 20 W halogen light.

- Remove the snap-on lamp cover by levering it from under the metal ring, supporting it with one hand.
- Remove the halogen lamp from the lamp holder by pulling gently.
- Replace the lamp with a new one of the same type, making sure that you insert the two pins properly into the housings on the lamp holder.
- Replace the snap-on lamp cover.

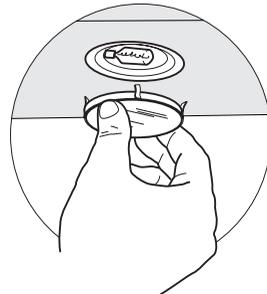





[www.electrolux.com](http://www.electrolux.com)

