


HANNSpree

Quick Start Guide


ST34-15U1 15" Liquid Crystal Display TV

This Guide is designed as a reference to help you start using your LCD TV quickly. Please Refer to the User's Manual for more detailed installation and safety instructions.

Front View

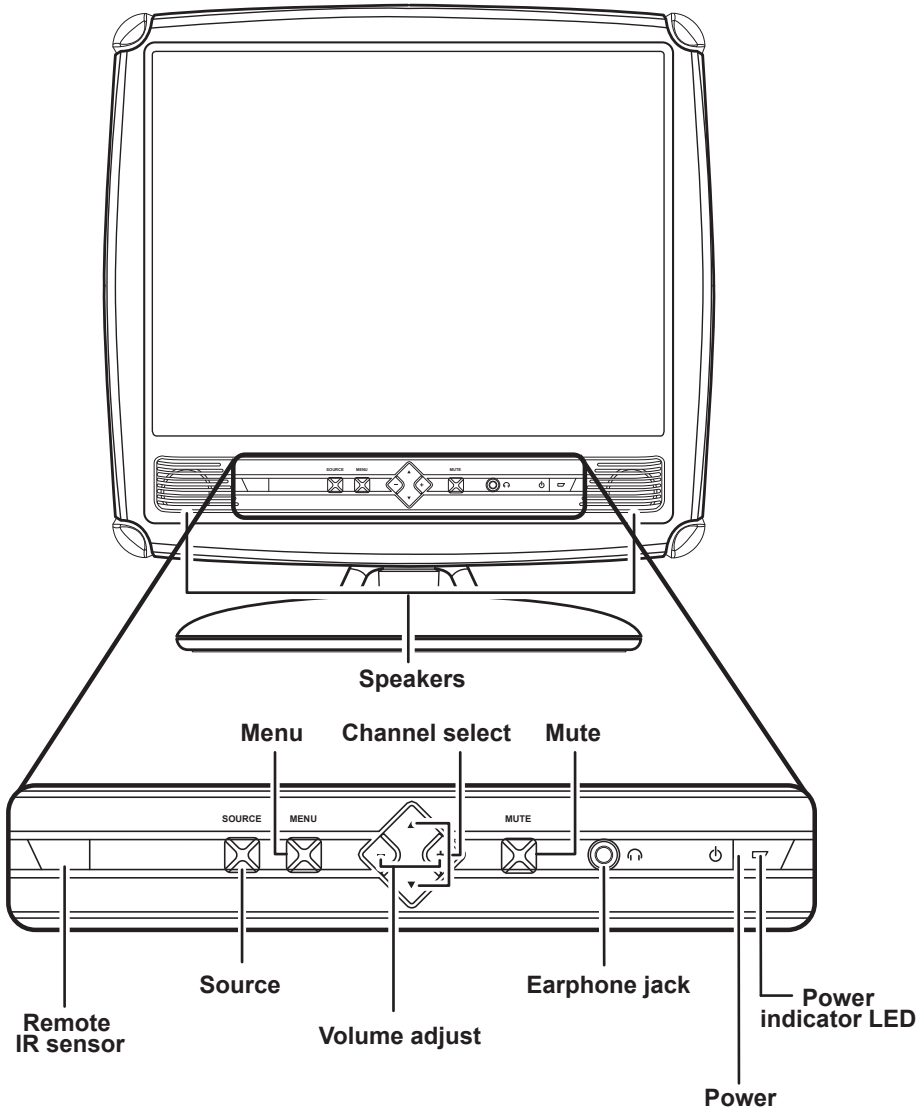


Rear View

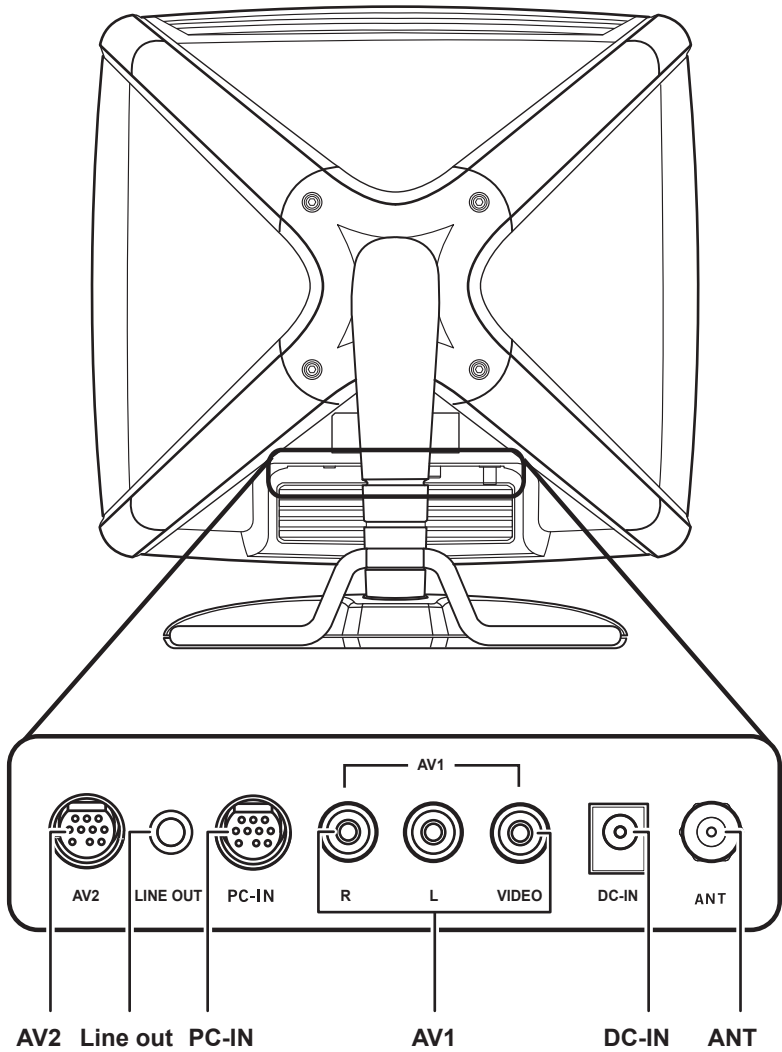


Making Connections


Connecting to Antenna/Cable TV

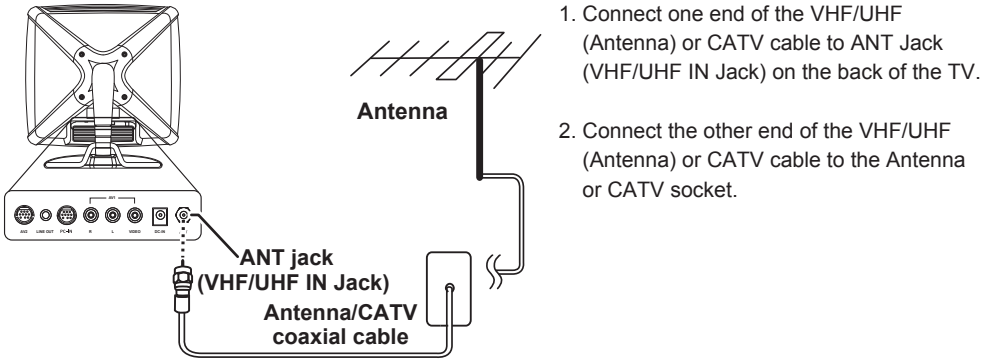

Connecting to a VCR, VCD, DVD Player, or Video Game Console

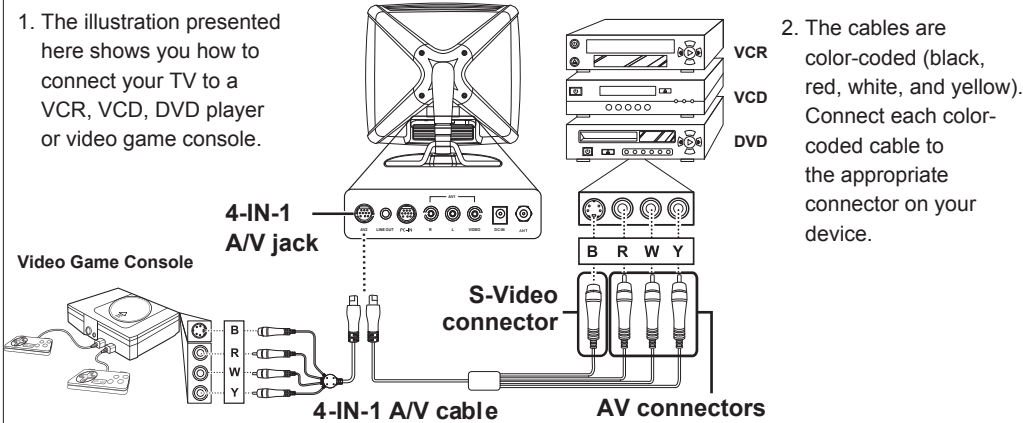

Connecting the Power Adapter

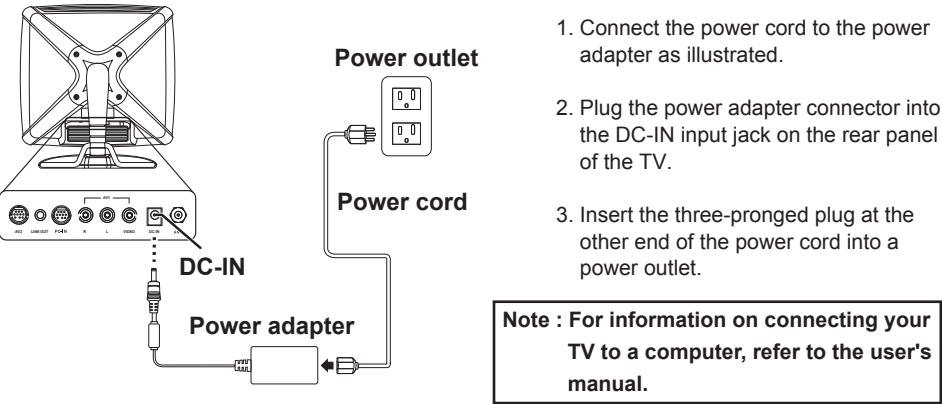

A/V and Channel Setup

Watching Broadcast or Cable TV

1. After you have made the appropriate power and source connections, press the **POWER** button to turn on your television.
2. Press the **SOURCE** button to select TV mode.
3. Press the **MENU** button to enter the OSD menu.
4. Use the **CH ▼** button to select "TV".
5. Press the **VOL +** button to enter TV setting.
6. Press the **CH ▼** button to select "TV/CATV".
7. Press the **VOL +** button to select "TV" (broadcast TV) or "CATV" (cable TV).

Selecting A/V Sources

1. Make sure your TV is turned on and a device such as a DVD player is connected.
2. Press the **SOURCE** button on the control panel to select different source signals. TV/CATV, "AV1", "AV2" or "PC" appears on the screen.

Auto Channel Setup

- Please follow the instructions by using the control panel.
1. Press the **MENU** button to enter the OSD menu.
 2. Use the **CH ▼** button to select "TV".
 3. Press the **VOL +** button to enter the TV setting.
 4. Press the **CH ▼** button until the "Auto Program" feature is selected.
 5. Press the **VOL +** button to begin "Auto Program".
 6. Your television will begin automatically memorizing the available channels.

Auto Program

