

# Contents

1.	INSTRUCTIONS FOR SAFE AND PROPER USE	4
2.	INSTALLATION OF THE APPLIANCE	6
3.	ADAPTATION TO DIFFERENT TYPES OF GAS	10
4.	FINAL OPERATIONS	13
5.	DESCRIPTION OF CONTROLS	15
6.	ELECTRONIC PROGRAMMER (ONLY ON EQUIPPED MODELS)	17
7.	DIGITAL TIMER (ONLY ON EQUIPPED MODELS)	20
8.	USE OF THE HOB	21
9.	USE OF THE OVEN	23
10.	AVAILABLE ACCESSORIES	28
11.	COOKING HINTS FOR ELECTRIC OVEN	29
12.	CLEANING AND MAINTENANCE	32
13.	EXTRAORDINARY MAINTENANCE	34
14.	PROBLEMS AND CAUSES	36



Thank you for choosing our product.

We advise you to read this manual carefully. It contains all necessary instructions for maintaining unaltered the appearance and functional qualities of the cooker.



**INSTRUCTIONS FOR THE INSTALLER:** these are for the **authorised person** who must carry out a suitable check of the gas system, install the appliance, set it functioning and carry out an inspection test.



**INSTRUCTIONS FOR THE USER:** these contain user advice, description of the commands and the correct procedures for cleaning and maintenance of the appliance.

# Introduction

## 1. INSTRUCTIONS FOR SAFE AND PROPER USE



THIS MANUAL IS AN INTEGRAL PART OF THE APPLIANCE AND THEREFORE MUST BE KEPT IN ITS ENTIRETY AND IN AN ACCESSIBLE PLACE FOR THE WHOLE WORKING LIFE OF THE COOKER. WE ADVISE READING THIS MANUAL AND ALL THE INSTRUCTIONS THERE IN BEFORE USING THE COOKER.

INSTALLATION MUST BE CARRIED OUT BY QUALIFIED PERSONNEL IN ACCORDANCE WITH THE REGULATIONS IN FORCE. THIS APPLIANCE IS INTENDED FOR DOMESTIC USES AND CONFORMS TO CURRENT **REGULATIONS IN FORCE**. THE APPLIANCE HAS BEEN BUILT TO CARRY OUT THE FOLLOWING FUNCTIONS: **COOKING AND HEATING-UP OF FOOD**. ALL OTHER USES ARE CONSIDERED IMPROPER.

**THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR IMPROPER USE.**



DO NOT LEAVE THE PACKING IN THE HOME ENVIRONMENT. SEPARATE THE VARIOUS WASTE MATERIALS AND TAKE THEM TO THE NEAREST SPECIAL GARBAGE COLLECTION CENTRE.

 


IT IS OBLIGATORY FOR THE ELECTRICAL SYSTEM TO BE GROUNDED ACCORDING TO THE METHODS REQUIRED BY SAFETY RULES.



IMMEDIATELY AFTER INSTALLATION CARRY OUT A BRIEF INSPECTION TEST OF THE APPLIANCE, FOLLOWING THE INSTRUCTIONS BELOW. SHOULD THE APPLIANCE NOT FUNCTION, DISCONNECT IT FROM THE SUPPLY AND CALL THE NEAREST TECHNICAL ASSISTANCE CENTRE.

**NEVER ATTEMPT TO REPAIR THE APPLIANCE.**



ALWAYS CHECK THAT THE CONTROL KNOBS ARE IN THE POSITION (OFF) WHEN YOU FINISH USING THE HOB.



NEVER PUT INFLAMMABLE OBJECTS INTO AN OVEN: IF THEY CATCH FIRE THEY COULD CAUSE A FIRE IN THE HOME.



THE I.D. PLATE WITH TECHNICAL DATA, REGISTRATION NUMBER AND BRAND NAME IS POSITIONED VISIBLY IN THE STORAGE COMPARTMENT. **THE PLATE MUST NOT BE REMOVED.**

## Introduction



**DO NOT PUT PANS** WITHOUT PERFECTLY SMOOTH AND FLAT BOTTOMS ON THE HOB GRIDS.



DURING USE THE APPLIANCE BECOMES VERY HOT. TAKE CARE NOT TO TOUCH THE HEATING ELEMENTS INSIDE THE OVEN.



**DO NOT USE** CONTAINERS OR BROILERS THAT EXTEND BEYOND THE OUTER PERIMETER OF THE HOB.



IF THE APPLIANCE IS TO BE POSITIONED ON A PLATFORM IT MUST BE INSTALLED IN SUCH A WAY AS TO PREVENT IT FROM SLIPPING OFF THE FORMER.



**THE APPLIANCE IS DESIGNED FOR USE BY ADULTS**. DO NOT ALLOW CHILDREN OR INFIRM PERSONS TO GO NEAR OR PLAY WITH IT. DURING USE THE APPLIANCE BECOMES HOT. CARE SHOULD BE TAKEN TO AVOID TOUCHING THE HEATING ELEMENTS INSIDE THE OVEN. KEEP CHILDREN AWAY FROM THE OVEN.



WHERE THIS APPLIANCE IS INSTALLED IN MARINE CRAFT OR IN CARAVANS, IT SHALL NOT BE USED AS A SPACE HEATER



REPLACED APPLIANCES MUST BE TAKEN TO A SPECIAL GARBAGE COLLECTION CENTRE.



WHERE THIS APPLIANCE IS INSTALLED IN MARINE CRAFT OR IN CARAVANS, IT SHALL NOT BE USED AS A SPACE HEATER.



DO NOT SPRAY AEROSOLS IN THE VICINITY OF THIS APPLIANCE WHILE IT IS IN OPERATION.



**The manufacturer declines all responsibility** for damage to persons or things caused by non-observance of the above prescriptions or by interference with any part of the appliance or by the use of non-original spares.



# Instructions for the installer

## 2. INSTALLATION OF THE APPLIANCE



It is the law that all gas appliances are installed by **authorised persons**. Clearance around the cooker must comply with the requirements of AS5601.

### 2.1 Electrical connection




Make sure that the power linkage matches the specifications indicated on the rating plate located inside the storage compartment. **This rating plate must never be removed.**



On the power line, install a two-pole cut-off device with contact cut-off distance greater than or equal to **3 mm**, located in an easily accessible position near the unit.




The wire section on the cable must not be less than  $1.5 \text{ mm}^2$  (3 x 1.5 cable), keeping in mind that the end to be connected to the cooker must have the ground wire (yellow-green) longer by at least 20 mm. Use only the special cables available at our Service Centres.

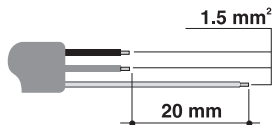

**The manufacturer declines all responsibility** for damage to persons or things caused by non-observance of the above prescriptions or by interference with any part of the appliance.

**Overall dimensions: location of gas and electrical connection points (all measures in mm).**

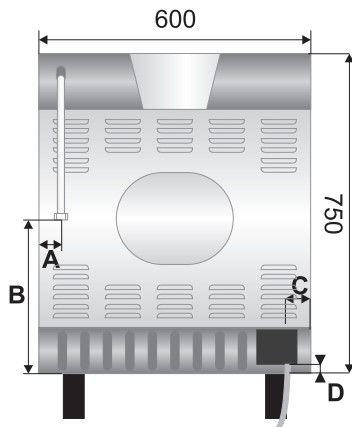

A	60
B	410
C	100
D	150



## 2.2 Gas connection

This appliance is suitable for installation with Natural Gas or ULPG (propane). Refer to page 12 for the relevant burner pressure and appropriate injector sizes. When the appliance is to be connected to Natural Gas then the pressure regulator supplied must be fitted to the gas inlet. A test point (for checking the gas pressure) is supplied either with the regulator or as a separate fitting in the case of ULPG (propane) appliances.

Connection of the appliance to the gas supply must be in accordance with the requirements of AS5601. A ½" BSP connector at the inlet is recommended and the gas supply line to the appliance must be of adequate length to allow sufficient withdrawal of appliance for service or disconnection and be:

1. annealed copper pipe or;
2. flexible hose according to AS/NZ1869 & be at least Class "B", 10 mm diameter.

The appliance must be installed with provision to allow the gas to be turned off and disconnected for servicing and removal of the appliance as required from the gas supply.

Before the appliance is operated make certain all relevant parts are placed in the correct position.



When the installation is completed the installation connections of appliance will require to be leak tested, the burner operating pressure and flame checked and adjusted.

Warranty service calls do not cover these adjustments!

To check the operating pressure of the appliance it is recommended that at least 2 large size burners are used. Ensure appliance is secured to wall when installation is completed.

N.G. The regulator supplied must be fitted to the ½ BSP thread at the rear of the appliance. An approved manual shut-off valve must be installed. The N.G. regulator must be checked and adjusted to 1.0kPa after installation.

**ULPG:** Can be connected to the inlet fitting directly. The pressure must be checked to ensure it is operating at 2.75kPa. A separate test point fitting must be installed between the piping & the appliance for the pressure to be checked to ensure it is operating at 2.75kPa.

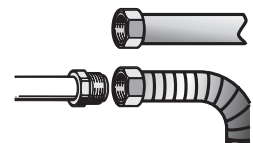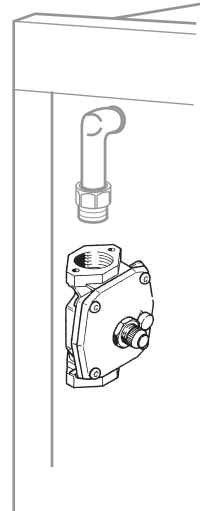



## Instructions for the installer


### 2.3 Room ventilation



**Caution** – This cooker may only be installed and operated in rooms permanently ventilated in accordance with current regulations. For proper operation of a gas appliance it is essential for the air necessary for combustion of the gas to be able to flow naturally into the room. Air must flow directly into the room through openings in its outside walls. This (these) opening (s) must have a free passage cross-section of at least 100 cm<sup>2</sup>, or 200 cm<sup>2</sup> for appliances not equipped with gas safety device. These openings must be constructed so that they cannot be obstructed indoors or outdoors, and should preferably be close to the floor on the side opposite to the combustion gas discharge point. If it is not possible to make the openings in the room where the cooker is installed, the necessary air may be taken from an adjoining room, provided it is not a bedroom or a room with fire risk.

### 2.4 Clearance above and around domestic cookers

Extract from AS5601

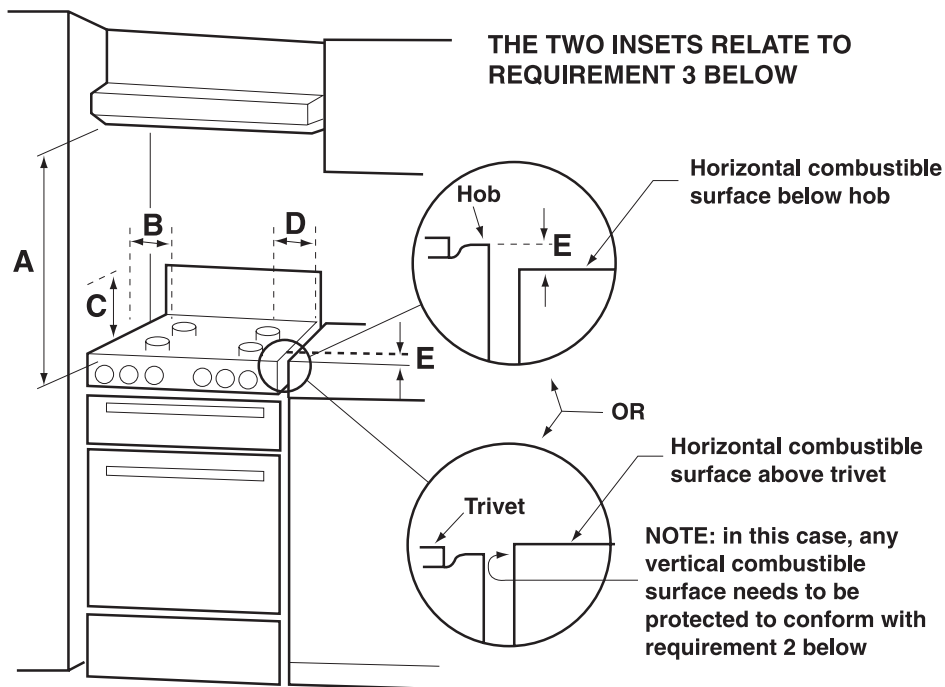

# Instructions for the installer



## REQUIREMENTS

- 1 Overhead clearances – (Measurement **A**)  
Range hoods and exhaust fans shall be installed in accordance with the manufacturer's instructions. However, in no case shall the clearance between the highest part of the hob of the cooking appliance and a range hood be less than **600 mm** or, for an overhead exhaust fan, **750 mm**.

Any other downward facing combustible surface less than **600 mm** above the highest part of the hob shall be protected for the full width and depth of the cooking surface area in accordance with Clause 5.12.1.2. However, in no case shall this clearance to any surface be less than **450 mm**.

- 2 Side clearances – (Measurements **B & C**)  
Where **B**, measured from the periphery of the nearest burner to any vertical combustible surface, is less than **200 mm**, the surface shall be protected in accordance with Clause 5.12.1.2 to a height **C** of not less than **150 mm** above the hob for the full dimension (width or depth) of the cooking surface area. Where the cooking appliance is fitted with a 'splashback', protection of the rear wall is not required.
- 3 Additional requirements for Freestanding and Elevated Cooking Appliances – (Measurements **D & E**)  
Where **D**, the distance from the periphery of the nearest burner to a horizontal combustible surface is less than **200 mm**, then **E** shall be **10 mm** or more, or the horizontal surface shall be above the trivet. See insets above.

## NOTES

- 1 Requirement 3 does not apply to a freestanding or elevated cooking appliance which is designed to prevent flames or the cooking vessels from extending beyond the periphery of the appliance.
- 2 The 'cooking surface area' is defined as that part of the appliance where cooking normally takes place and does not include those parts of the appliance containing control knobs.
- 3 For definition of hob, see Clause 1.4.64.
- 4 For definition of trivet, see Clause 1.4.109.
- 5 Consideration is to be given to window treatments when located near cooking appliances. See Clause 5.3.4.



## Instructions for the installer

### 3. ADAPTATION TO DIFFERENT TYPES OF GAS




Before performing any cleaning or maintenance work, disconnect the appliance from the mains.

The hob of the cooker is adjusted for use with either natural gas at a pressure of 1.0kPa (FS61XNG-FS62XNG-FS60WHNG-FS60XNG) or LPG (propane) at a pressure of 2.75 kPa (FS61XLPG-FS62XLPG). If used with other types of gas, you have to replace the nozzles, then adjust the minimum flame on the gas taps. For nozzle replacement and burner adjustment operate as described in the following paragraph.

#### 3.1 Replacement of nozzles on the hob

This operation requires no primary air regulation.

1. Extract the grids and remove all the caps and flame-spreader crowns;
2. unscrew the burner nozzles with a 7 mm socket wrench;
3. replace the nozzles according to the type of gas to be used and the description in paragraph "3.2 Burner and nozzle characteristics table".
4. Replace the burners in the correct position.

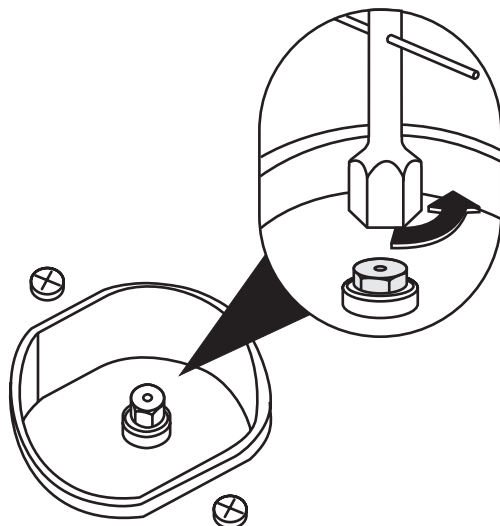



# Instructions for the installer



## 3.2 Burner and nozzle characteristics table

Burner	LPG (PROPANE) – 2.75 KPa		
	Nominal gas consumption (MJ/h)	Turn-down gas consumption (MJ/h)	Injector (mm)
Auxiliary	3.9	1.5	0.54
Semi rapid	6.3	1.5	0.68
WOK	12.8	5.4	1.00
Gas Grill	10.8	//	0.94
Gas Oven	11.5	//	0.94

Burner	NG – 1.0 KPa		
	Nominal gas consumption (MJ/h)	Turn-down gas consumption (MJ/h)	Injector (mm)
Auxiliary	3.9	1.5	0.90
Semi rapid	7.5	1.5	1.20
WOK	15	5.4	1.75
Gas Grill	10.4	//	1.55
Gas Oven	11.5	//	1.55




## Instructions for the installer

### 3.3 Adjustment of the oven burner(only for gas oven models)

To adjust the oven burners follow the procedure described below from inside the oven:

- Open the oven door;
- Remove the oven dish and shelf.
- Lift up the oven floor and remove.

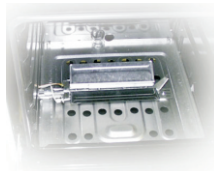


#### 3.3.1 Replacement of the oven and grill burner nozzle

Loosen the fixing screws **A** on the oven burner.

Push the burner **B** towards the right to get to the nozzle.

Use a 13 socket wrench to change the nozzle, fitting the one for the type of gas to be used (see point “3.2 Table of burner and nozzle characteristics”).

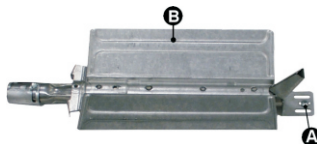


#### 3.3.2 Regulation of the primary air on the oven and grill burner

Loosen the register screws “**A**” on the air regulation coupling.

Turn the register coupling “**B**” to the position corresponding to the type of gas to be used according to the table below.

Tighten the register screws and mount the seals.

Once the operation is completed reassemble the burner correctly.

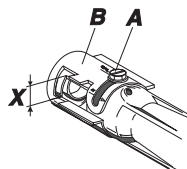

	NG 1.0 KPa	LPG (PROPANE) 2.75 KPa
<b>X =</b>	15 mm	15 mm




## 4. FINAL OPERATIONS

After replacing the nozzles, reposition the flame-spreader crowns, the burner caps and the grids.

### 4.1 Adjustment of the hob burner minimum level for natural gas

Light the burner and turn it to the minimum position  $\Delta$ . Extract the gas tap knob and turn the adjustment screw at the side of the tap rod until the correct minimum flame is achieved. Refit the knob and verify that the burner flame is stable (turning the knob rapidly from the maximum to the minimum position the flame must not go out). Repeat the operation on all the gas taps.

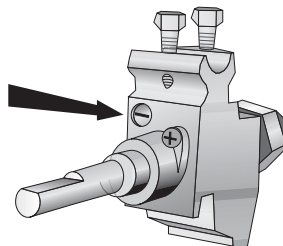

### 4.2 Adjustment of the hob burner minimum level for LPG (propane)

To regulate the minimum for LPG (propane), completely tighten (clockwise) the screw inside or next to the gas tap pin (depending on the model).

### 4.3 Arrangement of the burners on the hob




Burners	
1	Auxiliary
2	Semi rapid
4	Wok



## Instructions for the installer


### 4.4 Mounting the rear top skirtboard (where applicable)

- Loosen screws **A** located beneath the skirt.
- Loosen nuts **B**.
- Position the skirt above the top, taking care to align pins **C** with holes **D**.
- Secure the skirt to the top by tightening screws **E**.

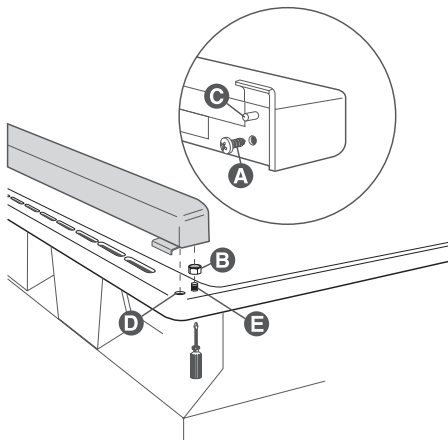

### 4.5 Wall fixing

- Stretch out the chain attached to the cooker horizontally so that the other end touches the wall.
- Mark the wall in the position where the hole is to be drilled.
- Drill the hole, insert the finned dowels and attach the chain.
- Move the cooker up against the wall.

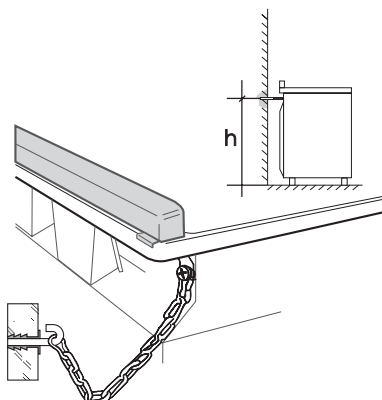

# Instructions for the user



## 5. DESCRIPTION OF CONTROLS

### 5.1 Front control panel

All the cooker controls and commands are on the front panel.




If the cooker is equipped with an electronic programmer, before using the oven make sure that the symbol ; appears on the display. See paragraph "6.1 Clock adjustment".

### DESCRIPTION OF SYMBOLS

	FRONT RIGHT BURNER		ELECTRIC OVEN THERMOSTAT
	BACK RIGHT BURNER		ELECTRIC OVEN FUNCTION KNOB
	BACK LEFT BURNER		GAS OVEN THERMOSTAT
	FRONT LEFT BURNER		OVEN LIGHT / ROTISSERIE / GRILL SWITCH

#### HOB BURNER COMMAND KNOB


The flame is lit by pressing the knob and turning it anticlockwise to minimum flame . To adjust the flame turn the knob between maximum () and minimum (). The burner goes out when the knob is returned to the position .

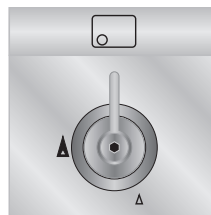

#### ELECTRIC OVEN THERMOSTAT KNOB (CERTAIN MODELS ONLY)

Selection of cooking temperature is carried out by turning the knob clockwise to the required temperature, between 50° and 260°C.

If the appliance has an electric oven, the warning light will come on when the oven is heating up. When it goes out it means that the required temperature has been reached. Regular flashing means that oven temperature is being constantly maintained at the programmed level.

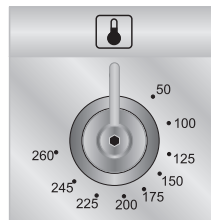




## Instructions for the user

### ELECTRIC OVEN CONTROL KNOB (CERTAIN MODELS ONLY)

Each of the functions listed below can be used (except the oven light and the small grill) only together with the correct temperature thermostat regulation as described on page 15 of this manual.

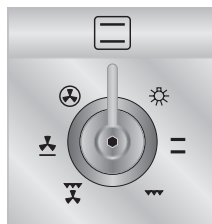

OVEN LIGHT



UPPER AND LOWER HEATING ELEMENT



GRILL ELEMENT



GRILL ELEMENT + VENTILATION



LOWER HEATING ELEMENT + VENTILATION




VENTILATED HEATING ELEMENT + VENTILATION

### GAS OVEN THERMOSTAT KNOB (CERTAIN MODELS ONLY)

This knob is used to ignite the gas burner inside the oven. The cooking temperature is selected by turning the knob anticlockwise to the desired setting, between Min. and 275°C.


For information on how to ignite the gas oven, see point “7.3 Use of the gas oven”.

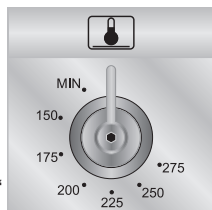

### OVEN LIGHT / ROTISSERIE / GRILL SELECTOR KNOB (CERTAIN MODELS ONLY)

This knob allows the user to activate the Grill / Rotisserie function or to switch on the light inside the oven to check the point reached in cooking the food.

CAUTION: IT IS NOT POSSIBLE TO OPERATE THE GAS OVEN AND THE GRILL / ROTISSERIE SIMULTANEOUSLY.

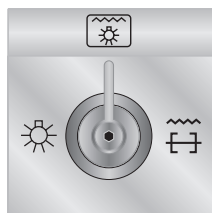






## Instructions for the user





 
 
### 6. ELECTRONIC PROGRAMMER (ONLY ON EQUIPPED MODELS)



#### LIST OF FUNCTIONS

-  MINUTE-COUNTER KEY
-  COOKING TIME KEY
-  END-OF-COOKING KEY
-  DECREASE TIME KEY
-  INCREASE TIME KEY




#### 6.1 Clock adjustment



When using the oven for the first time, or after a power failure, the display flashes regularly and indicates **0:00**. Press the keys   and at the same time the keys  or : each single press changes the time by 1 minute either up or down.

Before setting the programmer activate the desired function and temperature.

#### 6.2 Semiautomatic cooking

Use this setting for automatic oven switch-off at the end of cooking time.

By pressing key , the display lights up, showing **0:00**; keep the key pressed and at the same time, press keys  or  to set the cooking time.

Release key  to start the programmed cooking time count. The display will now show the right time together with symbols **A** and .












## Instructions for the user





### 6.3 Automatic cooking

Use this setting to automatically start and stop the oven.


By pressing key , the display lights up showing ; keep the key pressed and at the same time, press keys  or  to set the cooking time.

By pressing key , the sum of the right time + cooking time will appear; keep the key pressed and at the same time, press keys  or  to regulate the end of cooking time. Release key  to start the programmed count and the display will show the right time together with symbols A and .



After set-up, to see the cooking time remaining, press the key ; to see the end of cooking time press the key . Set-up with incoherent values is logically prevented (e.g. the contrast between a cooking time and a longer period will not be accepted by the programmer).

### 6.4 End of cooking

When cooking is over, the oven will automatically switch off and, at the same time, an intermittent alarm will sound. After switching off the alarm, the display will once again show the right time together with the symbol , indicating that the oven has returned to manual operation mode.


 









# Instructions for the user



 
## 6.5 Minute Counter

The programmer can also be used as a simple minute counter. By pressing key , the display shows ; keep the key pressed and at the same time press keys  or . On releasing the key , programmed counting will begin and the display will show the current time and the symbol .





After set-up, to see the remaining time, press the key . Use as a minute counter does not interrupt functioning of the oven at the end of the programmed time.




## 6.6 Adjusting alarm volume

The acoustic alarm has three different settings. These can be operated, while the alarm is sounding, by pressing key .

 

## 6.7 Switching off the alarm

The alarm switches off automatically after seven minutes. They can be manually de-activated by pressing the keys  and  together. **To switch off the appliance, rotate all the knobs to position 0.**

## 6.8 Cancellation of set data

Once the programme has been set, keep the key of the function to be cancelled pressed, while at the same time  is reached by means of variation keys  or . Time cancellation will be considered as end-of-cooking time by the programmer.

## 6.9 Changing the set data

The cooking data entered can be changed at any time by keeping the function key pressed and at the same time adjusting the keys  or .






## Instructions for the user


 

### 7. DIGITAL TIMER (ONLY ON EQUIPPED MODELS)





#### LIST OF FUNCTIONS



-  MINUTE-COUNTER KEY
-  DECREASE TIME KEY
-  INCREASE TIME KEY

#### 7.1 Setting the time

 
When the oven is used for the first time, or after a power blackout, the display flashes on and off at regular intervals showing **0:00**. Press the  key and use the  or  keys to set the current time.

#### 7.2 Setting the timer


To set the timer, press the  key and keep it pressed until the required number of minutes is shown. When the  key is released, after 5 seconds the countdown will start; once this finishes, an acoustic device will sound.

During the countdown the display will show the  symbol; pressing the  key displays the current time for 5 seconds.



#### 7.3 Deactivating the acoustic device

 The acoustic device stops sounding automatically after seven minutes. It can be deactivated in manual mode by pressing the  key.

#### 7.4 Adjusting the volume of the acoustic device

The volume can be adjusted (3 settings) while it is in operation by pressing the  key.

#### 7.5 Modifying the data set

 The timer data set can be modified at any moment by pressing the  or  keys.



## 8. USE OF THE HOB

### 8.1 Lighting of the hob burners



Before lighting the hob burners check that the flame caps are in the correct position and that their burner caps are in place, making sure that the holes **A** in the flame caps correspond to the spark plugs and thermocouples.


Before lighting the burners **lift the glass cover**; before lowering the cover, turn off all the burners and wait for them to cool down.




The optional grid **B** is for use with “woks” (Chinese pans).

To prevent deterioration of the hob we have equipped the cooker with a raised pan stand **C** to be placed underneath pans more than 26 cm in diameter.

The supplied reduction rest **C** is also used for small pans.

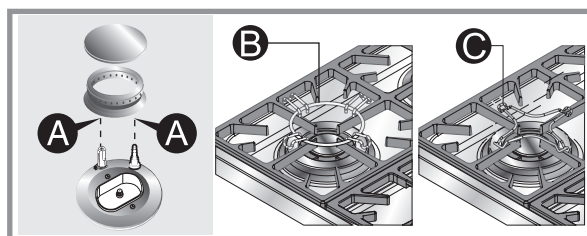

The drawing next to each knob shows the corresponding burner. The appliance has an electronic lighting device. Simply press and turn the knob anticlockwise to the minimum flame symbol  $\Delta$ , until the ring is lit. Hold the knob down for a few seconds to allow the thermocouples to heat up. The burner may go out when the knob is released: this is because the thermocouple has not been sufficiently heated. Repeat the operation holding down the knob for a little longer. This operation is not necessary for burners without thermocouples.

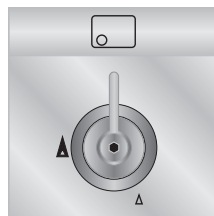

For models with thermocouples, if the burner should accidentally go out, a safety device will be activated which stops the gas flow even if the tap is open.




## Instructions for the user
 
### 8.2 Practical advice for using the hob burners

For better use of the burners and lower gas consumption, use covered containers that are proportional in size to the burner to prevent the flame from licking the sides (see paragraph “8.3 Diameter of containers”). When water reaches the boiling point, lower the flame so that it doesn't overflow. To avoid burns or damage to the hob, all recipients or griddle plates must be placed within the perimeter of the hob. All containers have to have a flat and smooth bottom. When using fats or oils, be extremely careful that they don't overheat and catch fire. If the flame accidentally goes out, turn off the control knob and wait at least 1 minute before trying to re-light the burner.



### 8.3 Diameter of containers



#### BURNERS

- 1 Auxiliary
- 2 Semi rapid
- 4 WOK

#### Ø min. and max. (in cm)

- 12-14
- 16-24
- 18-26



## 9. USE OF THE OVEN



For those models with electronic programmer, before using the oven make sure that the display shows the symbol

For those models with analogue clock and timer, place on the symbol

### 9.1 Warnings and general advice

Using the oven and the grill for the first time, heat them to the maximum temperature (**260°C** for electric oven and **275°C** for gas oven) for as long as it takes to burn off any production oil residues which could give a nasty flavour to the food. After a power cut, the oven display will flash intermittently and show **0:00**. To adjust refer to paragraph "6 ELECTRONIC PROGRAMMER (ONLY ON EQUIPPED MODELS)".



The oven accessories which may come into contact with food are made from materials which conform to the standing directives.



**WARNING:** the gas oven is lit with the door open. The oven is equipped with a safety system which stops the burners being lit when the door is closed. If this is done wrongly, open the door and wait for a few moments before lighting once more.



To prevent any steam in the oven creating problems, open the door in two stages: half open (5 cm approx.) for 4-5 seconds and then fully open. To access food, always leave the door open as short a time as possible to prevent the temperature in the oven from falling and ruining the food.

### 9.2 Cooling system

The oven is equipped with a cooling system which automatically comes on upon a few minutes after the oven has been turned on.

Fans cause a steady outflow of air from above the door which may continue for a brief period of time even after the oven has been turned off.




## Instructions for the user

### 9.3 Use of the gas oven

#### 9.3.1 Electronic spark lighting


Open the oven door completely, press the thermostat knob and turn it clockwise to max. temperature. The electronic spark lighting device will be enabled automatically. Once the oven is lit, hold the knob down for a few seconds to allow the thermocouple to heat up.

This device should not be enabled for more than 15 seconds; if after this time the burner has not come on, stop, fully open the oven door and try again after one minute.

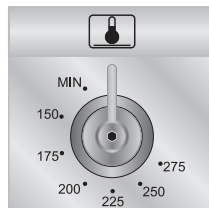

#### 9.3.2 Manual lighting



Open the oven door completely and turn the thermostat knob. Place a lit match to the mouth of the flame pipe **A** in the centre of the oven floor and press the thermostat knob. Once the oven is lit, hold the knob down for a few seconds to allow the thermocouple to heat up and check that the oven is lit through the inspection hole **B**. Choose the cooking temperature by turning the knob clockwise to the desired temperature, between **50°** and **275°**C.

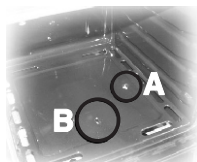

If the burner is accidentally switched off, turn the knob to the off position (●) and wait for one minute before lighting again.

### 9.4 Use of the electric grill
 
#### 9.4.1 Using the grill in cookers with electric oven


For short cooking procedures, such as the final crisping of meat which is already cooked, select the static grill function  and turn the thermostat knob to the maximum temperature. The fan grill function (certain models only) allows actual cooking procedures to be carried out, thanks to the fan function which ensures that the heat penetrates into the food. For this cooking mode, select the fan grill function  and turn the thermostat knob to the ideal cooking temperature (never set at more than 200° C).

# Instructions for the user




## 9.5 Use of the gas grill

### 9.5.1 Manual lighting of the gas grill burner


Having opened the oven door, press the knob and turn it clockwise to the grill  position, placing a lit match to the burner on the roof of the oven. Once the burner is lit, hold the knob down for about 10 seconds. If the burner does not stay lit after this time, release the knob and wait for at least one minute before trying again. If the burner accidentally goes out, turn the knob to the off position (●) and wait at least one minute before lighting again.

### 9.5.2 Electric lighting of the gas grill burner


Having opened the oven door, press the knob and turn it clockwise to the grill  position. Once the burner is lit, hold the knob down for about 10 seconds. If the burner has not come on by this time, release the knob and wait for at least one minute before trying again. If the burner accidentally goes out, turn the knob to the off position (●) and wait at least one minute before lighting again.

During a power cut the burner can always be lit with a match.




### 9.5.3 Using the grill in gas cookers

To activate this function, the oven burner must first be switched off by turning the relative knob back to the  position; the switch must then be turned to ●

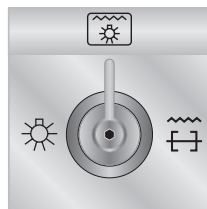**CAUTION: IT IS NOT POSSIBLE TO OPERATE THE GAS OVEN AND THE GRILL / ROTISSERIE SIMULTANEOUSLY.**




### 9.5.4 Operation of the grill + rotisserie

Both the static and the fan grill functions can be used for cooking in combination with the rotisserie. Fit the spit rod into the rotisserie bushing, select the  or  or fan grill  function and turn the thermostat knob to the temperature of choice (never set at more than 200° C).

### 9.5.5 Using the rotisserie in cookers with standard ovens

Place the rotisserie frame “B” on the second runners up from the bottom and insert the rod “A” in the hole in the back of the oven.

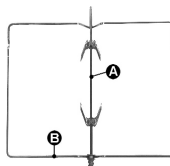




## Instructions for the user

### 9.5.6 Using the lateral rotisserie

Fit the supporting frame onto the second runner up from the bottom so that the seat to take the rod projects outside the oven. Place the rod as shown in the diagram (1) and push the frame into the oven until the end of the rod reaches the hole in the rotisserie motor. Now push the rotisserie rod to the left until it reaches the position shown in the diagram (2). To activate this function, turn the switch to (🔌).

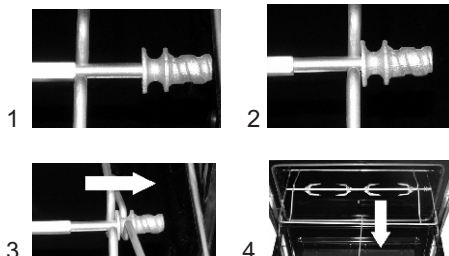

**These operations must be carried out with the oven switched off and cold.**

When cooking is over, use the tool provided to extract the rod from the hole (3) and remove the frame (4) to bring the rotisserie rod out of the oven cavity.


### How to use the grill



Once the electric grill is lit, the red warning light will come on. Leave the oven to heat up for five minutes before placing the food inside.

Food should be flavoured and basted with oil or melted butter before cooking. An oven dish should be used to contain the sauces.

The food should be placed on the oven shelf which is positioned on one of the guides supplied with the different ovens, following the instructions below:

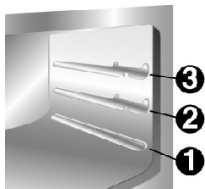

FOOD	GRILLE ON THE SHELF
Flat or thin meat	1
Rolled roast joints	2 – 3
Poultry	2 – 3



# Instructions for the user




## WARNINGS



- Cooking procedures in this mode must never last more than 60 minutes.
- In models with gas oven, the door must be half-open on the first catch during grilling and grill-rotisserie cooking.
- In models with electric oven, the door must be close during grilling.
- During and after use the accessible parts of the oven may be very hot, and children must always be kept at a distance.
- During cooking with the rotisserie, one of the oven trays provided with the cooker should be placed in the bottom of the oven, inserting it on the bottom runners, in order to collect the grease and fats which may be formed.
- During cooking, do not cover the bottom of the oven with aluminium or tin foil and do not place pans or oven trays on it as this may damage the enamel coating. If you wish to use greaseproof paper, place it so that it will not interfere with the hot air circulation inside the oven.
- When using the oven, remove all unused baking sheets and shelves from the interior.

If your cooker is equipped with knob guard, when cooking using the grill or grill + rotisserie it must be fitted as shown here, fitting the slots "A" onto the pins "B" in the top of the oven.

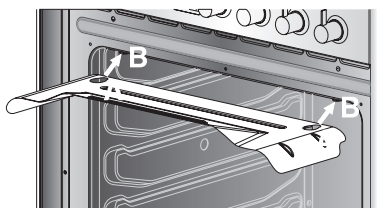

### 9.6 Storage compartment

A storage compartment, accessible by pulling on the top edge of the door, is located beneath the oven.

Never store inflammable materials such as rags, paper or the like. The compartment is intended only for holding the metal accessories of the range.






## Instructions for the user

### 10. AVAILABLE ACCESSORIES


The oven has **4 support** for positioning plates and racks at various heights.




**Oven grill:** for cooking food on plates, small cakes, roasts or food requiring light grilling.

 


**Plate grill:** for placing above plate for cooking foods that might drip.

 

 **Oven plate:** useful for catching fat from foods on the grill above.



 **Pastry plate:** for baking cakes, pizza and oven desserts.



#### Accessories on Request

You can order the lower base and self-cleaning oven panels through Authorised Assistance Centres.

# Instructions for the user



## 11. COOKING HINTS FOR ELECTRIC OVEN

### 11.1 Traditional cooking



**FUNCTION SWITCH**



**THERMOSTAT SELECTOR SWITCH FROM 50° TO 260°C**



This traditional cooking method, in which heat comes from above and below, is suitable for cooking food on a single level. You have to pre-heat the oven until the set temperature is reached. Place the food in the oven only after the thermostat indicator light has turned off. very fatty meats may be put in when the oven is still cold. Put frozen meat in immediately, without waiting for it to thaw. The only precaution you need to take is to set the temperature about 20°C lower and cooking time about 1/4 longer than you would for fresh meat.



Use high-rim pans to prevent fat splashing and dirtying the sides of the oven.



### 11.2 Hot-air cooking



**FUNCTION SWITCH**



**THERMOSTAT SELECTOR SWITCH FROM 50° TO 260°C**



This system is suitable for cooking on several levels, including different types of food (fish, meat etc.), without the tastes and smells mingling. Air circulation in the oven ensures a uniform distribution of heat. Pre-heating is not necessary.



Multiple cooking is possible as long as the cooking temperature of the different foods is the same.



## Instructions for the user

### 11.3 Grill cooking



FUNCTION SWITCH



THERMOSTAT SELECTOR SWITCH FROM  
50° TO 260°C



Permits rapid browning of foods. You are advised to place the pan in the highest guide. For short-term cooking of small quantities, place the grid in the third guide from the bottom. For long-term cooking and grills, put the grid in the lowest guide in accordance with the size of the pieces.

**Make sure that the oven door is closed during cooking.**

### 11.4 Hot-air grilling



FUNCTION SWITCH



THERMOSTAT SWITCH FROM 50° TO 200°C



Ensures uniform heat distribution with greater heat penetration into the food. Food will be lightly browned on the outside and remain soft inside.

**Keep the oven door closed during cooking. Heating up time must not exceed 60 minutes.**

# Instructions for the user



## 11.5 Delicate cooking



**FUNCTION SWITCH**



**THERMOSTAT SELECTOR SWITCH FROM 50° TO 260°C**



Ideal for pastries and cakes with wet covering and little sugar and damp desserts in moulds. Excellent results can also be achieved in completing cooking at the bottom and with dishes requiring heat in the lower area in particular. The plate is best inserted at bottom level.

## 11.6 Defrosting



**FUNCTION SWITCH**



**THERMOSTAT SWITCH IN POSITION 0**



The flow of air produced by the fan ensures quicker defrosting. The air circulating inside the oven is at room temperature.



The advantage of defrosting at room temperature is that it does not alter the taste and appearance of the food.



## Instructions for the user

### 12. CLEANING AND MAINTENANCE

#### 12.1 Cleaning stainless steel and enamelled versions



To maintain stainless steel in good condition it must be cleaned regularly after each use, once it has cooled down.

##### 12.1.1 Ordinary Daily Cleaning

To clean and preserve the stainless steel surfaces, always use **only** specific products that do not contain abrasives or chlorine-based acids.

**How to use:** pour the product on a damp cloth and wipe the surface, rinse thoroughly and dry with a soft cloth or deerskin.

##### 12.1.2 Food stains or residues

Do not use metallic sponges or sharp scrapers: they will damage the surface.

Use normal non-abrasive products for steel, and a wooden or plastic tool if necessary.

Rinse thoroughly and dry with a soft cloth or deerskin.

Do not allow residues of sugary foods (such as jam) to set inside the oven. If left to set for too long, they might damage the enamel lining of the oven.



#### 12.2 Cleaning of the hob components

##### 12.2.1 Grids

Remove the grids and clean them in warm water with a non-abrasive detergent, taking care to remove any incrustations. Replace them on the hob.


Continuous contact of the grids with the flame can cause the paint near the hot areas to be altered. This is completely natural and does not compromise the functionality of the component.

##### 12.2.2 Burner caps and flame cap crowns

The caps and flame-spreader crowns are extractable to facilitate cleaning. Wash them in hot water with non-abrasive detergent, taking care to remove any incrustations, and wait until they are **perfectly dry**.

**WARNING: do not wash these components in the dishwasher.**

Replace the flame-spreader crowns, checking that they are positioned in their housing with their respective caps, taking care that flame-spreader holes **A** correspond to the spark plugs and the thermocouples.

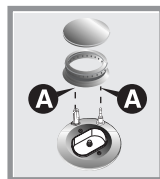


# Instructions for the user



## 12.2.3 The spark plugs and thermocouples

To function properly the spark plugs and thermocouples must always be clean (on the models which are equipped with them). Check them regularly and clean with a damp cloth if necessary. Any dry residues can be removed with a toothpick or a needle.

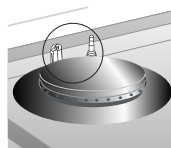


## 12.2.4 The burners

The burners can be left to soak in hot water and detergent.

## 12.3 Cleaning of oven



For best oven upkeep clean regularly after having allowed to cool. Take out all removable parts.

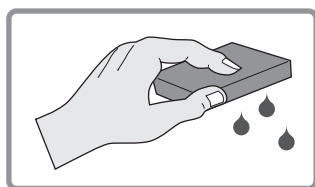

Clean the oven grill with hot water and non-abrasive detergent. Rinse and dry.

## 12.4 Door glass

The door glass should always be kept clean. Use absorbent kitchen paper to clean. In case of tough spots, clean with a damp sponge using regular detergent.



## Instructions for the user

### 13. EXTRAORDINARY MAINTENANCE

Ovens periodically require small maintenance interventions or replacement of parts subject to wear and tear such as gaskets, electric bulbs etc. Specific instructions for each intervention of this type appear below.



**Before performing any operations requiring access to powered parts, switch off the power supply to the machine.**




#### 13.1 Lubrication of gas taps

With time it may happen that the gas taps get blocked and hard to turn. Clean them inside and re-grease them. **This operation must be done by an authorised person.**

#### 13.2 Replacement of light bulbs


Remove cover **A** by twisting anticlockwise, replace bulb **B** with another similar bulb. Refit the cover **A**.

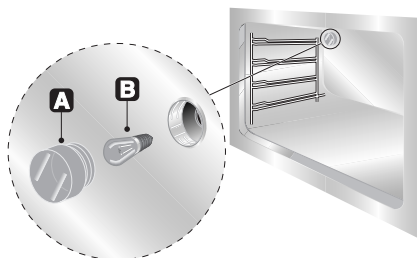

**Only use oven bulbs (T 300°C).**

#### 13.3 Dismantling of the doors

Hold the door on both sides with both hands near hinges **A** and raise levers **B**. Lift up the door forming an angle of about 45° and remove. To refit, slide the hinges **A** in the grooves, drop the door and release levers **B**.

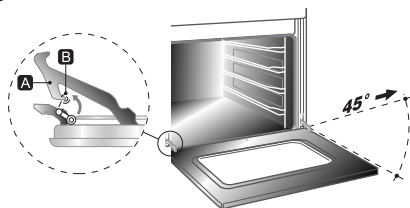



## Instructions for the user



### 13.4 Oven door gaskets

The door gaskets can be dismantled for thorough cleaning of the ovens. Before removing the gaskets the oven doors must be removed as previously described. With the doors removed, raise the tabs at the corners as shown in the figure.



### 13.5 Preventive maintenance

This appliance does not need any special maintenance. However, a few simple operations have to be carried out periodically to prevent malfunctioning:



**Burners:** the burners must be cleaned after every use to ensure correct combustion; make sure that all the openings and flame ports are clean and free of obstacles, and that the burners rest firmly on their supports.

**Gas connection:** the gas connection must be checked periodically (at least every 2 years). Each time the cooker is moved the connection may be stressed: test it for leakages using special sprays or a solution of soap and water.

**Flexible pipes:** if a flexible pipe is used, it must be inspected periodically (once a year) for leakages: if the surface of the pipe appears rigid and cracked, disconnect immediately the cooker from the gas supply and replace the pipe with a new one.

**Valves:** if the gas valves get stuck or hard to turn, they need to be cleaned and re-greased; this operation must be carried out by an authorised person.

**Oven gasket:** with time the oven gasket may harden and crack on the surface, resulting in leakage of heat from the oven and higher temperatures on the control panel and knobs. Check it periodically (once a year) and replace it if necessary.



## Instructions for the user

### 14. PROBLEMS AND CAUSES

Each of the following cases is caused by an abnormal operation of the appliance and should be dealt with by a authorised person: please contact your local dealer or Service Center in case you detect any of these malfunctioning.

PROBLEM	CAUSE	WHAT TO DO
The flame is very long with bright yellow tips. Black deposits on the bottom of the pans.	Defect of comburent air or incorrect injectors.	Call Service Center.
The flame is very short and noisy. The flame moves away from the burner ports.	Excess of comburent air.	Call Service Center.
The flame extinguishes when the burner knob is set to the low flame position.	Incorrect adjustment of the minimum heat input or excess of comburent air.	Call Service Center.
The valve knob is hard to rotate.	Gas valve worn out or needs lubrication.	Call Service Center.
The cooker suddenly stops working during operation of the oven. The electronic programmer is not operating.	Overheating of the appliance.	Let the appliance cool down: the safety thermal cut-out will self-reset when the temperature has decreased to a correct value. Should the problem arise again, call the Service Center.





914772174/ H