

Contents

1	INSTRUCTIONS FOR SAFE AND PROPER USE	4
2	POSITIONING OF THE HOB	6
3	ELECTRICAL CONNECTION	7
4	GAS CONNECTION	8
5	ADJUSTMENT FOR DIFFERENT TYPES OF GAS	10
6	FINAL OPERATIONS	14
7	USING THE HOB	16
8	CLEANING AND MAINTENANCE	18

THESE INSTRUCTIONS ARE VALID ONLY FOR END USER COUNTRIES WHOSE IDENTIFICATION SYMBOLS APPEAR ON THE COVER OF THIS MANUAL.



INSTRUCTIONS FOR THE INSTALLER: these are for the **qualified technician** who must carry out a suitable check of the gas system, install the appliance, set it functioning and carry out an inspection test.



INSTRUCTIONS FOR THE USER: these contain user advice, description of the commands and the correct procedures for cleaning and maintenance of the appliance.

Introduction

1 INSTRUCTIONS FOR SAFE AND PROPER USE



THIS MANUAL IS AN INTEGRAL PART OF THE APPLIANCE AND THEREFORE MUST BE KEPT IN ITS ENTIRETY AND IN AN ACCESSIBLE PLACE FOR THE WHOLE WORKING LIFE OF THE COOKING HOB. WE ADVISE READING THIS MANUAL AND ALL THE INSTRUCTIONS THEREIN BEFORE USING THE COOKING HOB. ALSO KEEP THE SERIES OF NOZZLES SUPPLIED. INSTALLATION MUST BE CARRIED OUT BY QUALIFIED PERSONNEL IN ACCORDANCE WITH THE REGULATIONS IN FORCE. THIS APPLIANCE IS INTENDED FOR DOMESTIC USES AND CONFORMS TO CURRENT **REGULATIONS IN FORCE**. THE APPLIANCE HAS BEEN BUILT TO CARRY OUT THE FOLLOWING FUNCTIONS: **COOKING AND HEATING-UP OF FOOD**. ALL OTHER USES ARE CONSIDERED IMPROPER. **THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR IMPROPER USE.**



DO NOT LEAVE THE PACKING IN THE HOME ENVIRONMENT. SEPARATE THE VARIOUS WASTE MATERIALS AND TAKE THEM TO THE NEAREST SPECIAL GARBAGE COLLECTION CENTRE.



IT IS OBLIGATORY FOR THE ELECTRICAL SYSTEM TO BE GROUNDED ACCORDING TO THE METHODS REQUIRED BY SAFETY RULES.



THE PLUG TO BE CONNECTED TO THE POWER CABLE AND THE SOCKET MUST BE THE SAME TYPE AND MUST CONFORM TO CURRENT REGULATIONS.

 
THE SOCKET MUST BE ACCESSIBLE AFTER THE APPLIANCE HAS BEEN BUILT IN.

NEVER UNPLUG BY PULLING ON THE CABLE.



IMMEDIATELY AFTER INSTALLATION CARRY OUT A BRIEF INSPECTION TEST OF THE COOKING HOB, FOLLOWING THE INSTRUCTIONS BELOW. SHOULD THE APPLIANCE NOT FUNCTION, DISCONNECT IT FROM THE SUPPLY AND CALL THE NEAREST TECHNICAL ASSISTANCE CENTRE.

NEVER ATTEMPT TO REPAIR THE APPLIANCE.



ALWAYS CHECK THAT THE CONTROL KNOBS ARE IN THE POSITION "ZERO" (OFF) WHEN YOU FINISH USING THE HOB.

Introduction



THE IDENTIFICATION PLATE, WITH TECHNICAL DATA, SERIAL NUMBER AND MARKING IS CLEARLY VISIBLE UNDER THE CASING. THE PLATE ON THE CASING MUST NOT BE REMOVED. BEFORE CONNECTING THE DEVICE, MAKE SURE THAT IT HAS BEEN REGULATED FOR THE TYPE OF GAS THAT WILL FEED IT, CHECKING THE LABEL UNDER THE HOB.



DO NOT PUT PANS WITHOUT PERFECTLY SMOOTH AND FLAT BOTTOMS ON THE COOKING HOB GRIDS.



DO NOT USE PANS OR GRIDDLE PLATES THAT EXTEND BEYOND THE EXTERNAL PERIMETER OF THE HOB.



THE HOB IS TO BE USED BY ADULTS ONLY. DO NOT LET UNSUPERVISED CHILDREN PLAY WITH THE HOB.



REPLACED APPLIANCES MUST BE TAKEN TO A SPECIAL GARBAGE COLLECTION CENTRE.



The manufacturer declines all responsibility for damage to persons or things caused by non-observance of the above prescriptions or by interference with any part of the appliance or by the use of non-original spares.

Instructions for the installer



2 POSITIONING OF THE HOB




The following operation requires building and/or carpentry work so must be carried out by a competent tradesman.

Installation can be carried out on various materials such as masonry, metal, solid wood or plastic laminated wood as long as they are heat resistant ($T 90^{\circ}\text{C}$).

2.1 Attachment to support structure



Create an opening with the dimensions shown in the figure in the top surface of the counter, keeping a minimum distance of **50 mm** from the rear border. This appliance can be mounted against walls higher than the work surface on condition that a certain distance "X" be kept between the appliance and the wall as shown in the figure so as to avoid damage from overheating.

70

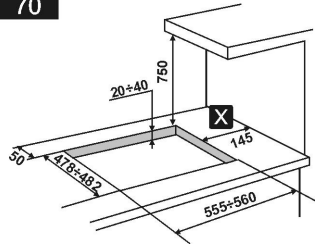

Make sure there is a minimum of **750 mm** between the hot plate flames and any shelf that may be installed directly above them. Accurately position the gasket provided all around the outer edge of the hole in the top surface as shown in the figures below, pressing it down so as to make it adhere properly. Refer to the dimensions shown in the diagram, bearing in mind that the sides A must be flush with the hole. Fix the hob to the unit using the brackets B provided.

Carefully trim any excess from border C of the gasket. The distances in the following drawing refer to the hole **on the inner side** of the gasket.

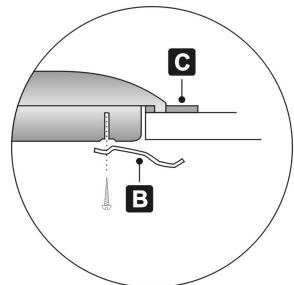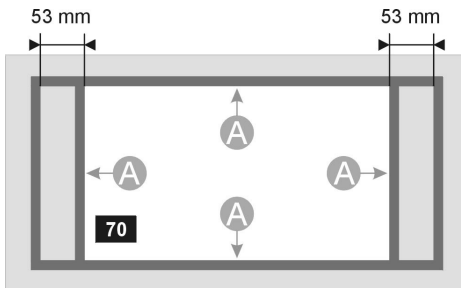




Instructions for the installer

3 ELECTRICAL CONNECTION



 
Make sure that the voltage and capacity of the power line conform to the data shown on the plate located under the casing. Do not remove this plate for any reason.



The plug on the end of the supply cable and the wall socket must be the same type and conform to the current electrical system regulations. Check that the power line is adequately grounded.



 On the power line, install an omnipolar cut-off device with contact cut-off distance greater than or equal to 3 mm, located in an easily accessible position near the unit.



Do not use reducers, adapters or shunts.




If the power cable is replaced, the wire section on the new cable must not be less than 1.0 mm^2 (3 x 1.0 cable), keeping in mind that the end to be connected to the hob must have the ground wire (yellow-green) longer by at least 20 mm. Use only H05V2V2-F cable or similar which has a maximum temperature of 90°C. Any replacement needed should be carried out by a specialised technician who should make the mains connections according to the following diagram.

L = brown

N = blue

 = yellow-green

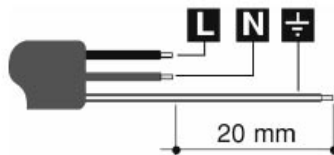

The manufacturer will not be liable for any damage to persons or property caused by non-observance of the above instructions or deriving from the tampering of even a single part of the hob.

Instructions for the installer



4 GAS CONNECTION

Connection to the gas mains may be made with a **rigid copper pipe** or with a **flexible pipe** and conforming to the provisions defined by standard regulations in force.

To facilitate connection, fitting **A** on the rear of the appliance may be adjusted laterally. For this purpose, undo the hexagonal nut **B**, turn the union **A** into the position required and retighten the hexagonal nut **B** to a torque of at least 20 Nm. An annealed aluminium gasket provides the seal.



If the gasket is removed it may NOT be reused and must be replaced with another of exactly the same type.


Use a soapy solution to check for proper tightness. Never use a free flame.

The hob has been inspected for **G20 (2H) natural gas** at a pressure of 20 mbar. For use with other types of gases, see Section "5. ADJUSTMENT FOR DIFFERENT TYPES OF GAS". The gas intake fitting is 1/2" gas external tapered thread (ISO 7-1).


Always place a suitable sealing medium (such as Teflon tape) between union **A** and pipe **C/D**.

Connection with rigid copper pipe: the connection to the gas mains must not provoke stress of any kind on the hob.

Connection may be made by using biconical adapter **D**.

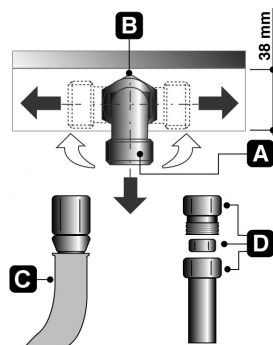

Connection with flexible pipe: use only flexible pipes conforming to standard regulations in force.

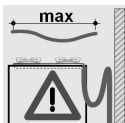

The flexible pipe has to be installed so that pipe length does not exceed the maximum extension allowed by the regulations in force. Make sure that the pipe does not touch any moving parts or become damaged.



Instructions for the installer

4.1 Connection to LPG



Use a pressure regulator and make the connection to the tank according to the provisions of standards regulations in force. Make sure that feed pressure conforms to the levels shown in the table in paragraph “5.2 Regulation for LPG”.

4.2 Ventilation of rooms



The hob may be installed only in rooms with permanent ventilation, as required by standards regulations in force. The room in which the hob is installed must have sufficient air flow to satisfy the requirements of normal gas combustion and of necessary air exchange in the room. The air intakes, protected by screens, must be appropriately sized (regulations in force) and placed so as not to be blocked in any way. The room where the oven is installed should be suitably ventilated to avoid overheating or excess humidity produced by cooking, and in the case of lengthy use a window should be opened or the speed of any ventilators should be increased.

4.3 Discharge of combustion products



Discharge of combustion products must be guaranteed by means of hoods connected to a natural draught flue with certain efficiency, or by means of forced aspiration.

An efficient aspiration system requires careful planning by a specialist capable of installing it, respecting the positions and distances prescribed by standards. After installation, the installer must issue a certificate of conformity.

Instructions for the installer



5 ADJUSTMENT FOR DIFFERENT TYPES OF GAS



Before performing any cleaning or maintenance work, disconnect the appliance from the electrical socket.

A label on the bottom enclosure of the hob declares for which type of gas the appliance has been adjusted. For functioning with other types of gas the nozzles must be replaced and the primary air adjusted.

To replace the nozzles and regulate the burners, operate as described in the following paragraph.

5.1 Removing the hob

1. Remove all the knobs, the grids, the burner caps and the flame-caps;
2. Remove the screws and the nuts **A** that secure the burner supports;
3. Remove plates **B**;
4. Lift the hob from its seat;
5. Replace the burner nozzles in accordance with the relevant gas table;
6. adjust the primary air as described in paragraph "5.2 Nozzle replacement and primary air adjustment"






Instructions for the installer

5.2 Nozzle replacement and primary air adjustment

Loosen screw **A** and push support **B** all the way. Use a double head wrench to remove nozzle **C** and assemble the suitable one, following the values indicated in the tables relevant to the type of gas to use. The screwing torque of the nozzle should never exceed **3 Nm**. Reposition support **B** so that nozzle **C** is covered perfectly.

Move the Venturi tube **D** to regulate the air flow until distance “**X**” is reached indicated in the table “Regulation of primary air” and then secure the tube by means of screw **A**. After the regulations have been carried out, restore the seals with sealing wax or equivalent material.

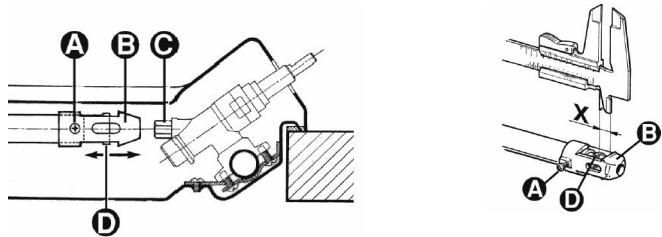

Burner	Rated heating capacity	LPG – G30/G31 2.8 kPa				
		Nozzle diameter 1/100 mm	By-pass 1/100 mm	Reduced flowrate (W)	Flowrate g/h G30	Flowrate g/h G31
Auxiliary	1.05	48	30 (1)	380	76	75
Semi-rapid	1.65	62	30 (1)	380	120	118
Rapid	2.55	76	37 (2)	750	185	182
Rapid large	3.1	85	45	800	225	222
Fish pan	1.8	65	43 (3)	750	145	143
Ultra rapid	3.3	87	65	1700	240	236
Double crown	Internal	0.8	26 (1)	380	58	57
	External	3.3	87	55	1200	240

(1)= 33 for appliances without flame failure device.

(2)= 40 for appliances without flame failure device.

(3)= 45 for appliances without flame failure device.

Instructions for the installer



Burner	Rated heating capacity	Natural gas – G20 2.0 kPa	
		Nozzle diameter 1/100 mm	Reduced flowrate (W)
Auxiliary	1.05	73	380
Semirapid	1.65	92	380
Rapid	2.55	115	750
Rapid large	3.1	126	800
Fish pan	1.8	95	100
Ultra rapid	3.3	130	1400
Double crown	Internal	0.8	67
	External	3.3	130




Instructions for the installer

Burner	Rated heating capacity	Town gas G110 – 0.8 kPa	
		Nozzle diameter 1/100 mm	Reduced flowrate (W)
Auxiliary	1.05	132	380
Semirapid	1.65	165	380
Rapid	2.55	210	600
Rapid large	3.1	240	800
Fish pan	1.8	177	750
Ultra rapid	3.3	250	900
Double crown	Internal	0.8	380
	External	3.3	250

Regulation of primary air

 Referred to distance "X" in mm.



Burner		G20	G30/G31	G110
		2.0 kPa	2.8 kPa	0.8 kPa
Auxiliary (1)		1.5	1.0	0.5
Semirapid (2)		1.5	1.5	0.5
Rapid (3)		1.0	1.5	1.0
Rapid large (4)		1.5	2.5	1.0
Fish pan (7)		2.5	2.0	1.0
Ultra rapid (5)		1.5	2.5	1.0
Double crown (6)	Internal	1.5	1.5	0.5
	External	1.5	4.0	1.0




6 FINAL OPERATIONS

Having carried out the above adjustments, reassemble the appliance following, backwards, the instructions in paragraph “5.1 Removing the hob”.

6.1 Regulation of turndown rate for natural gas or town gas

Replace the components on the burner and slide the knobs on the gas tap pins. Light the burner and set it at turndown rate position. Remove the knob and turn the regulation screw inside or next to the gas tap pin (depending on the model) until you get a suitable low flame. Replace the knob and check burner flame stability: (rapidly turning the knob from maximum to minimum position, the flame should not go out).

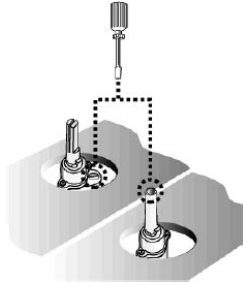

6.2 Regulation of turndown rate for LPG

To regulate the turndown rate for LPG, completely tighten (clockwise) the screw inside or next to the gas tap pin (depending on the model). The diameters of the by-passes for each burner are given in table “5.2 Nozzle replacement and primary air adjustment”.



After having regulated the device with a gas other than the one tested, replace the label located on the bottom enclosure with the one that corresponds to the new gas. The label is inside the bag that contains the nozzles.



Instructions for the installer

6.3 Arrangement of the burners on the hob



Burners

1. Auxiliary
2. Semi rapid
3. Rapid
4. Rapid large
5. Ultra rapid
6. Double crown
7. Fish pan

6.4 Lubrication of gas taps



After a while, the gas tap may become hard to turn or lock. If this happens, it has to be cleaned inside and re-greased.

This must be done by a qualified technician.

Instructions for the user



7 USING THE HOB



Before turning on the burners, make sure that the burner rings, caps and grids have been fitted correctly.


In the ultrarapid burner, notch **A** must be aligned with pin **B**.

Grid **C** provided is intended for use with woks (Chinese pans).

Adapter **D** comes only with open grids models and is intended for use with small sized vessels.



7.1 Ignition of the burners

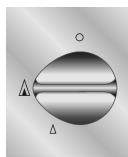

The device is fit with electronic ignition. Simply press and simultaneously turn the knob counter-clockwise on the low point flame symbol, until the burner is ignited.

Concerning models with valves, push the knob for approximately 2 seconds in order to keep the flame burning and to activate the safety device.

The burner might go off when the knob is released. In this case repeat the aforesaid operation keeping the knob pressed for more than 2 seconds.



(Only where applicable)

Double-crown burners, controlled by two knobs, feature two ribs, a long one corresponding to the small inner burner and a short one to the outer burner.

Double-crown burners comprise an auxiliary and a rapid burner, controlled by two different knobs which allow both burners to be used at the same time or to select one or the other as required.



Should the burners go off accidentally in the models with valves, a safety device will trip after approximately 20 seconds to block the gas outlet even if the cock is open.



 
Instructions for the user

7.2 Practical advice for using the burners


For better burner performance and minimum gas consumption, flat bottomed, even pans must be used, with covers and proportional in size to the burners (see paragraph “7.3 Diameter of the pans”).



To avoid overcooking or damage to the surface top while cooking, all pans or griddles must be positioned within the cooking hob perimeter and must be a minimum distance of **3-4 cm** from the knobs.



7.3 Diameter of the pans

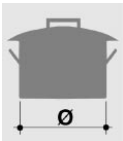

Burners	Ø min. and max. (in cm.)
Auxiliary	7 - 18
Semirapid	10 - 24
Rapid	12 - 24
Rapid large	14 - 28
Double crown	22-26
Ultrarapid	22-26
Fish burner	Special oval-shaped vessels

Instructions for the user



8 CLEANING AND MAINTENANCE



Before any intervention, disconnect the power supply of the appliance.

8.1 Cleaning



Clean the cooking top regularly every time you use it, obviously after it has cooled.

8.1.1 Regular daily cleaning of the hob

In order to clean and preserve the surface, always use specific products only, which do not contain abrasive substances or chlorine-based acid substances.

How to use: pour the product on a damp cloth and wipe the surface, rinse thoroughly and dry with a soft cloth or deerskin.

8.1.2 Food stains or residues

Do not use metallic sponges or sharp scrapers: they will damage the surface.

Use normal non-abrasive products and remove spots or residuals with non-scratch sponges or, if need be, with wood or plastic utensils.

Rinse thoroughly and dry with a soft cloth or deerskin.



8.2 Cleaning of cooking hob components

 
Grids, caps, flame cap crowns and burners can be removed for ease of cleaning. Wash them in warm water using a non-abrasive detergent, taking care to remove all tough spots. Before remounting, allow the components to fully dry out. In fact, humidity residues inside the burner holes might impair burner operation.



8.2.1 Ignition plugs and safety devices

For good functioning of the lighting ignition plugs and the safety devices, keep them very clean.

Check frequently and clean with a damp cloth when necessary.






Instructions for the user

8.2.2 The cover

Clean the glass or steel cover, where mounted, with warm water. Never use abrasive sponges or detergents.

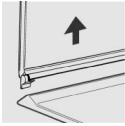

Attention: the glass lid may break if overheated. Make sure that all the burners are switched off and let them cool down before lowering the lid.

