


# PHILIPS

# MAGNAVOX

*FW 375P* Mini HiFi System



0 0 0 0 0 0 0 0 0 3 9 3 4

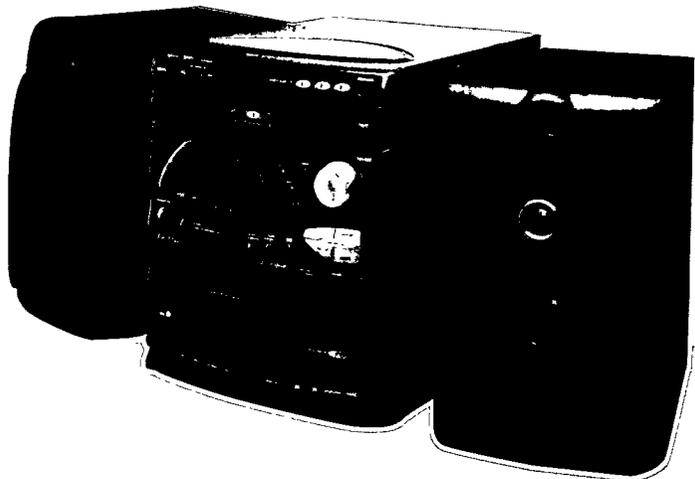

Owner's Manual  
Mode d'emploi  
Instructivo de manejo

**Toll Free Help Line**

Ligne d'assistance en service libre  
Línea de ayuda telefónica sin cargo

**800-531-0039**



# Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

- Once your Philips Magnavox purchase is registered, you're eligible to receive all the privileges of owning a Philips Magnavox product.
- So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

## Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your Philips Magnavox warranty.

## Owner Confirmation

Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.

## Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Know these  
*safety* symbols



This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.



The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

### For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

# PHILIPS MAGNAVOX

***Congratulations on your purchase, and welcome to the "family!"***

**Dear Philips Magnavox product owner:**

Thank you for your confidence in Philips Magnavox. You've selected one of the best-built, best-backed products available today.

And we'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the Philips Magnavox "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

And most importantly you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome—and thanks for investing in a Philips Magnavox product.

Sincerely,



Robert Minkhorst  
President and Chief Executive Officer

**P.S. Remember, to get the most from your Philips Magnavox product, you must return your Warranty Registration Card within 10 days.  
So please mail it to us right now!**



	<b>CAUTION</b>	
<b>RISK OF ELECTRIC SHOCK DO NOT OPEN</b>		
<p><b>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</b></p>		



This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.



This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

## WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

## CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure.

The set complies with the FCC-Rules, Part 15 and with 21 CFR 1040.10.

## Canada

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

	<b>AVIS</b>	
<b>RISQUE DE CHOC ÉLECTRIQUES NE PAS OUVRIR</b>		
<p><b>Attention: Afin de prévenir le risque de chocs électriques, ne pas retirer les vis. Toute réparation devrait être confiée à un personnel qualifié.</b></p>		



Ce symbole indique la présence d'une tension suffisamment élevée pour engendrer un risque de chocs électriques.



Ce symbole indique que le manuel d'installation fourni avec l'appareil contient d'importantes recommandations quant au fonctionnement et à l'entretien de ce dernier.

## AVIS

Afin de réduire tout risque d'incendie ou de choc électrique, il ne faut pas exposer cet appareil à la pluie ou à l'humidité.

## ATTENTION

L'utilisation des commandes ou réglages ou le non-respect des procédures ci-incluses peuvent se traduire par une exposition dangereuse à l'irradiation.

L'appareil répond aux normes FCC, Part 15 et 21 CFR 1040.10.

## Canada

Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Class B prescrites dans le Règlement sur le Brouillage Radioélectrique édicté par le Ministère des Communications du Canada.

	<b>AVISO</b>	
<b>RIESGO DE CHOQUE ELÉCTRICO NO ABRIR</b>		
<p><b>Atención: Para reducir el riesgo de choque eléctrico, no quite la tapa (o el panel posterior). En su interior no hay piezas que el usuario pueda reparar. Para servicio dirijase a personal calificado.</b></p>		



Este símbolo tiene por finalidad advertir al usuario de la presencia de tensión peligrosas no aislada dentro de la caja del aparato, que puede ser lo suficientemente fuerte para constituir un peligro de choque eléctrico.



Este símbolo sirve para advertir al usuario de la presencia de instrucciones de manejo y mantenimiento (servicio) importantes en el manual que acompaña al aparato.

## AVISO

Para reducir el riesgo de fuego o choque eléctrico, no exponga el aparato a la lluvia o humedad.

## ATENCIÓN

El uso de mando o ajustes o la ejecución de métodos que no sean los aquí descritos puede ocasionar peligro de exposición a radiación.

El aparato cumple las normas FCC, Parte 15 y 21 CFR 1040.10.

## Mexico

Es necesario que lea cuidadosamente su instructivo de manejo.

	<b>PRECAUCION · ADVERTENCIA</b>	
<b>NO ABRIR, RIESGO DE CHOQUE ELÉCTRICO</b>		
<b>ATENCIÓN</b>		
<b>VERIFIQUE QUE EL VOLTAJE DE ALIMENTACION SEA EL REQUERIDO PARA SU APARATO</b>		
<b>PARA EVITAR EL RIESGO DE CHOQUE ELÉCTRICO, NO quite LA TAPA. EN CASO DE REQUERIR SERVICIO, DIRIJASE AL PERSONAL AUTORIZADO DE PHILIPS</b>		

**NOM**

**English ..... 9**

**Français ..... 33**

**Español ..... 57**

**English**

**Français**

**Español**

**CLASS 1  
LASER PRODUCT**



This product was designed and manufactured to meet strict quality and safety standards. There are, however, some installation and operation precautions which you should be particularly aware of.

1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating and use instructions should be followed.
5. **Water and Moisture** - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub or swimming pool, or in a wet basement.
6. **Carts and Stands** - The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- 6A.  An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
7. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. **Ventilation** - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. **Heat** - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
10. **Power Sources** - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
11. **Grounding or Polarization** - Precautions should be taken so that the grounding or polarization means of an appliance is not defeated.


**CAUTION:** To prevent electric shock, match the wide blade of this plug to the wide slot and fully insert. Do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.



12. **Power Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles, and the point where they exit from the appliance.
13. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
14. **Power Lines** - An outdoor antenna should be located away from power lines.
15. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding connectors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure below.
16. **Nonuse Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
17. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
18. **Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
  - A. The power supply cord or the plug has been damaged; or
  - B. Objects have fallen, or liquid has spilled into the appliance; or
  - C. The appliance has been exposed to rain; or
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
  - E. The appliance has been dropped, or the enclosure damaged
19. **Servicing** - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

**Note to the CATV system installer**

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

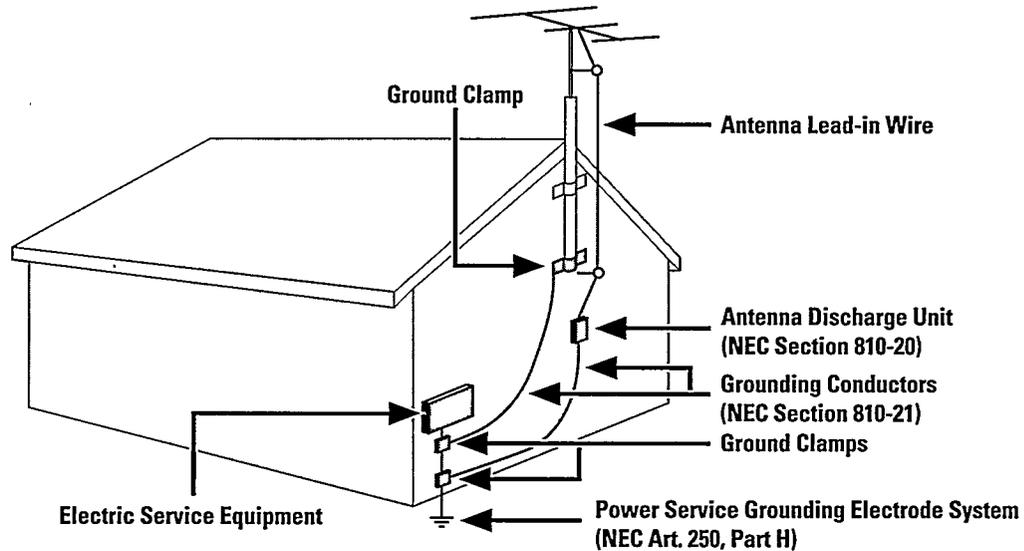**Example of Antenna Grounding as per NEC - National Electrical Code**

## AUDIO SYSTEM

One Year Free Labor

One Year Free Service on Parts

This product must be carried in for repair.

### **WHO IS COVERED?**

You must have proof of purchase to receive warranty service. A sales receipt or other document showing that you purchased the product is considered proof of purchase.

### **WHAT IS COVERED?**

Warranty coverage begins the day you buy your product. For one year thereafter, all parts will be repaired or replaced, and labor is free. After one year from the day of purchase, you pay for the replacement or repair of all parts, and for all labor charges.

All parts, including repaired and replaced parts, are covered only for the original warranty period. When the warranty on the product expires, the warranty on all replaced and repaired parts also expires.

### **WHAT IS EXCLUDED?**

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.).

- a product that is used for commercial or institutional purposes.

### **WHERE IS SERVICE AVAILABLE?**

Warranty service is available in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does not distribute the product, the local Philips service organization will attempt to provide service (although there may be a delay if the appropriate spare parts and technical manual(s) are not readily available).

### **MAKE SURE YOU KEEP...**

Please keep your sales receipt or other document showing proof of purchase. Attach it to this owner's manual and keep both nearby. Also keep the original box and packing material in case you need to return your product.

### **BEFORE REQUESTING SERVICE...**

Please check your owner's manual before requesting service. Adjustments of the controls discussed there may save you a service call.

### **TO GET WARRANTY SERVICE IN U.S.A., PUERTO RICO OR U.S. VIRGIN ISLANDS...**

Take the product to a Philips factory service center (see enclosed list) or authorized service center for repair. When the product has been repaired, you must pick up the unit at the center. Centers may keep defective parts. (In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.).

### **TO GET WARRANTY SERVICE IN CANADA...**

Take the product to a Philips consumer service center (listed below), self-servicing dealer or authorized service depot.

Philips Electronics Ltd.

601 Milner Avenue, Scarborough, Ontario, M1B 1M8  
(416) 292-5161

4977 Levy Street, St. Laurent, Québec, H4R 2N9  
(514) 956-0120

1741 Boundary Road, Vancouver, B.C., V5M 3Y7  
(604) 294-3441

(In Canada, this warranty is given in lieu of all other warranties. No other warranties are expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. Philips is not liable under any circumstances for any direct, indirect, special, incidental or consequential damages, howsoever incurred, even if notified of the possibility of such damages.)

### **REMEMBER...**

Please record the model and serial numbers found on the product below. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL # \_\_\_\_\_

SERIAL # \_\_\_\_\_

*This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province*

**Philips Service Company, P.O. Box 555, Jefferson City, Tennessee 37760, (423) 475-8869**

## GENERAL INFORMATION

Safety .....	6-7
Limited Warranty .....	8
General Information .....	9
Preparations .....	10-11
Dolby Pro Logic .....	12-14
Remote Control .....	15
Controls .....	16-17
Operating the System .....	17-18
Tuner .....	19
Cassette Deck .....	20-21
CD Changer .....	21-23
Clock Setting .....	24
Timer Setting .....	24
Maintenance .....	25
Specification .....	25
Troubleshooting Guide .....	26-27

### Thank you ...

Thank you for buying the new Philips Magnavox Dolby Pro Logic CD Changer mini hifi system. We have designed and tested the mini system to provide you with the latest technology and high quality sound. Follow these instructions to adjust and operate all the functions of your new mini system. Please read and perform the instructions in the order shown.

### General Information

- The typeplate (which contains the serial number) is located at the rear of the set.
  - Recording is permissible if copyright or other rights of third parties are not infringed.
- 1 All unnecessary packaging material has been omitted. We have tried to make the packaging easy to separate into three mono-materials:
    - cardboard (box)
    - expandable polystyrene (buffer)
    - polythene (bags, protective foam sheet).Please observe the local regulations regarding the disposal of these packaging materials.
  - 2 Your set consists of materials which can be recycled and reused if disassembled by a specialized company. Please follow local regulations on recycling your old set.
  - 3 Do not dispose of dead batteries with your household waste. Dispose of batteries according to local regulations.
  - 4 Note: Switching off the standby mode overnight (remove the AC power cord from the wall socket) will save energy.

### Acknowledgement



"Dolby" "Pro-Logic" and the double-D symbol DD are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories Licensing Corporation.

### Accessories (Supplied)

- Remote control
- Batteries (two AAA size) for remote control
- AM loop antenna
- FM antenna wire
- AC power cord
- Model FB 203 Surround speaker package (includes two surround rear speakers and one center speaker)

### Accessories (Recommended)


- Model FB 201 active subwoofer
- Model FB 206W wireless surround speaker package (includes two wireless surround rear speakers and one center speaker)

## Safety Information

- Before operating the system, check that the operating voltage indicated on the typeplate (or the voltage indication beside the voltage selector) of your system is identical with the voltage of your local power supply. If not, please consult your dealer. The type plate is located at the rear of your system.
- When the system is switched on, do not move it around.
- Place the system on a solid base (e.g. a cabinet).
- Place the system in a location with adequate ventilation to prevent internal heat build-up in your system.
- Do not expose the system to excessive moisture, rain, sand or heat sources.
- Under no circumstances should you repair the unit yourself, as this will invalidate the warranty.
- If the system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens of the CD unit inside the system. Should this occur, the CD player will not operate normally. Leave the power on for about one hour with no disc in the unit until normal playback is possible.
- Electrostatic discharge may cause unexpected problems. See whether these problems disappear if you unplug the AC power cord and plug it in again after a few seconds.
- **To disconnect the system from the power supply completely, withdraw the AC power cord from the wall socket.**

## Inserting the batteries into the Remote Control

- Insert two batteries (Type R03 or AAA) into the remote control as shown inside the battery compartment.

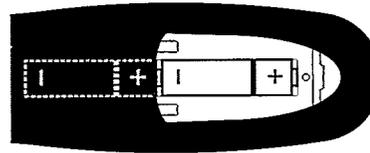

- To avoid damage from possible battery leakage, remove dead batteries or batteries that will not be used for a long time. For replacement use type R03 or AAA batteries.

## A AM Antenna Connection

Connect the supplied loop antenna to the AM AERIAL terminal. Adjust the position of the AM loop antenna for the best reception.


## B FM Wire Antenna Connection

Connect the supplied FM wire antenna to the FM 300  $\Omega$  terminal. Adjust the position of the FM antenna for the best reception.

### Outdoor Antenna

For better FM stereo reception connect an outdoor FM antenna to the FM AERIAL 300  $\Omega$  terminal using a 300  $\Omega$  dipole wire.


## C Speaker Connections

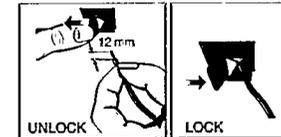

- Connect the right speaker to terminal **R**, with the red wire to **+** and the black wire to **-**.
- Connect the left speaker to terminal **L**, with the red wire to **+** and the black wire to **-**.
- Clip the stripped portion of the wire as shown

**For Dolby Pro Logic Connection, see next page.**

Rear Connection

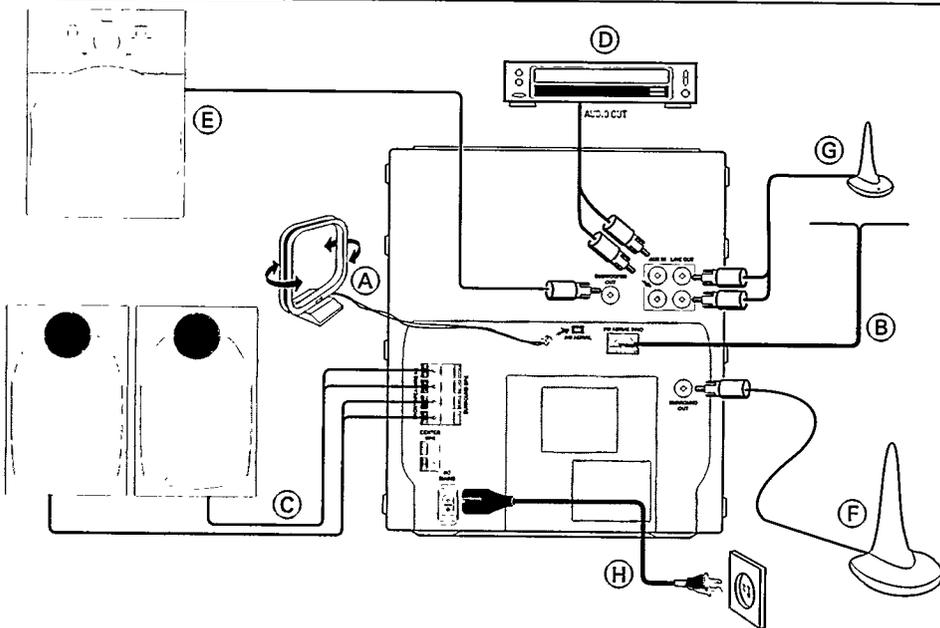

**(D) Connecting other equipment to your system**

You can connect the audio left and right outputs of TV, Laser Disc or VCR to the AUX IN terminal at the rear of the system.

**(E) Subwoofer Out (optional)**

You may connect an external active subwoofer (recommended Model FB 201) to the SUBWOOFER OUT socket to enhance the mini system. The subwoofer reproduces bass sound (e.g. explosions, the rumble of spaceships, etc.). For specifications of the subwoofer, see Specifications. Be sure to follow the instructions supplied with the subwoofer unit.

**(F) Wireless Surround Out (optional)**

You may connect a wireless rear speakers infrared transmitter (recommended Model FB 206W) to the SURROUND OUT socket instead of the supplied wired rear speakers. Be sure to follow the instructions supplied with the wireless rear speakers.

**(G) Line Out (ready)**



**Line Out for remote active speakers**

There is a possibility of locating additional front active speakers away from the system (e.g. in another room). It reduces the inconvenience of running long speaker wires across rooms. You can place as many remote speakers as you like provided that they operate at the same radio frequency. Connect the wireless radio frequency transmitter to the LINE OUT sockets. Place the active speakers at your preferred location. Be sure to follow the instructions supplied with the active speakers.

**(H) AC Power Supply**

After all other connections have been made, connect the AC power cord to the set and to the wall outlet.

## Dolby Pro Logic

This Dolby Pro Logic mini system enables you to experience and enjoy a Home Cinema sound. The Pro Logic system allows more accurate, defined, individual sound sources. Pro Logic provides four outputs: Left, Center, Right and Surround (Rear). Front signals are produced from the Left, Right and Center speakers. The surround signal is reproduced by two speakers placed toward the rear of the listening area.

This Pro Logic decoder enables you to decode the following mode : **Dolby Pro Logic Center Normal**, **Dolby Pro Logic Center Phantom**, **Dolby 3 Stereo** or **Stereo**.


### Setting up the Dolby Pro Logic system

You must connect the speakers first.

#### Five-Speakers Connection


**The Center and Rear speakers are included with this mini system.**

- **Front speakers :** Connect the black wires to the black FRONT terminals and the red wires to the red FRONT terminals.
- **Center speaker :** Connect the black or non-marked wires to the black CENTER terminal and the blue or marked wires to the blue CENTER terminal.
- **Rear (surround) speakers :** Connect the black or non-marked wires to the black REAR terminals and the white or marked wires to the grey REAR terminals. You may also connect a pair of wireless rear speakers (not supplied) from the SURROUND OUT terminal

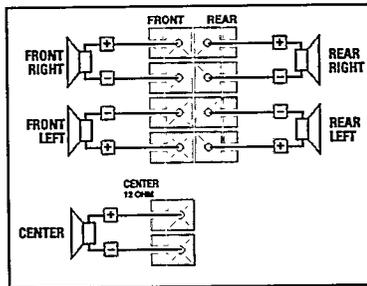

### Positioning the Speakers

To get the best surround sound effect, place the speakers as follows.

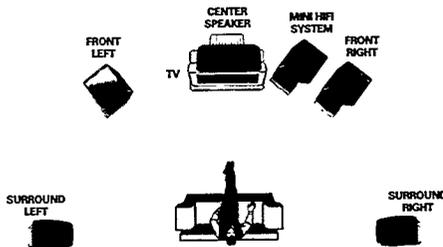

#### Front Left and Right Speakers

For best listening effect, it is recommended to have the Left and Right speakers to form an angle of approximately 45 degrees to the listener. The speakers are shielded magnetically. Should the magnetic field from the speakers affect the picture of the television, you should increase the distance between the speakers and the TV.

#### Center Speaker

Try to have the center speaker at the same height as the left and right speakers and as close as possible to the screen. Place it directly above or beneath the TV. If you use other speakers make sure that it is magnetically shielded.

#### Surround (Rear) Speakers

The surround speaker should be placed at normal listening ear level. It can also be mounted on the wall at the back of the room. Experiment with the speakers' placement to obtain the best sound.

### Test Tone

This feature enables you to adjust the Front Left, Front Right, Center, and Rear sound levels of the respective speakers in Dolby Pro Logic mode.

**You must sit at the ideal sitting position to perform this operation.**

- 1 Press **CD, TAPE, TUNER** or **VIDEO/AUX** on the remote control to switch on the set.
- 2 Press **TEST TONE** on the remote control.
  - A test signal moves through the Left, Center, Right and Rear speakers respectively.
  - The test signal will last for about 90 seconds.
- 3 Press **BALANCE L** to adjust the Front Left level setting.
  - The display will show the sound level and **BAL L %**.
- 4 Press **BALANCE R** to adjust the Front Right level setting.
  - The display will show the sound level and **BAL R %**.
- 5 Press **CENTER +/-** to adjust the center level setting.
  - The display will show either **CENT +** or **CENT -**.

English

- 6 Press **REAR +/-** to adjust the surround level setting.  
→ The display will show either **REAR +** or **REAR -**.
- 7 Adjust the sound level of all the speakers until they are of the same apparent loudness. When you are satisfied with the setting, press **TEST TONE** again to switch off the test tone.

*Note:*  
Set the speakers' level at a normal listening volume level.


When you have completed the Dolby Pro Logic setup, you are ready to experience and enjoy Home Cinema sound.

- Press **DPL (DOLBY PRO LOGIC)** on the remote control repeatedly to select and cycle through the various sound modes.




**Dolby Pro Logic Center Normal** → **Dolby Pro Logic Center Phantom** → **Dolby 3 Stereo** → **Stereo** → **Dolby Pro Logic Center Normal** ...

*Note:*  
You can also press the respective **Dolby Pro Logic** button on the set to select a **Dolby Pro Logic** sound.

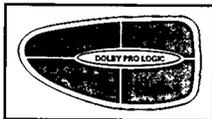


## Dolby Pro Logic Center Normal

This setting is for a full Dolby Surround Pro Logic sound.

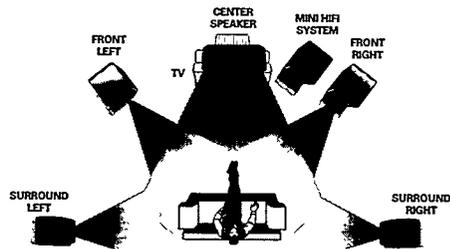


- Press **DPL** on the remote control (or press **DOLBY PRO LOGIC ON** on the set) to select Dolby Pro Logic Center Normal.  
→ The message **"DOLBY PRO LOGIC"** will scroll across the display.  
→ The display will be as follows:

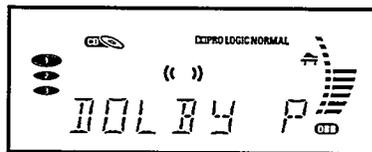

## Dolby Pro Logic Center Phantom

Use this setting when you do not use the center speaker. This setting redistributes the center channel information to the left and right speakers.

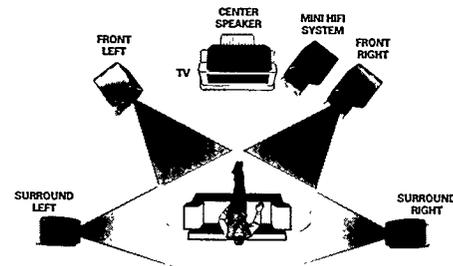


- Press **DPL** on the remote control (or press **DOLBY PRO LOGIC PHANTOM** on the set) to select Dolby Pro Logic Center Phantom.  
→ The message **"CENTER PHANTOM"** will scroll across the display.  
→ The display will be as follows:




## Dolby 3 Stereo

Use this setting when full surround is not required, but a wide stereo sound is desirable. It only requires the left, right and center speakers.

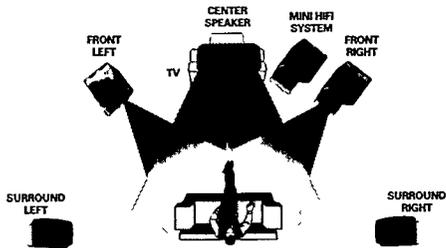


- Press **DPL** on the remote control (or press **DOLBY PRO LOGIC 3 STEREO** on the set) to select Dolby 3 Stereo mode.
  - The message "3 STEREO" will scroll across the display.
  - The display will be as follows:

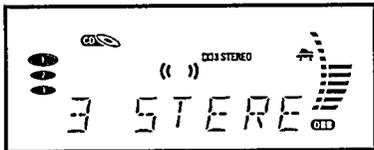


## Normal Stereo

This setting is for normal stereo sound without Dolby Pro Logic. It only requires the left and right speakers.

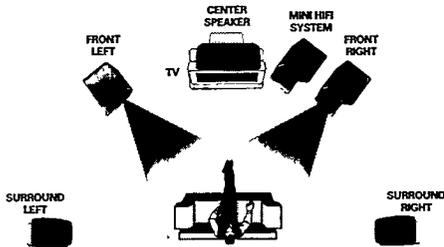

- Press **DPL** on the remote control (or press **DOLBY PRO LOGIC OFF** on the set) to select the Stereo mode.
  - The message "STEREO" will scroll across the display.
  - The display will be as follows:

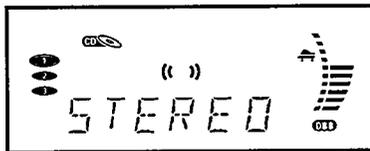

## Important!

1. For the best Dolby Pro Logic sound setting, switch on **DPL** in combination with "Classic sound".
2. Switch to normal stereo mode when you wish to do recording on a cassette.

## Remote Control Functions


- First select the source you wish to control by pressing one of the source selection keys on the remote control (e.g. CD, TAPE, TUNER or VIDEO/AUX).
- Then select the desired function (PLAY, NEXT, etc.).


### Note:

Whenever a remote control button is pressed, the source icon on the display will flicker. This indicates the remote control signal is received by the set.

- ⏻** ..... to switch the unit to standby mode.
- DISC UP** ..... to select the next disc tray for playback.
- CD** ..... to select CD mode.
- TAPE** ..... to select TAPE mode.
- TUNER** ..... to select TUNER mode.
- VIDEO/AUX** ..... to select VIDEO/AUX or external mode.
- DPL** ..... to select Dolby Pro Logic Center Normal, Dolby Pro Logic Center Phantom, Dolby 3 Stereo or Stereo.
- TEST TONE** ..... to check the sound level for Front Left, Front Right, Center and Rear speakers respectively.
- BALANCE L/R** ..... to balance the sound level of the Front Left and Right speakers.
- CENTER +/—** ..... to adjust the sound level of the center speaker.
- REAR +/—** ..... to adjust the sound level of the rear speakers.
- DBB** ..... to switch on or off dynamic bass boost.
- DSC** ..... to select digital sound control: OPTIMAL, JAZZ, ROCK, CLASSIC or POP.
- SHUFFLE** ..... to play CD tracks at random.
- VOLUME +/—** ..... to adjust the volume.

- PLAY ▶** ..... to start playback in CD mode.
- STOP ■** ..... to stop playback in CD mode.
- ◀ PREV./NEXT ▶**  
 for TUNER ..... to select a lower/higher tuner preset station.  
 for CD ..... to select previous/next CD track.  
 for TV/VCR ..... to select previous/next channel.
- PAUSE ||** ..... to interrupt play in CD mode.
- ◀◀ / ▶▶**  
 for TUNER ..... to select a lower/higher frequency.  
 for CD ..... to search for a particular passage.

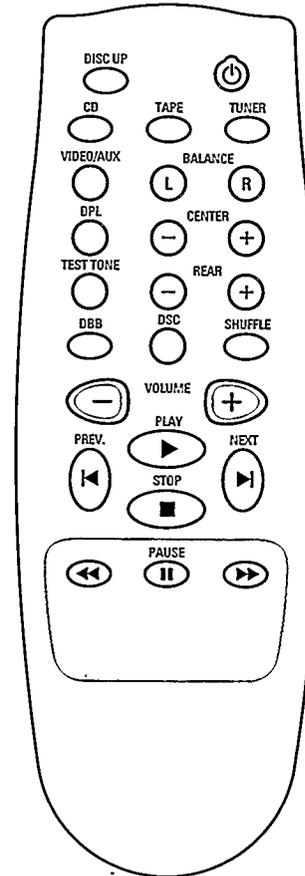

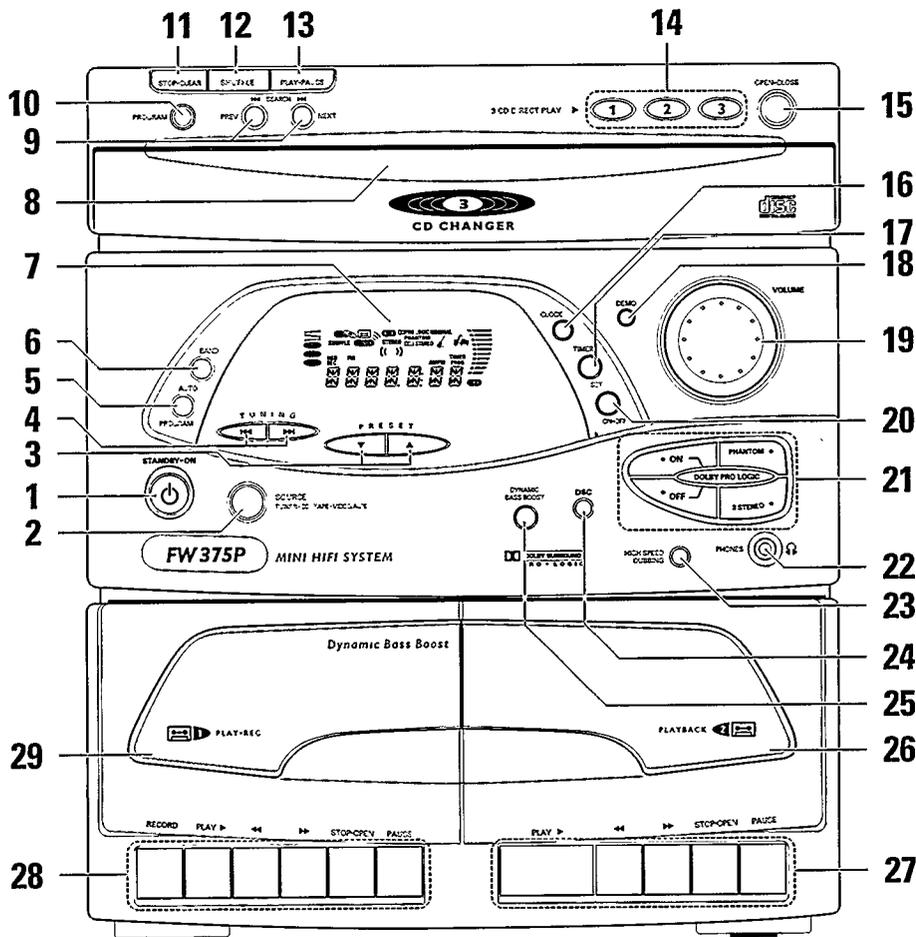

## Front View

- 1 **STANDBY-ON**  
– to switch the set on or to standay mode.
- 2 **SOURCE**  
– to select the following.  
**TUNER** : to switch to TUNER mode.  
**CD** : to switch to CD mode.  
**TAPE** : to switch to TAPE mode.  
**VIDEO/AUX** : to switch to VIDEO/AUX mode  
 (for external sources, e.g. TV, Laser Disc or VCR sound).
- 3 **PRESET** ▼ or ▲  
– to select a radio station in memory. Also use for clock and timer setting.
- 4 **TUNING** ◀◀ or ▶▶  
– to tune to radio stations:  
 ◀◀ : lower frequencies  
 ▶▶ : higher frequencies  
 Also use for clock and timer setting.
- 5 **AUTO PROGRAM**  
– to program preset stations automatically or manually.
- 6 **BAND**  
– to select the waveband: FM or AM.
- 7 **DISPLAY**  
– to display the current setting of the set.
- 8 **CD CAROUSEL TRAY**  
– place up to three CDs in here.
- 9 **PREV / NEXT** (◀◀ SEARCH ▶▶)  
– to skip to the beginning of the current or previous/next track or to search backward/forward.
- 10 **PROGRAM**  
– to program CD tracks.
- 11 **STOP•CLEAR**  
– to stop CD play or to clear a program.

## CONTROLS

- 12 **SHUFFLE**
  - to play all the available discs and their tracks in random order.
- 13 **PLAY•PAUSE**
  - to start or interrupt CD play.
- 14 **3 CD DIRECT PLAY ►**
  - to select play for each CD tray.
- 15 **OPEN•CLOSE**
  - to open or close the CD carousel tray.
- 16 **CLOCK**
  - to set the clock.
- 17 **TIMER SET**
  - to set the timer.
- 18 **DEMO**
  - to display the various features offered by the system.
- 19 **VOLUME**
  - to adjust the volume level.
- 20 **TIMER ON•OFF**
  - to switch the timer on or off.
- 21 **DOLBY PRO LOGIC**
  - ON; PHANTOM; 3 STEREO; OFF : to select Dolby Pro Logic Center Normal, Dolby Pro Logic Center Phantom, Dolby 3 Stereo or Stereo.
- 22 **PHONES** 
  - headphones jack.
- 23 **HIGH SPEED DUBBING**
  - to dub from **TAPE DECK 2** to **TAPE DECK 1** at high speed.
- 24 **DIGITAL SOUND CONTROL (DSC)**
  - to select the desired sound effect: OPTIMAL, JAZZ, CLASSIC, ROCK and POP.
- 25 **DYNAMIC BASS BOOST (DBB)**
  - to switch on bass boost to enhance bass response or to switch off bass boost.
- 26 **TAPE DECK 2**

- 27 **TAPE DECK 2 CASSETTE OPERATION**
  - **PLAY ►** : to start playback.
  - **◀◀** : to rewind the cassette.
  - **▶▶** : to fast forward the cassette.
  - **STOP•OPEN** : to stop playback or to open the cassette compartment.
  - **PAUSE** : to interrupt playback.
- 28 **TAPE DECK 1 CASSETTE OPERATION**
  - **PAUSE** : to start recording.
  - **PLAY ►** : to start playback.
  - **◀◀** : to rewind the cassette.
  - **▶▶** : to fast forward the cassette.
  - **STOP•OPEN** : to stop playback or to open the cassette compartment.
  - **PAUSE** : to interrupt playback or recording.
- 29 **TAPE DECK 1**

## OPERATING THE SYSTEM

### Demo mode


The system has a demonstration mode that shows the various features offered by the system. Whenever the system is switched on from the wall socket, the demonstration mode will start automatically.

#### To stop demonstration mode

- Press **DEMO, STANDBY - ON, SOURCE, CD OPEN•CLOSE** or **3 CD DIRECT PLAY** button on the system (or **⏻, CD, TAPE, TUNER** or **VIDEO/AUX** on remote control) to stop the demonstration mode.

#### To switch on demonstration mode

- Press **DEMO**.
  - The display will show "DEMO", then a demonstration of the various features will follow.

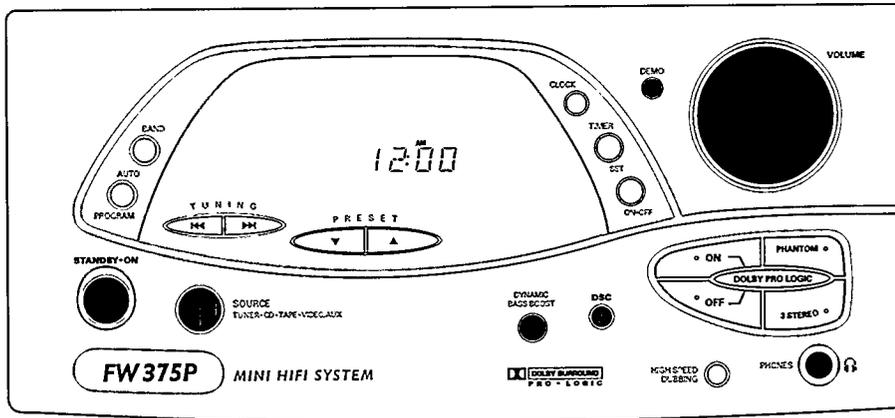

### Important:

Before you begin operating the system, complete the preparation procedures.

### Switching the system ON

- Press **STANDBY-ON** or **SOURCE** (or **CD**, **TAPE**, **TUNER** or **VIDEO/AUX** on the remote control).

### Switching the system to standby mode

- Press **STANDBY-ON** again (or  on the remote control).

### Selecting the Sound Source

- Press **SOURCE** to select either **TUNER**, **CD**, **TAPE** or **VIDEO/AUX** (or **CD**, **TAPE**, **TUNER** or **VIDEO/AUX** on the remote control).  
→ The display indicates the selected sound source.

#### Note:

For an external source, make sure that you have connected the audio left and right output terminals of the external equipment (TV, VCR or Laser Disc player) to the **AUX IN** sockets at the rear of the set.

### Volume Adjustment

Rotate **VOLUME** right or left (or press **VOLUME +** or **-** on the remote control) to increase or decrease the sound level.

### For Personal Listening


Connect the headphones to the  socket at the front of the set. The speakers will be muted.

### Digital Sound Control (DSC)

- Press **DSC** on the set or remote control to select the desired special sound effect: **OPTIMAL**, **JAZZ** (), **CLASSIC** (), **ROCK** () or **POP** ().  
→ The respective sound flag lights up except for **OPTIMAL**.

### Dynamic Bass Boost (DBB)

- Press **DBB** on the set or remote control to enhance the bass response.  
→ The **DBB** flag ( ) lights up.

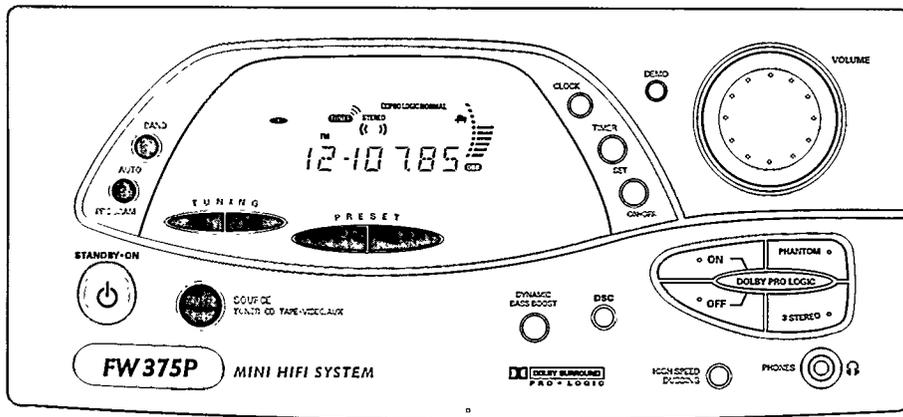

- You can cancel the automatic programming by pressing **AUTO PROGRAM**, **TUNING** |◀◀ or ▶▶| or **PRESET** ▼ or ▲.

### Note:

If you want to reserve a section of preset numbers, for example preset numbers 1 - 9, select preset 10 before starting automatic programming. Now only the preset numbers 10 to 20 will be programmed.

### Manual programming

- Press **AUTO PROGRAM** for less than one second.  
→ PROGRAM flashes on the display.
- Press **BAND** to select the desired waveband: FM or AM.
- Press **TUNING** |◀◀ or ▶▶| to tune to the desired frequency.
- Press **PRESET** ▼ or ▲ to select a preset number.
- Press **AUTO PROGRAM** again.  
→ PROGRAM disappears, and the station is stored.

- Repeat the above procedure to store other preset stations.

### Tuning to Preset Stations

- Press **PRESET** ▼ or ▲ (or **PREV** |◀ or **NEXT** |▶| on the remote control) to select the desired preset number.  
→ The preset number, frequency and waveband appear on the display.

### Tuning to radio stations


- Press **SOURCE** (or **TUNER** on the remote control) to select **TUNER**.
  - Press **BAND** to select the desired waveband: FM or AM.
  - Press **TUNING** |◀◀ or ▶▶| for more than one second.  
→ The display will show 'SEARCH' until a station with sufficient signal strength is found.
- Repeat this procedure until the desired station is reached.
  - To tune to a weak station, briefly press **TUNING** |◀◀ or ▶▶| until the display shows the right frequency and/or when the best reception has been obtained.

### Storing Preset Stations

You can store up to 20 stations in the memory. When a preset station is selected, the preset number appears next to the frequency on the display.

### Automatic programming

- Press **BAND** to select the desired waveband: FM or AM.
- Press **AUTO PROGRAM** for more than one second to start the automatic programming.  
→ PROGRAM flashes and 'AUTO' is displayed.  
→ Every available station will be stored automatically. The frequency and preset number will be displayed briefly.  
→ It will stop searching when all the available stations are stored or the memory for 20 preset stations is used.

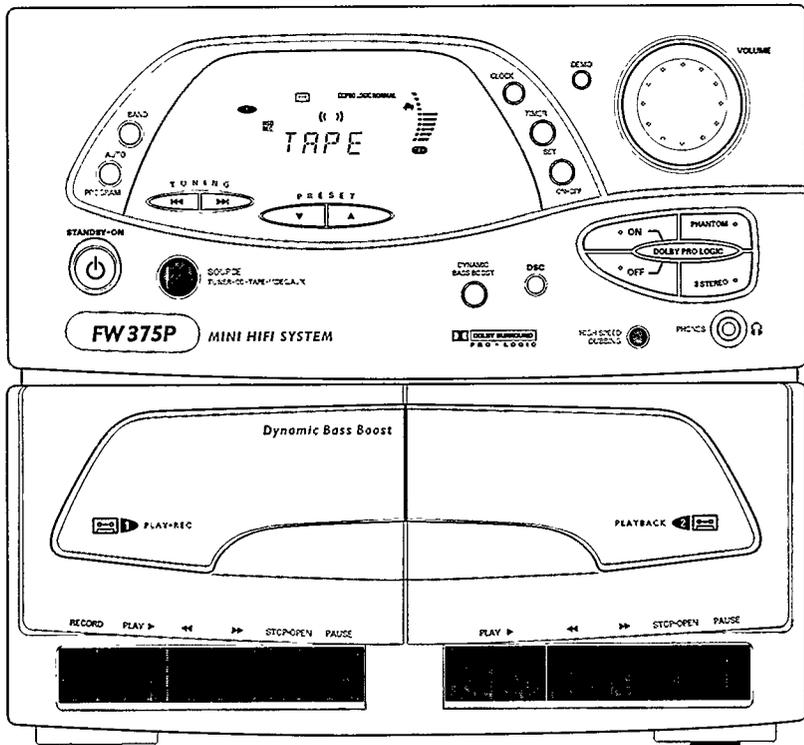

## Loading a cassette

- Press **STOP•OPEN**.
- The cassette compartment door opens.
- Load the cassette with the open side downward and the full spool to the left.
- Close the cassette compartment door.

## Tape Playback

- 1 Press **SOURCE** (or **TAPE** on the remote control) to select TAPE.
- 2 Load the cassette into the desired **cassette deck**.
- 3 Press **PLAY ▶** to start playback.
- 4 Press **STOP•OPEN** to end playback.

## Fast Forward/Rewinding

- 1 You can rewind or fast forward the tape by pressing ◀◀ or ▶▶.
- 2 Press **STOP•OPEN** to stop fast forwarding or rewinding.

*Note:*

*It is possible to fast forward or rewind a cassette when the set is in another source mode (e.g. TUNER, CD or VIDEO/AUX mode).*

## Continuous playback of two cassettes

- 1 Press **SOURCE** to select TAPE.
- 2 Load the cassettes in **tape deck 1** and **tape deck 2**.
- 3 Press **PLAY ▶** on **tape deck 2**.
- 4 Press **PAUSE** on **tape deck 1**.
- 5 Press **PLAY ▶** on **tape deck 1**.
  - Playback will begin with **tape deck 2** and will continue with **tape deck 1** when **tape deck 2** ends
- 6 Press **STOP•OPEN** if you want to stop playback before the end of the tape in **tape deck 1** or **tape deck 2**.

## Recording (TAPE DECK 1)

- 1 Press **SOURCE** to select TUNER, CD or VIDEO/AUX (the source from which you want to record).
- 2 Load a blank cassette into **tape deck 1**.
- 3 Press **RECORD** on **tape deck 1** to start recording.
  - The record flag starts flashing.
  - CD playback will begin automatically.
- 4 Press **STOP•OPEN** on **tape deck 1** to stop recording.

*Note:*

*During recording, it is not possible to listen to another sound source.*

## CASSETTE DECK

### Dubbing cassettes (from TAPE DECK 2 to TAPE DECK 1)

- 1 Load the pre-recorded cassette into **tape deck 2** and a blank cassette into **tape deck 1**.
  - Make sure that both cassettes have their full spools to the left.
- For high speed recording, press **HIGH SPEED DUBBING**.
  - HIGH SPEED appears on the display.
- 2 Press **PAUSE** on **tape deck 1**.
- 3 Press **RECORD** on **tape deck 1**.
  - RECORD appears on the display.
- 4 Press **PLAY ►** on **tape deck 2**.
  - Recording will start automatically.
- 5 Press **STOP•OPEN** on **tape deck 1** and **tape deck 2** to stop dubbing.



### Notes:

- At the end of side A, flip the cassettes to side B and repeat the procedure.
- Dubbing of cassettes is only possible in the Tape mode. To ensure good dubbing, use tapes of the same length.
- During high speed dubbing in Tape mode, the sound is reduced to a low volume.

## General Information

- For recording, use only a cassette of IEC type I (normal cassette).
- The tape in the cassette is secured at both ends with leader tape. At the beginning and end of a cassette, nothing will be recorded for six to seven seconds.
- The recording level is set automatically, regardless of the position of VOLUME.
- Check and tighten slack tape with a pencil before use. Slack tape may get jammed or may burst in the mechanism.
- To prevent accidental recording, break out the tab on the left shoulder of the cassette side you want to protect. To re-record the cassette, cover each hole with cellophane tape.

### Erasure Prevention Tabs



- C-120 tape is extremely thin and may be easily deformed or damaged. It is not recommended for use in this unit.
- Store the cassettes at room temperature and do not put them too close to a magnetic field (for example, transformers, TVs or speakers).


## CD CHANGER

### Warning!


- 1) This set is designed for conventional CDs. Do not use any accessories like disc stabilizer rings or CD treatment sheets, etc., which may damage the CD mechanism.
- 2) Do not load more than one disc into each tray.
- 3) When the CD changer is loaded with CD(s), do not turn over or shake the unit as this may jam the changer mechanism.

You can load up to three discs in the CD changer for continuous play without interruption. In addition to the conventional 12-cm disc, 8-cm discs can be used without an adaptor .

### Loading the CD Changer

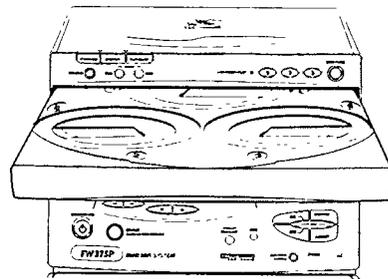

- 1 Press **SOURCE** (or **CD** on the remote control) to select CD.
- 2 Press **OPEN•CLOSE**.
  - The CD compartment slides out.
- 3 Load a disc with the **printed side up** in the right tray.
  - You can load another disc in the left tray.
  - To load the third disc, press the corresponding **3 CD DIRECT PLAY ►** button of the empty tray.

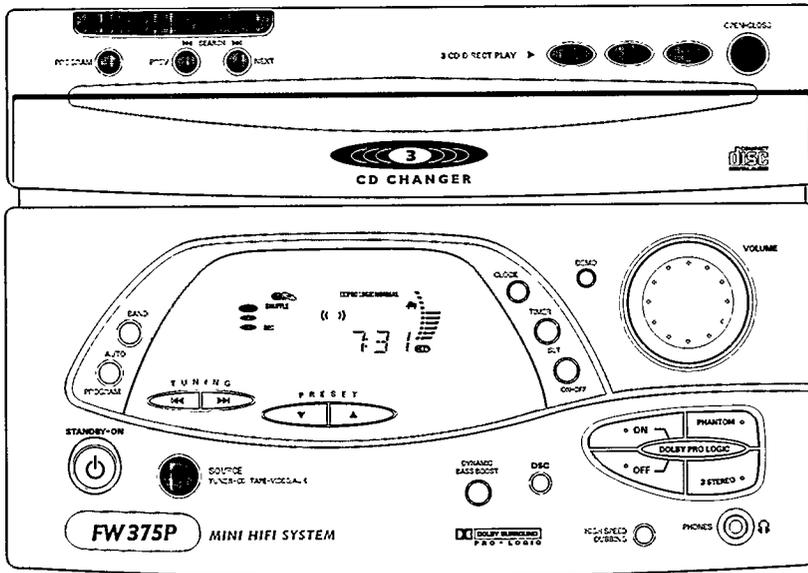

- The CD changer carousel will rotate until the empty tray is at the right and is ready for loading.
- Playback will always start with the right disc tray.
- 4 Press **OPEN•CLOSE** to close the CD compartment.
- The total number of tracks and the playing time of the last selected disc will appear on the display.

The following display indications will help you to know whether the disc trays are empty or loaded :

-  - indicates that disc tray 1 is empty.
-  - indicates that disc tray 2 is loaded with a disc.
-  - indicates that disc tray 3 is loaded and selected.


## Playing a Disc

- 1 Press **PLAY•PAUSE** (or **PLAY ►** on the remote control) to start playback.
  - The disc tray, track number and elapsed playing time of the current track appear on the display.
  - To interrupt play, press **PLAY•PAUSE** (or **PAUSE ||** on the remote control).
    - The playing time flashes.
  - To resume play, press **PLAY•PAUSE** again (or **PLAY ►** on the remote control).
- 2 To stop play, press **STOP•CLEAR** (or **STOP ■** on the remote control).

*Note:*

All the available discs will play once and then stop. When the CD has stopped playing, the set will switch to the standby mode automatically after 15 minutes if no button is pressed.

When the CD tray is closed, you can also play a CD by pressing the **3 CD DIRECT PLAY ► (1-3)** buttons on the set (or **DISC UP** button on the remote control). The CD player will stop at the end of playback of the selected disc.

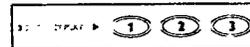

## Selecting a desired track

### Selecting a desired track when playback is stopped

- 1 Press **PREV** or **NEXT (PREV ◀ or NEXT ▶)** on the remote control until the desired track appears on the display.
- 2 Press **PLAY•PAUSE** (or **PLAY ►** on the remote control) to start playback.
  - The selected track number and elapsed playing time appear on the display.

### Selecting a desired track during playback

- 1 Press **PREV** or **NEXT (PREV ◀ or NEXT ▶)** on the remote control until the desired track appears on the display.
  - The selected track number and elapsed playing time appear on the display.
- If you press **PREV** once it will skip to the beginning of the current track and play the track again.

## Searching for a particular passage during play

- Press and hold **SEARCH** |◀◀ or ▶▶| (or ◀◀ / ▶▶ on the remote control) until the desired passage is located. During the search, the sound is played faster than normal at a reduced volume. Play returns to normal when **SEARCH** |◀◀ or ▶▶| is released.

## Shuffle

**SHUFFLE** – playing all the available discs and their tracks in random order. It can also be used during program mode.

### To shuffle all the discs and tracks

- 1 Press **SHUFFLE** (or **SHUFFLE** on the remote control).
  - "SHUFFLE" flashes briefly on the display.
  - The **SHUFFLE** flag, the disc and the track selected at random appear on the display.
- The discs and the tracks will now be played in random order until you press **STOP•CLEAR**.
- 2 Press **SHUFFLE** again to resume normal play.
  - The **SHUFFLE** flag disappears from the display.

## Programming Tracks

Programming tracks of a loaded CD is possible when CD playback is stopped. The display will indicate the total tracks stored in the program. Up to 40 tracks can be stored in the memory in any order. When 40 tracks are stored and you attempt to store another track, the display will show "PROGRAM FULL."

- 1 Load the desired discs in the disc trays.
- 2 Press **PROGRAM** to start programming.
  - The **PROGRAM** flag flashes on the display.
- 3 Press the desired disc button to select the disc.

- 4 Press **PREV** or **NEXT** to select the desired track.
- 5 Press **PROGRAM** to store the track.
  - Repeat steps 3 to 5 to store other discs and tracks.
- 6 Press **STOP•CLEAR** once to end programming.
  - The total number of tracks programmed and total playing time appear on the display.

### Playing the program

- 1 Press **PLAY•PAUSE** to start program playback.
  - The track number and elapsed playing time of the current track appear on the display.
- 2 Press **STOP•CLEAR** to stop program playback.

#### Note:

*If you press any of the 3 CD DIRECT PLAY buttons, the selected disc will play. The stored program will be ignored temporarily. The PROGRAM flag will also temporarily disappear from the display and then reappear when playback for the selected disc ends.*

### Reviewing the program

Reviewing of the program is only possible when CD playback is stopped.

- Press **PREV** or **NEXT** repeatedly to review the programmed tracks.

### Erasing the program (when playback is stopped)

- Press **STOP•CLEAR**.
  - "PROGRAM CLEAR" appears on the display.

#### Note:

*The program is also erased when the set is disconnected from the power supply. If the CD carousel is opened, the tracks belonging to the discs in the outer two trays will be erased and "CLEAR" will flash on the display once.*


## CD Recording

### During CD recording,

- it is not advisable to fast forward/rewind your cassette in TAPE DECK 2.
- it is not possible to listen to another sound source.

### CD Recording

- 1 Load a blank cassette (full spool to the left) into **tape deck 1**.
- 2 Press **SOURCE** (or **CD** on the remote control) to select CD.
- 3 Load a disc into the disc tray.
- 4 Press **PREV** or **NEXT** to select the desired track. If desired, you can program the tracks in the order you want them to be recorded (see Programming Tracks).
- 5 Press **RECORD** on cassette **tape deck 1** to start recording.
  - The **RECORD** flag flashes on the display.
  - CD starts playing.
- 6 Press **STOP•CLEAR** of the CD compartment and **STOP•OPEN** on cassette **tape deck 1** to stop recording.

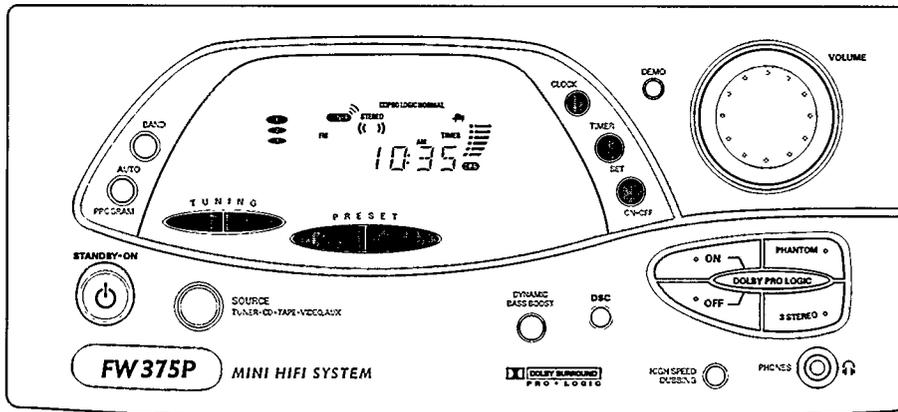

### Setting the clock

The clock uses the 12 hour system, e.g. 1 PM or 12 AM.

- 1 Press **CLOCK**.  
→ "12:00 AM" starts flashing.
- 2 Set the hour with **TUNING** |◀◀ or ▶▶| .
- 3 Set the minute with **PRESET** ▼ or ▲.
- 4 Press **CLOCK** again to store the setting.  
→ The clock starts running.

*Note:*

*When a power interruption occurs, the clock settings are erased.*

### Setting the Timer

- The system can switch on to TUNER or CD mode automatically at a preset time. It can serve as an alarm to wake you up. After half an hour from the preset time, the system will return to the standby mode.
- Before setting the timer, make sure the clock is set correctly.
- The timer works only once for each setting.
- **The volume of the timer will be at the last setting before the set is switched to standby mode.**

### Timer Setting

- 1 Press **TIMER SET**.  
→ The **TIMER** flag flashes.
- 2 Press **PRESET** ▲ to select the desired source.  
→ The display will switch as follows:  
TUNER → CD → TUNER ...
- 3 Press **TIMER SET** to confirm your source selection.  
→ The display will show "ON 12:00 AM" and "12:00 AM" flashes.
- 4 Press **TUNING** |◀◀ or ▶▶| to set the hour for the timer to start.
- 5 Press **PRESET** ▼ or ▲ to set the minutes for the timer to start.
- 6 Press **TIMER SET** to store the start time.  
→ The **TIMER** is now set.  
→ The **TIMER** flag remains lit.

### To stop the TIMER

- Press **TIMER ON•OFF** on the set.  
→ The **TIMER** is now off.

### To start the TIMER again

- Press **TIMER ON•OFF** on the set.  
→ The display will show the last set start time of the **TIMER** and its flag.  
→ The **TIMER** flag remains lit.

*Notes:*

- If the source selected is **TUNER**, the last tuned frequency will be switched on.
- If the source selected is **CD**, the first track of the last selected disc will be played. If the **CD** trays are empty, the **TUNER** source will be selected instead.

# MAINTENANCE

## Maintenance

### Cleaning the Cabinet

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.


### Cleaning Discs

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the center out.
- Do not use solvents such as benzene, thinner, commercially available cleaners, or anti-static spray intended for analog records.



### Cleaning the Heads and the Tape Paths

- To ensure good recording and playback quality, clean the heads (A) and (B), the capstan (C), and pressure roller (D) after every 50 hours of tape operation.

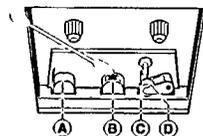

- Use a cotton swab slightly moistened with cleaning fluid or alcohol.

### Demagnetizing the heads

- Use a demagnetizing cassette available at your dealer.

# SPECIFICATIONS

## Specifications

### AMPLIFIER

Standby power	11 W
Output power	
DPL mode FRONT	2 x 40 W RMS
CENTER	20 W RMS
SURROUND	20 W RMS
Normal Stereo	2 x 50 W (10% THD)
Power band width	40 - 20000 Hz
Frequency response	40 - 20000 Hz
Signal-to-noise ratio	≥ 75 dBA (IEC)
Stereo separation	≥ 50 dB (1 kHz)
Input sensitivity (Aux)	350 mV
Speakers	
Left/Right/Surround	≥ 6 Ω
Center	≥ 12 Ω
Headphones	32 Ω - 1000 Ω

### TUNER

FM wave range	87.5 - 108 MHz
AM wave range	530 - 1700 kHz
Sensitivity at 300 Ω, 26 dB S/N ratio, FM mono	13.8 μV
46 dB signal-to-noise ratio, FM Stereo	309 μV
FM Frequency response	63 - 12500 Hz (±3 dB)
Signal-to-noise ratio	≥ 50 dBA
Total Harmonic Distortion	< 3%

### CD PLAYER

Frequency range	20 - 20000 Hz
Signal-to-noise	≥ 85 dBA
Channel separation	≥ 40 dB
Total harmonic distortion + noise	≤ 65 dB

### CASSETTE DECK

Frequency range	
Normal tape (type I)	80 - 14000 Hz (±5 dB)
Signal-to-noise ratio	
Normal tape (type I)	≥ 48 dBA
Wow and flutter	≤ 0.4% DIN

### OUTPUT FOR ACTIVE SUBWOOFER (optional)

Output at maximum volume	500 mV (±2 dB)
Output impedance	2000 Ω
Frequency response	20 - 20000 Hz (±3 dB)

### MAIN UNIT

Material/finish	Metal and polystyrene
Dimensions (w x h x d)	265 x 316 x 363 (mm)
Weight	9.0 kg approx.

### SPEAKER BOX

Dimensions (w x h x d)	200 x 310 x 265 (mm)
Weight	3.25 kg approx.
Speaker woofer	1 x 5.25 inch
Speaker tweeter	1 x 2.5 inch
Speaker piezo	1 x 1 inch

### Subject to modification



**Warning!** Under no circumstances should you try to repair the set yourself, as this will invalidate the warranty.

- If a fault occurs, check the points listed below before taking the set for repair.
- Should any problems persist after you have made these checks, consult your nearest dealer or service center.

<b>SYMPTOM</b>	<b>POSSIBLE CAUSE</b>	<b>REMEDY</b>
<b>RADIO RECEPTION</b>		
The STEREO indicator flashes.	The signal is too weak.	Adjust the antenna.
Severe hum or noise.	The signal strength is too weak.	Adjust the antenna.
	The TV or VCR is too close to the stereo system.	Separate the stereo system from the TV or VCR. Connect an external antenna for better reception.
<b>CASSETTE DECK OPERATION</b>		
Recording is not possible.	No cassette in the cassette deck.	Insert a blank cassette into the cassette deck.
	The protection tab has been broken.	Put a piece of clear adhesive tape over the opening.
Recording or playback cannot be made or there is a decrease in audio level.	Dirty tape heads.	See section on cassette deck maintenance.
	Magnetic build-up in the record/playback head.	Use demagnetizing cassette.
Excessive wow or flutter, or sound drop-out.	Contamination of the capstans or pressure rollers.	See section on cassette deck maintenance.
<b>CD PLAYER OPERATION</b>		
"NO DISC" is displayed.	The disc is inserted upside down.	Place CD with printed side up.
	Moisture condensation.	Wait until lens has adjusted to normal room temperature.
	There is no disc in the CD tray.	Insert a CD.
	The CD is dirty, badly scratched or warped.	Replace or clean the CD.
<b>GENERAL</b>		
Set not working.	Set does not react when buttons are pressed.	Press STANDBY-ON to switch the unit off, then switch it on again. Or, unplug the AC power plug from the wall outlet, then plug it in again.
No or poor sound.	Volume is not turned up.	Adjust VOLUME.
	The headphones are connected.	Disconnect the headphones.
	Speakers are not connected or are connected wrongly.	Check that the speakers are connected correctly. Make sure that the stripped speaker wire is clamped.
Reversed left and right sound.	Speakers are connected wrongly.	Check the speaker connections and speaker location.

Lack of bass sound or apparently imprecise physical location of musical instruments.	Speakers are connected wrongly.	Check the speaker connection for proper phasing, red/black wires to red/black terminals.
Clock blinking.	There was a power disruption.	Reset the clock.
Remote control has no effect on the set.	The distance to the system is too large.	Reduce the distance.
	Batteries are inserted incorrectly.	Insert the batteries correctly.
	Batteries are exhausted.	Replace the batteries.
Timer not working	Wrong sound source is selected.	Select the sound source before pressing the function button (PLAY, PREV./NEXT, etc.).
	Timer not on.	Press TIMER ON • OFF on the set to switch on the timer.
	Dubbing/recording is active.	Stop dubbing/recording.
"PRESS DEMO TO EXIT" is displayed.	Demo mode is switched on.	Press STANDBY-ON or DEMO to switch off the demo.

# Philips Consumer Electronics Company Factory Service Center Locations

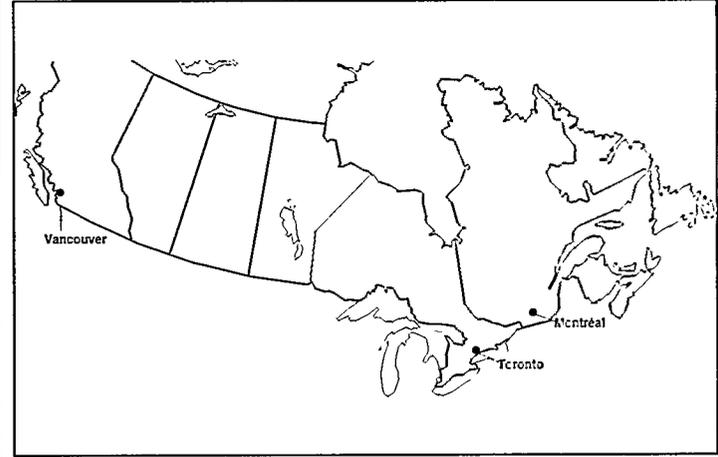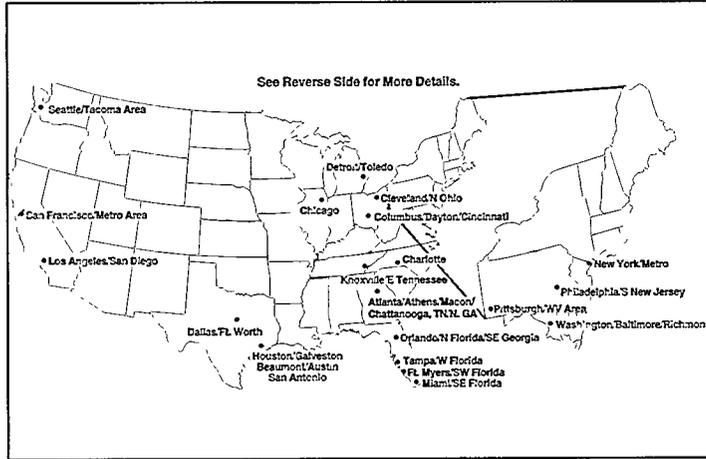

**NOTE:** If you reside in one of our Philips Factory Service Branch areas (see directory on back), you can contact the nearest Service Branch to obtain efficient and expedient repair for your product. If your product is In-Warranty, you should have proof-of-purchase to ensure No Charge Service. For Out-of-Warranty service, call the location nearest you.

**NOTA:** Si vous résidez dans une des régions desservies par une succursale de service après vente du fabricant Philips (voir liste ci-dessous), vous pourrez contacter la branche de service après vente la plus près de chez vous pour obtenir un service après vente rapide et efficace. Si le produit est sous garantie, il suffira de présenter une preuve d'achat pour bénéficier d'un service sans frais. Pour les produits non couverts par la garantie, contactez le centre le plus près de chez vous.

**NOTA:** Si Ud. reside en una de nuestras zonas para sucursales Philips de servicio al de fábrica (ver directorio más abajo), Ud. puede comunicarse con la sucursal de servicio más cercana para obtener una reparación oportuna y eficaz de su producto. Si su producto está todavía bajo garantía, Ud. debe presentar comprobante de compra para no ocasionar ningunos cargos por servicio. Para servicio después del vencimiento de la garantía, llame al lugar más cercano de los abajo indicados.

**QUALITY SERVICE IS AS CLOSE AS YOUR TELEPHONE! SIMPLY LOOK OVER THE LIST BELOW FOR THE NUMBER OF A FACTORY SERVICE CENTER NEAR YOU. YOUR PRODUCT WILL RECEIVE EFFICIENT AND EXPEDIENT CARRY-IN, MAIL-IN, OR IN-HOME SERVICE, AND YOU WILL RECEIVE PEACE OF MIND, KNOWING YOUR PRODUCT IS BEING GIVEN THE EXPERT ATTENTION OF PHILIPS' FACTORY SERVICE. AND, IF THE PHONE NUMBER LISTED FOR YOUR AREA IS LONG DISTANCE, CALL 1-800-242-9225 FOR FACTORY SERVICE.**

**COMMENT OBTENIR NOTRE SERVICE APRÈS VENTE RAPIDE ET EFFICACE SOIT PAR COURRIER, À DOMICILE, OU EN SE PRÉSENTANT À UN CENTRE DE SERVICE PHILIPS. PLUS DE 600 CENTRES DE RÉCEPTION DE PRODUITS À RÉPARER À TRAVERS LE PAYS: CONTACTER LE CENTRE DE SERVICE AUX CONSOMMATEURS LE PLUS PROCHE POUR SAVOIR L'EMPLACEMENT DE CES DÉPÔTS DANS UN RAYON DE 50 À 75 MILES (80 KM À 120 KM) DU CENTRE DE SERVICE LOCAL.**

**CÓMO OBTENER UN SERVICIO OPORTUNO Y EFICIENTE POR CORREO, EN CASA O EN PERSONA PARA SU PRODUCTO A TRAVÉS DE UN CENTRO PHILIPS DE SERVICIO. MAS DE 600 SITIOS POR TODO EL PAIS PARA LA RECEPCION DE PRODUCTOS NECESITADOS DE REPARACIONES: COMUNICARSE CON EL CENTRO DE SERVICIO DE FABRICA MAS CERCAO PARA ESTOS LUGARES DENTRO DE UN RADIO DE 80 A 120 KM (50 A 75 MILLAS) DEL CENTRO DE SERVICIO LOCAL.**

<p><b>Atlanta - Athens-Macon - Chattanooga, TN-North Georgia Area</b> 200 North Cobb Parkway Suite 120 Marietta, GA 30062 (770) 795-0085</p>	<p><b>Dallas - Ft. Worth Area</b> 13375 Stemmons Freeway Suite 200 Dallas, Texas 75234 (972) 243-4775</p>	<p><b>Los Angeles - San Diego Area</b> 2910 E. LaPalma, Suite E Anaheim, CA 92806 (714) 238-7250</p>	<p><b>Pittsburgh, PA - Steubenville, OH - Wheeling/Morgantown, WV Area</b> 2891 Banksville Road Pittsburgh, PA 15216 (412) 563-8020</p>
<p><b>Charlotte - Winston Salem - Greensboro Area</b> 520-G Clanton Road Charlotte, NC 28217 (704) 529-6330</p>	<p><b>Detroit Area</b> 25173 Dequindre Madison Heights, MI 48071 (810) 544-2110</p>	<p><b>Miami - Southeast Florida Area</b> 2099 W. Atlantic Blvd. Pompano Beach, FL 33069 (954) 978-0467</p>	<p><b>San Francisco - Oakland - San Jose Area</b> 3370 Montgomery Drive Santa Clara, CA 95054 (408) 492-9013</p>
<p><b>Chicago-Naperville-Rockford - Kenosha - Beloit - Madison - Gary - Merrillville Area</b> 1360 W. Hamilton Parkway Itasca, IL 60143 (708) 775-0990</p>	<p><b>Ft. Myers Satellite Location</b> 11601 Cleveland Ave., Suite 15 Ft. Myers, FL 33907 (941) 278-4242</p>	<p><b>New York Metro Area</b> 116 Charlotte Avenue Hicksville, NY 11801 (516) 933-1780 Nassau County</p>	<p><b>Seattle-Tacoma Area</b> 1055 Andover Park East Tukwila, WA 98188 (206) 575-6288</p>
<p><b>Cleveland - Akron - Youngstown Area</b> 24090 Detroit Avenue Westlake, OH 44145 (216) 899-2040</p>	<p><b>Houston - Galveston - Beaumont - Austin - San Antonio Area</b> 1110 North Post Oak Road Suite 100 Houston, TX 77055 (713) 682-3990</p>	<p><b>Orlando - Jacksonville - Ocala - Gainesville &amp; East Coast</b> 2452 Sand Lake Road Orlando, FL 32809 (407) 857-8998</p>	<p><b>Tampa - St. Petersburg - Sarasota Area</b> Center Point Business Park, Building B-1, Suite 100 1911 U.S. Hwy. 301 North Tampa, FL 33619 (813) 621-8181</p>
<p><b>Columbus - Dayton - Cincinnati Area</b> 6333 Busch Blvd. Columbus, Ohio 43229 (614) 781-2605</p>	<p><b>Knoxville - Greeneville-Tri Cities - East Tennessee Area</b> 6700 D. Papermill Road Papermill Plaza Knoxville, TN 37919 (423) 584-6614</p>	<p><b>Philadelphia - South NJ Area</b> 352 Dunks Ferry Road Bensalem, PA 19020 (215) 638-7500</p>	<p><b>Washington, DC - Baltimore - Northern VA Area</b> 6671-J Santa Barbara Road Elkridge, MD 21227 (410) 796-0105</p>

 
**HOW YOU CAN OBTAIN EFFICIENT AND EXPEDIENT CARRY-IN, MAIL-IN, OR IN-HOME SERVICE IN CANADA FOR YOUR PRODUCT THROUGH A PHILIPS CONSUMER SERVICE CENTER**

**COMMENT OBTENIR NOTRE SERVICE APRÈS VENTE RAPIDE ET EFFICACE SOIT PAR COURRIER, À DOMICILE, OU EN SE PRÉSENTANT À UN CENTRE DE SERVICE PHILIPS**


**CÓMO OBTENER UN SERVICIO OPORTUNO Y EFICIENTE POR CORREO, EN CASA O EN PERSONA EN EL CANADA PARA SU PRODUCTO A TRAVÉS DE UN CENTRO PHILIPS DE SERVICIO AL CONSUMIDOR**

<p><b>TORONTO</b> 601 Milner Avenue Scarborough, Ontario M1B 1M8 (416) 754-6064 (Tel.) (416) 292-5161 (Tel.) (416) 754-6290 (Fax)</p>	<p><b>MONTRÉAL</b> 4977 Levy Street St. Laurent, Québec H4R 2N9 (514) 956-0120 (Tel.) (514) 956-0828 (Fax)</p>	<p><b>VANCOUVER</b> 1741 Boundary Road Vancouver, B.C. V5M 3Y7 (604) 294-3441 (Tel.) (604) 294-3574 (Fax)</p>
---	--	---





FW 375P

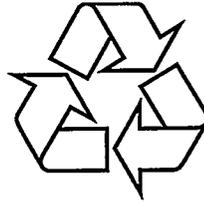

**Philips Consumer Electronics Company**

A Division of Philips Electronics North America Corporation, Knoxville, Tennessee 37914-1810, USA

3139 116 16471  
IB7744T001

Printed in Malaysia

TL-9762/37-3