



Technika

IDTV
User Guide



Model No
19-228
22-228

HD
ready

DVB-T

HDMI™
HIGH DEFINITION MULTIMEDIA INTERFACE

DVD
VIDEO





Technika



IMPORTANT GUARANTEE INFORMATION

Congratulations on purchasing this television. We hope you have many years of trouble free enjoyment from your purchase.

Your product is covered under the manufacturers guarantee for 12 months from date of purchase.

In the event of a fault being diagnosed, please refer to the frequently asked questions/ troubleshooting section at the rear of this user guide.

If you are still unable to remedy the fault, try resetting the TV to factory settings, (details in this user guide) or contact the helpline.

In the event that a fault is diagnosed, the helpline will arrange to collect the TV from your home or work address, return it to our service centre, repair the item and then return it to you.

If we believe we cannot offer a permanent repair, we will replace the item.

Sky Media UK LTD – Helpline Information

Telephone UK 0871 2000 463, ROI 01443 3940

Email: service@skymediauk.co.uk

Web support: www.skymediauk.co.uk


The telephone opening hours are Monday to Friday 8.30am to 6pm, Saturday 9am – 5pm.

You must retain all packaging materials, in addition to your proof of purchase/receipt, as you will need these in the event of warranty/service support.

This guarantee is in addition to and does not affect your statutory rights.

If you need to call the helpline, you will need the following information.

- 1) Model Number _____ (You can find this on the rear of the TV)
- 2) Date of purchase _____ (You can find this on your sales receipt)
- 3) Serial Number _____ (You can find this on the rear of the TV)

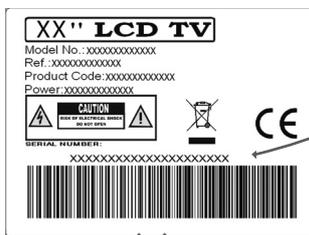

EXAMPLE OF LABEL ON REAR OF TV

IMPORTANT SAFETY INSTRUCTIONS



Please read these instructions. All the safety and operating instructions should be read before the appliance is operated.

Warnings

- To reduce the risk of fire, electric shock or damage to the television, do not expose it to dust, rain or moisture, or place any objects filled with liquids on or near the television.
- Do not place the television in a confined space, ensure that nothing can obstruct the ventilation openings at the rear of the television.
- Do not place naked flames on or near the television.
- Dispose of this television and any components including batteries in an environmentally friendly manner. If in doubt, please contact your local authority for details of recycling.

Safety

- For your safety, this appliance is fitted with a fused moulded 3 pin mains plug. Should the fuse need to be replaced, ensure that any replacement is of the same amperage and approved with the BSI mark.
- Never try and replace the mains plug unless you have adequate qualifications and are legally authorised to do so. In the event that a replacement Mains cable is required, contact the manufacturer for a suitable replacement.
- Never use the television if it is damaged in any way.
- Always place the television on a flat level surface avoiding anywhere which may be subject to strong vibration.
- Ensure the television is not placed on top of the power cable as the weight of the television may damage the cable and cause a safety hazard.
- Never place mobile phones, speakers or any other device which may cause magnetic or radio interference with the television. If interference is apparent, move the device causing the interference away from the television.

Maintenance

- To clean this unit, wipe with a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth dipped in a soapy and water solution or a weak detergent solution.
- Use eyeglass cleaner to remove stubborn dirt from the LCD/LED Screen.
- Never use alcohol, paint thinner or benzene to clean this unit.
- Before using a chemically treated cloth, read the instructions that come with the cloth carefully.

CAUTION: If water or other liquid enters the television through the display panel surface, a malfunction may occur.



Packaging

- The safest way to transport your item is in the original box/packaging - please save your packaging for this.
- You will need original box/packaging in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly.



IMPORTANT SAFETY INSTRUCTIONS



Please read these instructions. All the safety and operating instructions should be read before the appliance is operated.

Important Information Regarding Use of Video Games, Computers, Captions or Other Fixed Image Displays

The extended use of fixed image program material can cause a permanent "shadow image" on the LCD panel.

This background image is viewable on normal programs in the form of a stationary fixed image. This type of irreversible LCD/LED panel deterioration can be limited by observing the following steps:

1. Reduce the brightness/contrast setting to a minimum viewing level.
2. Do not display the fixed image for extended periods of time.
3. Turn the power off when not in actual use.

Examples of images that you need to watch out for are as follows (this is not an exhaustive list):

- TV Channel Logos: e.g. Shopping channel logos and pricing displays-especially if they are bright and stationary. Moving or low-contrast graphics are less likely to cause ageing of the screen.
- Time Displays
- Teletext: Do not view a stationary page for long period of time
- TV/DVD Menus: e.g. Listings of DVD disk content
- Pause Mode: Do not leave the TV in pause mode for long periods of time, e.g. When watching DVDs or videos.

Important - Once 'shadow image/screen burn' occurs, it will never disappear and is not repairable under warranty.

How do I dispose of this product?

Batteries

- Observe the correct polarity when inserting batteries.
- Do not use different types of batteries together or mix old and new batteries.
- Dispose of batteries in an environmentally friendly way.
- Certain regions may regulate the disposal of batteries. Please consult your local authority.



CAUTION:  This caution label is located on the rear panel of the unit

THIS UNIT IS A CLASS 1 LASER PRODUCT. HOWEVER THIS UNIT USES A VISIBLE LASER BEAM WHICH COULD CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THE PLAYER CORRECTLY AS INSTRUCTED. WHEN THIS UNIT IS PLUGGED INTO THE WALL OUTLET, DO NOT PLACE YOUR EYES CLOSE TO THE OPENINGS TO LOOK INTO THE INSIDE OF THIS UNIT. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.





Technika





CONTENTS

Manufacturers Guarantee Information	3
Important Safety Instructions	4-5
What is included in the box	8
Detaching the stand and wall mounting	9
Getting Started - Initial Set Up	11
TV Buttons and Input Source Menu	12
Remote Control	13
Connections	14-15
TV Menu Operation	16-20
Picture Menu	16
Sound Menu	17
Channel Menu	18
Feature Menu	19
Setup Menu	20
DVD Menu	21
PC Operation	22-23
Using the television as a computer monitor	22
PC Settings Menu	23
7 Day TV Guide/USB	24-25
7 Day TV Guide	24
USB Mode / Media Player	25
General Information	27-39
Frequently Asked Questions	27
Technical Specifications	28
Index	29




WHAT IS INCLUDED IN THE BOX

Accessories

Included with this TV are the following accessories:


1 x User Guide

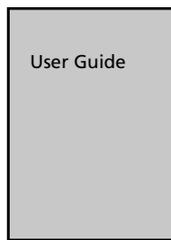

1 x Remote Control



1 x Quick Start Guide

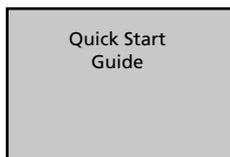

2 x AAA Batteries



1 x Stand



1 x TV



1 x RF Cable




Please save your packaging as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in it's original box/packaging.

ATTACHING/DETACHING THE STAND

Attaching the Stand

1) Insert the TV into the stand at 45 degrees

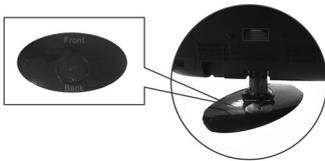

2) Twist the TV into the CLOSE position until it clicks into place



This television requires a VESA 100 wall mount, or equivalent.

Detaching the Stand

- 1) To remove the base, press close and rotate 45 degrees.
- 2) Remove the 4 screws highlighted



3) Remove the screw/s in the neck of the stand (where fitted)

IMPORTANT - Before drilling any holes in the wall ensure you are not drilling where there could be any electric wires, water or gas pipes.


Wall mounting the TV

- 1) Remove the four screws highlighted below.
- 2) The wall mount can now be easily attached to the mounting holes on the rear of the TV. These holes are indicated in the picture below.



For optimum viewing, if wall mounting the TV higher than eye level, the TV should be tilted downwards so that the TV's screen is 'face on'. See fig 1 and 2

Important – If wall mounting this TV, only use the screws already provided in the wall mounting holes. Using other screws which are longer could cause irreparable damage to internal parts.

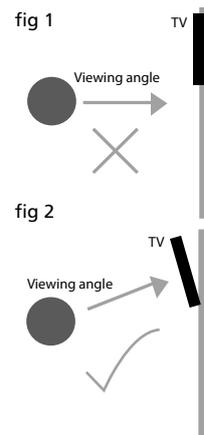



Technika



GETTING STARTED - INITIAL SET UP



1) Using the RF cable supplied, connect the TV to the TV Aerial wall socket (Fig A)

2) Connect the power cable to the Electrical outlet (Fig B)





3) Switch on the television using the power on/off switch located on the side of the TV.

4) Insert the batteries supplied into the Remote control and press the Standby button to power on the TV

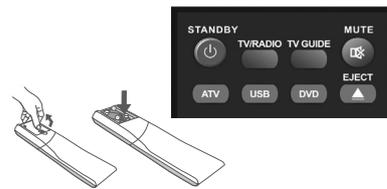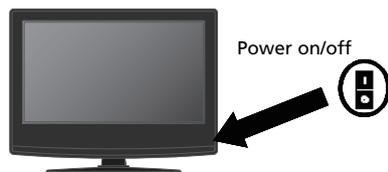

5) You will now be welcomed with the initial set-up screen. If it does not appear, on the remote control, please press [MENU] then 8-8-8-8 and the menu will appear. Press OK on the remote control and tuning will start.

 
6) After tuning the following screen will appear.

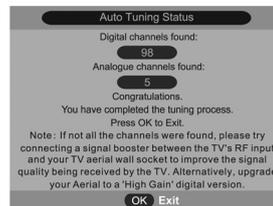

If you are missing channels, the reason for this is likely to be signal strength, you should consider connecting signal booster and re-tuning the TV.

Tip: If the TV finds some, but not all, of the Digital channels, the TV is functioning correctly but the signal being received is not strong enough. (The signal strength needs to be above 85% - you can see the signal strength the TV is receiving when you change channels/ programmes) you will need to increase the signal reception in order to receive all of the channels available. The most economical way to do this is by purchasing and connecting a 'signal booster' in between the TV and the TV aerial socket. If this does not solve the problem, you will need to upgrade the TV aerial to a digital hi-gain compatible aerial

TV BUTTONS & SOURCE MENU

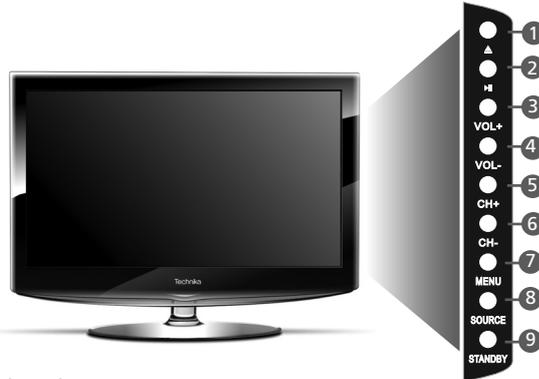

- 1 Eject Disc
- 2 Play/Pause Disc
- 3 Volume up and menu right
- 4 Volume down and menu left
- 5 Programme/Channel up and menu up
- 6 Programme/Channel down and menu down
- 7 Displays Menu/OSD
- 8 Displays the input source menu
- 9 Standby Power On/Off

Choosing Mode Input/Source

To switch between the different input/connections.

A) Using the buttons on the remote control:

- 1) Press [SOURCE/ AV] - The source menu will appear
- 2) Press [V] or [^] to select the input you require.
- 3) Press [OK]

B) Using the buttons on the Television:

- 1) Press [SOURCE]
- 2) Scroll up / down using CH+/ CH- buttons to the input/source you require
- 3) Press Vol+ to change input/source to the one selected.

SOURCE MENU

ANALOGUE

FREEVIEW

USB MEDIA

HDMI

SCART

COMPONENT

VIDEO


VGA/PC

DVD


- 1** STANDBY - Switch on TV when in standby or vice versa
 MUTE - Mute the sound or vice versa
 TV/RADIO - Switch to Freeview and switch between TV and radio in Freeview mode
 TV GUIDE - Opens the 7 Day TV Guide (Freeview mode)
 ATV - Switch to analogue TV source
 USB - Switch to USB Source
 DVD - Switch to DVD source
 EJECT - Eject disc in DVD mode
- 2** S.MODE - Scrolls through sound mode options
 P.MODE - Scrolls through picture mode options
 ⏪ - To restart the current chapter
 ⏩ - To advance forward to the next chapter
 ⏸ - To stop the playback
 ⏮ - To play in fast rewind mode
 ⏭ - To play in fast forward mode
 ⏹ - To play/pause
- 3** SOURCE/AV - To display the input/source menu
 INFO - Press once for now/next channel information
 Press twice for programme information about current programme
 (▲/▼/◀/▶/OK) - Allows you to navigate the on-screen menus and adjust the system settings to your preference
 MENU - To display OSD menu
 EXIT - To exit all menus
 NUMBER BUTTONS - 0 - 9 to select a TV channel directly.
 ⏪ - To return to the previous channel viewed
 FAV - To display favourites menu
- 4** VOL ▲/▼ - To increase / decrease the sound level
 SUBTITLE - To switch the dialogue at the bottom of the screen (on/off)
 ASPECT - To switch the screen between the different picture formats
 AUDIO - To change the audio language (if available)
 SLEEP - Press repeatedly to cycle through the sleep options
 CH ▲/▼ - To increase or decrease the channel being watched
 GOTO - DVD mode - To go to a specific chapter
 A-B - DVD mode - Press once to set point, press a second time to return to point
 ANGLE - DVD mode - Select different angle of DVD (if available)
 REPEAT - DVD mode - To repeat playback
- 5** D.DIS - DVD mode - To display the current disc information
 ZOOM - DVD mode - To zoom in
 SIZE - Teletext mode - To change the display size in Teletext mode
 DISPLAY - To switch off the screen when listening to radio
 DVD SETUP/TEXT - DVD mode - To display the DVD setup menu
 Teletext mode - To enter Teletext
 D.MENU/INDEX - DVD mode - To display the DVD disc menu
 Teletext mode - To display the index page
 TITLE/REVEAL - DVD mode - To display the DVD title menu
 Teletext mode - To reveal or hide the hidden words.
 HOLD - Teletext mode - Hold current page which is displayed



CONNECTIONS

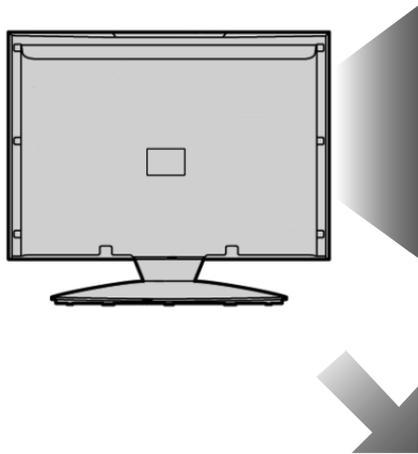


A	HEADPHONES	3.5mm Headphone output
B	RF IN	RF / TV Aerial Input
C	AUDIO IN (R/L)	Component / Video audio input
D	Component HD	Component HD Input
E	VIDEO	Video input
F	COAX Audio Out	Digital Coax output
G	CI CARD IN	Common Interface Card Input
H	SCART	SCART input
I	VGA(PC) Audio In	3.5mm PC audio input
J	VGA(PC)	VGA-PC input
K	HDMI	HDMI input
L	USB	USB port

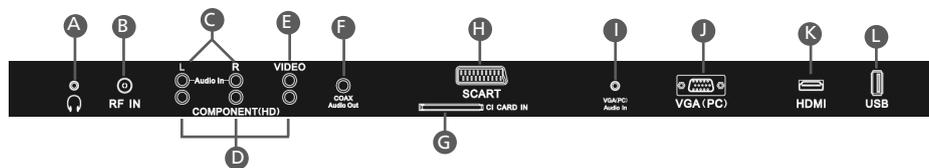

Connecting a DVD Player/Recorder, Video Recorder or Cable/Satellite Box

TVs Input/Source should be set to SCART

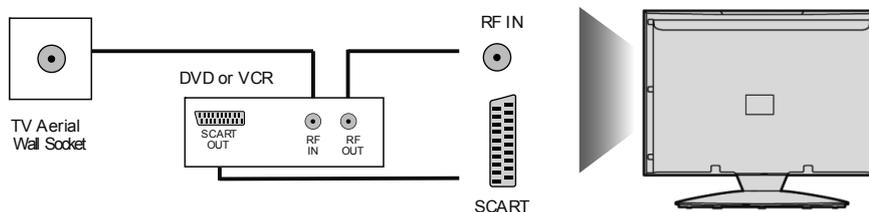




CONNECTIONS

Connecting a Camcorder, Camera or Games Console

Source should be set to Video

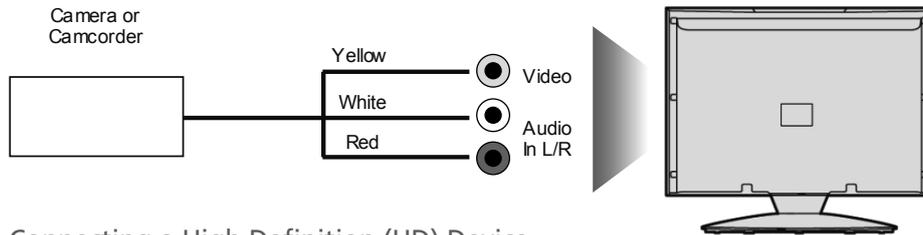


Connecting a High Definition (HD) Device

Option 1 - via HDMI to HDMI cable

A HDMI cable can output both video and audio and enables you to enjoy digital-quality video and audio with minimal loss of quality.


TV's Input/Source should be set to HDMI.

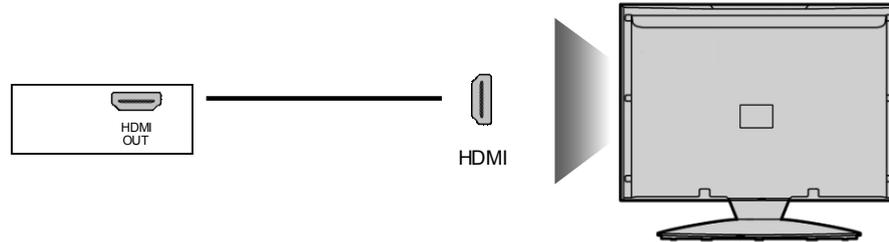

Option 2 - via Component cable



If you are supplied with a cable from the device which has RED, GREEN, BLUE, RED & WHITE connectors you must connect via Component (for picture) and by phono cable (for sound).

TV Source should be set to Component.

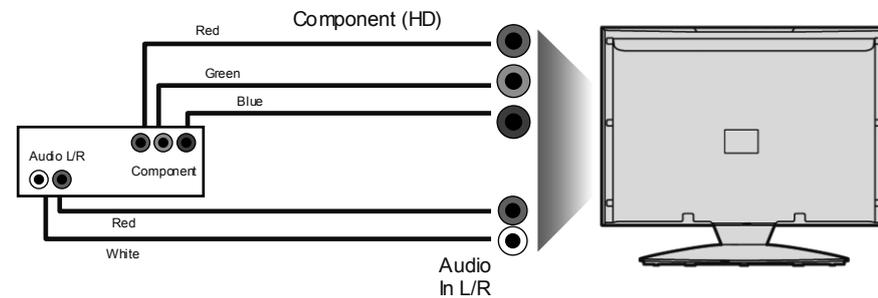



PICTURE MENU

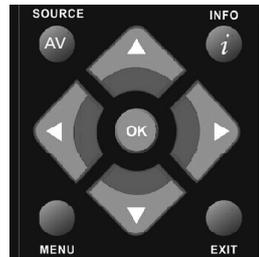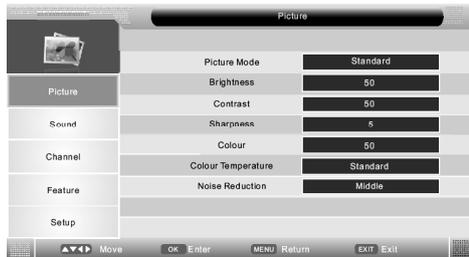

To access this menu, press [MENU] button on the remote control.

If you wish to make changes to any of the default settings, use the scroll **▲▼▶◀** buttons. To confirm any settings press [OK] button.

To exit this menu at anytime, press [EXIT] button.

Picture Mode - Choose from the following presets

Standard	Default settings
Personal	Lets you manually alter all the settings
Movie	Recommended settings when watching a movie
Sport	Recommended settings when watching sport
Mild	Set to be lighter in colour and less bright
Game	Recommended settings when playing game consoles

Brightness - Increase or decrease the brightness of the picture

Contrast - Switch the balance between black and white

Sharpness - Increase or decrease the sharpness of the picture

Colour - Increases the colour from black and white

Colour Temperature - Choose from the following presets

Standard	Default settings
Warm	Increases red within the picture
Cool	Increases blue within the picture

Noise Reduction - Choose from the following presets

Low	Minimum reduction in interference
Middle	Medium reduction in interference
High	Maximum reduction in interference
Off	Off

Tip: If you do not press any buttons for 10 seconds, the menu will automatically exit. You can change the length of time before the menu exits automatically - see 'OSD Timer' section.





SOUND MENU



To access this menu, press [MENU] button on the remote control.

If you wish to make changes to any of the default settings, use the scroll  buttons. To confirm any settings press [OK] button.

To exit this menu at anytime, press [EXIT] button.

Sound Mode - Choose from the following presets

Personal	Selects your personal sound settings
Voice	Emphasises voice over other sounds
Music	Emphasises music over voices
Theatre	Provides live and full sound for movies
Standard	Default settings

Tip: Treble and bass levels can only be adjusted when the sound mode 'Personal' is selected.

Bass - To adjust the amount of low frequency within the sound

Treble - To adjust the amount of high frequency within the sound

Balance - To switch the sound between the left and right speakers


Auto Volume Level (AVL) - When 'on' is selected, the volume will stay at a constant level regardless of input/source

Digital Output - This is the digital COAX Audio output. Choose from the following options:

Off	Off
Bitstream	Select this option if you are connecting to a Dolby Digital 5.1 surround sounds amplifier via coax cable (True digital signal)
PCM	Select this option if you are connecting to a Stereo Hi-fi via coax cable (Pulse-code modulation (PCM) is a digital representation of an analogue signal)



CHANNEL MENU

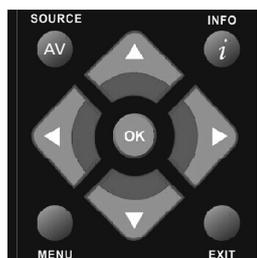

To access this menu, press [MENU] button on the remote control.

If you wish to make changes to any of the default settings, use the scroll  buttons. To confirm any settings press [OK] button.

To exit this menu at anytime, press [EXIT] button.

Channel Manager - Allows you to lock channels, delete channels, add/remove channel skip, move channel position and rename channels.

Favourite Manager - Add and remove favourites. Up to 4 favourite lists are available

Auto Search - You can select the country and then complete re-tune of the television

Manual Search - Select the start channel (which relates to the frequency) and search manually for a channel.

Note - This only searches for channels in the current source. i.e. Digital channels on Digital source



FEATURE MENU



To access this menu, press [MENU] button on the remote control.

If you wish to make changes to any of the default settings, use the scroll  buttons. To confirm any settings press [OK] button.

To exit this menu at anytime, press [EXIT] button.

System Lock - This menu allows you to lock certain features of the television so that they cannot be used or viewed. For example if you don't want certain channels viewed by children or if the television is to be used in a hotel and you want to limit the volume.

When you enter the system lock menu you will be asked for a pin code. As default it is 0000.

You now have the choice to lock any of the following:

System Lock - Switches all the locks on or off

Key Lock - Stops the buttons on the television working

Source Lock - Press [OK] to enter then apply On to lock the source so it can't be used

Channel Lock - Press [OK] to enter then apply locks to channels you wish to block. This will lock the channels of the source you using, i.e. Analogue, Digital.

Default Source - You can set the default start up source, so when the television is turned on it goes to this source, i.e. Digital, SCART, HDMI etc

Default Channel - You can set the default start up channel, so when the television is turned on it goes to this channel.

Maximum Volume - You can limit the maximum volume

Change Pin Code - Press [OK] to enter, first enter the current code, then enter your new code and confirm your new code. Write the new code here so you don't forget it _____

Language - Lets you adjust the different language options available

Programme Schedule - Lets you manually set recording by date, time and number of recordings.

Clock - Allows you to set the clock (as default the information is taken automatically from the digital TV signal)

Hearing Impaired - You can switch on the hearing impaired feature, this provides additional information and subtitles

Sleep Timer - Lets you set the sleep timer so the television automatically switches off after a certain amount of time

Common Interface - Pay per view services require a "smartcard" to be inserted into the TV.


If you subscribe to a pay per view service the provider will issue you with a 'CAM' and a "smartcard". The CAM can then be inserted into the COMMON INTERFACE PORT (CI Card In).



CAM and smartcard



SETUP MENU

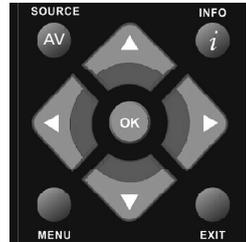

To access this menu, press [MENU] button on the remote control.

If you wish to make changes to any of the default settings, use the scroll ▲▼▶◀ buttons.

To confirm any settings press [OK] button.

To exit this menu at anytime, press [EXIT] button.

OSD Timer - Lets you adjust the amount of time the On Screen Menu stays on the screen before disappearing


First Time Installation - Takes you back to the first time installation screen, so you can completely re-tune both Digital and analogue

Aspect Ratio - Within the UK the picture format varies depending on the channel/broadcast. There are a number of different options to best meet your needs

Auto


Automatically displays the best picture format. So the picture is in the correct position. May have black lines At the top/bottom and/or sides.

4:3

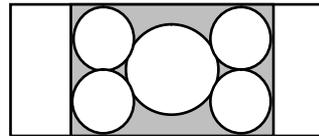


Displays the 4:3 picture in its original size. Side bars are shown to fill the 16:10 screen

Full

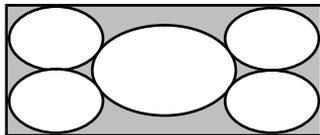


Fills the screen, so no black lines

16:9

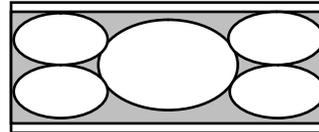


Top and bottom bars are shown to fill the 16:10 screen. 4:3 pictures will be stretched

Zoom

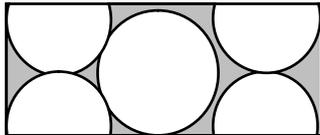

The picture is the correct proportion but zoomed in to fill the screen

14:9

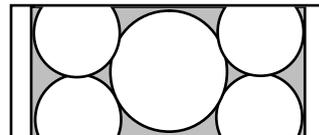

Displays the 14:9 picture in the correct proportion. As a result side bars are shown on the screen

Blue Screen - Changes the background when there is no input between clear and a blue background (Only available on some sources)


Reset to default

Reset Menu System - This resets the menus to factory settings.

Reset TV Channels - This clears all the TV channels from the television.

Firmware Upgrade - From time to time we may release new firmware to improve the operation of the television (available to download). This menu lets you install the new software/firmware onto the television. Further details of how to do this will be issued with the firmware. Contact the helpline or refer to the 'product support' section of the website.

DVD MENU

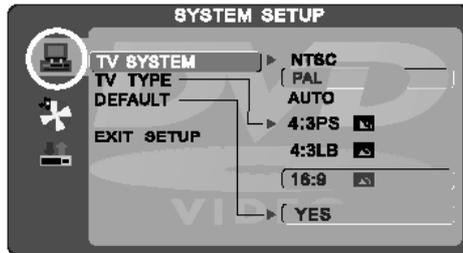

To access this menu, press [MENU] button on the remote control.

If you wish to make changes to any of the default settings, use the scroll buttons. To confirm any settings press [OK] button.

To exit this menu at anytime, press [EXIT] button.

TV System - Choose from the following options

NTSC	Normally used for discs from North America, Japan etc
PAL	The standard for discs from UK/Europe, most of Asia, Australia etc
Auto	For both NTSC and PAL

TV Type - Choose from the following options

4:3PS	Traditional picture format, often used on old film
4:3 LB	Traditional picture which has been adapted for widescreen
16:9	Widescreen picture format

Default - This option allows you reset all DVD settings to factory settings.

Tone - Choose from the following options

+	Increases the treble (high frequency sound)
-	Increases the bass (low frequency sound)

Dynamic Range - This is the difference between the quietest and loudest sounds. This setting works only with DVD discs recorded in Dolby digital.

Full	Set this to listen with the range recorded on the disc
4/8	Set this to listen with a range equivalent to a normal television
2/8	Set this to listen with a smaller difference between the maximum and minimum volume

Dual Mono

Stereo	Outputs 2 channels of sound both left and right
Mono L	Outputs left side sound
Mono R	Outputs right side sound
Mix Mono	Outputs a single channel of sound but mix between right and left

USING THE TELEVISION AS A COMPUTER MONITOR

IMPORTANT – Before connecting the computer to the television you must ensure the computer settings are correct for the television. You **MUST** do this using your old monitor.

How to set up for Windows XP & Windows Vista (connecting via VGA cable to the TV)

- 1) Switch on your computer
- 2) When finished booting up right click your mouse anywhere on the screen
- 3) Left click your mouse on Properties/Personalise



XP Screen

VISTA Screen



XP Screen

VISTA Screen

- 4) Left click your mouse on Setting/Display Settings. Ensure the screen resolution is set to what is shown in the technical specifications section toward the rear of this user guide. To correct the resolution to that of the television move the slider.



XP Screen

VISTA Screen

- 5) Left click your mouse on Advance/Advance Settings and left click on Monitor



XP Screen


VISTA Screen

- 6) Left click on the drop down for Screen refresh rate and select 60 Hertz, if you experience picture noise or 'flickering', select 50 hertz or 70 hertz.

- 7) Click on Apply, then click Yes and the settings will be saved.

- 8) Now switch off your computer and connect the television (as shown)


- 9) Switch on the TV, select the input/source to VGA/PC and re-start your PC.

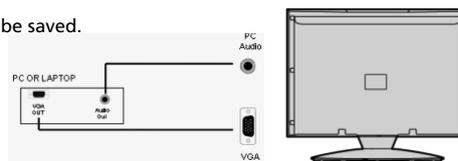

Connecting a Laptop

In addition to the above if you are connecting a laptop to the television you will also need to activate the VGA connection on the laptop. This can vary based on the brand of laptop you have, on many brands/models, it is as per below.

 
- 1) Connect the laptop to the television
- 2) On the Laptop push buttons
The screen will now switch to the television.





Technika

PC SETUP MENU

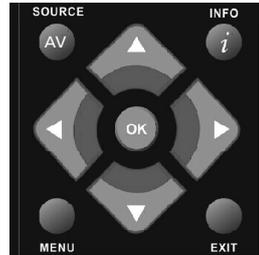

To access this menu, press [MENU] button on the remote control.

If you wish to make changes to any of the default settings, use the scroll **▲▼▶◀** buttons. To confirm any settings press [OK] button.

To exit this menu at anytime, press [EXIT] button.

Auto Adjust - Lets you automatically configure the television to be used as a computer monitor

Horizontal Position - Changes the horizontal position of the picture

Vertical Position - Changes the vertical position of the picture

Phase - To adjust delay time of phase in order to reduce the noise of picture

Clock - Alter this in order to reduce the noise within the picture

Tip: If the computer is left in-active for a period of time, the television will switch into a 'sleep' state (the screen will power off to save power). To switch back on press the standby button.

7 DAY TV GUIDE

TV Guide is available in Digital TV mode. It provides information about forthcoming programmes (where supported by the freeview channel). You can view the start and end time of all programmes and on all channels for the next 7 days and set reminders.

1) Press [TV GUIDE]. The following 7 Day TV Guide will appear.

7 Day TV Guide		31/05/2007 02:41:38 PM			
005	Five	01:30 pm	03:30 pm	03:30 pm	04:30 pm
Comedy drama starring David Niven. An officer in charge of a displaced persons' camp faces a dilemma when a Russian deserter is ordered back. (1969) [S]					
THU 31/05		2:30 pm	03:00 pm	03:30 pm	04:30 pm
Five	Before Winter Comes	Battle of The v.1			
abc1	8 Simple Rules	8 Simple Rules	8 Simple Rules	Hope and Faith	
QVC	Fairies & Flower..	Fairies & Flower Inspired Craft	In the Salon with		
UKTV Gold	Closedown		New Tricks		
bid tv	Quality Products	Quality Products at Low Prices	Fashion Accesso		
price_drop.tv	Quality Products	Quality Products at Low Prices	Home Collection		
UKTV Style	Extreme Makeov	Extreme Makeover: Home Edition	Closedown		
	Reminder	Prev Day	Next Day		
Move Page-/Page+ INFO Info EXIT Exit					


2) Navigate through the menu using ▲▼▶◀

You can now:

- Set a reminder by pressing GREEN
- View a previous day by pressing YELLOW
- View the next day by pressing BLUE

3) Press [EXIT] to exit the 7 day TV Guide.

USB MODE / MEDIA PLAYER

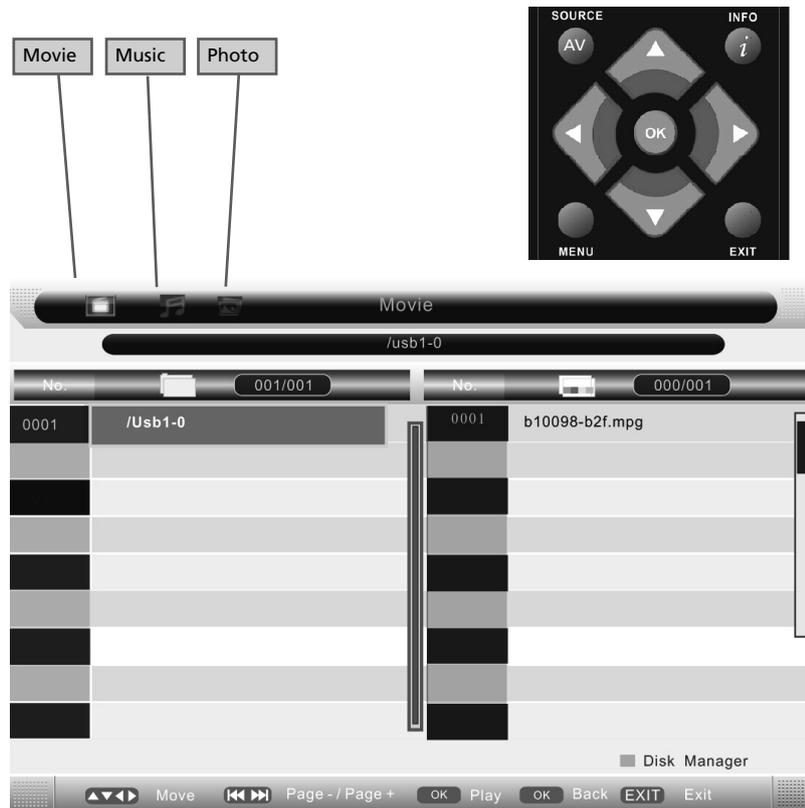

USB mode offers playback of various different types of content that you have saved on your USB Memory Stick.

On switching to USB source the above menu screen will appear. The content will be divided into Movies, Music, Photos and Recorded Programmes based on file type.

You can navigate through the menus using the scroll ▲▼▶◀ buttons. To confirm the item you wish to play/view press [OK] button.



Technika



FREQUENTLY ASKED QUESTIONS

General	I would like to have louder sound by connecting additional speakers	There are 2 options: 1) Use Digital COAX output connected to an external amplifier/surround sound system 2) Use the 3.5mm headphone output and a 3.5mm to phono cable (available separately) to connect to an amplifier/surround sound system
General	Why are some options in the menu unavailable and greyed out	Some options are only available in certain sources, i.e. HDMI, PC/VGA. They are unavailable in the other sources where they have no affect.
TV	I have re-tuned my television but when I switch it off it is not storing the channels	Complete a first time installation, please refer to the set-up menu section of the manual of how to do this
DVD	I have inserted a disc but it is not playing	1) Ensure you have inserted put the disc in facing the correct way forward 2) Ensure the disc is clean and is not scratched 3) Some copied discs will not play. 4) Check the DVD is a region 2 disc.
VCR/DVD Recorder	I have connected the TV to my VCR or DVD Recorder via SCART but it is not recording	In addition to connecting via SCART, you should connect the aerial cable from the wall socket to your VCR/DVD Recorder and another aerial cable from the VCR/DVD Recorder to the TV
Game Consoles	I have connected my PS3 to the TV via HDMI, but I am not receiving any pictures or sound on my Console	1) Ensure the TV's source is on HDMI 2) Check your settings on your PS3 are as per the PS3 instruction manual
Game Consoles	I have connected my Xbox 360 to the TV via Component Cables (Red, Green & Blue) but I am not receiving any sound	Component cables only provide HD Pictures. For the sound you will need to connect the Red & White audio cables on the Xbox to the Red & White phono inputs on the rear of the TV. Please refer to the 'Connections' pages.
USB Mode	I have inserted a USB Memory Key, but the TV does not recognise it	Ensure the USB Memory Key is formatted to type FAT32.
USB Mode	Using a USB portable hard drive	If you wish to use a portable hard drive larger than 32GB, please note that it must be formatted to the FAT32 file system in order to operate on this TV. Windows XP/Vista computers are only capable of formatting up to 32GB, therefore, you will need a software programme/utility to format larger hard drives. Please refer to the web site for more information.
USB Record / TV	I can not change the channel, access the menu or use the red button	During Time Shift you can not change the channel, access the menu or use the red button
USB Record / TV	When using the USB to record the picture 'breaks up' or experience loss of sound.	Check the USB Memory Stick meet the minimum requirements of Read Speed - 20 MB/s (Mega Byte Per Second), Write Speed - 6 MB/s (Mega Byte Per Second)
System Lock	I have changed the password on the television and now forgotten it	There is a master password of 4711, to gain access to the TV menu and reset the normal password

TECHNICAL SPECIFICATION

Model	19-228	22-228
Screen size (diagonal)	18.5"/47cm	21.6"/55cm
Resolution	1366 x 768	1366 x 768
Contrast Ratio	1000:1	1000:1
Brightness cd/m2	250	350
PC RGB	Yes	
RF	75 ohm Antenna / PAL-SECAM	
Video Inputs	1 x SCART, 1 x Video, 1 x Component (YPbPr - 1080i)	
Sound Inputs	1 x 3.5mm jack for PC audio input, 1 x pair RCA shared for Video & YPbPr (component) audio input	
Sound Outputs	1 x Coax Audio output, 1 x Headphone output	
HDMI	1 (up to 1080i)	
Watts (RMS)	2 x 3	
Voltage	110-240v 50/60Hz 1.5A 60W (standby less than 1w)	110-240v 50/60Hz 1.5A 70W (standby less than 1w)
Dimensions including stand (mm)	463W x 372H x 178D	534W x 404H x 200D
Net weight (Kgs)	5	5.3



INDEX

Aspect Ratio.....	21	Remote control	13
Auto Configuration of screen (PC).....	23	Reset to default.....	20
Auto Volume Level	17	Sharpness	16
Auto Search	18	Sleep Timer	19
Balance	17	Sound Mode	17
Bass	17	Source Menu.....	12
Blue Screen	21	System Lock	19
Brightness	16	Technical Specifications	28
Changing DVD Regions	21	Treble	17
Channel Manager.....	18	TV buttons	12
Clock.....	19	TV Guide	24
Clock (PC).....	23	USB Mode / Media Player	25
Colour	16	Using the television as a computer monitor	22
Colour Temperature	16	Vertical Position (PC)	23
Common Interface	19	Wall mounting	9
Connections.....	14-15	What is included in the box	8
Contrast	16		
Detaching the base/stand.....	9		
Digital Output	17		
DVD Menu	21		
Favourites Manager	18		
Firmware Update	20		
First Time Installation	20		
Frequently Asked Questions.....	27		
Getting Started.....	11		
Hearing Impaired	19		
Horizontal Position (PC).....	23		
Language	19		
Manual Search.....	18		
Noise Reduction	16		
On Screen Display Timer	20		
Phase (PC)	23		
Picture Mode	16		





Technika





Technika





Tesco Stores Ltd.
Cheshunt EN8 9SL, UK

XMU/MAN/0058

