EPSON STYLUS M SX200/TX200 Series





- for use without a computer -





EN Contents

Important Safety Instructions	.4
Guide to Control Panel	.6
Using the LCD Screen	.8

Copying & Printing

Selecting Paper	
Loading Paper	
Placing Originals	
Copying Photos	
Copying Documents	
Inserting a Memory Card	
Printing Photos	
Printing from a Digital Camera	

Maintenance

Checking the Nozzles	
Cleaning the Print Head	
Aligning the Print Head	

Solving Problems

Error Indicators	
Replacing Ink Cartridges	
Paper Jam	
Print Quality Problems	40
Print Layout Problems	
Contacting Customer Support	42





Do not use aerosol products that contain flammable gases inside or around the printer. Doing so may cause fire.	Except as specifically explained in your documentation, do not attempt to service the printer yourself.	Keep ink cartridges out of the reach of children and do not drink the ink.	Do not shake ink cartridges after opening their packages; this can cause leakage.	If you remove an ink cartridge for later use, protect the ink supply area from dirt and dust and store it in the same environment as the printer. Do not touch the ink supply port or surrounding area.	If ink gets on your skin, wash it off with soap and water. If it gets in your eyes, flush them immediately with water. If you still have discomfort or vision problems, see a doctor immediately.

Guide to Control Panel



a	b	c
் on	🛇 Stop	[Print Index Sheet A4]
Turns the printer on/off.	Stops copying/printing. The sheet being printed is ejected and the number of copies is reset. Press to replace expended ink cartridges. Cleans the print head when pressed and held for three seconds.	Prints an index sheet of the photos.

d	e	f	g	h
Print from Index Sheet]	Copies	Paper Select	♦ Start 🖲 [B&W]	♦ Start 0000 [Color]
Prints the photos selected on the index sheet.	Sets the number of copies. The number in the window increases from 1 up to 9, then , and then starts again from 1.	Selects between F [A4 Plain Paper] and A Plain [4" × 6" Photo Paper] for the paper loaded in the sheet feeder.	Copies in black and white.	Copies in color or starts memory card printing.

Using the LCD Screen



i	a		b c		с		b c		d	е
ር	() on				[A4 Plain Paper]	[10 × 15/4" × 6" Photo Paper]				
٠	Ŭ	● / Ŭ	•	Ŭ	•	•				
The printer is on.	The printer is active, turning off, or turning on.	An error has occurred. □ → 30	An ink cartridge is low.	An ink cartridge is expended or missing. □ ➡ 34	Indicates that this paper size/ type is selected.	Indicates that this paper size/type is selected.				

	*								
				Copies					
d	1 - 9	Ξ	E	н	Р	-			
The memory card printing option is in DPOF mode.	Indicates the number of copies.	The printer continues to copy until the paper you loaded runs out. You can load up to 100 sheets.	An error has occurred.	An unsupported device (HUB) is connected.	Flashes when a camera with PictBridge data is connected. When the connected device is not supported, the P and the error light double-flash.	The printer enters "sleep" mode when no buttons are pressed for 13 minutes. Press any button (except the ひ On button) to "wake" it.			

About This Guide

Follow these guidelines as you read your instructions:

	Ð	\otimes	Ø	
Warning: Warnings must be followed carefully to avoid bodily injury.	Caution: Cautions must be observed to avoid damage to your equipment.	These symbols must be observed to avoid bodily injury and damage to your equipment.	Note: Notes contain important information and hints for using the printer.	Indicates a page number where additional information can be found.

Copying & Printing



Selecting Paper

If you want to print on this paper	Choose this on the control panel	Loading capacity (sheets)
(a) Plain paper	🖲 [A4 Plain Paper]	[12 mm] *
(b) Epson Bright White Paper	🖗 [A4 Plain Paper]	80
(c) Epson Premium Ink Jet Plain Paper	🖗 [A4 Plain Paper]	80
(d) Epson Premium Glossy Photo Paper	ा⊉ [10 × 15/4" × 6" Photo Paper]	20
(e) Epson Premium Semigloss Photo Paper	ा [10 × 15/4" × 6" Photo Paper]	20
(f) Epson Ultra Glossy Photo Paper	া⊠ [10 × 15/4" × 6" Photo Paper]	20
(g) Epson Glossy Photo Paper	ा [10 × 15/4" × 6" Photo Paper]	20

* Paper with a weight of 64 to 90 g/m².

The availability of special paper varies by area.

If you want to print on this paper...

(a) Plain paper

(b) Epson Bright White Paper

(c) Epson Premium Ink Jet Plain Paper

(d) Epson Premium Glossy Photo Paper

(e) Epson Premium Semigloss Photo Paper

(f) Epson Ultra Glossy Photo Paper

(g) Epson Glossy Photo Paper

Loading Paper



Open and slide out.

0

Ø

See the online User's Guide when using Legal size paper.



Flip forward.



Load printable side up.

Fit.

Ø

Align the edges of the paper before loading.

Ø

Do not use paper with binder holes.



Placing Originals



Open.

Place face down horizontally.



Place image in the corner.

Close.

. ..

Copying Photos

1 □ → 14







Load paper printable side up.

Place face down horizontally.

Select the number of copies.

4 5

Select 🖬 10x15/4"x6".

Start copying.

Ø

2

To fit copies to the paper size, hold down \diamond **Start** for three seconds. This function depends on the paper type. Select photo paper (\mathbb{E} **10x15/4"x6"**) for borderless or select plain paper (\mathbb{E} **A4**) for borders.

3

Copying Documents

1 □ → 14







Load paper printable side up.

6

Place face down.



4



Select 🛡 A4.



Start copying in B&W or Color.

Ø

2

You can speed up copying, however the print quality declines. In step 5, while pressing \otimes **Stop**, press \diamond **Start**. When the \circlearrowright light starts flashing, release the buttons.

3



	55) 128мв				Innov Stat On Augo	M2 Adapotor
xD-Picture Card xD-Picture Card Type M xD-Picture Card Type H	SD Memory Card SDHC Memory Card MultiMediaCard	miniSD * miniSDHC *	microSD * microSDHC *	Memory Stick Memory Stick Pro MagicGate Memory Stick	Memory Stick Duo * Memory Stick Pro Duo * MagicGate Memory Stick Duo *	Memory Stick Micro *



If the memory card needs an adapter then attach it before inserting the card into the slot, otherwise the card may get stuck.





Load A4-size plain paper.

Insert one memory card.

Print Index Sheet.









7

Check \blacktriangle aligns with the corner.

Select a paper size.

6

Select border or borderless.

6

Select to print with a date stamp.



Select the number of copies.

Place face down.

Load photo paper.

Start printing photos.

Ø

. .

If you have more than one index sheet, wait each time until printing is complete. Then repeat the steps above to scan and print from each additional sheet.

. ..

Printing from a Digital Camera

Compatibility	PictBridge
File Format	JPEG
Image size	80×80 pixels to 9200×9200 pixels



Remove.

Select 🖬 10x15/4"x6".

Load paper.

Connect and turn on.



. .

Ø

Depending on the settings on this printer and the digital camera, some combinations of paper type, size, and layout may not be supported.

Some of the settings on your digital camera may not be reflected in the output.

Ø



See the camera's guide to print.

Maintenance



Checking the Nozzles



2 □ → 14





. . ..

Turn off.

Load A4-size plain paper.

While pressing ♥, press Ů.

3





(a) - Good.

(b) - Not Good. Your printout has gaps. Clean the print head. $\square \Rightarrow$ 27

Check pattern.



3 □ → 26

Check nozzles.

Ø

If it does not improve after cleaning four times, turn off the printer for at least six hours. Then try cleaning the print head again. If quality does not improve, one of the ink cartridges may need to be replaced. If quality is a problem after replacing the cartridges, contact your dealer.

Aligning the Print Head





Select the most solid pattern.

Select the number for pattern #1.

Set.

Repeat 5 and 6 for all patterns.

Solving Problems



Error Indicators

Check the lights on the control panel and the code or letter in the \mathbb{D} Copies windows to diagnose the problem. $\bullet = On \stackrel{\sim}{\bullet} = Flashing$

Lights/Code	Cause	Action		
• 🖓	No paper is loaded in the sheet feeder.	Load paper in the sheet feeder. □ → 14 Then press ♦ Start 0000 [Color] to continue or ♥ Stop to cancel.		
	Multiple pages have been fed into the sheet feeder.			
₩₽	Paper is jammed.	Clear the jammed paper. $\Box \Rightarrow$ 39		
₩ •	An ink cartridge is running low on ink.	You can check the ink status from your computer. Obtain a replacement ink cartridge.		
• •	An ink cartridge is expended or not installed correctly.	If any cartridge is expended, you cannot print until you replace it. Replace the ink cartridge. 🗂 🕈 34		
₩D Copies 🗍	An unsupported memory card is inserted.	Remove the memory card. □ ➡ 18		
	The memory card does not contain any valid images.			
₩́ □ Ҧ Copies 🖓	The index sheet was not recognized because it is not positioned correctly.	Position the index sheet correctly on the document table, aligning the top of it with the right edge of the glass. Then press \diamond Start 0000 [Color] to continue or \oslash Stop to cancel. The index sheet was not printed correctly. Print the index sheet, mark it, and try again. $\Box \Rightarrow 20$		
ë D © Copies ∃	The index sheet is not marked correctly.	Remove the index sheet, mark it correctly, and try again. $\Box \Rightarrow 20$		
⊌ّ ◘ © Copies ۲	The index sheet does not match the photos on the memory card.	Remove the memory card and insert the card used to print the index sheet—or place the correct index sheet on the document table. Then press § Start 0000 [Color] to continue or © Stop to cancel.		
ë □ © Copies ⁄	An unsupported device (HUB) is connected.	Remove the HUB.		
⊌́ D © Copies 🖗	An unsupported device is connected.	Remove the connected device or press the Stop .		
َّ⊌ , ● ◘, ● ♦ الله Copies ال	The waste ink pad in the printer is saturated.	Contact your dealer to replace it.		
♦ All lights▶ Copies 	There is a problem with the printer.	Turn the printer off and then back on. If the error does not clear, contact your dealer.		



Replacing Ink Cartridges

Ink Cartridge Handling Precautions

□ Never move the print head by hand.

- Some ink is consumed each time cartridges are inserted because the printer automatically checks their reliability.
- □ For maximum ink efficiency, only remove an ink cartridge when you are ready to replace it. Ink cartridges with low ink status may not be used when reinserted.
- Epson recommends the use of genuine Epson ink cartridges. Epson cannot guarantee the quality or reliability of non-genuine ink. The use of non-genuine ink may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic printer behavior. Information about non-genuine ink levels may not be displayed, and use of non-genuine ink is recorded for possible use in service support.
- Make sure you have a new ink cartridge before you begin replacement. Once you start replacing a cartridge, you must complete all the steps in one session.
- □ Leave the expended cartridge installed until you have obtained a replacement. Otherwise the ink remaining in the print head nozzles may dry out.
- Do not open the ink cartridge package until you are ready to install it in the printer. The cartridge is vacuum packed to maintain its reliability.
- Other products not manufactured by Epson may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic printer behavior.
- □ Do not turn off the printer during ink charging as this will waste ink.
- When an ink cartridge is expended, you cannot continue printing even if the other cartridges still contain ink.

•••

When \blacklozenge light is on, one or more ink cartridges are expended. Replace the appropriate cartridges.

For how to replace before the cartridge is expended, see the online User's Guide.



Open.

ก









Squeeze tab and lift up.

Shake new cartridge.

Ø

!



Be careful not to break the hooks on the side of the ink cartridge.





Remove the yellow tape.







Insert and push.

Close.

D

If you find it difficult to close the cover, press down on each cartridge until it clicks into place.



Close.

D



Press to charge ink.

Replacement finished.

Ø

Ω

If you had to replace an ink cartridge during copying, to ensure copy quality after ink charging is finished, cancel the job that is copying and start again from placing the originals.



Remove jammed paper.

Close.

Press.

Print Quality Problems

Try one or more of the following solutions in order from the top. For further information, see your online User's Guide.

- □ Clean the print head. □ → 27
- □ Align the print head. □ → 28 If quality is not improved, try aligning using the printer driver utility. See your online User's Guide to align the print head.
- **D** To clean the inside of the printer, make a copy without placing a document on the document table.
- □ Use up ink cartridge within six months of opening vacuum package. □ → 34
- **□** Try to use genuine Epson ink cartridges and paper recommended by Epson.



Print Layout Problems

Check the following points.

- \Box Make sure you selected the correct paper setting for the loaded paper. $\Box \Rightarrow 12$
- □ Make sure you loaded paper correctly. □ → 14
- □ Make sure the original is placed correctly. $□ \Rightarrow 15$
- □ If the edge of the copy or photo are cropped off, move the original away from the corner slightly. □ → 15
- □ Clean the document table. See your online User's Guide.



Contacting Customer Support

If you cannot solve the problem using the troubleshooting, contact customer support services for assistance. You can find information for customer support for your area in your online User's Guide or warranty card. If it is not listed there, contact the dealer where you purchased your product.

Copyright Notice

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. The information contained herein is designed only for use with this product. Epson is not responsible for any use of this information as applied to other printers.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

Seiko Epson Corporation shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as Epson Approved Products by Seiko Epson Corporation.

EPSON® is a registered trademark and EPSON STYLUS™ and Exceed Your Vision are trademarks of Seiko Epson Corporation.

SDHC[™] is a trademark.

Memory Stick, Memory Stick Duo, Memory Stick PRO, Memory Stick PRO Duo, MagicGate Memory Stick, and MagicGate Memory Stick Duo are trademarks of Sony Corporation. xD-Picture CardTM is a trademark of Fuji Photo Film Co., Ltd.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.







MEMORY STICK PRO









		ВК	С	М	Υ
Stylus SX200 Series	8	T0891	T0892	T0893	T0894
	-5	T0711	T0712	T0713	T0714
		T0711H	-	-	-
Stylus TX200 Series		73N (T0731N)/ 73HN (T0731HN)	73N (T0732N)	73N (T0733N)	73N (T0734N)
EN		Black	Cyan	Magenta	Yellow

(): The ink cartridge numbers between the parenthesis may be displayed depending on the area.



The online User's Guide provides instructions for printing and scanning from your computer and information on the software. To read this guide, double-click the icon on your desktop after printer installation.

Copyright © 2008 Seiko Epson Corporation. All rights reserved. Printed in XXXXXX

