



user manual

Iron Aid

EDI 96150 W

**We were thinking of you**  
when we made this product

**Welcome to the world of Electrolux**

Thank you for choosing a first class product from Electrolux, which hopefully will provide you with lots of pleasure in the future. The Electrolux ambition is to offer a wide variety of quality products that make your life more comfortable. You will find some examples on the cover in this manual. Please take a few minutes to study this manual so that you can take advantage of the benefits of your new machine. We promise that it will provide a superior User Experience delivering Ease-of-Mind. Good luck!

# Contents

Operating Instructions	5	Installation safety instructions	37
Safety	5	Removing transport safety packaging	37
Disposal	7	Electrical connection	38
Environmental tips	7	Levelling the appliance	40
Appliance description	8	Changing door stop	41
Control panel	9	Special accessories	41
Prior to using for the first time	10	Guarantee/Customer Service	42
Sorting and preparing laundry	10	Service and Spare Parts	45
Starting up for the first time	12		
Iron Aid™ - Steam-System	12		
Overview of Iron Aid™ programmes	14		
Starting an Iron Aid™ programme	18		
Drying	20		
Overview of drying programmes	20		
Starting a drying programme	23		
Cleaning and maintenance	25		
What to do if...	33		
Technical data	36		
Consumption values	36		

The following symbols are used in this user manual:



Important information concerning your personal safety and information on how to avoid damaging the appliance.



General information and tips



Environmental information

**Important: Only operate the Iron Aid programmes with distilled water! Mains water causes damage to the appliance.**



## Safety

### Prior to using for the first time

- Note the "**Installation and connection instructions**"
- **Important** The appliance may only be transported in an upright position.
- Before first starting up, check the machine for any damage caused in transport. Never connect a damaged machine. In the event of damage to the appliance contact your supplier.

### Correct use in accordance with the requirements

- The machine is intended for drying and smoothing standard laundry in domestic applications.
- The machine is not intended for use by people (including children) with limited physical, sensory or mental capabilities, lack of experience or lack of knowledge unless supervised or instructed by someone responsible for their safety when using the machine.
- Conversions or modifications to the machine are not permitted.
- Do not use the drying cycle to dry unwashed laundry.
- Laundry which is stained or soaked in oil must not be dried or smoothed in this machine. Risk of fire!
- Before being dried or smoothed, laundry which has come into contact with substances such as oil, acetone, alcohol, petrol, kerosene, stain removers, turpentine, wax or wax removers must be rinsed thoroughly by hand using warm water mixed with a cleaning agent.
- Do not place items of laundry in the machine if they contain foam rubber (Latex foam) or materials similar to rubber. Such items include shower caps, water-repellent textiles, textiles with rubber inserts and pieces of clothing or cushions with foam rubber stuffing.
- Do not place heavily worn laundry items in the machine. Risk of fire!
- Do not place laundry items with loose fillings (e.g. cushions) in the machine. Risk of fire!
- Parts with rigid components (e.g. door mats) may cover the air slots. Risk of fire! Do not place such items in the machine.
- Do not overfill the machine. Risk of fire! Observe max. loading volume of 6 kg.
- Explosive objects (e.g. cigarette lighters, spray cans, etc.) must not enter the machine with the laundry. Risk of fire and/or explosion!
- When using dry-cleaning sets: Only use those products which are declared as suitable for the drier by the manufacturer.
- Softeners or similar products may only be used as described in the instructions for the product.
- Clean the micro-fine filter and fine strainer after each drying cycle or Iron Aid programme.
- Do not use the machine without a lint filter or with a damaged lint filter. Risk of fire!

## 6 electrolux **safety**

- Only fill the water tank with distilled water. Do not use tap water or additives! You can also use the condensed water from this machine, as long as you filter it first (e.g. using a coffee filter).
- Clean the heat exchanger regularly.
- With stacked washer and dryer: Do not place objects on the machine. These may fall off during operation.
- The lampcover for the interior light must be screwed down tightly.
- Disconnect the machine from the power supply during long pauses in operations.
- When removing from the socket, never pull the mains plug by the cable, instead take a hold of the plug.
- Manifold plugs, couplings and extension cables must not be used. Risk of fire from overheating!
- The height-adjustable feet must not be removed.

### **Child safety**

- Keep packaging away from children. Risk of suffocation!
- Children can often not see the dangers associated with electric machines. Never leave unsupervised children near the appliance.
- Ensure that children and small animals cannot climb into the appliance's drum. Risk of death! Keep the appliance door shut whenever it is not being used.
- Do not spray down the machine with jets of water. Risk of electric shock!
- Do not lean on the open door. The machine may tip over.
- Once the drying cycle or Iron Aid programme has been interrupted, the laundry and drum may be hot. Risk of burns! Take care when removing the laundry.

### **General safety**

- Repairs to the machine may only be carried out by technicians.
- Never start up the machine if the mains cable is damaged or if the operating screen, operating plate or base area are damaged so that the inside of the machine is open and accessible.
- A damaged mains cable must be replaced by a qualified electrician or Customer Service.
- Switch off the machine before all cleaning, care or maintenance work. Also disconnect the mains plug from the socket or – with permanent connections – switch off the circuit breaker in the fuse box and/or fully unscrew the screwed-in fuse.
- Take care when interrupting the Iron Aid programme: Do not open the machine door during the steam phase. Hot steam may result in burns. The display has a steam symbol to indicate the steam phase.
- If you end the drying cycle or Iron Aid programme before it has come to the end, it is important to quickly remove and unfold all the laundry so it can cool quickly.
- The last stage in the drying cycle is a cooling phase to protect the laundry from damage caused by high temperatures.
-  Caution – Hot surface: Do not touch the back of the appliance while it is operating.

## Disposal



### Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at your local waste disposal facilities.



### Old appliance

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



**Warning!** When your appliance has finished its working life, remove the plug from the mains socket. Cut off the cable and plug and dispose of them.

**Destroy the door lock.** This prevents children from trapping themselves inside and endangering their lives.




## Environmental tips

- In the drying cycle the laundry becomes fluffy and soft. Fabric softeners are not therefore needed when washing.
- Filtered condensed water can be used for Iron Aid programmes.
- The appliance works most economically in the drying programmes if you:
  - spin the laundry well before drying.  
Example: Consumption values – depending on spin speed – for 6kg of laundry, dried using the programme  COTTON  CUPBOARD.


Revolutions per minute	Pre-draining		Drying cycle
	Residual dampness in litres	as a %	
800	4.2	70	4.0
1000	3,6	60	3,7
1200	3.2	53	3.3
1400	3.0	50	3.1
1800	2.5	42	2.6

- always keep the ventilation holes in the dryer plinth unobstructed;
- use the loads specified in the programme overview;
- ensure you have good ventilation in the room;
- clean micro filter and fine filter after every drying or Iron Aid programme:


# Appliance description

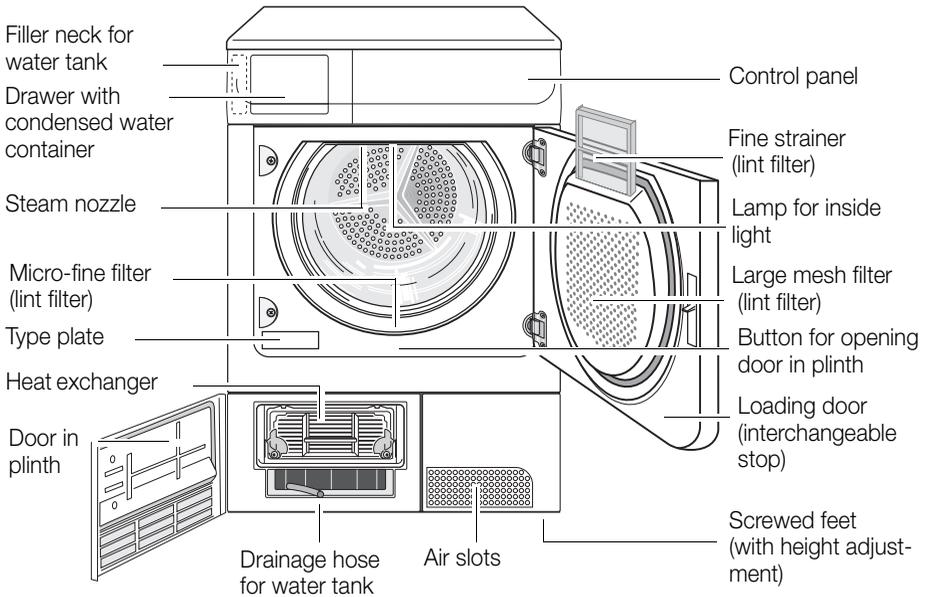

# Control panel

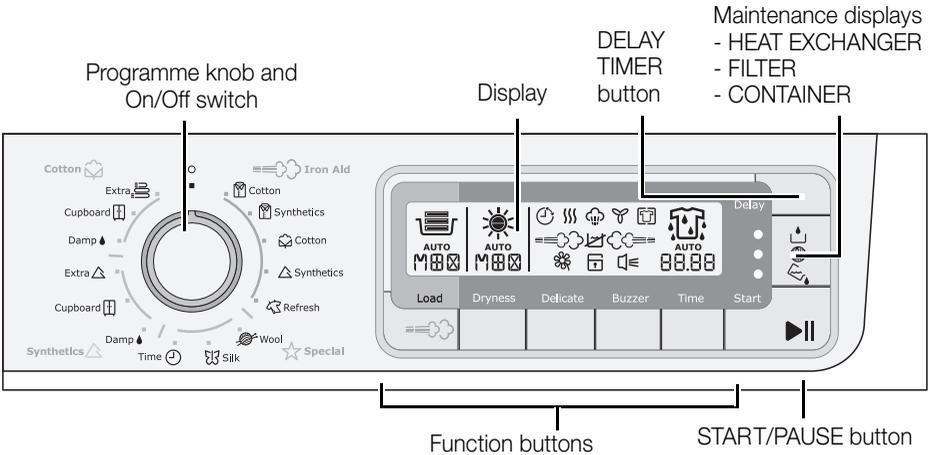

## What is shown in the display

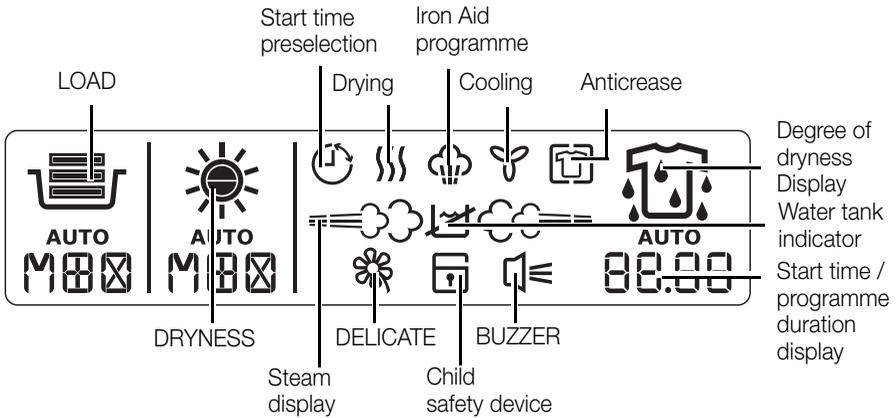

# Function overview: Iron Aid™ Steam System

This appliance can be used both as a dryer and to condition clothes (Iron Aid) to treat garments using steam.

When it is operating as a dryer, there are 9 available programmes.

When it is operating as a steam appliance, there are 4 available programmes for smoothing and removing odours

from wet and dry laundry and the  REFRESH programme for smoothing and removing odours from dry outer-wear. Garments are softened and smoothed and require a lot less ironing. If laundry is wet, a drying programme is automatically activated before the Iron Aid programme starts.

**Exception:** The  REFRESH programme must only be used for dry laundry.

	Programmes	Laundry type	Iron Aid washed garments	Smooths worn clothing	Odour removal worn clothing
	Cotton  EXTRA	wet			
	Cotton  CUPBOARD	wet			
	Cotton  DAMP	wet			
	Synthetics  EXTRA	wet			
	Synthetics  CUPBOARD	wet			
	Synthetics  DAMP	wet			
	 WOOL	wet			
	 SILK	wet			
	 TIME	wet			
	 COTTON	wet/dry	X	X	X
	 SYNTHETICS	wet/dry	X	X	X
	 COTTON	wet/dry	X	X	X
	 SYNTHETICS	wet/dry	X	X	X
	 REFRESH	dry		X	X

## Prior to using for the first time

In order to remove any residues which may have been produced during production, wipe the dryer drum with a damp cloth or carry out a brief drying cycle (30 MIN) with damp cloths in the machine.

1. Turn the programme knob to  TIME.
2. Press the TIME button repeatedly until **0:30** appears in the display.
3. Press the START/PAUSE button.

## Sorting and preparing laundry

### Sorting laundry – general

- Sorting by fabric type:
  - Cotton/linen for programmes in the  COTTON programme group.
  - Mixed fibres and synthetics for programmes in the  SYNTHETICS programme group.
- Sorting by care label. The care labels mean:

			
Drying in the tumble dryer possible in principle	Dry at normal temperature	Dry at reduced temperature (press SPECIAL CARE button!)	Drying in the tumble dryer <b>not possible</b>



**Important: Do not place in the appliance any wet laundry which is not specified on the care label as being suitable for tumble-drying.**

This appliance can be used for all wet laundry items which are labelled as suitable for tumble-drying.

- Do not dry new, coloured textiles together with light-coloured laundry items. Textile colours may bleed.

- Do not dry cotton jersey and knitwear with the  EXTRA programme. Items may shrink!
- Wool and wool-like textiles can be dried using the WOOL programme. Before the drying cycle spin the woollen textiles as well as possible (max. 1200 rpm). Only dry woollen textiles together which are similar or the same with respect to material, colour and weight. Please dry heavy laundry items made of wool separately.

## Special notes about Iron Aid



- The following textiles cannot be treated using an Iron Aid programme:  
woollen knitwear, leather, textiles with large metal, wooden or plastic parts, textiles with rusting metal parts, oilskins or wax cotton garments.



- To smooth or freshen laundry with an Iron Aid programme, sort laundry by size, weight, material and colour. Only smooth textiles together that are similar in terms of size, weight, material and colour.



- Do not dry new, coloured textiles together with light-coloured laundry items. Colours may fade (check colour fastness of fabric when damp in an inconspicuous area).



- Do not use dry cleaning sets such as dryel in combination with Iron Aid programmes.

## Preparing laundry - general

- To avoid laundry becoming tangled: close zips, button up duvet covers and tie loose ties or ribbons (e.g. of aprons).
- Empty pockets. Remove metal items (paper clips, safety pins, etc).
- Turn items with double-layered fabrics inside out (e.g. with cotton-lined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

## Special notes about Iron Aid

- Before treating garments with an Iron Aid programme, remove stains by washing or using localised stain removal.

## Starting up for the first time

### Switching appliance on / switching light on

Turn the programme selector to any programme. The appliance has been switched on. When the loading door is opened, the drum is illuminated.

### Opening loading door / loading laundry

1. Open loading door:  
Push against the loading door (push point )
2. Load your laundry (do not force it in/ overload the machine).



### **Caution! Be careful not to trap laundry in between the loading door and rubber seal.**

3. Close loading door securely. Lock must audibly lock.

## Iron Aid™ - Steam-System



### Fill water tank

You must fill up the water tank before using an Iron Aid programme for the first time. Use the distilled water provided if there is not yet any condensed water from previous drying programmes (see chapter on ‘Cleaning and Maintenance, Emptying condensed water container’). If, after an Iron Aid programme is selected, the  water tank indicator on the display lights up, you will need to fill up the water tank with distilled water. Otherwise, you will not be able to start any Iron Aid programme.




**Important Only fill the water tank with distilled or fully desalinated water. Do not use tap water or additives! You can also use the condensed water from the tank, as long as you filter it first (use the canister supplied with the filter fitted: see figure opposite).**

1. Pull drawer containing condensed water container out a little (1), then pull out the water tank's filler neck (2).

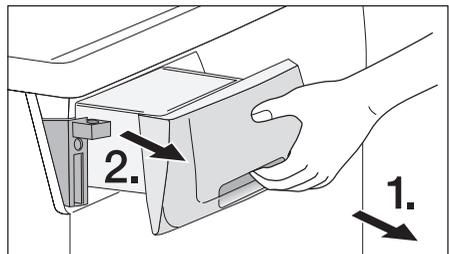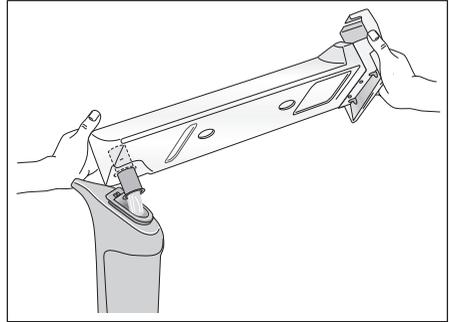

2. Fill with distilled water from the canister provided, up to the MAX mark inside the container.
3. Push filler neck and drawer with condensed water container back in.

**When dry, all textiles not specifically prohibited in the chapter 'Sorting and preparing laundry' may be treated with the Iron Aid Steam System. Wet textiles may only be treated if they are labelled as suitable for dry programmes.**

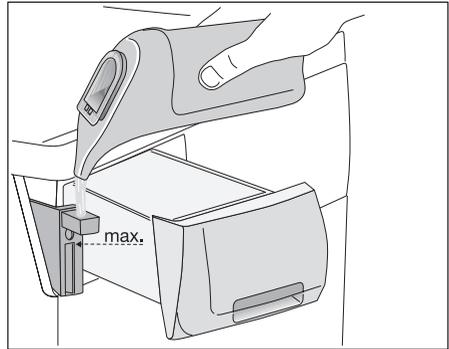

## Overview of Iron Aid™ programmes

Programmes	Max. load* (Weight when dry)	Additional functions		Application/properties	
		LOAD	BUZZER		
 COTTON	1,0kg	•	•	For 1- 5 cotton shirts. Min. 80% natural fibres (cotton, linen etc).	wet, dry
 SYNTHETICS	1.0kg	•	•	For 1- 5 synthetic shirts. Max. 20% natural fibres (cotton, linen etc).	wet, dry
 COTTON	3,0kg	•	•	For smoothing cotton garments. Min. 80% natural fibres (cotton, linen etc).	wet, dry
 SYNTHETICS	1.5kg	•	•	For smoothing easy-care garments. Max. 20% natural fibres (cotton, linen etc).	wet, dry
 REFRESH		•	•	For one suit or up to two suit jackets or pairs of trousers or similar garments. Also suitable for removing odours. For dry garments only	dry



**All information on applications is for guidance only. Smoothing results may vary depending on the selected programme and especially the fittings and material properties of the textile. The results can be improved if necessary by using different programmes and steam volumes. For example, some textiles containing more than 20% synthetics but with the right fittings may behave more like cotton textiles in an Iron Aid programme. You may therefore get better smoothing results by selecting a cotton Iron Aid programme.**



**Given the wide range of different textile grades and properties that can be manufactured today using different mechanical and chemical processes, we recommend running the first few Iron Aid programmes at low steam levels and with a small number of garments that are as similar as possible. Later, you can carefully start to vary the conditions of Iron Aid programmes to learn from experience how to get the best results from the volume of laundry loaded, the quality of the textiles and the most suitable steam levels and Iron Aid programmes.**

Please also note the accompanying 'Textile Guide'.

Programme	LOAD	Loading volume	DURATION dry* [min.]	DURATION wet* [min.]
👕 COTTON	MIN	1 - 2 items	19 +/-3	+40 +/- 10
	MED	3 - 4 items		
	MAX	5 items		
👕 SYNTHETICS	MIN	1 - 2 items	21 +/-3	+30 +/- 10
	MED	3 - 4 items		
	MAX	5 items		
👕 COTTON	MIN	0.5 - 1 kg	20 +/-3	+40 +/- 10
	MED	1 - 2 kg		
	MAX	2 - 3 kg		
△ SYNTHETICS	MIN	0,2 - 0,5 kg	21 +/-3	+30 +/- 10
	MED	0.5 - 1 kg		
	MAX	1 - 1.5 kg		
🔄 REFRESH	MIN	1 pair of trousers	19 +/-3	
	MED	1 jacket		
	MAX	1 suit		




**All information provided on selecting the steam level and corresponding load are suggestions only. In some cases, using a higher steam level or smaller load may give better results.**

**The 🔄 REFRESH programme is a gentle Iron Aid programme for non-washable textiles. Any distortion to the shape of a garment which might occur in few cases, can be remedied by ironing.**

\* exact programme times appear in the display once the machine has performed wet/dry recognition (approx. 2 min.)

## Selecting the programme

Use the programme selector to set the programme you require. The estimated programme duration (in minutes) appears in the multi-display.

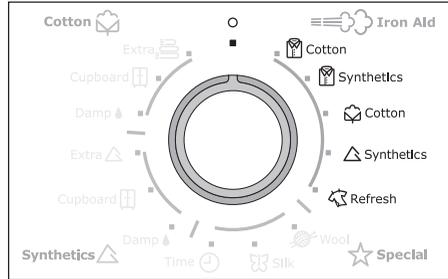

## Select steam level (LOAD)



**To achieve the best results, different steam levels are required for different volumes of laundry. The LOAD button is used to set the required steam level: MIN, MED or MAX.**

All Iron Aid programmes, apart from the REFRESH programme, automatically recognise the remaining dampness in clothes. When laundry is wet, a drying cycle is activated first if required.

The table shows the steam levels appropriate for the selected load, under LOAD.

1. Press the LOAD button repeatedly until the desired steam level (MIN, MED or MAX) is shown in the display.

If the LOAD button is not pressed after an Iron Aid programme is selected, the medium steam level (MED) is selected automatically. If you select the REFRESH programme, MIN is selected automatically.

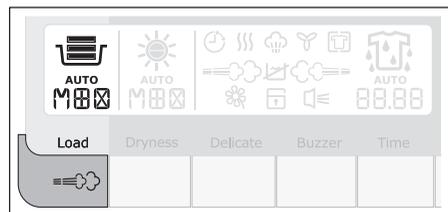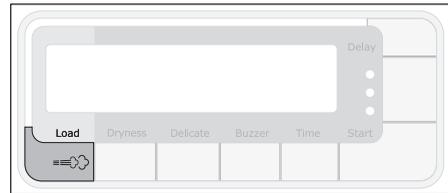




**Important: If in doubt, always select a lower steam level first until you have more experience with load volumes, fabric types and the corresponding optimum steam level. If too high a steam level is selected, garments may lose their shape. If too low a steam level is selected, creases may remain.**

### Selecting additional functions


The additional functions available for the Iron Aid programmes are BUZZER, TIME DELAY and the CHILD LOCK.

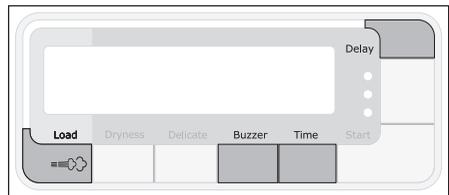

### BUZZER

The appliance is supplied with the BUZZER function activated. When the drying cycle has finished, an intermittent acoustic signal will sound. Each time a button is pressed or a programme is changed using the programme knob, an audible signal is also set to sound.

The button is used to switch the function on or off. When the function is active, the  BUZZER symbol appears in the display.

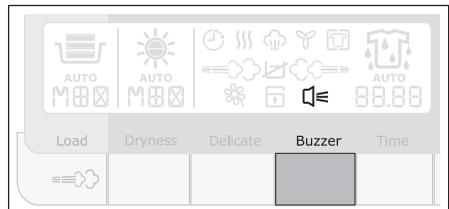

## Delay timer



**With the DELAY button, you can delay the start of a programme by between 30 minutes (30') and a maximum of 20 hours (20h).**

1. Select the programme and additional functions.
2. Press the DELAY button as many times as necessary until the required start delay appears on the display, e.g. 12h if the programme is to be started in 12 hours.



**If the display is showing 20h and you press the button again, the time delay will be cancelled. The display will show 0' and then the duration of the selected programme.**

3. To activate the delay timer, press the START/PAUSE button. The amount of time remaining until the programme is set to start is continuously displayed (e.g. 15h, 14h, 13h, ... 30' etc).

## Child safety device

The child lock can be set to prevent a programme being accidentally started or a programme in operation being accidentally changed.

The child safety device locks all buttons and the programme knob.

The child safety device can be activated or deactivated by holding down the BUZZER and TIME buttons simultaneously for 5 seconds.

- Before programme is started: Appliance cannot be used
- After programme is started: Programme in operation cannot be changed

The  symbol appears in the display to indicate that the child safety device is activated.

The child safety device is not deactivated once the programme comes to an end.

If you want to set a new programme, you must first deactivate the child safety device.

## Starting an Iron Aid™ programme

Press the START/PAUSE button. The programme is started. First, the drying phase indicator appears in the display.

The display will also show the programme duration for the selected Iron Aid programme, not including the additional drying phase.

With wet laundry, after a few minutes the appliance will show the correct programme duration for the Iron Aid programme including the preceding drying programme.

As soon as the right level of dryness is reached, the Iron Aid programme will start automatically. The steam indicator shows the progress of the Iron Aid programme in the display. The individual steam phases are shown by

☰☱☲ animated clouds of steam.



**Important: During the steam phases that form part of the Iron Aid programme and also the anti-crease phase (represented by animated clouds of steam in the display), the loading door cannot be opened. Risk of burns!**

If the  water tank indicator lights up when you select an Iron Aid programme, the programme cannot be started. You will need to fill the water tank first (see section on 'Cleaning and maintenance, filling water tank'.)



It is normal for the appliance to make noises during an Iron Aid or drying programme if garments with hard parts, such as metal buttons, are put in the drum.

### Changing a programme

To change a programme which has been selected by mistake once the programme has started, first turn the programme selector to ★ OFF and then reset the programme.



**The programme can no longer be changed directly once the programme has started. If you nevertheless attempt to change the programme with the programme knob or an additional function button (except the BUZZER button), the START/PAUSE button and Err will flash in the display. The drying programme is not however affected by this.**

Putting in extra items or taking items out before end of programme

1. Open door.
2. Load or remove laundry items.
3. Close door securely.
4. Press the START/PAUSE button to continue the drying cycle.

## Iron Aid programme complete / removing laundry

After the Iron Aid phase has ended, **000** is illuminated and the message  ANTICREASE appears in the display. If the  BUZZER has been activated, an audible signal sounds at regular intervals.



**The Iron Aid programme is automatically followed by an anti-crease phase, including brief steam phases, which lasts around 90 minutes.**

The drum rotates during the anti-crease phase. This keeps the laundry loose and free of creases. It can be removed at any point during the anti-crease phase, except during steam phases (look for steam animation in the display!). Laundry should be removed as quickly as possible.

1. Open the loading door to remove the laundry.
2. Before removing the laundry, remove fluff from the micro-fine filter. It is best to use a damp hand for this purpose. (See “Cleaning and maintenance” section.)
3. Remove laundry one garment at a time.



**To retain the effects of the Iron Aid treatment, clothes must be removed one garment at a time during the anti-crease phase and hung immediately on a clothes hanger to dry (for at least 5-15 mins, depending on fabric and selected steam level). Do up the buttons and tug the garment into shape, paying particular attention to cuffs and seams.**

4. Turn the programme knob to **O OFF**.  
**Important!** After each drying cycle
  - Clean the micro-fine filter and fine filter
  - Drain the condensed water container (See section “Cleaning and maintenance”).
5. Close door.

# Drying

## Overview of drying programmes


Programmes		Max. load (Weight when dry)	Additional- functions			Application/properties	Care symbols
			BUZZER	DELICATE	DRYNESS		
COTTON	 EXTRA	6kg	•	•	•	Thorough drying of thick or multi-layered fabrics, e.g. terry towelling items, bathrobes.	
	 CUPBOARD	6kg	•	•	•	Thorough drying of fabrics of even thicknesses, e.g. terry towelling items, knitwear, towels.	
	 DAMP	6kg	•	•	•	For normal thickness cotton or linen laundry, e.g. bedding, table linen	
SYNTHETICS	 EXTRA	3kg	•	•	•	Thorough drying of thick or multi-layered fabrics, e.g. pullovers, bedding, table linen.	
	 CUPBOARD	3kg	•	•	•	For thin fabrics which are not ironed, e.g. easy care shirts, table linen, baby clothes, socks, lingerie with bones or wires.	
	 DAMP	3kg	•	•	•	For thin textiles which are still to be ironed, e.g. knitted items, shirts.	
	 TIME	1kg	•	•	<b>AUTO</b>	For further drying of individual items of laundry or for small volumes of less than 1 kg. You can select a programme duration from 10 mins to 3 hrs in 10-minute steps.	
SPECIAL	 SILK	1kg	•	<b>AUTO</b>	•	Special programme for drying silk using warm air and gentle movement.	
	 WOOL	1kg	•	<b>AUTO</b>	•	Special programme, for drying woollen fabrics with minimum physical stress. "Sorting and preparing washing".) Recommendation: Remove fabrics immediately after drying, as no anti-crease programme follows.	

1) Press the DELICATE button.

## Selecting the programme


Use the programme selector to set the programme you require.

The probable programme run time is displayed (in minutes) on the multi-display.

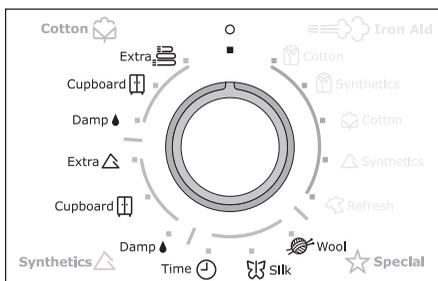

## Selecting additional functions

You can choose from the additional functions DRYNESS, DELICATE, BUZZER and TIME (if a ⌚ TIME programme has been selected). The symbols of the functions available for the selected programme are shown in the display.

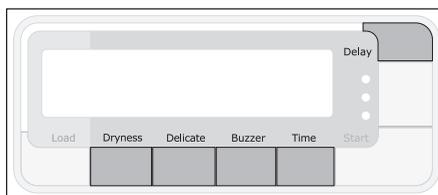


### DRYNESS

If laundry comes out of the machine too damp after a standard drying programme, you can increase the drying result by using the DRYNESS function.

Laundry becomes drier as you move from MIN to MAX.

1. Press the DRYNESS button repeatedly until the desired dryness level (MIN, MED or MAX) is shown in the display. If another programme has been selected, AUTO flashes in the display.

If wool or silk comes out of the machine too damp at the end of a  WOOL or  SILK programme, you can dry it again by restarting the appropriate programme, this time with the DRYNESS function selected and dryness level MIN, MED or MAX. In the case of a drying cycle with relatively dry laundry, the length of the programme cycle displayed at the beginning is corrected after a while.

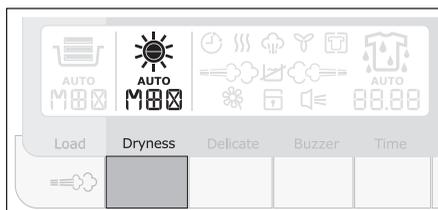



**Caution: Make sure that by selecting the DRYNESS function, you do not over-dry your wool or silk.**

## DELICATE

For especially gentle drying of sensitive fabrics with the  care label and for temperature-sensitive textiles (e.g. acrylic, viscose). Programme is executed with reduced heat.

DELICATE is only suitable for use with loads of up to 3kg.


1. Press the DELICATE button. The DELICATE symbol appears in the display.



## BUZZER

The appliance is supplied with the BUZZER function activated. When the drying cycle has finished, an intermittent acoustic signal will sound. Each time a button is pressed or a programme is changed using the programme knob, an audible signal is also set to sound.

The button is used to switch the function on or off. When the function is active, the  BUZZER symbol appears in the display.

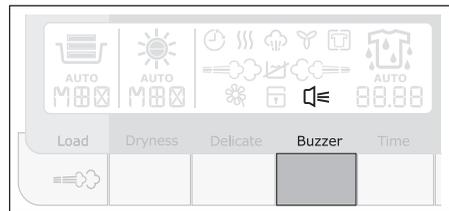


## TIME ⌚

To select the programme duration after setting the ⌚ TIME programme. You can select a programme duration from 10 mins to 3 hrs in 10-minute steps.

1. Turn the programme knob to the ⌚ TIME programme. The display will show **0.10** (corresponding to the  COOLING programme).
2. Press the TIME button repeatedly until the desired programme duration is shown in the display, e.g. **00.20** for a programme of 20 minutes.

If the programme duration is not selected, the duration is automatically set to 10 mins.

To set the timer delay and the child safety device, please refer to the chapter on 'Iron Aid, setting the timer delay' / 'Setting the child safety device'.

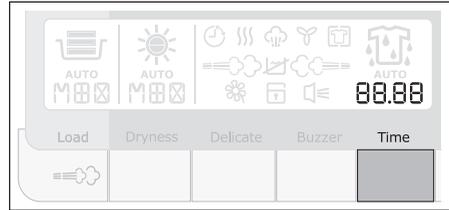

## Starting a drying programme

Press the START/PAUSE button. The programme is started.

The programme progress display shows drying progress. The symbols for  DRYING and  COOLING appear in the display one after the other. The number of droplets in the dryness indicator gradually goes down as the drying process progresses.

## Changing a programme

To change a programme which has been selected by mistake once the programme has started, first turn the programme selector to OFF and then reset the programme.



**The programme can no longer be changed directly once the programme has started. If you nevertheless attempt to change the programme with the programme knob or an additional function button (except the BUZZER button), the START/PAUSE button and Err will flash in the multi-display. The drying programme is not however affected by this.**

Removing laundry or loading laundry when necessary

1. Open loading door



**Warning! Laundry and drum can become hot. Risk of burns!**

2. Load or remove laundry items.

3. Close the door securely. Lock must audibly lock.
4. Press the START/PAUSE button to continue the drying cycle.

## Drying cycle complete / removing laundry

Once the drying programme has finished,  CREASE GUARD lights up in the display. If the  BUZZER is activated, an audible signal sounds at regular intervals.



**The drying cycle is automatically followed by a anti-crease phase which lasts around 30 minutes.**

The drum rotates at intervals during this phase. This keeps the laundry loose and free of creases. It can be removed at any time during the anti-crease phase. (The laundry should be taken out towards the end of the anti-crease phase at the latest to prevent creases from forming.)

1. Open door.
2. Before removing the laundry, remove fluff from the micro-fine filter. It is best to use a damp hand for this purpose. (See "Cleaning and maintenance" section.)
3. Remove laundry.
4. Turn the programme knob to O OFF.
5. **Important!** After each drying cycle
  - Clean the micro-fine filter and fine filter
  - Drain the condensed water container
 (See section "Cleaning and maintenance".)
6. Close door.

## Cleaning and maintenance


### Cleaning lint filters

To ensure that the appliance works perfectly, the lint filters in the door and in front of the drum must be cleaned after every Iron Aid or drying cycle.




**Important Never operate the dryer without the lint filter or with a damaged or blocked lint filter.**

1. Open the door.
2. Use a damp hand to clean the lint filter, which is built into the lower part of the loading aperture.

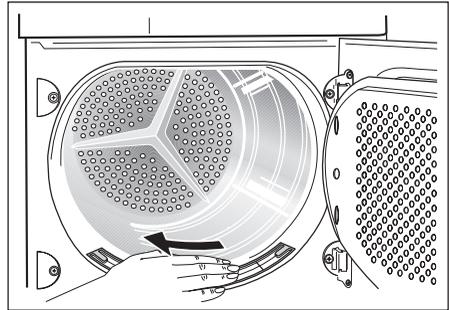

3. Remove the lint filter from the door by pulling the grip upwards.
4. Remove fluff from lint filter, preferably using a damp hand for this purpose.
5. Replace the filter.

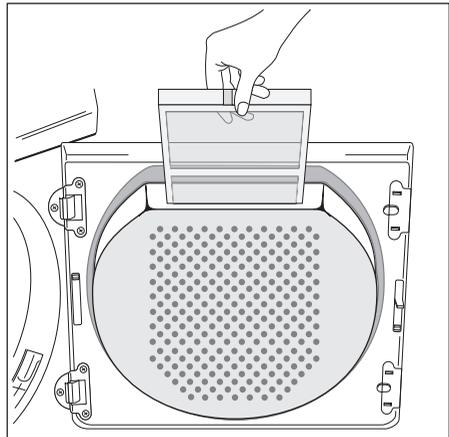

## Cleaning the filter area



**The filter area does not have to be cleaned after every drying cycle, but should be checked regularly and cleaned of fluff, if necessary.**

You will need to undertake the following (to clean the filter area):

1. Remove lint filter (see chapter on 'Cleaning lint filters').
2. Remove fluff from the entire filter area. It is best to use a vacuum cleaner for this purpose.
3. Replace the filter.

Clean the door seal.

Wipe the door seal using a damp cloth immediately after the Iron Aid or drying cycle.

## Emptying the condensed water container


Empty condensed water container after every drying cycle.

If the condensate tank is full, an active programme will break off automatically and the TANK display will light up. In order to continue the programme, the condensed water container must first be emptied.



**Warning! The condensate is not suitable for drinking or for preparing foodstuffs.**


1. Pull drawer containing condensed water container all the way out (1) and pull up the condensed water container's drainage pipe as far as it will go (2).

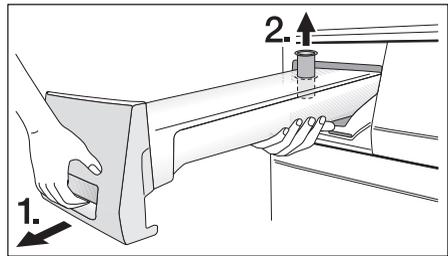

2. Pour out the condensate into a basin or similar container.
3. Push drainage pipe in and refit condensed water container.

If the programme has been interrupted as a result of the condensed water container being full:

Press the START/PAUSE button to continue the drying cycle.

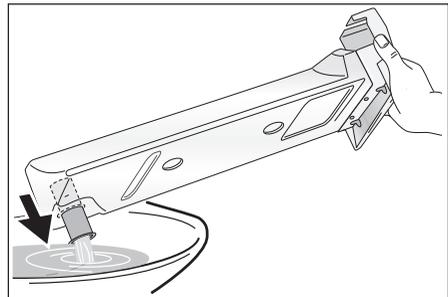


**The condensed water container has a volume of approx. 4 litres. This is sufficient for around 6kg of laundry which has previously been spun at 1000 revolutions/minute.**

4. The condensed water be used as distilled water, e.g. for steam irons. However, first filter the condensed water to remove any residues and small pieces of fluff.

Using the attached canister to filter:

Pour the water out of the container straight through the filter at the top of the canister.

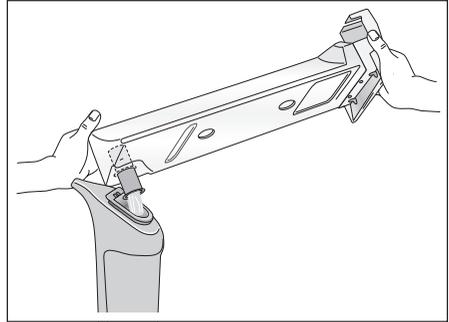


## Cleaning heat exchanger

If the HEAT EXCHANGER display is illuminated, the heat exchanger needs to be cleaned.




**Caution! Operating when the heat exchanger is clogged with lint can damage the appliance. This also increases energy consumption.**


1. Open loading door
2. Open base door. To do this, press the release button located beneath the loading aperture and open the base door to the left.
3. Remove lint from the inside of the door and the heat exchange chamber. Wipe the door seal with a damp cloth.

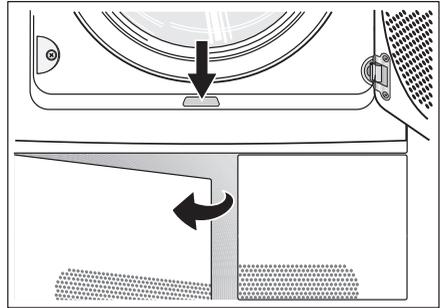

4. Turn both lock washers inwards.

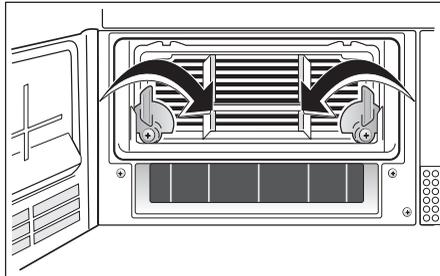

5. Use the handle to pull the heat exchanger out of the base and carry it horizontally to prevent any remaining water from spilling.
6. To empty the heat exchanger, hold vertically over a washing-up bowl.

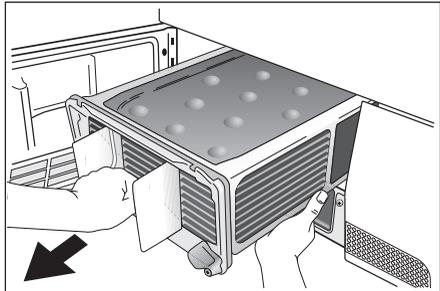



**Caution! Do not use sharp objects to clean the heat exchanger. You could damage it and cause leaks.**

7. Clean heat exchanger.  
It is best to use a brush or to rinse thoroughly with a shower head.
8. Replace heat exchanger and lock into place (turn both lock washers outwards until they snap into place).
9. Close base door.



**The appliance will not operate if the HEAT EXCHANGER indicator is still lit.**



**Caution! Never operate the appliance without the heat exchanger.**

## Cleaning the drum



**Caution! Do not use abrasives or steel wool to clean the drum.**



**Lime in the water or cleaning agents may form a barely visible lining on the inside of the drum. The degree to which the laundry has been dried is then no longer detected reliably. The laundry is damper than expected when removed from the appliance.**

Use a standard domestic cleaner (e.g. vinegar-based cleaner) to wipe down the inside of the drum and drum ribs.

## Clean control panel and housing



**Caution! Do not use furniture cleaners or aggressive cleaning agents to clean the machine.**

Use a damp cloth to wipe down the control panel and housing.

## Changing the light bulb for interior lighting

**Important:** The bulb for the interior lighting must be changed by our Customer Care Department.

## What to do if...

### Remedying small malfunctions

If, during operation, the error code (E plus number or letter) appears on the

multi-display: Switch the appliance off and on again. Reset programme. Press the START/PAUSE button.

If the error appears again, please contact the Customer Care Department, stating the error code.

Problem	Possible cause	Remedy
Washing machine does not work.	Mains plug is not plugged in or fuse is not working correctly. Door is open. Press the START/PAUSE button.	Plug in at mains socket. Check fuse in fuse box (domestic installation). Close door. Press the START/PAUSE button.
Drum light is not working.	Programme selector in O OFF position. Defective light bulb.	Turn the programme selector to any programme. Replace light bulb (see next section).
Iron Aid programme does not start.	Water tank is empty.	Fill water tank.
After an Iron Aid programme, garments are not sufficiently smooth.	Wrong programme selected (e.g.  SYNTHETICS instead of  COTTON). Too low a LOAD steam level set. Too many garments in machine, or garments that are too different. Clothes are not removed until the anti-crease phase is finished. Garments not hung on clothes hangers and/or not tugged into shape. Multi-layered garments tend to lose their shape.	Note the composition of the fabric. Set a higher LOAD steam level. Load the machine with fewer garments, or only similar ones. Remove clothes quickly one at a time from the machine as soon as possible after the start of the anti-crease phase. Hang garments on clothes hangers, do up buttons and tug garments into shape. Reshape multi-layered garments by ironing after they come out of the machine.
After an Iron Aid programme, there are no creases left in the garments.	The Iron Aid programme has the effect of smoothing garments.	Iron creases in again after the Iron Aid programme.

Problem	Possible cause	Remedy
Drying results unsatisfactory.	<p>Wrong programme selected.</p> <p>Lint filter blocked.</p> <p>Heat exchanger blocked with fluff.</p> <p>Incorrect amount of washing.</p> <p>Ventilation slots in base area covered up.</p> <p>Residue on inside surface of drum or drum paddles.</p>	<p>Select a different programme the next time you dry (see section "Overview of programmes").</p> <p>Clean lint filter.</p> <p>Clean heat exchanger.</p> <p>Observe recommended loads.</p> <p>Uncover ventilation slots in base area.</p> <p>Clean inside surface of drum and drum paddles.</p> <p>Adjust using the DRYNESS additional function (see chapter on 'Drying, selecting additional functions').</p>
When you press a button <b>Err</b> appears in the multi-display.	Laundry guard. Additional functions cannot be selected after a programme has started.	Turn the programme knob to <b>★ OFF</b> . Reset programme.
Drying cycle ends shortly after programme starts. ANTICREASE display illuminated.	Too little laundry has been loaded for the selected programme, or laundry that is too dry.	Select time programme or higher drying level (e.g. <b>EXTRA</b> instead of <b>CUPBOARD</b> ).
Programme inactive, CONTAINER display illuminated.	Condensed water container is full.	Empty condensed water container, then start programme with the [START/PAUSE] button.
PROGRAMME TIME display changes erratically or stays unchanged for a long time.	Programme time is corrected automatically depending on type and volume of laundry and level of dampness.	Automatic process, there is no fault with the appliance.
Drying cycle lasts an unusually long time. Note: After up to 5 hours the drying cycle ends automatically (see 'End of drying cycle').	<p>Fluff filter blocked.</p> <p>Heat exchanger blocked with fluff.</p> <p>DELICATE button pressed and load volume too big.</p> <p>Load volume too big.</p> <p>Laundry insufficiently pre-drained.</p>	<p>Clean fluff filter.</p> <p>Clean heat exchanger.</p> <p>DELICATE is only suitable for use with loads of up to 3kg!</p> <p>Reduce load volume.</p> <p>Laundry must be adequately pre-drained.</p>
Discoloration	Colour fastness of textiles.	Check colour fastness of textiles. Only treat textiles together if they are a similar colour.

## Technical data



### This appliance conforms with the following EU Directives:

- 73/23/EEC dated 19.02.1973 Low Voltage Directive
- 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC
- 93/68/EEC dated 22.07.1993 CE Marking Directive

Height x width x depth	85 x 60 x 60 cm
Depth with loading door open	109 cm
Height can be adjusted by	1.5 cm
Weight when empty	approx. 46kg
Loading volume (depends on programme) <sup>1)</sup>	max. 6kg
Energy consumption in accordance with IEC 1121 s. e. (6kg of cotton, pre-drained at 1000 rpm,  COTTON  CUPBOARD programme)	3.7kWh
Use	Domestic
permissible ambient temperature	+ 5°C to + 35°C

1) Different loading volume data may be needed in some countries as a result of different measuring methods.

## Consumption values

The consumption values have been established under standard conditions.

They may deviate when the machine is operated in domestic circumstances.

Programme	Loading volume in kg	Energy consumption in kWh
COTTON  CUPBOARD <sup>1)</sup>	6	3,7
COTTON  DAMP <sup>1) *)</sup>	6	3,0
SYNTHETICS  CUPBOARD <sup>2)</sup>	3	1,4

1) pre-drained at 1000 rpm

2) pre-drained at 1200 rpm

\*) corresponds to the programme COTTON HAND IRON



## Installation safety instructions



- **Important** The appliance must only be transported in an upright position.
  - Before first starting up, all parts of the transport safety equipment must be removed. The machine may otherwise be damaged.
  - The appliance must not be installed.
  - Before starting up for the first time, ensure that the nominal voltage and type of current specified on the machine type plate match the nominal voltage and type of current at the installation site. The electrical fuses required can also be found on the type plate.
  - Always connect the plug into a protection contact socket which has been installed as specified.  
The manufacturer accepts no responsibility for damage or injuries caused by a failure to observe the safety measures described above.
  - With permanent connections: A permanent connection may only be established by an authorised specialist electrician.
  - Do not install machine in rooms at risk of frost.
  - Do not position the appliance behind
    - a door that can be locked,
    - a sliding door
    - a door with a hinge situated opposite the appliance's hinge.
  - The appliance door must not be at risk of being blocked by house doors or the doors of other appliances.
- Do not install on carpets with high piles. Air circulation will be hindered at the ventilation slots.
  - Ensure that the machine is not placed on its mains cable.
  - Install the machine horizontally.

## Removing transport safety packaging



**Caution! Before use all parts of the transport packaging must be removed.**

1. Open loading door
2. Pull off adhesive strips from inside machine on top of drum.
3. Remove foil hose and polystyrene padding from the machine.

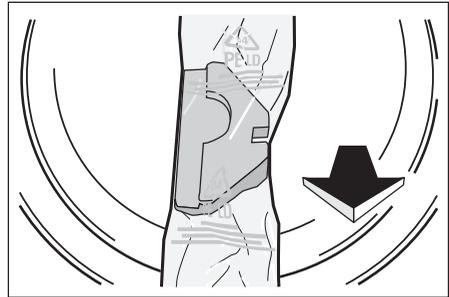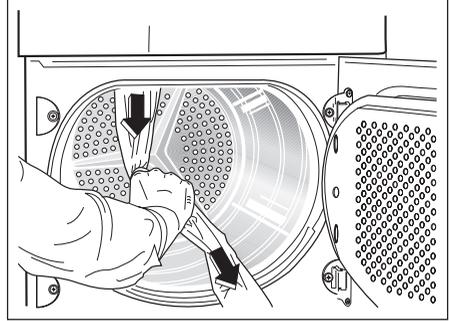

## Electrical connection

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.



### **WARNING – THIS APPLIANCE MUST BE EARTHED.**

**The manufacturer declines any liability should these safety measures not be observed.**

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance rating plate.

#### **Important:**

The plug must be accessible after the appliance has been installed.


The appliance is supplied with a 13 amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13 amp ASTA approved (BS 1363) fuse must be used.

Should the plug need to be replaced for any reason, proceed as described below.

The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow:	Earth
Blue:	Neutral
Brown:	Live

- The wire coloured green and yellow must be connected to the terminal marked with the letter “E” or by the earth symbol  $\oplus$  or coloured green and yellow.
- The wire coloured blue must be connected to the terminal “N” or coloured black.

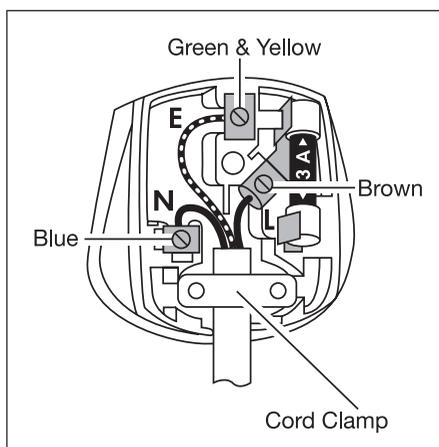

- The wire coloured brown must be connected to the terminal marked “L” or coloured red.
- Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.



**WARNING! A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely.**

### **Permanent Connection**

In the case of a permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations.

The switch must not break the yellow and green earth cable at any point.

This appliance complies with the requirements laid out in the EEC Directive 76/899.

Voltage 240 V AC: Fuse rating 13amps

See rating plate for further information.

This appliance meets VDE requirements.

Particular regulations of local electricity authorities must be observed.

This appliance conforms to EEC Directive No. 82/499/EWG on radio interference.



**WARNING! Repairs to electrical appliances must only be carried out by trained personnel. Improper repairs may lead to serious risks for the user.**

## Levelling the appliance

The four feet of the appliance are pre-adjusted.

Large degrees of unevenness can be compensated for by individually adjusting the height adjustable screw feet.

To do this lift the appliance and turn the adjustable feet in or out.

**Important** Do not use pieces of wood, cardboard or such like to level out unevenness in the floor, but adjust the height adjustable screw feet instead.

## Changing door stop

The stop on the door of the appliance can be changed if required to make it easier to load and unload laundry.

The door stop must not be changed if this would result in the appliance's door stop being located on the opposite side of the door stop of a facing door.



**Warning! The door stop may only be changed by a qualified person. If necessary, please contact our after-sales service.**

## Special accessories

The following special accessories are available from your Electrolux Service Force Centre or your specialist dealer:

### **Intermediate installation kits for stacked washer and iron aid appliance:**

These intermediate installation kits can be used to arrange the iron aid appliance and an automatic Electrolux washing machine (60cm wide, front loading) as a space-saving washer/iron aid stack. The automatic washing machine is at the bottom and the iron aid appliance is at the top.

Two versions can be supplied:

- without stacker plate
- with extractable stacker plate

Read the manual supplied with the installation kit carefully.

## Guarantee/Customer Service

### **Standard guarantee conditions**

We, Electrolux, undertake that if within 12 months of the date of the purchase this Electrolux appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- All service work under this guarantee must be undertaken by a Service Force Centre.
- Any appliance or defective part replaced shall become the Company's property.
- This guarantee is in addition to your statutory and other legal rights.

Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged.

### **Exclusions**

#### **This guarantee does not cover:**

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of Electrolux manufacture which are not marketed by Electrolux.

## European Guarantee

This appliance is guaranteed by Electrolux in each of the countries listed at the back of this user manual, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of the countries listed below the appliance guarantee will move with you subject to the following qualifications:

- The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by the seller of the appliance.
- The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your new country of residence for this particular model or range of appliances.
- The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user.
- The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes.
- The appliance is installed in accordance with all relevant regulations in force within your new country of residence.

The provisions of this European Guarantee do not affect any of the rights granted to you by law.

**www.electrolux.com**

		
Albania	+35 5 4 261 450	Rr. Pjeter Bogdani Nr. 7 Tirane
Belgique/België/ Belgien	+32 2 363 04 44	Bergensesteenweg 719, 1502 Lembeek
Česká republika	+420 2 61 12 61 12	Budějovická 3, Praha 4, 140 21
Danmark	+45 70 11 74 00	Sjællandsgade 2, 7000 Fredericia
Deutschland	+49 180 32 26 622	Muggenhofer Str. 135, 90429 Nürnberg
Eesti	+37 2 66 50 030	Mustamäe tee 24, 10621 Tallinn
España	+34 902 11 63 88	Carretera M-300, Km. 29,900 Alcalá de Henares Madrid
France	www.electrolux.fr	
Great Britain	+44 8705 929 929	Addington Way, Luton, Bedfordshire LU4 9QQ

#### 44 electrolux **guarantee/customer service**

		
Hellas	+30 23 10 56 19 70	4 Limnou Str., 54627 Thessaloniki
Hrvatska	+385 1 63 23 338	Slavonska avenija 3, 10000 Zagreb
Ireland	+353 1 40 90 753	Long Mile Road Dublin 12
Italia	+39 (0) 434 558500	C.so Lino Zanussi, 26 - 33080 Porcia (PN)
Latvija	+37 17 84 59 34	Kr. Barona iela 130/2, LV-1012, Riga
Lietuva	+370 5 2780609	<b>Verkių 29, LT-09108 Vilnius</b>
Luxembourg	+35 2 42 43 13 01	Rue de Bitbourg, 7, L-1273 Hamm
Magyarország	+36 1 252 1773	H-1142 Budapest XIV, Erzsébet királyné útja 87
Nederland	+31 17 24 68 300	Vennootsweg 1, 2404 CG - Alphen aan den Rijn
Norge	+47 81 5 30 222	Risløkkvn. 2 , 0508 Oslo
Österreich	+43 18 66 400	Herziggasse 9, 1230 Wien
Polska	+48 22 43 47 300	ul. Kolejowa 5/7, Warsaw
Portugal	+35 12 14 40 39 39	Quinta da Fonte - Edifício Gonçalves Zarco - Q 35 2774 - 518 Paço de Arcos
Romania	+40 21 451 20 30	Str. Garii Progresului 2, S4, 040671 RO
Schweiz/Suisse/ Svizzera	+41 62 88 99 111	Industriestrasse 10, CH-5506 Mägenwil
Slovenija	+38 61 24 25 731	Electrolux Ljubljana d.o.o. Gerbiceva 98, 1000 Ljubljana
Slovensko	+421 2 43 33 43 22	Electrolux Slovakia s.r.o., Electrolux Domáce spotrebièe SK, Seberíniho 1, 821 03 Bratislava
Suomi	www.electrolux.fi	
Sverige	+46 (0)771 76 76 76	Electrolux Service, S:t Göransgatan 143, S-105 45 Stockholm
Türkiye	+90 21 22 93 10 25	Tarlabası caddesi no : 35 Taksim Istanbul
Россия	+7 095 937 7837	129090 Москва, Олимпийский проспект, 16, БЦ „Олимпик“

## Service and Spare Parts

If the event of your appliance requiring service, or if you wish to purchase spare parts, please contact Service Force by telephoning:

**0870 5 929 929**

Your telephone call will be automatically routed to the Service Force Centre covering your post code area.

For the address of your local Service Force Centre and further information about Service Force, please visit the website at

**[www.serviceforce.co.uk](http://www.serviceforce.co.uk)**

Before calling out an engineer, please ensure you have read the details under the heading „What to do if...“

When you contact the Service Force Centre you will need to give the following details:


1. Your name, address and post code.
2. Your telephone number.
3. Clear and concise details of the fault.
4. The model and serial number of the appliance (found on the rating plate)
5. The purchase date.

Please note that a valid purchase receipt or guarantee documentation is required for in-guarantee service calls.

### Customer Care

For general enquiries concerning your Electrolux appliance, or for further information on Electrolux products please contact our Customer Care Department by letter or telephone at the address below or visit our website at

**[www.electrolux.co.uk](http://www.electrolux.co.uk)**

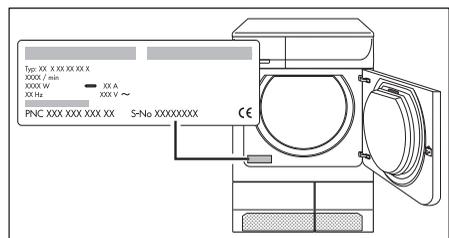

Customer Care Department  
Major Appliances  
Electrolux  
Addington Way  
Luton  
Bedfordshire, LU4 9QQ  
Tel: 08705 350350 (\*)

**For Customer Service in the Republic of Ireland** please contact us at the address below:  
AEG/ Electrolux Group (Ire) Ltd  
Long Mile Road/ Dublin 12  
Republic of Ireland  
Tel: +353 (0) 1 4090753  
Email: [service.eid@electrolux.ie](mailto:service.eid@electrolux.ie)

(\*) Calls may be recorded for training purposes



[www.electrolux.com](http://www.electrolux.com)

[www.electrolux.co.uk](http://www.electrolux.co.uk)