

December 2, 2009

Document Summary

- This document describes how to use the Book Copy feature for Edgeline MFP devices.

Security:
Public

Document Number:
c01955359



Introduction.....	2
How to use the Book Copy feature.....	2
Frequently Asked Questions	7
For more information.....	7
Applicable products	7
Product Models.....	7
Product Numbers	7


Introduction

The Book Copy feature, which can be used to scan and print pages from a book, was implemented for Edgeline MFP devices in the firmware version 20091130 77.018.0. The Book Copy feature includes options for copying book covers, books with right binding and left binding, and skipping pages when copying. The feature also supports the standard Copy options including: single or double sided output, stapling, media size selection, watermarks, etc.


This document will provide an overview of how to use the Book Copy feature and address some of the frequently asked questions about the feature.

How to use the Book Copy feature


1. Verify that your device firmware version is 20091130 77.018.0 or greater. If necessary, upgrade your device firmware to a version that includes this feature.
2. The Book Copy option is available under the Copy menu from the Home Screen of the control panel.

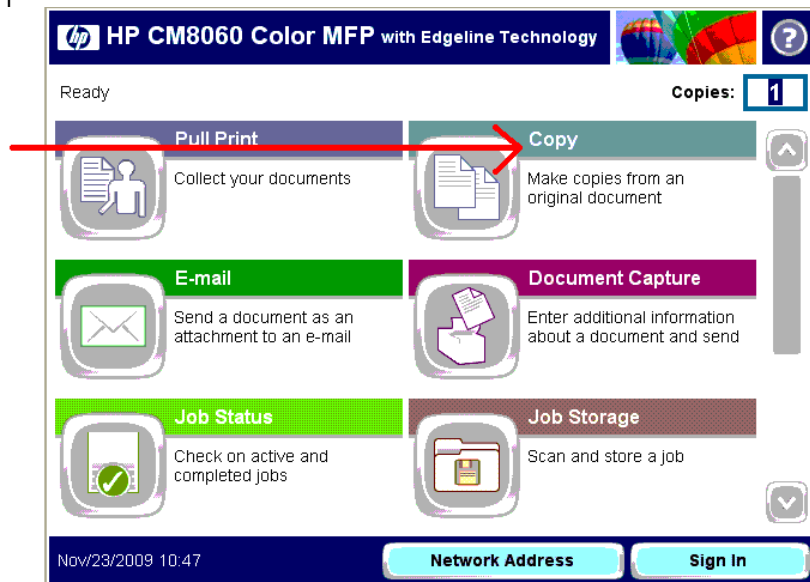


3. Select **Book Copy**
Note: Keep the flatbed cover open while scanning a book.

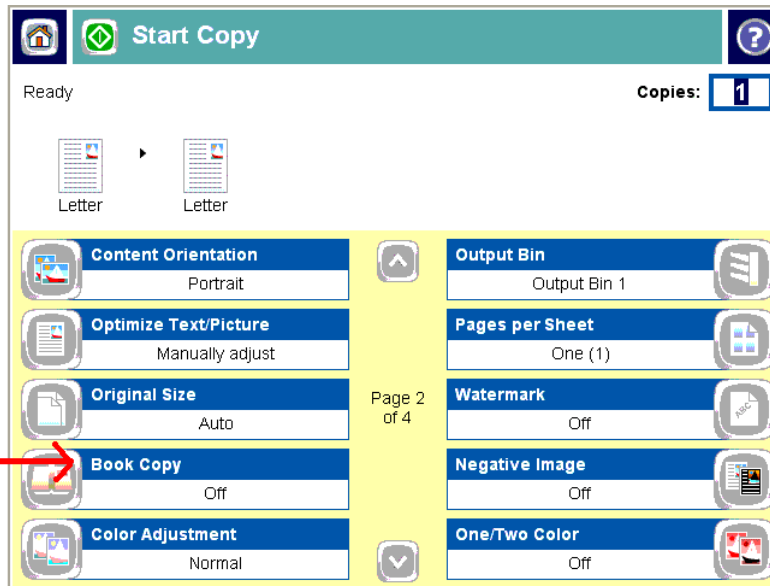


4. Choose an option for copying book covers, and then touch the **Next** button.
 - a. Select **Copy front cover** to copy only the front book cover.
 - b. Select **Copy front and back covers** to copy both the front and back book covers.
 - c. Select **Don't copy book covers** if you do not want to copy the book covers.

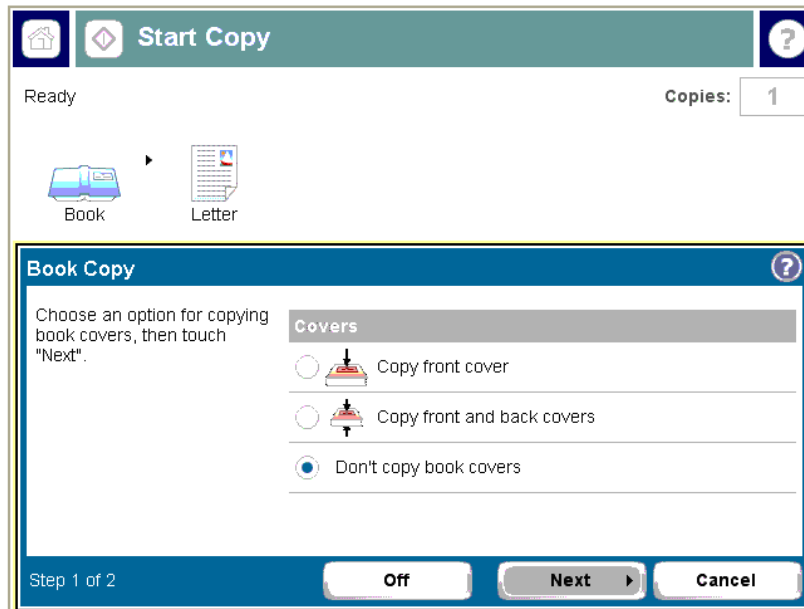


5. Choose an option for the book binding, and then touch the **Finish** button.
 - a. Select **Book has left binding** for books with binding on the left.
 - b. Select **Book has right binding** for books with binding on the right.

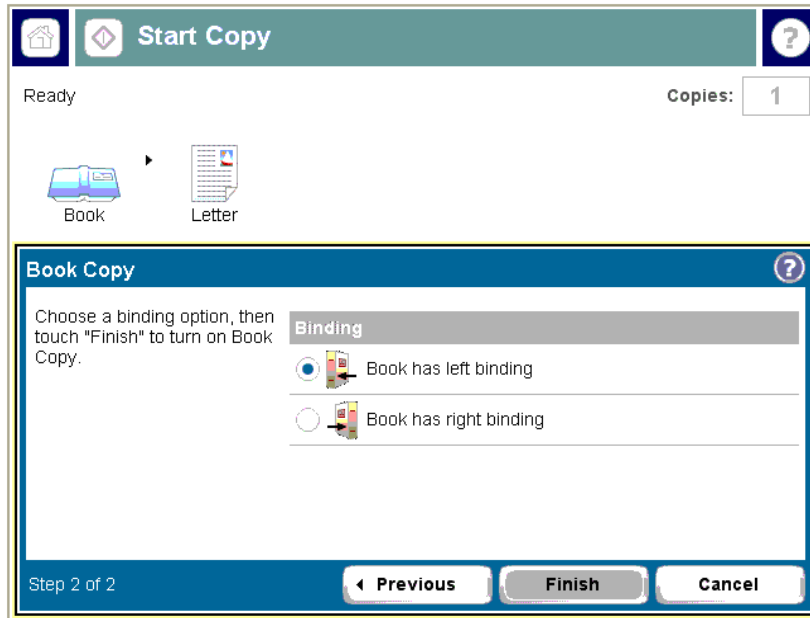


- Adjust other copy settings as necessary and select the number of copies to make.

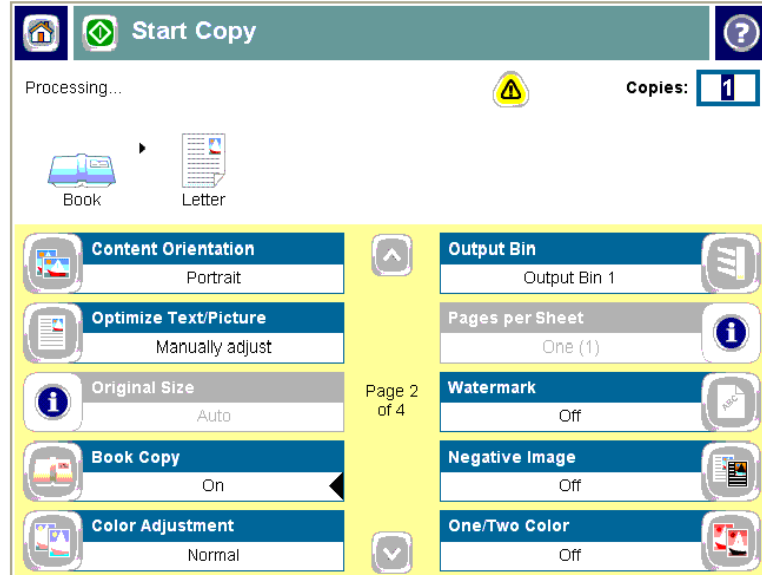


- Touch the **Start** button to start the Book Copy job
- If you chose the **Copy front and back covers** or **Copy front cover** option, place the closed book with the front cover face down on the glass, positioning the book in the upper-left corner with the top edge toward the rear of the glass. Touch the **Scan** button.

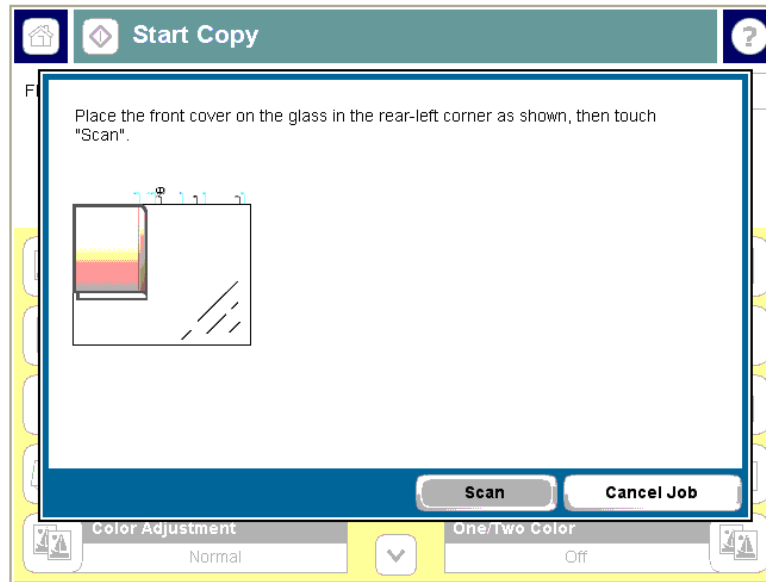

9. If you chose the **Copy front and back covers** option, place the closed book with the back cover face down on the glass, positioning the book in the upper-left corner with the top edge toward the rear of the glass. Touch the **Scan** button.

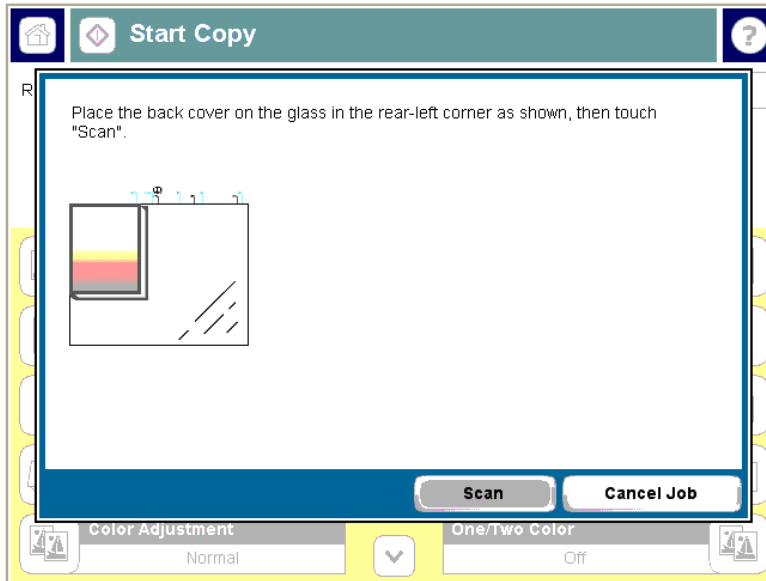


10. Place the open book face down on the glass with the top edge toward the rear of the glass. Align the book spine with the book symbol along the top edge of the glass.
11. Select which pages of the book should be copied:
 - a. **Copy both pages** copies the images on both the left and right side of the spine.
 - b. **Skip left page** copies the image on the right side of the spine only.
 - c. **Skip right page** copies the image on the left side of the spine only.

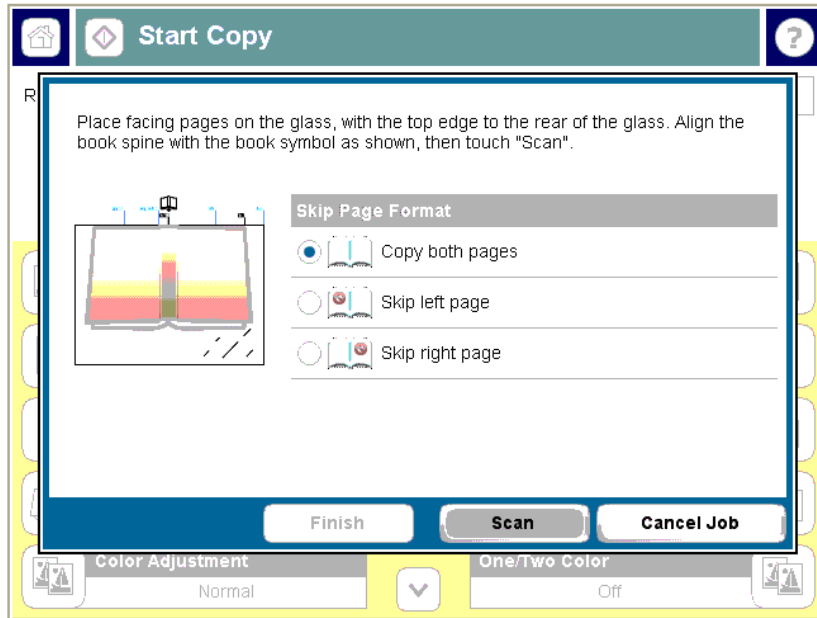


12. When each page is ready to be scanned, touch the **Scan** button.

13. After the last page is scanned, touch the **Finish** button.

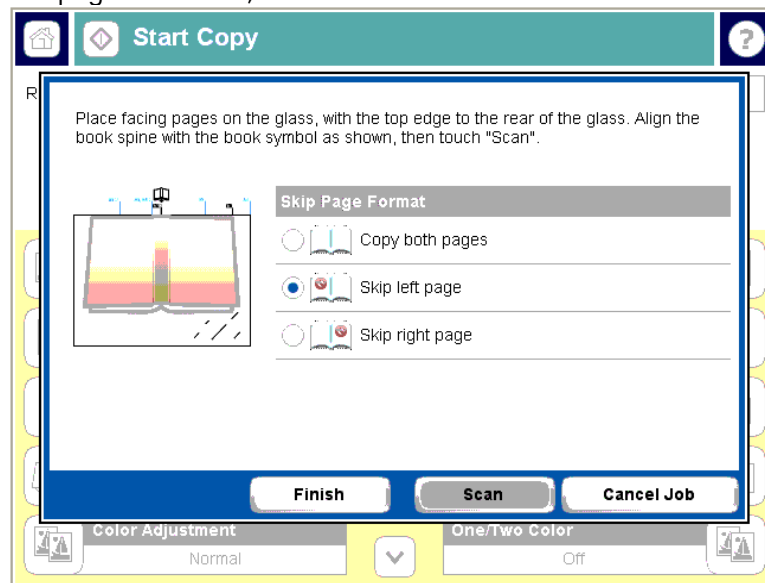

14. When prompted, touch the **Yes** button to begin printing.

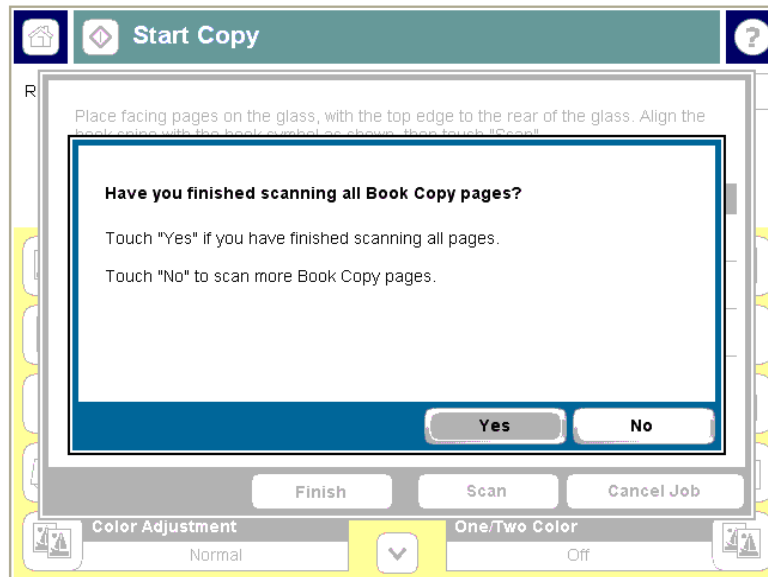

Frequently Asked Questions

1. Why must the flatbed cover be open while scanning a book?
The flatbed cover must be open so that the device can most accurately detect the size of the book being copied. After detecting the size of the book, the device will crop the scanned image removing background content and only printed the book image on the page.
2. Why does the device scan twice?
The first scan during a Book Copy is to detect the size/shape of the book and only requires scanning half of the book. During the second scan, the entire book is scanned in order to capture the image data for copying.
3. What will be the order of book covers and book pages in printed output?
If front and/or back covers have been selected for the Book Copy job, those covers will be scanned prior to scanning any of the internal book pages. When the Book Copy job is printed, the output will include the front cover first, and then all of the book pages, followed by the back cover.

For more information

www.hp.com/support/cm8060edgeline

Applicable products

Product Models

HP CM8060/CM8050 Color MFP

Product Numbers

C5957A, C5958A

© 2009 Hewlett-Packard Development Company, L.P. The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

4AA0-XXXXENW, Dec 2009

