



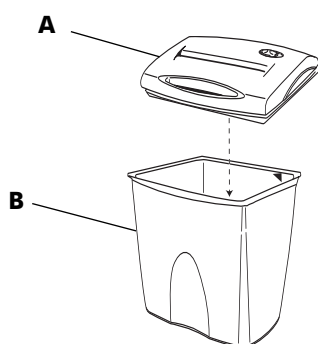

Fellowes

T440C

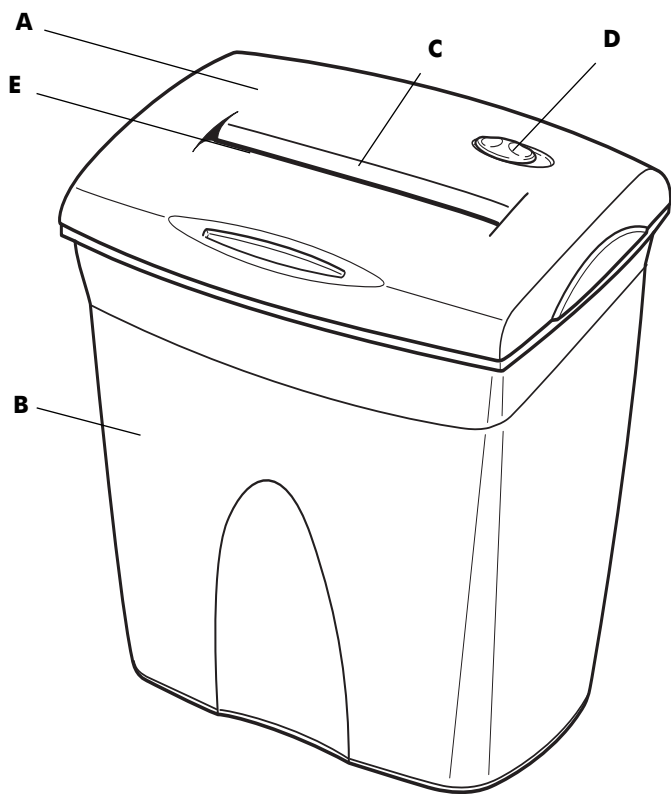

Fellowes

Dear Customer,

Thank you for buying a Fellowes Personal Shredder. We have made many improvements in our personal shredder since its introduction in 1990 as the first of its kind on the market. We are confident that it offers you the greatest value for your money in its product category today. We hope it meets – or even exceeds – your expectations.

To ensure years of safe, efficient use, please read these few pages about your new shredder. If this manual doesn't answer all your questions or if you wish to comment on this product, we welcome your call or letter.

Sincerely,

*James Fellowes
Chairman & CEO*

Contents

Product Profile	4
Important Safety Instructions	4
Set-up	5
Operation	5
Maintenance	6
Troubleshooting	6
Warranty	7

Product Profile

This product is built to shred **paper, staples and credit cards**. It is *not* built to take paper clips, continuous forms, adhesive labels, transparencies, newspaper, cardboard or any plastic (except credit cards). Using it for these purposes is likely to cause irreparable damage.



Confetti Cut	
Sheet Capacity*	7 sheets
Paper shred size	5/32 x 2"
Maximum paper width	9"
Daily capacity	10-20 shredding passes
Maximum running time	5-7 minutes
Automatic cool-down period	15 minutes

*Based on 20 lb., 8-1/2" x 11" paper with shredder operating at rated voltage; heavier paper, high humidity or other than rated voltage may reduce maximum sheet capacity.



IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING

While setting up shredder

- Check shredder for damage or defects; some paper particles in the basket are normal due to product testing and does not indicate a defect.
- Avoid touching exposed blades on underside of confetti-cut shredder head.
- Plug power cord in an outlet that can easily be reached.
- Do not place shredder near or over a heat or water source.

While operating shredder

- Keep hands and hanging objects (jewelry, ties, loose clothing, long hair, etc.) away from paper entry
- Keep children and pets away from shredder.



When not in use

- Always turn off and unplug shredder
- Unplug before emptying basket
- Do not open shredder head: Danger of electric shock



NOTE: Do not use flammable synthetic oil, petroleum-based products or aerosols of any kind on or near product at any time.



Set-Up

CONFETTI-CUT (T440C):

- Recommendation: Place plastic waste bag (Fellowes part number 36052) into basket to collect confetti particles.
- For safety reasons, this model will operate only if the shredder head is in the correct position on the basket. Align slot at the back of the shredder head (A) with tab on the back of the basket (B) and place it onto the basket in this position.

Operation

For convenience, your shredder is equipped with an **automatic-start sensor** (C). This means that when the control switch (D) is in the automatic (I) position, the shredder will start running when you put paper into it and stop 1 or 2 seconds after the paper has passed through. Because the sensor cannot tell the difference between paper and other objects, this feature can also be a hazard, especially to children and pets. To avoid accidents, turn off the shredder as soon as you are finished. Unplug shredder if it will not be used for an extended period.

To shred:

- Plug in shredder with control switch (D) in off (O) position
- Slide control switch to automatic (I) position to signal readiness

Paper

- Feed paper straight into entry (E), until the shredder automatically begins shredding; see *Product Profile* for limits on paper width, shreddable items, sheet capacity, etc.
- Shred for no more than 5-7 minutes; shredding longer will cause shredder to turn itself off for 15 minutes to cool down.
- Slide control switch to off (O) position after cutting has stopped; cutting continues for 1 or 2 seconds after paper has gone through in order to clear shredded paper from cutting cylinders.

In case of a **paper jam**, which may occur if the shredder is pushed beyond its specified capabilities, press the control switch to the off (O) position and empty the basket if full. Then:

- 1) Slide control switch in reverse (R) position and attempt to back paper out of shredder.
- 2) If shredder jams in reverse mode, slide control switch to automatic (I) position and attempt to continue shredding operation.
- 3) If shredder jams again, alternate control switch slowly between reverse (R) and automatic (I) positions to attempt to move jammed paper completely through shredder.

If you are unable to clear the jam using this method, turn off and unplug the shredder; remove shredder head from the wastebasket and carefully remove any paper extending below the cutting cylinders; empty the wastebasket; reassemble the shredder and repeat jam clearing procedure.

Maintenance

Regular emptying of the basket is important to ensure the smooth operation of the cutting cylinders. If paper is within 2 inches of shredder head, turn off and unplug the shredder, remove the shredder head and empty the basket.

Regular oiling of the shredder is also necessary to ensure proper performance. If you are running the shredder at or near capacity, we recommend oiling it monthly. Using Fellowes Powershred Lubricant #35250 or other non-aerosol vegetable-based oil in a long-nozzle container:



- Apply oil over full width of paper entry (E) with shredder in off [O] position.
- Press control switch to automatic [I] position which will cause shredder to run for about 2 seconds.
- Press and hold control switch in reverse [R] position for 3–5 seconds.
- Repeat above automatic [I] and reverse [R] sequence three times.

REMINDER: Do not use flammable synthetic oil, petroleum-based products or aerosol lubricants of any kind in or near the shredder at any time.



Troubleshooting

If you have a problem with your shredder, check the symptoms and remedies below. If you cannot solve the problem this way, contact Fellowes Customer Service. **Do not open shredder head** to attempt repair: It could expose you to serious electric shock and will void your warranty.

Symptom	Remedy
Shredder does not start or stops while shredding	<ul style="list-style-type: none">• Make sure shredder is plugged in and switch is in automatic (I) position• If paper appears to be jammed, follow instructions under <i>Operation</i>• Check shredder head position; follow instructions under <i>Set-Up</i> to correct• Wait 4 minutes for shredder to cool down before trying again
Shredder runs below capacity	<ul style="list-style-type: none">• Check to see if basket is full, follow instructions under <i>Maintenance</i>.• Oil cutting cylinders. Follow instructions under <i>Maintenance</i>.
Shredder continues to run for 1 or 2 seconds after shredding has been completed	<ul style="list-style-type: none">• No action required. This is a self-cleaning function.

Limited Warranty

Fellowes, Inc. warrants the cutting cylinders of the machine to be free from defects in material and workmanship for 3 years from the date of purchase by the original consumer. Fellowes warrants all other parts of the machine to be free of defects in material and workmanship for 1 year from the date of purchase by the original consumer. If any part is found to be defective during the warranty period, your sole and exclusive remedy will be repair or replacement, at Fellowes' option and expense, of the defective part.

This warranty does not apply in cases of abuse, mishandling or unauthorized repair. ANY IMPLIED WARRANTY, INCLUDING THAT OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS HEREBY LIMITED IN DURATION TO THE APPROPRIATE WARRANTY PERIOD SET FORTH ABOVE. IN NO EVENT SHALL FELLOWES BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES ATTRIBUTABLE TO THIS PRODUCT. This warranty gives you specific legal rights. You may have other legal rights that vary from this warranty. The duration, terms and conditions of this warranty are valid worldwide, except where different limitations, restrictions or conditions may be required by local law. For more details or to obtain service under this warranty, please see below.

To obtain service under this warranty, please contact us (see back cover) or your dealer.

Help Line

Australia	+ 1-800-33-11-77
Canada	+ 1-800-665-4339
Mexico	+001-800-234-1185
United States	+ 1-800-955-0959

Fellowes

Australia	+ 61-3-8336-9700
Benelux	+ 31-(0)-76-523-2090
Canada	+ 1-905-475-6320
Deutschland	+ 49-(0)-5131-49770
France	+ 33-(0)-1-30-06-86-80
Italia	+ 39-(0)-71-730041
Japan	+ 81-(0)-3-5496-2401
Korea	+ 82-(0)-2-3462-2884
Malaysia	+ 60-(0)-35122-1231
Polska	+48-(22)-771-47-40
Singapore	+ 65-6221-3811
United Kingdom	+ 44-(0)-1302-836836
United States	+ 1-630-893-1600