



## Editing or deleting entries – Telephone, Schedule, Memo –

### Editing

- Recall the entry to be edited.
- Tap **[EDIT]**. The cursor starts to flash.
  - In Telephone mode tap **[ENTER]** several times to display each field (the address field and so on).
- Tap **[←]**, **[→]**, **[▲]**, or **[▼]** to move the cursor to the position to be edited.
- Enter, insert, or delete characters (refer to “Entering Characters”).
  - To cancel editing, tap **[C-CE]**.

 
- Tap **[ENTER]** several times (until “STORED!” appears briefly) to finish editing and to store the entry.

### Deleting

- Recall the entry to be deleted.
- Tap **[DEL]**.
  - “DELETE?” is displayed.
  - To cancel the deletion operation, tap **[2nd]**.
- Tap **[ENTER]** to delete the entry.

## Calculator Mode

The Organizer can calculate numbers of up to 10 digits. Tap **[CALC/CONV]** several times to display the Calculator mode screen (Calculator → Currency conversion → Unit conversion → Calculator...).



### Calculation

Be sure to tap **[C-CE]**, **[C-CE]**, and **[CM]** to clear the display and memory before performing a calculation.

### Note

- When **[+]**, **[-]**, **[×]**, or **[÷]** is tapped, the respective symbol, +, -, ×, or ÷ is displayed. (In the examples in this manual, these symbols are not described.)

### If an error occurs

If the calculation result or the integer section in the numerical value in the memory exceeds 10 digits or if a number is divided by zero (0), an error occurs (“ERR” is displayed).

 
### Calculation examples

Example	Operation	Display
(-24+2)÷4=-5.5	<b>[C-CE]</b> <b>[24]</b> <b>[+]</b> <b>[2]</b> <b>[+]</b> <b>[4]</b> <b>[÷]</b>	<b>-5.5</b>
34+57=91	<b>[34]</b> <b>[+]</b> <b>[57]</b>	<b>91</b>
45+57=102	<b>[45]</b> <b>[+]</b>	<b>102</b>
	(The addend becomes a constant.)	
68×25=1700	<b>[68]</b> <b>[×]</b> <b>[25]</b>	<b>1700</b>
68×40=2720	<b>[68]</b> <b>[×]</b> <b>[40]</b>	<b>2720</b>
	(The multiplicand becomes a constant.)	
200×10%=20	<b>[200]</b> <b>[×]</b> <b>[10]</b> <b>[%]</b>	<b>20</b>
9÷36=25%	<b>[9]</b> <b>[÷]</b> <b>[36]</b> <b>[%]</b>	<b>25</b>
200÷(200×10%)=220	<b>[200]</b> <b>[÷]</b> <b>[200]</b> <b>[×]</b> <b>[10]</b> <b>[%]</b>	<b>220</b>
500-(500×20%)=400	<b>[500]</b> <b>[−]</b> <b>[500]</b> <b>[×]</b> <b>[20]</b> <b>[%]</b>	<b>400</b>
4 <sup>2</sup> =(4 <sup>2</sup> ) <sup>2</sup> =4096	<b>[4]</b> <b>[^]</b> <b>[2]</b> <b>[=]</b> <b>[4]</b> <b>[^]</b> <b>[2]</b>	<b>4096</b>
1/8=0.125	<b>[1]</b> <b>[÷]</b> <b>[8]</b>	<b>0.125</b>
25×5=125	<b>[CM]</b> <b>[25]</b> <b>[×]</b> <b>[5]</b> <b>[M+]</b>	<b>125</b>
-) 84÷3=28	<b>[84]</b> <b>[÷]</b> <b>[3]</b> <b>[M-]</b>	<b>28</b>
+) 68+17=85	<b>[68]</b> <b>[+]</b> <b>[17]</b> <b>[M+]</b>	<b>85</b>
182	<b>[RM]</b>	<b>182</b>
√25=9=4	<b>[25]</b> <b>[√]</b> <b>[9]</b> <b>[=]</b> <b>[√]</b>	<b>4</b>
1234567890×145=179012344050	<b>[1234567890]</b> <b>[×]</b> <b>[145]</b>	<b>ERR</b>
	<b>[C-CE]</b>	<b>17.90123440</b>
	(17.90123440×10 <sup>10</sup> =179012344000)	


## Currency/Unit Conversion Mode

### 1. Setting a currency rate

- Tap **[CALC/CONV]** several times to display the currency conversion mode screen (refer to “Calculator mode”).  
*Example:* 1 CAD (Canada dollars) = 0.66 USD (US dollars)



 - Tap **[↔]**, **[↔]**, **[↔]** to change the display and tap **[2nd]** **[EDIT]**. The initial character of “CAD” starts to flash.
  - You can change each currency name by entering characters (up to 4 in each) and using **[←]**, if needed.
- Tap **[ENTER]**. “0” starts to flash.
- Enter the rate (up to 10 digits).




### 2. Converting currency/unit

You need to set the conversion rate before making the currency conversion.  
*Example:* Convert 500 CAD into USD using the rate that you have set.

- Display the screen: “CAD → USD”.
- Enter the value to be converted.

**500**

 - Tap **[→]** to convert CAD into USD.
  - To convert in reverse order (e.g. 200 USD into CAD), enter **200** and tap **[←]**.
  - You can use the unit conversion in the same manner. You cannot change the units or the rates for units.
  - The conversion result may have a slight error as a result of rounding off the number (e.g. up to 2 decimal places for currency conversions). Use the conversion result for reference.




## Game Mode

 
 
Tap **[GAME]** to play the game “BLACKJACK”.

Each time **[GAME]** is tapped, the display switches between “ALPHA ATTACK” and “BLACKJACK”.

### BLACKJACK (Twenty-one)

Make your “hand” (the total of the numbers on the cards) as close to 21, without going over 21.

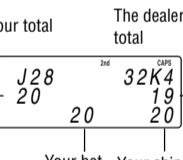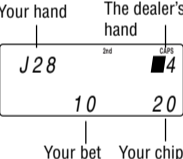

- Tap **[GAME]** to display the following Game mode screen.  

- Tap **[ENTER]** to start a game. The left 2 cards are dealt for you. (One card is faced up and the other is faced down.)
- Agree the left-displayed maximum bet (up to 10) or enter fewer bet. Tapping **[→]** also can bet to the maximum.
- Tap **[SPACE]** to see your hand. Each time **[SPACE]** is tapped, a new card is dealt.
  - “J”, “Q”, and “K” are counted as 10.
  - “A” can be counted as 1 or 11.
  - When the first 2 cards are “A” and a face card (“J”, “Q”, or “K”), your hand is “BLACKJACK”.
- Tap **[ENTER]** to stop being dealt and hold your hand. The dealer’s hand and the results are displayed.
  - When you win, your total flashes and your bet is doubled.
  - When you win with “BLACKJACK”, your bet is tripled.



- Tap **[ENTER]** and display the Game mode screen.
  - When you have no more chips to bet, the game is over.
  - To quit the game, tap **[C-CE]** or any mode key. Your chips are stored for the next time.
  - To return your chips to 30, tap **[2nd]** **[DEL]** and **[ENTER]** on the Game mode screen.


### ALPHA ATTACK

Type in characters (A to Z) displayed on the 1st line to clear them. 20 levels of speed are available.

- Tap **[GAME]** to display the following Game mode screen.  

- Enter the level number (2 digits from 01 to 20).
  - 01: slow, 20: fast
- Tap **[ENTER]** to start a game.  

- Tap the same key as the first character at the left end of the 1st line. (In this case, tap keys in the order: E → Y → K → W.)
  - Tapping the correct key in the correct order deletes the character.
  - When 12 characters are displayed in each level, the game continues in the faster level (up to 20).
  - When no more characters can be displayed, the game is over. The Game mode screen with the level when the game is over is displayed.
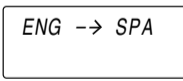
## Word Translator Mode

The Organizer offers an English-Spanish bi-directional word translation function.

- Tap **[↔S]** to enter the English → Spanish translation mode.  

- Tap **[↔S]** twice (or **[↔S]** then **[↔]**) to enter Spanish → English mode.
- Enter the desired source word and tap **[ENTER]**. “English...” or “Spanish...” is displayed while conducting search. The matching English or Spanish word will then be displayed.
  - When the symbol “▶” appears, more letters exist. To view remaining letters of long words that cannot be accommodated on the screen, use **[→]** to scroll right.


- If there is no matching word, “NOT FOUND!” is displayed. The word next in alphabetical order will then be displayed.
- Tap **[↔]** or **[↔]** to scroll through word list, or edit entry using the keyboard, and tap **[ENTER]** for another search.
- Tap **[←]** or **[→]** to return to the source word.

### Caution

- Spanish words stored in this device are those of Spain.
- Only the masculine form of the noun will be displayed for nouns with both masculine and feminine forms.
- Sometimes, two identical words will appear in the word list.
- Enter European characters and spaces correctly. Otherwise, the unit may not be able to complete the search.

## Memory Storage

### 1. Checking memory storage

- Tap **[TELSCHEDMEMO]** several times to display “NAME?”, “SCHEDULE?”, or “MEMO?”.
- Tap **[2nd]** **[MENU]**, select “MEMORY CHECK” by using **[▲]** or **[▼]**, and tap **[ENTER]**. The number of remaining bytes is displayed briefly.  


### Notes

- The Organizer can store up to 34070 bytes in the memory (excluding the Calculator mode memory).
- One byte is required per character (in the 1st line) for telephone, schedule, and memo entries.
- One byte is required for 2 digits in the number part (in the 2nd and the 3rd lines) of telephone and memo entries. (When there is an odd number of digits in a number entry, the last digit occupies 1 byte.)
- In addition to the memory size for characters (in the

1st line) and numbers (in the 2nd and the 3rd lines), each entry requires the following memory size:  
Telephone entry ..... 6 bytes  
Schedule entry ..... 8 bytes (including date and time)  
Memo entry ..... 3 bytes

### 2. Deleting all the memory contents

Perform steps 2 and 3 as described in the section, “Using the Organizer for the First Time”.

- To cancel the deletion operation, tap any key EXCEPT **[2nd]** **[ENTER]** in step 3.

## Secret Function


### 1. Registering a password and storing secret entries

Up to 6 characters can be registered as the password.

- One password is valid for Telephone, Schedule, and Memo modes.

*If the password is forgotten, you cannot delete the password only. You have to delete all the memory contents. (Perform steps 2 and 3 as described in the section, “Using the Organizer for the First Time”.) As a safeguard, make a written record of the password.*

### Registering a password

- Tap **[TELSCHEDMEMO]** several times to display “NAME?”, “SCHEDULE?”, or “MEMO?”.
- Tap **[2nd]** **[?]**.  

- Enter the password (case sensitive), e.g. **ABC**.
- Tap **[?]** to register it.
  - The display returns to the screen in step 1 with the symbol “**☛**”.
  - If “ERROR!” appears briefly, a password has already been registered. Enter the correct password or delete the password and all the memory contents.
- Tap **[2nd]** **[?]** to turn Secret function on. “**☛**” disappears.

### Storing secret entries

- Enter characters in Telephone, Schedule, or Memo mode when “**☛**” is not displayed (Secret function is on).
  - When “**☛**” is displayed, tap **[?]** **[?]** to turn Secret function on.
- Tap **[?]** before tapping **[ENTER]** to store. “**☛**” appears.
- Tap **[ENTER]** to store a secret entry in the memory.
  - “STORED!” appears briefly, and the display returns to the mode screen without “**☛**” (Secret function is on).
  - You cannot display the secret entry until you turn Secret function off.

### 2. Turning Secret function on and off

When Secret function is on, “**☛**” is not displayed.

- You can display, edit, or delete entries except secret entries.
- You can enter new entries as secret or non-secret.

When Secret function is off, “**☛**” is displayed.

- You can display, edit, or delete secret entries only. (You cannot display non-secret entries.)
- You cannot enter a new entry.

### Turning Secret function off

- Tap **[TELSCHEDMEMO]** and check that “**☛**” is not displayed.
- Tap **[2nd]** **[?]**. “PASSWORD?” is displayed.
- Enter the password and tap **[?]**.
  - “**☛**” is displayed and you can display secret entries.
  - If you enter an incorrect password, “ERROR!” appears briefly. Follow the above steps and enter the correct password.
  - Even when Secret function is turned off, it will be automatically turned on (“**☛**” will disappear):
    - A) when **[GAME]**, **[CLOCK]**, or **[CALC/CONV]** is tapped,
    - or B) after the power is turned off manually or automatically.

### Turning Secret function on

- Tap **[TELSCHEDMEMO]** and check that “**☛**” is displayed.
- Tap **[2nd]** **[?]**. The password is displayed. Memorize it again.
- Tap **[?]** again. “**☛**” disappears and you cannot display secret entries.

### 3. Changing the password

- Turn Secret function off (“**☛**” appears).
- Tap **[2nd]** **[?]**. The password is displayed.
- Tap **[2nd]** **[EDIT]**. The initial character of the password starts to flash.
- Enter, or edit characters and make a new password.
- Tap **[?]**. The new password is now registered.

## Caring for Your Organizer

- Do not carry the Organizer in the back pocket of slacks or trousers.
- Do not drop the Organizer or apply excessive force to it.
- Do not subject the Organizer to extreme temperatures.

- Since this product is not waterproof, do not use it or store it where fluids can splash onto it.
- Clean only with a soft, dry cloth.
- Use only a SHARP approved service facility.

## Replacing Battery

### Battery used

Type	Model	Quantity
Lithium battery	CR2032	1

- Improper battery replacement may cause change or loss of the memory contents.*
- Be sure to write down any important information stored in the memory before replacing the battery.*
- Make sure the power is turned off before replacing the battery.*
- Do not press **[OFF]** until the battery replacement procedure is completed.*

### 1. Precautions

Since improper use of the battery may cause leakage or explosion, strictly observe the following instructions.

- Insert the battery with the positive side (+) correctly facing up.
- Never throw the battery into a fire because it might explode.
- Keep the battery out of the reach of children.

 
 
Because the battery in the Organizer was installed at the factory, it may become depleted before the specified expiration time is reached.

### 2. Battery replacement

If the display becomes dim and difficult to read, immediately replace the battery with a new one. Continued use of the Organizer with an exhausted battery can alter or clear the memory contents.

- Complete the replacement of the battery within 1 minute, otherwise all the memory contents may be cleared.

- Press **[OFF]** to turn the power off.
- Loosen the screw and remove the battery holder cover on the back of the unit.
- Remove the exhausted battery by prying it out with a stylus. (Fig. 1)
- Install a new battery with the positive side (+) facing up into the battery holder. (Fig. 2)
- Replace the holder cover and secure it with the screw.
- Press **[OFF]** to turn the power on.
  - If nothing appears on the display, press the RESET switch and tap **[↔]**.
  - Do not tap **[2nd]** and **[ENTER]**. This key sequence will clear all the memory contents.
- Set the clock.



## Specifications

- Model:** YO-P5B
- Product name:** Electronic Organizer
- Display:** 3 lines of 12 digits
- Memory capacity:** 48 KB Equivalent\*
- Clock mode:**
  - Accuracy:** ± 60 seconds/month at 25°C/77°F
  - Display:** Year, month, day, day of the week, hour, minute, second, AM/PM
  - Clock function:** 12-hour/24-hour format (switchable), 3 kinds of date type (switchable), world clock function, daylight saving time (summer time) display, daily alarm, hourly alarm
- Telephone mode:** Entering and recalling of telephone entry (name, address, E-mail address, phone number, and web address (URL))
- Schedule mode:** Entering and recalling of schedule entry (details, year, month, day, hour, and minute), schedule alarm
- Memo mode:** Entering and recalling of memo entry (switchable), world clock function, daylight saving time (summer time) display, daily alarm, hourly alarm
- Calculator mode:** 10 digits (with calculation square symbols), arithmetic calculations, percentage, square root, memory calculation, etc.
- Currency/unit conversion mode:** 5 types of currency conversion (editable) and 9 types of unit conversion

- Game mode:** 2 games
  - Word Translator mode:** Approx. 2400 words
  - Power consumption:** 0.003 W
  - Operating temperature:** 0°C to 40°C (32°F to 104°F)
  - Power supply:** 3V<sup>≒</sup> (DC), lithium battery CR2032 × 1
  - Auto-power off:** Approx. 7 minutes
  - Battery life:** Approx. 2 years at ambient temperature of 25°C/77°F, assuming the following daily use: 30 minutes display, alarm sounding for 20 seconds and key touch tone turned on/off 100 times.
  - Weight (including battery):** Approx. 72g (0.15 lb.)
  - Dimensions:** 64 mm (W) × 94 mm (D) × 14.3 mm (H) 2-17/32" (W) × 3-11/16" (D) × 9/16" (H)
  - Accessories:** 1 lithium battery (installed), operation manual, stylus
- \* Memory at 48KB Equivalent. Approx. 750 telephone names & numbers (name, telephone and fax number are 14 characters per entry) can be stored by using compression technology. (Compression Rate: Approx. 1.5:1)

### LIMITED WARRANTY

SHARP ELECTRONICS CORPORATION warrants to the first consumer purchaser that this Sharp brand product (the “Product”), when shipped in its original container, will be free from defective workmanship and materials, and agrees that it will, at its option, either repair the defect or replace the defective Product or part thereof with a new or remanufactured equivalent at no charge to the purchaser for parts or labor for the period(s) set forth below.

This warranty does not apply to any appearance items of the Product nor to the additional excluded item(s) set forth below nor to any Product the exterior of which has been damaged or defaced, which has been subjected to improper voltage or other misuse, abnormal service or handling, or which has been altered or modified in design or construction.

In order to enforce the rights under this limited warranty, the purchaser should follow the steps set forth below and provide proof of purchase to the servicer. The limited warranty described herein is in addition to whatever implied warranties may be granted to purchasers by law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD(S) FROM THE DATE OF PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein, or to extend the duration of any warranties beyond the time period described herein on behalf of Sharp.

The warranties described herein shall be the sole and exclusive warranties granted by Sharp and shall be the sole and exclusive remedy available to the purchaser. Correction of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of Sharp to the purchaser with respect to the Product, and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise.

In no event shall Sharp be liable, or in any way responsible, for any damages or defects in the Product which were caused by repairs or attempted repairs performed by anyone other than an authorized servicer. Nor shall Sharp be liable or in any way responsible for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

<b>Your Product:</b>	Electronic Organizer
<b>Warranty Period for this Product:</b>	One (1) year parts and labor from date of purchase.
<b>Additional Items Excluded from Warranty Coverage:</b>	Any consumable items such as paper, maintenance cartridge, ink cartridges supplied with the Product or to any equipment or any hardware, software, firmware, fluorescent lamp, power cords, covers, rubber parts, or peripherals other than the Product.
<b>Where to Obtain Service:</b>	At a Sharp Authorized Servicer located in the United States. To find out the location of the nearest Sharp Authorized Servicer, call Sharp toll free at 1-800-BE-SHARP.
<b>What to do to Obtain Service:</b>	Ship (prepaid) or carry in your Product to a Sharp Authorized Servicer. Be sure to have proof of purchase available. If you ship or mail the Product, be sure it is packaged carefully.

TO OBTAIN SUPPLY, ACCESSORY OR PRODUCT INFORMATION, CALL 1-800-BE-SHARP.

### PRODUCT SUPPORT

If you have read the ORGANIZER operation manual, but you still require product support, you can:

**Call Sharp Customer Assistance Center**  
630-378-3590  
(7am to 7pm CST M-F)

**Visit our Web Site**  
www.sharppusa.com

**Send an E-mail**  
pdasupport@sharpsec.com

**Write to our Customer Assistance Center**  
SHARP Electronics Corp.  
Customer Assistance Center  
Att: WIZARD HELP  
1300 Naperville Drive  
Romeoville, IL 60446

