



Note:

- The handsets have been pre-registered for use with the base unit.
- If you want to know the handset number, press **[INT]** on the handset when in standby mode. The number will be shown on the display of the handset.





