



Model MC1910

McCULLOCH

HANDHELD VACUUM CLEANER!



by Top Innovations, Inc.

Any Questions?

Let us answer any questions
you may have about this
product. Please call us at:

Toll-Free
1-800-711-6617

Se tienes alguna pregunta
por favor llame a:
1-800-711-6617
La llamada es gratis



customerservice@topinnovations.com

**PLEASE READ THESE INSTRUCTIONS BEFORE USE
AND SEND IN YOUR WARRANTY REGISTRATION CARD**



LETTER FROM THE CEO

Congratulations on purchasing your **McCULLOCH®** Vacuum Cleaner. We hope it can make your cleaning experience faster and easier.

Top Innovations, Inc. takes pride in providing excellent quality products, affordable prices, and outstanding customer support.

We invite you to visit us at www.topinnovations.com or call (800) 711-6617 ext. 102 and/or 130. Our customer support team is available to answer any questions you may have about your new product.

Enjoy your **McCULLOCH®** Vacuum Cleaner!

A handwritten signature in cursive script, appearing to read 'Benny Lee'.

Benny Lee
Chairman and CEO
Top Innovations, Inc.

IMPORTANT SAFEGUARDS



WARNING: When using an electrical appliance, to reduce the risk of fire, electrical shock or injury the following basic safety precautions should always be followed:

READ ALL INSTRUCTIONS BEFORE USING YOUR VACUUM

1. Do not leave the appliance unattended when plugged in. Unplug the unit from outlet when not in use and/or before servicing.
2. Do not use outdoors or on wet surfaces.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this manual. Use only manufacturer's recommended attachments.
5. Do not use with damaged cord or plug. Do not use the vacuum if it has been dropped, damaged, left outdoors, or dropped in water.
6. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners.
7. Keep cord away from heated surfaces.
8. Do not unplug by pulling on cord. To unplug, grasp the plug, and gently remove from outlet.
9. Do not handle plug or appliance with wet hands.
10. Do not put any object into the suction intake opening that would block it. Do not use with any opening or air intake area blocked. Keep free of dust, lint, hair and anything else that may reduce the airflow.
11. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
12. Do not vacuum anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS




WARNING: To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug, if it still does not fit, contact a qualified electrician to install a proper outlet. Do not attempt to modify the plug in any way.

13. Turn the vacuum to the “Off” position before unplugging.
14. Use extra care when cleaning on stairs.
15. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
16. Look on your vacuum and follow all instructions printed on the machine.
17. This unit is designed for pick up of dry matter. Do not attempt to vacuum liquids of any type or moist materials as this could create a situation that electrical shock could occur.
18. Use only extension cords UL or cUL-rated at 15 amperes. Extension cords rated less amperage may overheat. Care should be taken to arrange the cord so that the cord cannot be accidentally pulled or tripped over.
19. Keep the end of hose wands and other openings away from your face and body.
20. Do not use the vacuum cleaner without dust cup and filter in place.
21. Always turn off this appliance before connecting or disconnecting the vacuum hose.
22. Store the vacuum and its attachments indoors in a dry location.
23. Using improper voltage may result in damage to the motor and possible injury to the user. Correct voltage is listed on the rating label.
24. Use only on dry, indoor surfaces.
25. Do not use for any purpose other than described in this user’s guide.

SAVE THESE INSTRUCTIONS

LEARN ABOUT YOUR VACUUM

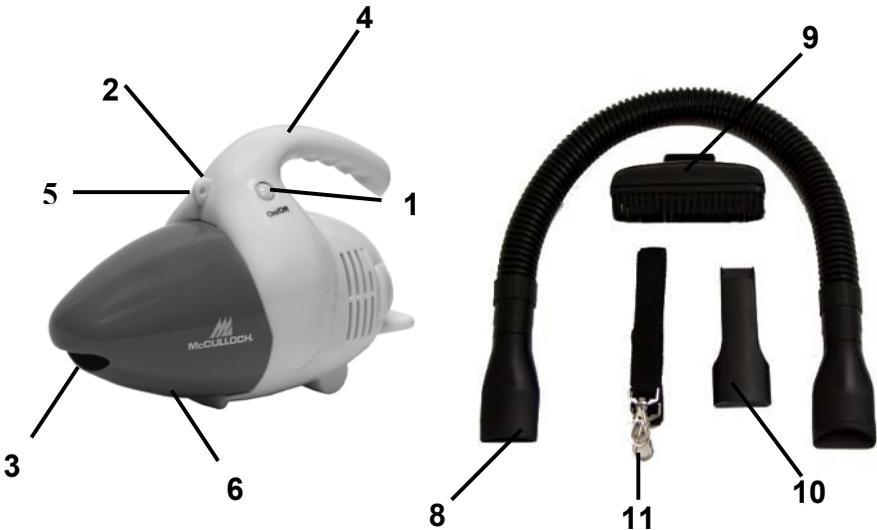

- 1. On/Off Power switch
- 2. Dust cup release button
- 3. Intake hole
- 4. Handle
- 5. Shoulder strap attaching holes
- 6. Dust cup
- 7. Dust cup filter
- 8. Flexible hose
- 9. Dust brush
- 10. Crevice tool
- 11. Shoulder strap



Model MC1910
120 Volts – 600 Watts

**WARNING:**

Always unplug from electrical outlet before opening the dust cup.

Note: The dust cup filter (7) must be properly installed when operating the vacuum cleaner.

A. Removing the Dust Cup and Filter.

To open the dust cup (6), push the release button (2) and remove the dust cup (6). Verify that the dust cup filter (7) is in its proper position; then attach the dust cup (6) to the vacuum.

**B. Attaching Shoulder Strap. (Optional)**

To use the vacuum with the shoulder strap (11), attach it to the proper holes (5) as shown below.

**C. Attaching Accessories.**

To attach the dust brush (9) or crevice tool (10) to the vacuum, push attachment into intake hole (3), as shown below.

**D. Attaching the Hose.**

To use the hose, (8) push the end of the hose into the intake hole (3), and then attach the desired attachment (9 or 10) to the other end of the hose (8).



EMPTYING THE DUST CUP

1. Remove dust cup (6) and dust cup filter (7).
2. Empty the dust cup (6).
3. Empty the dust and dirt from the Dust Cup (6).
4. Shake loose any build up on the filter before installing it to its proper position.
5. Attach the dust cup (6) and dust cup filter (7), and continue cleaning.



CAUTION: Make sure that you hold the handle firmly, if not it could slip out of your hand and cause an injury.

CHANGING & CLEANING FILTER

If the dust cup filter (7) becomes clogged, perform the following procedure:

1. Remove the dust cup (6) and dust cup filter (7).
2. Empty the dust cup (6) and rinse the dust cup filter (7) in clean water.
3. Allow the dust cup filter (7) to dry.
4. When dry, replace the dust cup filter (7) and the dust cup (6).

The unit is now safe and ready to perform at maximum capacity.



McCULLOCH HANDHELD VAC WILL NOT OPERATE	<ol style="list-style-type: none"> 1. Power cord may not be firmly plugged into outlet. 2. No power coming from outlet. 3. Unit may need service. 	<ol style="list-style-type: none"> 1. Firmly replace power cord into outlet. 2. Check fuse or breaker. Please note they may need replacement. 3. Be sure to contact Customer Service.
McCULLOCH HANDHELD VAC HAS NO SUCTION OR WEAK SUCTION	<ol style="list-style-type: none"> 1. Dust cup not installed correctly. 2. Dust cup is full. 3. Filter is clogged. 4. Hose or nozzle passage clogged. 	<ol style="list-style-type: none"> 1. Replace dust cup until it snaps into place. 2. Empty the dust cup and shake loose any buildup on the filter. 3. Clean and rinse with cold water, or replace filter. 4. Turn unit off and unplug it from outlet. <p>Check for possible obstruction in the intake hole and/or in the accessories.</p>
DUST ESCAPING FROM THE McCULLOCH HANDHELD VAC	<ol style="list-style-type: none"> 1. Dust cup not installed correctly. 2. Dust cup is full. 3. Hose not installed correctly. 	<ol style="list-style-type: none"> 1. Read instructions for proper dust cup removal and replacement. 2. Empty the dust cup and shake loose any buildup on the filter. 3. Read instructions for proper hose replacement.
FLEXIBLE HOSE AND ACCESSORIES NOT LIFTING DUST	<ol style="list-style-type: none"> 1. Hose is clogged. 2. Intake hole is obstructed. 3. Dust cup is full. 4. Filter is clogged. 	<ol style="list-style-type: none"> 1. Remove hose from unit and check hose for possible obstruction. 2. Remove hose and check intake hole. 3. Empty the dust cup and shake loose any buildup on the filter. 4. Clean and rinse with cold water or replace filter. Call 1-800-711-6617 ext: 102/130

CUSTOMER SERVICE

BEFORE RETURNING ANY PRODUCT THAT IS DEFECTIVE:

1. Read the instructions in this manual
2. Read the Troubleshooting above
3. Contact our customer service at (800) 711-6617 ext. 102/130

NOTE: To ensure prompt and accurate service, call for a Return Authorization Number before returning any unit to Top Innovations, Inc. Failure to obtain a Return Authorization Number will cause a delay in warranty or out-of-warranty service requests.

LIMITED WARRANTY

Top Innovations, Inc. will repair or replace, at its option, without charge to the consumer; any McCULLOCH® vacuum cleaner that fails due to a defect in material or workmanship within 3 months following the initial consumer purchase. This warranty does not cover damage caused by commercial use, misuse, alteration, or modification.

Performance of any obligation under this warranty may be obtained by returning the warranted vacuum, freight prepaid, with dated proof of the purchase to:

Top Innovations, Inc.

Warranty Service Department
400 NW Platte Valley Dr.
Riverside, MO 64150

If you have any questions about coverage under this warranty you may contact the Warranty Service Department by telephone (800) 711-6617 ext. 102/130 or email, customerservice@topinnovations.com.

This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.



Top Innovations, Inc.
400 NW Platte Valley Dr.
Riverside, MO 64150
Tel: (800) 711-6617
www.topinnovations.com



Printed In China