





A

CAUTION: THE ROTOR WILL COAST EVEN AFTER THE ENGINE IS OFF. MAKE SURE THE ROTOR STOPS TURNING, THEN DISCONNECT THE PLUG WIRE FROM THE ENGINE BEFORE ATTEMPTING ANY MAINTENANCE OR CLEAN-OUT. IF THE ROTOR IS STILL TURNING, IT MAY CAUSE SERIOUS PERSONAL INJURY.







