### **User's Manual**

### **BV9F**

9" FLIP-DOWN WIDESCREEN TFT VIDEO MONITOR WITH BUILT-IN INFRARED AUDIO TRANSMITTER

BV9F

9" FLIP-DOWN WIDESCREEN TFT VIDEO MONITOR WITH BUILT-IN INFRARED AUDIO TRANSMITTER

11.2010



tech support: www.bossaudio.com/support



BOSS Audio Systems 3451 Lunar Court • Oxnard, CA 93030 **www.bossaudio.com** 800.999.1236



Power Requirements	DC 12V
Power Consumption	6 W
Screen Size	9 inch TFT LCD
Screen Format	16:9 Wide
Resolution Pixel	480xRBx234
A/V Inputs	2 A/V RCA Inputs
Dimensions	(L)9.6×(W)9.8×(H)1inch
IR Power Requirements	DC 12V
IR Power Consumption	3W
IR Transmitter Frequency A	Right 2.8MHz Left 2.3MHz
IR Transmitter Frequency B	Right 3.8MHz Left 3.2MHz
LCD Panel Type	Active Matrix TFT
Compatible video standard	NTSC/PAL auto select

Note : This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.


This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

## **MONITOR OPERATION**

## **USER'S MANUAL**

### **Releasing the Monitor**


Push the open button (located on the front edge of the screen housing) and lower the monitor to the desired angle. You can also adjust the swivel angle.

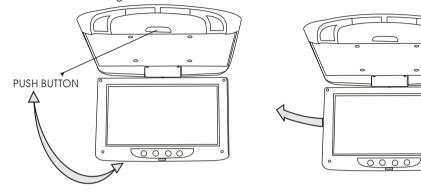

### How to watch the monitor

1.Connect the monitor to the external devices.

 2.Press the POWER button on either the remote control or the unit once to turn the power on. Press the same POWER button to turn the power off.




3. Turn on the external devices and view.

## BV9F

**AUDIO SYSTEMS** 

9-INCH FLIP-DOWN WIDESCREEN TFT VIDEO MONITOR WITH BUILT-IN INFRARED AUDIO TRANSMITTER
PRECAUTIONS ····································
INSTALLATION ··· ··· ··· ··· ··· ··· ··· ··· ··· ·
FEATURES AND CONTROLS6
A/V AND POWER CONNECTIONS ·······8
MONITOR OPERATION ····································
Releasing the Monitor9
How to watch the Monitor 9
SPECIFICATIONS

## PRECAUTIONS

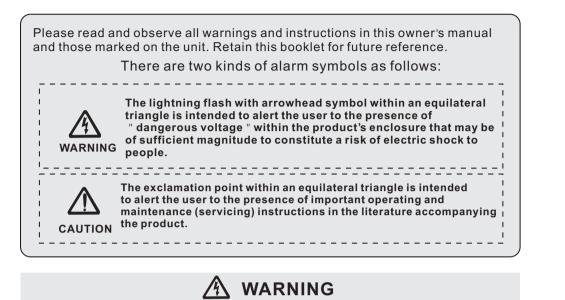

# field of vision.

Installation of all TV monitors must be out of the drivers



Do not try and service these products yourself. Seek only a qualified service center or factory service center.



Be careful not to drop or apply pressure to the front panel of your video monitor. If the screen cracks due to misuse, your warranty will be void!



Be careful not to overload your cigarette lighter plug by adding more than one device at a time.



Use only a damp cloth to clean the screen and use only purified water on the cloth. Wring out all excess water prior to wiping the screen. Do not use any cleaners or chemicals to clean the screen. In most cases a dry cloth will do!

Do not mount the product where

it will obstruct the deployment of

the airbag or in an area where it

would affect the vehicular control. Also be careful to avoid mounting the product where it can become hazardous during sudden stops or in the event of an accident.

Use extra caution with any liquids

spills any liquid on these products, pull your vehicle to the roadside and turn the key off to disconnect

in your car. If you or your child

or wipe the products with a towel. Do not operate the equipment until all liquids have either evaporated or you have had the monitor


inspected at a service center by a qualified

technician, Severe harm or danger can occur.

## **A/VAND POWER CONNECTIONS**

On a towel or soft cloth, gently place the monitor assembly "face down" on a stable worksurface


Using the wires provided, complete the audio, video and power connections in vour vehicle as shown in the diagram below.

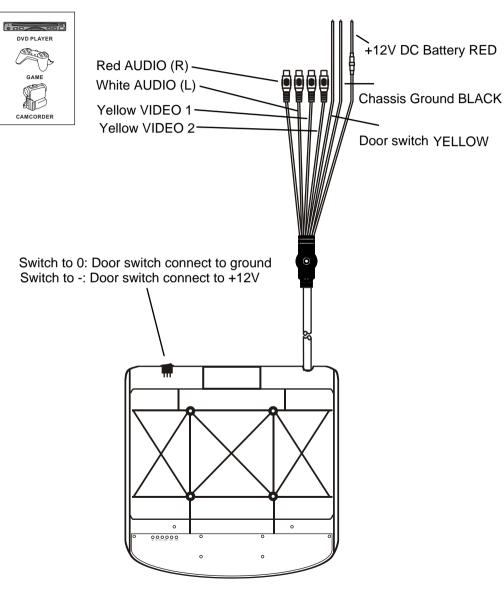


### **FEATURES AND CONTROLS**

### PRECAUTIONS

### 

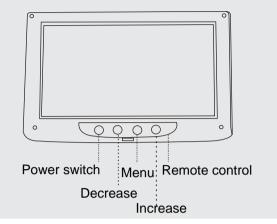

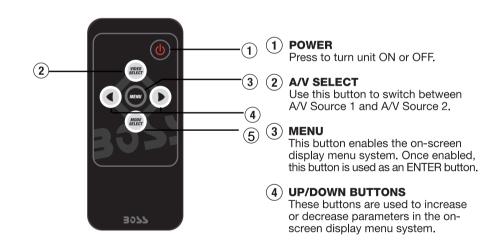

(5) MODE SELECT This button switch display ratio between 4:3 and 16:9



Quality installations are best performed by qualified and certifled installers.



Watching the monitor for an extended period of time with the engine turned off may deplete the vehicle's battery.



Don't touch the unit if there is a flash of lightning. It may receive an electric shock.



This product is designed for operation with a 12 Volt DC, negative ground vehicle. It is not suitable for operation under other conditions or voltages.



Do not cover heater ducts or vents. This may cause a fire or an electric shock.

#### **Check Point**

1. The operating temperature of this product is limited to  $14^{\circ}F \sim 140^{\circ}F$  (- $10^{\circ}C \sim 60^{\circ}C$ ).

Your vehicle can reach temperatures up to 100°C in the summertime.

2. When your vehicle is extremely hot or cold you must allow time for your air conditioner or heater to cool or heat the vehicle and for operating temperatures to return to normal operating ranges. Your monitor will return to its normal functions when these operating ranges are achieved.


3.Optimum picture quality is achieved when you are directly in front of the monitor (+/-45 degrees).

### FEATURES AND CONTROLS


1. Open the packaging and check that these parts are present.



2.Connect the external devices RCA cable or AV output as required. Refer to the connection diagram on page 8 for details.

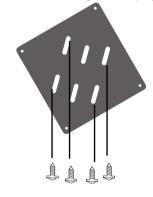

3.Match the position of installation bracket and installation plate with screw A.

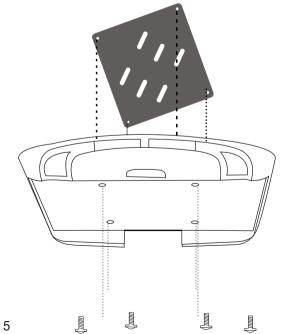

4. Secure the unit in place with the supplied screw B.



