

DIPLOMAT™

**OWNER'S INSTRUCTIONS  
MANUAL DE INSTRUCCIONES  
MANUEL D'UTILISATION**

**Model:**


- **DAC5088M**

ENGLISH

ESPAÑOL

FRANÇAIS

**Window-type Room Air Conditioner (Cool)**  
**Acondicionador de aire doméstico sistema de tipo ventana (Refrigeración)**  
**Climatiseur de type Fenêtre (Refroidissement)**

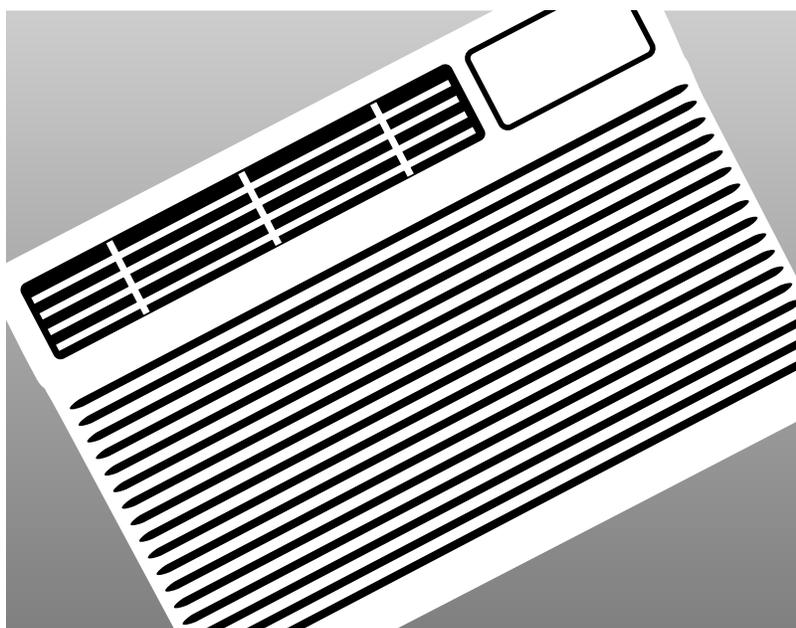

# Safety Precautions

*The following safety precautions must be taken when using your air conditioner.*



## **WARNING**

Risk of electric shock. • Can cause injury or death. • Disconnect all remote electric power supplies before servicing, installing or cleaning.  
• This must be done by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.

### **DURING OPERATION**

- ◆ Users of this product are cautioned not to attempt repair of this product at their own discretion. Instead, they are requested to directly contact a designated service center or the outlet at which the product was purchased.
- ◆ Never spill any kind of liquid into the unit. Should this happen, unplug or main switch off the unit and contact an authorized service center.
- ◆ Do not insert anything between the air outlet blades because the inner fan may be damaged and could cause injury. Keep children away from the unit.
- ◆ Do not place any obstacles in front of the unit.
- ◆ Do not spray liquid of any kind into the indoor unit. Should this happen, switch off the breaker used for your air conditioner and contact your installation specialist.
- ◆ Make sure that the unit is correctly ventilated at all times:  
Do not place clothing or other materials over it.
- ◆ If the wireless remote control will not be used for a long time, remove the batteries. (If applicable)
- ◆ The air conditioner must be plugged into its own specific power source, which must be installed in compliance with national wiring, earthing and safety regulations.
- ◆ If the power cord is damaged in any way, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- ◆ This device must be installed according to the national electrical rules.
- ◆ The appliance must be installation that the plug should be easily accessible after installation.
- ◆ The breaker of the air conditioner should be all-pole switch; and the distance between its two contacts should be no less than 3.5mm. Such means for disconnection must be incorporation in the fixed wiring.

### **DISPOSING OF THE UNIT**

- ◆ Before throwing out the device, it is necessary to pull back the battery cells and get rid of them safely for recycling reasons.
- ◆ When you need to dispose of the unit, consult your dealer. If pipes are removed incorrectly, refrigerant may blow out and come into contact with your skin, causing injury. Releasing refrigerant into the atmosphere also damages the environments.
- ◆ Please recycle or dispose of the packaging material for this product in an environmentally responsible manner.

### **OTHERS**

- ◆ Never store or ship the air conditioner upside down or sideways to avoid damage to the compressor.
- ◆ The appliance is not intended for use by young children or infirm persons without supervision; young children should be supervised to ensure that they do not play with the appliance.
- ◆ Max current is measured according to IEC standard for safety and current is measured according to ISO standard for energy efficiency.



# Contents

---

◆ PREPARING YOUR AIR CONDITIONER	
■ Safety Precautions .....	2
■ Description of Each Component .....	4
■ Getting Started .....	5
◆ OPERATING YOUR AIR CONDITIONER	
■ Cooling Your Room .....	6
■ Ventilating Your Room .....	6
■ Switching the Air Conditioner Off .....	7
■ Adjusting the Air Flow Direction Horizontally .....	7
◆ RECOMMENDATIONS FOR USE	
■ Power Failure .....	8
■ Temperature and Humidity Ranges .....	8
■ Cleaning Your Air Conditioner.....	9
■ Solving Common Problems.....	10
■ Technical Specifications.....	11

# Description of Each Component


The design and shape are subject to change.

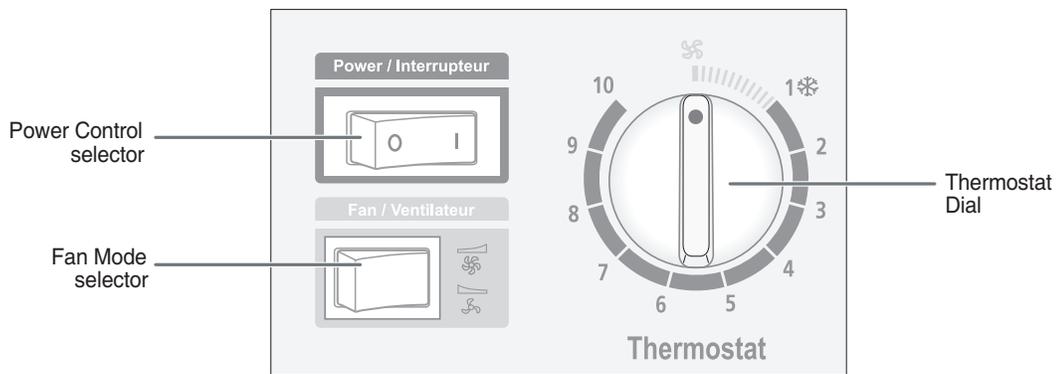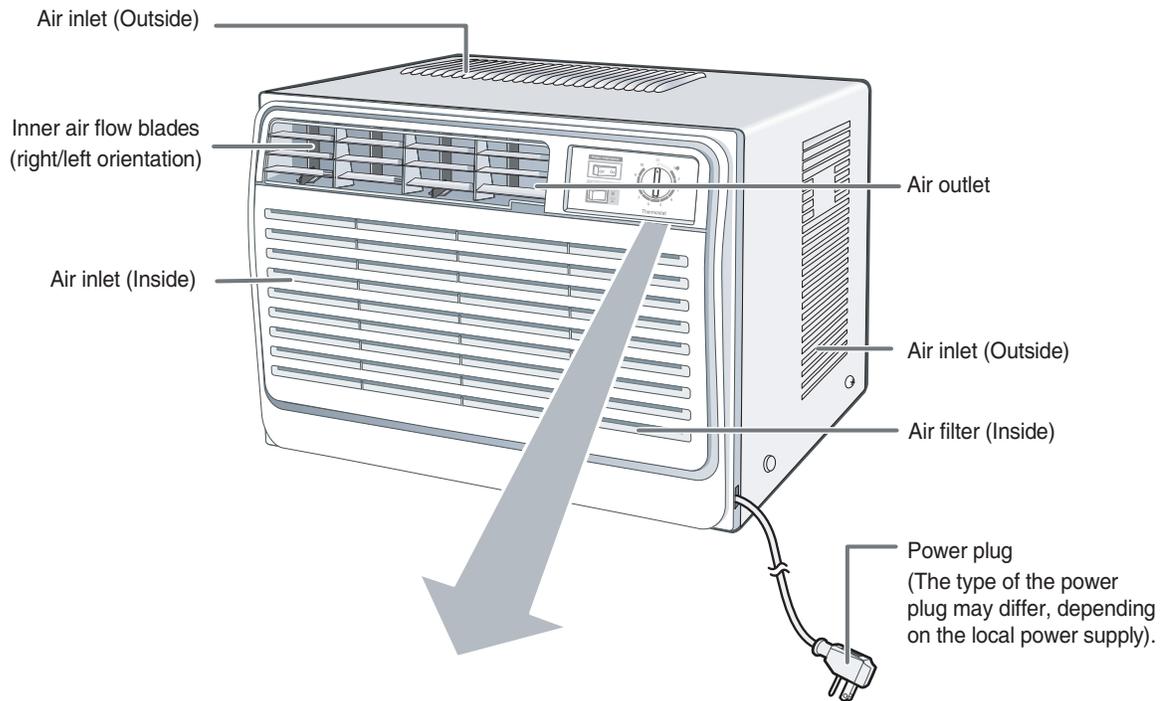



## Getting Started

*Your Owner's Instructions contain much valuable information on using your air conditioner. Please take the time to read them as they will help you take full advantage of the unit's features.*

*The illustrations in the step-by-step procedures use four different symbols:*

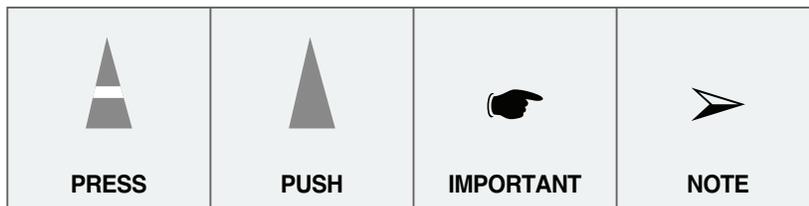

## Cooling Your Room

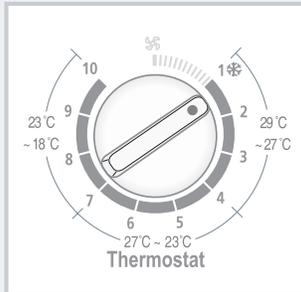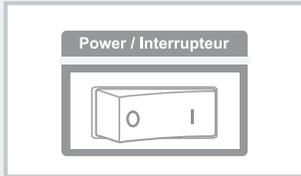

**You must select the Cool mode if you wish to adjust the:**

- ◆ **Cooling temperature**
- ◆ **Fan speed when Cooling**

- 1 To switch the unit on, simply press the Power Control selector to the "I" position.

Result: The air conditioner starts operating.

- 2 Turn the Thermostat dial and set it to "1 ~ 10".

Possible temperatures: Can be set between 18 °C and 29°C .




Result: ◆ The air conditioner starts cooling if the room temperature is higher than the selected temperature.

- 3 Press the "Fan Mode" selector to the High or Low position.

Result: The Fan speed is adjusted.

- 4 To control the direction of the air flow, refer to page 7.

## Ventilating Your Room

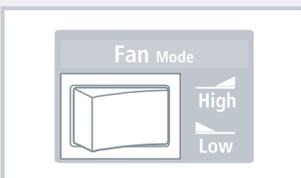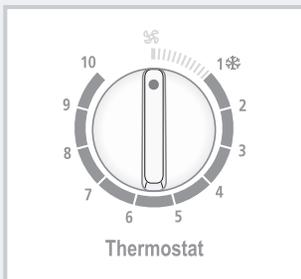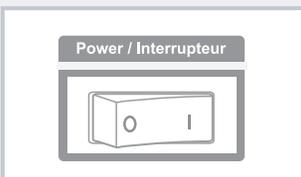

- 1 To switch the unit on, simply press the Power Control selector to the "I" position.

Result: The air conditioner starts operating.

- 2 Turn the Thermostat dial and set it to "Fan only" position.

Result: ◆ The air conditioner starts up in fan mode.

- 3 Press the "Fan Mode" selector to the High or Low position.


Result: The Fan speed is adjusted.

- 4 To control the direction of the air flow, refer to page 7.

## Switching the Air Conditioner Off

*You can switch the air conditioner off whenever you want.*


To switch the unit off, simply press the Power Control selector to the "O" position.

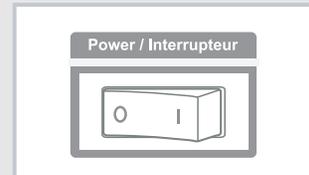

## Adjusting the Air Flow Direction Horizontally

*Depending on the position of the unit in your room, you can adjust the orientation of the inner air flow blades on the unit.*

Adjust the air flow blades to the desired position by pushing them side to side.

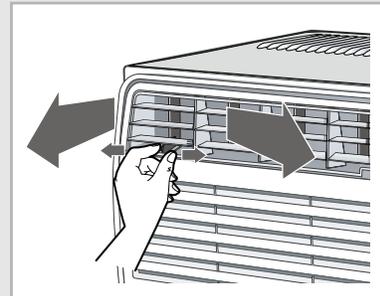

## Power Failure

---

If a power failure occurs, the air conditioner is switched off.  
When the power comes back on, the air conditioner will start up automatically.

---

## Temperature and Humidity Ranges

*The following table indicates the temperature and humidity ranges that the air conditioner can be used at.*

Mode	Indoor Temperature	Outdoor Temperature	Indoor Humidity
Cooling	21°C to 32°C approx.	21°C to 43°C approx.	80% or less



If the air conditioner is used at...	Then...
Higher temperatures	The automatic protection feature may be triggered and the air conditioner will stop.
Lower temperatures	A water leakage or some other malfunction may happen if the heat exchanger freezes.
Higher humidity levels	Water may condense on and drip from the surface of the unit if it is used for long periods.

# Cleaning Your Air Conditioner

**Be sure to clean the air filter periodically to keep the air conditioner operating at optimum level.**

 **When cleaning the air conditioner, turn it off and pull out the power plug.**

- 1 Open the front grille by pulling the tabs on both sides of the grille. Then lift it up slightly to open the front grille completely.
- 2 Grab the tabs on the filter and pull it up and out.
- 3 Remove all dust on the air filter with a vacuum cleaner or brush.
- 4 When you have finished, insert the air filter back into its original position.
- 5 Wipe the surface of the unit with a neutral detergent and then wipe it again with a dry cloth.  
(Be sure not to use benzene, solvent, or other chemical products).

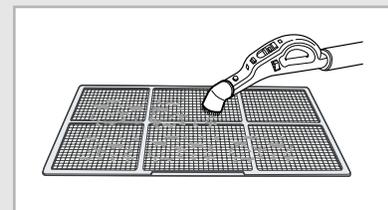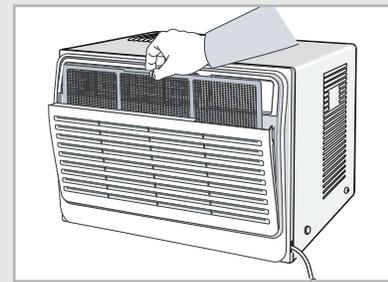

If you...	Then...
Will not be using the air conditioner for a long period of time	<ul style="list-style-type: none"> <li>◆ Set the fan going for a few hours to thoroughly dry the inside of the air conditioner.</li> <li>◆ Switch the air conditioner off and unplug it from the wall socket.</li> <li>◆ Clean the filter and outer surfaces.</li> </ul>
Have not used the air conditioner for a long period of time	Set the fan going for a few hours to thoroughly dry the inside of the air conditioner.

## Solving Common Problems

***Before contacting an authorized service center, perform the following simple checks. They may save you the time and expense of an unnecessary call.***

<b>Problem</b>	<b>Explanation/Solution</b>
The air conditioner does not operate at all	<ul style="list-style-type: none"><li>◆ Check for a power failure.</li><li>◆ Check the voltage. (See the technical specifications).</li><li>◆ Check the power plug for disconnection.</li><li>◆ Check to see whether the Power Control selector is placed in the "O" position. (Set it to the desired position).</li><li>◆ Check to see whether the room temperature is too low. - Refer to page 8 for details about temperature condition.</li></ul>
The air comes out smoothly, but cooling is not effective.	<ul style="list-style-type: none"><li>◆ Set the THERMOSTAT dial to the desired position. -When the number on the THERMOSTAT dial is too high, the room temperature may be too warm.</li><li>◆ Check to see whether there is an open window or other leakage of cool air to the outside. - Close the window and fill the gap.</li><li>◆ Check to see whether there is any obstacle adversely affecting the flow of air inside and outside the room. - Remove the obstacle or change the position of the air conditioner.</li><li>◆ Check to see whether the air filter is clogged with dust or contaminated with foreign substances. -Clean the air filter.</li><li>◆ Check to see whether there is any direct sunlight facing the air conditioner. -Block the sunlight with a sunshade.</li><li>◆ Check to see whether there is any electric device generating heat. -Do not use the air conditioner together with any heating device.</li></ul>
Odors are permeating the room during air conditioning	<ul style="list-style-type: none"><li>◆ Ventilate the room.</li></ul>

## Technical Specifications

*Design and specifications are subject to change without notice.*

Model	Power Supply
DAC5088M	115V ~ , 60 Hz

### ⚠ Important Safety Instructions ⚠

The power cord supplied with this air conditioner contains a current leakage detection device designed to reduce the risk of fire. Please refer to the section "Power Supply Cord" for details. In the event the power supply cord is damaged, it cannot be repaired it must be replaced with a new cord from the Product Manufacturer.

- Under no circumstances should this device be used to turn the air conditioner on or off.
- The 'RESET' button must always be pushed in (engaged) for correct operation.
- The power supply cord must be replaced if it fails to reset when the 'TEST' button is pushed in.
- If the power supply cord is damaged, it cannot be repaired. It must be replaced with a new cord obtained from the Product Manufacturer.

### Power Supply Cord

The power cord supplied with this air conditioner contains a device that senses damage to the power cord. To test if your power supply cord is working properly, you must do the following;

1. Connect the power supply cord to an electrical outlet.
2. The power supply cord is inclusive of two buttons located on the head of the plug. One button is marked 'TEST', the other button is marked 'RESET'. Press the 'TEST' button, you will hear a click as the 'RESET' button pops out.
3. Press the 'RESET' button, you will hear a click as the button engages.
4. The power supply cord is now energized and supplying electricity to the air conditioner. (On some products this is also indicated by a light on the plug head).

# DIPLOMAT™

## LIMITED AIR CONDITIONER WARRANTY

This quality product is warranted to be free from manufacturer's defects in material and workmanship, provided that the unit is used under the normal operating conditions intended by the manufacturer.

This warranty is available only to the person to whom the unit was originally sold by Danby or by an authorized distributor of Danby, and is non-transferable.

### TERMS OF WARRANTY

Plastic parts, are warranted for thirty (30) days only from purchase date, with no extensions provided.

*First 12 MONTHS* During the first twelve (12) months, any electrical parts of this product found to be defective, including any sealed system units, will be repaired or replaced, at warrantor's option, at no charge to the ORIGINAL purchaser.

*To obtain Service* Danby reserves the right to limit the boundaries of "In Home Service" to the proximity of an Authorized Service Depot. Any appliance requiring service outside the limited boundaries of "In Home Service", it will be the consumer's responsibility to transport the appliance (at their own expense) to the original retailer (point of purchase) or a service depot for repair. Contact your dealer from whom your unit was purchased, or contact your nearest authorized Danby service depot, where service must be performed by a qualified service technician. If service is performed on the units by anyone other than an authorized service depot, or the unit is used for commercial application, all obligations of Danby under this warranty shall be at an end.

### EXCLUSIONS

Save as herein provided, Danby Products Limited (Canada) or Danby Products Inc. (U.S.A.), there are no other warranties, conditions, representations or guarantees, express or implied, made or intended by Danby Products Limited or its authorized distributors and all other warranties, conditions, representations or guarantees, including any warranties, conditions, representations or guarantees under any Sale of Goods Act or like legislation or statute is hereby expressly excluded. Save as herein provided, Danby Products Limited (Canada) or Danby Products Inc. (U.S.A), shall not be responsible for any damages to persons or property, including the unit itself, howsoever caused or any consequential damages arising from the malfunction of the unit and by the purchase of the unit, the purchaser does hereby agree to indemnify and save harmless Danby Products Limited from any claim for damages to persons or property caused by the unit.

### GENERAL PROVISIONS

No warranty or insurance herein contained or set out shall apply when damage or repair is caused by any of the following:

- 1) Power Failure.
- 2) Damage in transit or when moving the appliance.
- 3) Improper power supply such as low voltage, defective house wiring or inadequate fuses.
- 4) Accident, alteration, abuse or misuse of the appliance such as inadequate air circulation in the room or abnormal operating conditions, (extremely high or low room temperature).
- 5) Use for commercial or industrial purposes.
- 6) Fire, water damage, theft, war, riot, hostility, acts of God such as hurricanes, floods etc.
- 7) Service calls resulting in customer education.

Proof of purchase date will be required for warranty claims; so, please retain bills of sale. In the event warranty service is required, present this document to our AUTHORIZED SERVICE DEPOT.

Warranty Service

Carry-In

Danby Products Limited  
PO Box 1778, 5070 Whitelaw RD, Guelph, Ontario, Canada N1H 6Z9  
Telephone: (519) 837-0920 FAX: (519) 837-0449

Danby Products Inc.  
PO Box 669, Findlay, Ohio, U.S.A. 45839-0069  
Telephone: (419) 425-8627 FAX: (419) 425-8629