

### XPB40-32 Single-tub Washing Machine with pump



- Please read this manual carefully before using.
- Retain it forfuture reference
- Please check if the power receptacle has good earthing condition before using to guarantee your safety.
- The manufacturer will not bear the responsibility for those risks occurred from not obeying this manual.

#### Before using

Names of the partsthe $2_{\text{nd}}$ cover
Safety precautions1
Installation and adjustment3
Using process
Preparation before washing5
Put in the laundries6
Put in the detergent7
Select the wash time7
Close the top cover8
Finish washing8
Disposal after washing8
Trouble shooting*Packing list9
Specificationthe back cover

# Names of the parts

# Before Using



#### Meaning and description of the symbols

Contents marked with that symbol are related to the safety of the product and the personal safety of the users. Please operate in strict conformity to the contents.



Contents marked with that symbol are actions forbidden to perform. Performing of those action may result in damage of the machine or influence the personal safety of the users.

# Safety precautions

### Before Using



# **Safety precautions**

# Before Using



# Installation and adjustment Before Using

Please install and adjust the machine according to the requirement of the manual. It is very important to your security and correct operating the machine.

#### Usage of the drain hose



#### Install the lint filter



# Before Using

#### Adjust the installation position

4

The largest permitted slope of the bearing surface of the washing machine is 2°. Slanting or uneven ground will cause unstable operation of the machine. Please check with following methods:

• Hang a becket with weight to confirm if the washing machine is horizontal.



### Install the water inlet hose ; Select the water level



### **1 Preparation before washing** Using process





Pay attention to followings before washing the laundries

Confirm if there's special requirement for the laundries.	Clear the pocket. Take out the coins , sand, hairpins etc.	Fasten the buttons and zippers.	The quantity of the laundries shall not exceed the rated value. The big laundries like the jeans shall be put in loosely.	When the pulsator is running, the buttons of the laundries may cause noise. For the sake of discretion, please put the laundries with buttons into other laundries.
	THE O			AMMAN AND AND AND AND AND AND AND AND AND A

- A. Check if the laundries are applicable for washing with machine.
- b. Divide the laundries that are not colorfast from other laundries.
- c. Put those laundries difficult to absorb water into water with hand.
- d. For those laundries with heavy soil, please first remove the dirt like mud or dust. For the parts with heavy soil, please apply detergent on them in advance, which can make it easier to remove the soil.
- e. For those laundries that may get lint ball and those with long fur, turn it over before putting in.
- f. Do not put those laundries polluted by chemicals into the washing machine directly.

### 2 Put in the laundries

### Using process



Reference weight of the laundries:

- The capacity of washing of the machine refer to the largest weight of the standard laundries under dry condition that can be washed in one time. Laundries quantity in one washing cycle shall be lower than the rated capacity.
- The thickness ,size , type of the cloth will influence the actual washing capacity. It is suitable to put in reasonable amount of laundries and the laundries can be turned round in washing for one time washing.
- Do not select " Maximum " water level for laundries less than 2.0kg, so as to avoid splashing of water.



6

# 3 Put in the detergent

#### How to use the whitener

- Fill water to decided level. Dilute the whitener with container. Pour it slowly into the washing tub.
- Avoid using whitener on laundries with color or pattern as they are prone to lose color.
- The whitener shall not touch the laundries directly.
- Refer to the user's manual for the usage and quantity of the whitener.
- For powder whitener, please dissolve it before using.

#### How to use the washing powder

#### Direct dissolved in the machine: The powder is more prone to pollute the 1.Fill small quantity of water. laundries than the detergent. Therefore 2.Add the powder. Run for 30 seconds to please use it with proper quantity. dissolve it completely. It is suggested not to use high sudsing 3.Put it in the laundries. Select suitable detergent. water level. • The instant dissolving of the washing powder: Dosage of different washing powder is 1.Prepare warm water of 30°C and a container. different. Please refer to the instruction 2.Add the powder while stirring to fully of the washing powder for the detail dissolve it. dosage.

#### Selection of the quantity of the washing powder

Laundries Water level		Standard dosage		
quantity	Water level (Water quantity)	Concentrated washing powder	Common washing powder	
4.0kg~3.6kg	Maximum (about43L)	About 36g	About 43g	
3.6kg~2.0kg	Medium (about36L)	About 30g	About 36g	
Below2.0kg	Minimum (about30L)	About 25g	About 30g	

# 4 select the wash time

Please select wash time according to the laundries.

Laundries	Wash time (minutes)
Silk(thin laundries)	About2~4
Knitwear/chemical fiber	About3~6
Bed sheet	About7~13
Cotton,blending,linen	About8~10
Very dirty and thick laundries	About10~13



# 5 Close the top lid

## Using process

# **6 Finish washing**

 The pulsator stops rotating. Push the drain switch down to discharge the water.

# 7 Disposal after washing

- After using, please clean the lint and foreign materials of the lint filter and lint frame in time. Otherwise it may influence your using the machine.
- Please first pull off the power plug from the receptacle before cleaning.

#### **Cleaning the lint filter** \* The lint filter must be used during washing. \* It must be cleaned in time after each using. 1. Take off the lint filter Put hand at the indicated position. Push down to take it off. (See to Figure 1) Figure 1 2. Clean the lint Put it in water and clean while it is still wet.(See to Figure 2) 3. Install the lint filter After cleaning, insert the bottom of Figure 2 the lint filter (marked with "down side") into the filter frame, then push the upper part of the filter in (marked with "up side"). (See to Figure 3) Figure 3 Attention: be sure not to confuse the direction. After washing, dismount the water inlet hose. • Wipe the complete unit with soft cloth Pull off the power plug and hang up the twisted dry. power cord. Wipe with neutral detergent if too dirty. Do not store water in the tub for long period. Do not wash it directly by water. Discharge the water immediately after each using. Wipe off the water drops on the surface and inside the tub with clean soft cloth. Open the cover of the wash tub for some time (about one hour), then close it.

• Hang up the drain hose.

# **Trouble-shooting**

The following phenomena are not breakdowns sometimes. Please confirm again before sending it to repair.

Phenomena	How to check
The washing machine does not act	<ul><li> Is there power failure?</li><li> Is the power plug inserted tightly?</li></ul>
The drainage does not work.	<ul><li> Is the drain hose frozen?</li><li> Is the front end of the drain hose blocked?</li></ul>
There's abnormal sound inside the machine.	<ul><li> Is the machine slanting?</li><li> Is there metal item inside the tub?</li></ul>

# **Packing list**

User's manual	● 1piece
Water inlet hose	• 1piece
Lint filter	• 1piece
Washing machine	● 1set

# **Specification**

Туре	Single-tub washing machine with pump
Model	HWM40-32
Rated voltage • Frequency	220V~ • 50Hz
Water level / Water quantity (about)	1/30L 2/36L 3/43L
Rated washing capacity (kg)	4.0
Rated input power (W)	325
Rated input power for draining(W)	35
Dimension(mm)	L510 W420 H810
Weight (kg)	15
Injection pressure	0.02MPa~0.2MPa

# المواصفات

الغسالة	نموذج
HWM40-32	موديل
220V~ 50Hz	القوة الكهربانية معدل النكرر
1/30L 2/36L 3/43L	مستوى المياه/كمية المياه
4.0	مقدار الغسيل القياسي (kg)
325	مقدار الطاقة القياسى(W)
35	قدرة الادخال المقدرة للتصريف (W)
L 510 W 420 H 810	الحجم (mm)
15	الوزن (kg)
0.02MPa-0.2MPa	الضبغط الحقن

## رد الاسئلة حول الاصلاح

(اذا الغسالة توقف عن العمل تفضل بنز ع القابس قبل التفتش)المظاهر التالية لست العطل احيانا إذا هي العطل الحقيقي بتفضل بذهب الى مركز الخدمة لشركتنا لا يصلحها بنفسك

المظاهر	باب (أو الشرح)	الاسد
لا يعمل الغسالة	هل الطاقة مقطوع؟ هل يربط القابس؟ هل العجلة المموجة تلف بالاشياء الاخرى؟	•
لا يعمل التصريف	هل يتجمد انبوب التصريف؟ هل يسد انبوب التصريف بالاشياء الاخرى؟ هل وضع أنبوب التصريف ؟	•
يوجد الصوت غير طبيعي خلال الغسيل	هل هناك وتد الشعر النقد المعدني او الاشياء دية داخل الخوض ؟	• الحديد

### قائمة التعبئة

التعريف •	واحد •
أتبوب لادخال المياه .	واحد •
مصفاة نتفة الخيوط	واحد •
الغسالة •	واحد •

عملية التشغيل

5 غلق الغطاء العلاوى 6 انتهاء الغسا، ي بعد وقوف عجلة المموج نفضل بضغوط على مفتاح التصريف للتصريف 7 العدجه بغد العسين

بعد التشغيل ينظف مصفاة النسبل في الوقت بالطريق الاخر إنه سيأثر التشغيل
 قبل التنظيف وضع أنبوب التصريف على الارض



قبل التشغيل

3 وضع المنظف

كيف استخدم المادة المبيضة

\*صب الماء الى المستوى المناسب و يشعشع المادة المبيضة في الوعاء و يصبها الى خوض الغسل بالبطىء \*لا يستخدم المادة المبيضة للملابس الملونة الميالة الى فقد اللون \*لا يضم المادة المبيضة على الملابس مباشر ا \*در اسة التعريف عندما يستخدم المادة المست. ة \*اذا استخدم المادة المبيضة المسحوفة يجب التذويب قبل الاستخدام

لختيار كمية المنظف

1 استعداد المياه الساخنة حوالي 30C و الوعاء	*يذوبه في الغسالة مباشر ا
2 الخل المنظف عندما تحرك الغسالة للتنويب	1 صب قليل من الماء
الكامل	2.ادخل المنظف يدور نصف دقيقة للتذويب
*استخدم المنظف كمية مناسبة تجنبا تلويث الهينة	الكامل
*لا يستخدم المنظف الرغوة الكثيرة	3.ادخل الملابس و اختار مستوى الماء
*المنظف المختلفة قدرتها مختلفة رجاء در اسة	*التذويب العاجل للمنظف
تعريفها	

#### لختيار كمية المنظف

كمية الملابس	مستوى المياه (كمية المياه)	كمية قياسى	
		منظف مکٹف	منظف عادی
4.0kg-3.6kg	علاوی (حوالی43L)	حوالى36g	حوالي 43g
3.6kg-2.0kg	متوسط (حوالي36L )	حو الى30g	حو الى36g
تحت 2.0kg	منخفض (حوالۍ30L)	حو الى25g	حو الى30g

4 اختيار وقت الغسيل

اختار وقت الغسيل حسب الملابس

الملابس	وقت الغسيل(دقائق)		
الحرير (الملابس الخفيفة)	حوالي 4-2		
ملابس تريكو\ الياف كيماوية	حوالي 6-3		
ملاءة السرير	هوالي 13-7		
قطن مزج قماش كتانى	حوالي 10-8		
الملابس القذير ة جدا و الملابس الثقيلة	حوالي10-13		



7

2 وضع الملابس

### عملية التشغيل



ان قدرة الغسل يشير الى اتقل
 الوزن للملابس الجافية التى تغسل فى
 المرة الواحدة. يجب على كمية الملابس
 القل من الكمية المقدرة و الكمية المقدرة
 ال ثخناة, قياس و شكل الملابس سياثر
 فدرة الغسل الحقيقية من المناسبة ان تضمع
 الكمية المعقدية للملابس لكى تدور فى الغسالة
 وزنها نقل من 2.0 لا وقاية من تطاير رذاذ
 المياه

الوزن المراجعي للملابس



عملية التشغيل

### الاستعداد قبل الغسيل





اهتم بما يلى قبل غسل الملابس



A. يفتش الملابس هل تناسب الغسل بالغسالة
b. يغسل الملابس تنهت اللون مستقلة
c. ضغط الملابس اللتى تصعب امنصاص الماء داخل المياه
b. يغيل الجزء القذيرة بالمقدمة بالمنظفة
e. وضع الملابس المخملة بعد التقليب
f. لا يدخل الملابس الموثة بالمادة الكيماوية الى الغسالة مباشرة

### قبل التشغيل

تعديل مكان التركيب



تركيب أنبوب لادخال المياه اختيار مستوى المياه



4

قبل التشغيل

التركيب و التعديل

تفضل بتركيب و تعديل الغسالة حسب الطلب من التعريف و هذا مهم جدا لامنك و استخدام الغسالة بالطريق الصحيحي. استخدام أنبوب التصريف





قبل التشغيل

التحذير



فبل التشغيل





قبل التشغيل

محتويات





معاقي للرمز





### HWM40-32

### الغسالة



المصنع ليس مسوؤل للحو ادت جانت من مخالفة التعريف