

PYLE®

PLVSMR7

User's Manual



Before operating the Monitor, please read this manual thoroughly and retain it for future reference.

PYLE®

PLVSMR7

7" TFT LEFT AND RIGHT SIDE SUN VISOR MONITORS

Monitor




Function key

- 1. V1/V2 Switch
- 2. R/C Window
- 3. Positive increase
- 4. Menu
- 5. Negative decrease
- 6. Power
- 7. Light

Operating instructions

Turn drawbar counter-clockwise by 90° when installing, drawbar can be easily stretched out or draw back, it is extremely facile to install in a wide variety of vehicles.

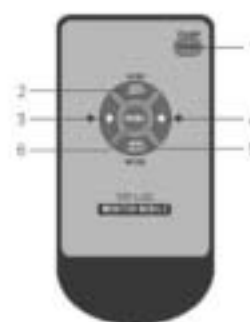

- 1. POWER
- 2. V1/V2 Change
- 3. Negative Decrease
- 4. Positive Increase
- 5. Mode Selection
- 6. Menu

Connection



Specification

- * Display size:7"
- *TFT LCD Sanyo panel
- * Video: Dual video input
- * System: PAL/NTSC auto switching
- * Resolution: 480xRGBx234
- * Brightness: 300CD/M²