



ENGLISH

General Description

- A 2D Contour Tracking Comb
- B 3-Dimensional Rounded Chromium Steel Blades
- C Hair Length Selector
- D On/Off Switch
- E Socket for Appliance Plug
- F Cleaning Brush
- G Barber's Comb
- H Charge Indication Light
- I Mains plug with Transformer
- J Appliance Plug
- K Nose/ear/eyebrow Grooming Attachment
- L Storage Stand
- M Trimming Attachment

Important

- Check if the voltage indicated on the appliance corresponds to the mains voltage in your home before you connect the appliance.
- Make sure that the appliance does not get wet.
- This appliance is only designed for trimming the human beard and grooming nose hair, ear hair, eyebrows, moustache and sideburns.
- Keep the appliance out of the reach of children.

Charging

Charge the appliance fully before you start using it for the first time.

- 1 Make sure the appliance is switched off.
- 2 Insert the appliance plug into the appliance (Fig. 2).

- 3 Put the mains plug into the wall socket.

- After a few moments the green pilot light will go on to indicate that the appliance is charging (fig. 3).
- It will take approx. 10 hours to fully charge the battery.

To optimise the lifetime of the appliance, do not charge it for more than 24 hours.

A fully charged appliance has a cordless trimming time of up to 40 minutes.

- To optimise the lifetime of the rechargeable battery, we advise you to use the appliance until the battery is completely empty when the appliance has been charged for the first time. Do not recharge the appliance in between trimming sessions. Continue using the appliance until the motor almost stops running during a session. Then recharge the battery. Follow this procedure at least twice a year.
- If the battery is empty and you want to trim your beard, charge the appliance for at least 1.5 hours and you will have enough power for one trimming session.

Trimming

Always comb the beard, moustache and/or sideburns with the attached Barber's Comb before you start trimming.

Do not move the appliance too fast. Make smooth and gentle movements.

To trim with the appliance disconnected from the mains:

- 1 Unplug trimmer from the outlet.

Trimming with comb attachment

The flexible combs (2D-Contour Tracking System) adjust to the contours of the face, the trimmer is easy to manoeuvre. Demanding areas, such as the chin- and throat area, are treated easily and an even cut is obtained.

Put on one of the exchangeable combs. To assemble the comb, insert the hook of the comb into the appliance and push it down until you hear a click.

- 1 Slide the adjustment comb to the desired trimming length setting (fig. 4).

The chosen setting is indicated by the arrow.

Length setting table

The trimmer has 2 exchangeable comb attachments with 5 settings each, resulting in 10 different hairlengths that can be cut:

- Small comb (setting 1-5): resulting in a hairlength of 1.5 - 9 mm .
- Big comb (setting 1-5): resulting in a hairlength of 10 - 17 mm .
- The resulting hairlength corresponds with the smallest distance between the cutting blade

and the spot where the comb is in contact with the skin (fig. 5).

- If you are using the trimmer for the first time, start at the maximum trimming length setting: setting 5 with big comb.

- 2 Switch the appliance on.

- 3 To trim in the most effective way, move the trimmer against the direction of hair growth. Make sure the surface of the comb always stays in contact with the skin (fig. 6).

- 4 If a lot of hair has accumulated in the comb, remove the comb attachment and blow and/or shake the hair out of the comb. The selected trimming length setting will not change when you do this (fig. 7).

Trimming without comb attachment

- 1 Remove the comb attachment by pulling it off the appliance (fig. 8).

Never pull at the flexible top of the comb attachment. Always pull at the bottom part.

Cutting without comb attachment (or with position '0') will result in a very short stubble beard.

- 1 Remove the old cutting unit.

- 2 Switch the appliance on.

- 3 Make well-controlled movements. Touch the hair lightly with the trimmer (fig. 9).

Storage

- 1 Store the appliance and attachments in the stand to prevent damaging (fig. 20).

Use the grooming attachment

- For trimming nose hair, ear hair and eyebrows:

- 1 Move the comb into position '0' and remove the trimming attachment (fig. 10).

- 2 Assemble the grooming attachment by inserting its hook into the housing and push it back until you hear a click (fig. 11).

Cutting nose hair

Make sure nasal passages are clean

- 1 Switch the groomer on.

- 2 Insert the groomer in one nostril and slowly move it in and out. Turning it around the same time to remove unwanted hair (fig. 12).

For best results, make sure the side of the tip is firm against skin. This will reduce the tickling effect that can occur during trimming nose hair:

- Do not insert the tip more than 0.5 centimetres into your nostril.

Cutting ear hair

Clean outer area of ear and make sure it is free of wax.

- 1 Switch the groomer on.

- 2 Move the tip softly around the edge of ear to remove hairs extending beyond the outer ear. Then carefully insert the tip into outer ear (fig. 13).

Do not insert the tip more than 0.5 centimetres into your ear as this could damage the eardrum.

- Do not move the appliance too fast. Make smooth and gentle movements.

To trim with the appliance disconnected from the mains:

- 1 Unplug trimmer from the outlet.

Trimming with comb attachment

The flexible combs (2D-Contour Tracking System)

adjust to the contours of the face, the trimmer is easy to manoeuvre. Demanding areas, such as the chin- and throat area, are treated easily and an even cut is obtained.

Put on one of the exchangeable combs. To assemble the comb, insert the hook of the comb into the appliance and push it down until you hear a click.

- 1 Slide the adjustment comb to the desired trimming length setting (fig. 4).

The chosen setting is indicated by the arrow.

Cleaning

Do not use abrasives, scourers or liquids such as alcohol, petrol or acetone to clean the appliance.

Do not immerse the appliance into water.

- 1 Make sure the appliance is switched off and disconnected from the mains before you start cleaning it.

- 2 Remove the comb attachment.

and the spot where the comb is in contact with the skin (fig. 5).

- If you are using the trimmer for the first time, start at the maximum trimming length setting: setting 5 with big comb.

- 3 Open the cutting unit by pushing it backwards (fig. 16).

Be careful that the cutting element does not drop down.

- 4 Clean the cutting unit and the inside of the appliance with the brush supplied (2)

- 5 Reassemble the cutting unit by inserting the hook onto the appliance and pushing it back onto the appliance until you hear a click (fig. 17).

FRANÇAIS

Description Générale

- A Contour Tracking Comb en 2 dimensions
- B Unité de Coupe 3 dimensions à Bords Arrondis en Acier Chromé en 3 dimensions
- C Sélecteur de Coupe
- D Bouton Marche/Arrêt
- E Prise Connecteur
- F Brosse de Nettoyage
- G Peigne
- H Témoin de Charge
- I Prise Secteur avec Transformateur
- J Fiche Connecteur
- K Accessoire de Soins pour couper les poils du nez/oreilles/sourcils
- L Support de Rangement
- M Tondeuse

Cleaning grooming attachment

- 1 Remove the grooming attachment by pushing it backwards (fig. 18).

- 2 Blow and/or shake hairs out of the grooming attachment.

- 3 Reassemble one of the two attachments on the appliance (fig. 19).

Replacing the cutting unit

- 1 Remove the comb attachment by pulling it off the appliance (fig. 8).

Never pull at the flexible top of the comb attachment. Always pull at the bottom part.

Cutting without comb attachment (or with position '0') will result in a very short stubble beard.

- 1 Remove the old cutting unit.

- 2 Switch the appliance on.

- 3 Make well-controlled movements. Touch the hair lightly with the trimmer (fig. 9).

Storage

- 1 Store the appliance and attachments in the stand to prevent damaging (fig. 20).

Environment

The built-in rechargeable battery contains substances that may harm the environment.

Remove the rechargeable battery when you discard the appliance.

Do not throw the battery away with the normal household waste but hand it in at an official collection point.

You can also take the appliance to a Philips service centre, where the staff will be happy to help you remove the battery and dispose of it in an environmentally safe way.

Pour optimiser la durée de vie de l'appareil, ne le chargez pas plus de 24 heures.

Un appareil correctement recharge offre une autonomie de 40 minutes environ.

Pour optimiser la durée de vie des accumulateurs, il est conseillé d'utiliser l'appareil jusqu'à ce que les accumulateurs soient complètement déchargés après avoir chargé l'appareil pour la première fois.

Ne rechargez pas l'appareil entre les séances de taille. Laissez l'appareil fonctionner jusqu'à ce que le moteur s'arrête. Ensuite rechargez les accumulateurs. Effectuez cette opération au moins deux fois par an.

Si les accumulateurs sont complètement déchargés et que vous voulez tondre votre barbe, chargez l'appareil au moins 1 heure. Cela suffit pour une séance.

Utilisation de la tondeuse

Peignez toujours la barbe, la moustache et ou les favoris à l'aide du Peigne avant de commencer à utiliser la tondeuse.

Ne faites pas des mouvements rapides avec l'appareil. Faites des mouvements uniformes et en douceur.

Pour tailler avec l'appareil (hors secteur):

- 1 Débranchez la tondeuse.

Taille avec guide de coupe

Les guides de coupe flexibles (2D-Contour Tracking System) suivent le contour du visage et la tondeuse est facile à manœuvrer. Les contours de la barbe sur le cou et sur les joues sont facilement suivis et les résultats obtenus seront uniformes.

Montez des guides de coupe interchangeables. Insérez le peigne dans l'appareil et poussez-le jusqu'à ce que vous entendiez un clic.

Réglez le guide de coupe sur la position désirée (fig. 4).

Le réglage sélectionné est indiqué par la flèche.

Régages de la hauteur de coupe

La tondeuse a deux guides de coupe interchangeables avec 5 positions chacun, donc vous pouvez obtenir 10 longueurs des cheveux différentes.

Petit peigne (réglage 1-5): pour une longueur des cheveux de 1,5 - 9 mm.

Grand peigne (réglage 1-5): pour une longueur des cheveux de 10 - 17 mm.

La longueur résultante correspond à la plus courte distance entre la lame et l'endroit où le peigne est en contact avec la peau (fig. 5).

Nettoyage

N'utilisez pas de produits abrasifs, de tampons à récurer ou des substances telles que l'alcool ou l'acétone pour nettoyer l'appareil.

Ne plongez pas l'appareil dans l'eau.

- Si vous utilisez la tondeuse pour la première fois, commencez par le réglage maximum: Réglage 5 avec le grand peigne.

- 2 Mettez l'appareil en marche.

- 3 Ouvrez l'unité de coupe en poussant vers l'arrière (1) (fig. 16).

Faites attention que l'élément coupant ne vous échappe pas.

- 4 Nettoyez l'unité de coupe et l'intérieur de l'appareil avec la brosse fournie (2).

