

Blue
mrHandsfree® Biker

BLUETOOTH® MOTORCYCLE HEADSET



GB

NL

FR

DK

CZ

SK

E

I

MR HANDSFREE / BLUE BIKER / 03-2012 / V01

WWW · MRHANDSFREE · COM

WWW · MRHANDSFREE · COM

Package Content



Blue Biker



Mounting parts



Allen wrench




Chargers

Product Description

The Mr Handsfree Blue Biker is a Bluetooth® stereo headset for motorcyclists. Before using it, we do recommend you to read this manual first.

1. **MFB button (Multi-functional Button)**
2. **Volume + (Volume up / Track forward / Voice dialing)**
3. **CTRL (Control) Button (Power / Pairing)**
4. **LED light indicator**
5. **Volume - (Volume down / Track back / Last number redial)**
6. **Micro USB port**

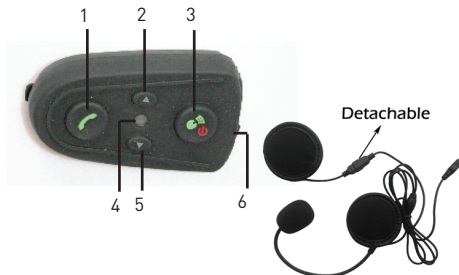

Specifications

Bluetooth® Version	Bluetooth® V2.1+EDR
Bluetooth® RF Spec	Class 1
Talk Time	8 hours
Standby Time	400 hours
Charging Voltage	5V
Charging Time	3 hours
RF Frequency	2.4 ~ 2.4835 GHz (ISM Band)
Battery Type	550mAh rechargeable Lithium-Polymer Battery
Supports HSP, HFP, A2DP, AVRCP and Full Duplex communication	

Main Features

Mobile phone functions



- ▶ Bluetooth® handsfree calling
- ▶ Voice dialing
- ▶ Last number redial
- ▶ Reject a call
- ▶ Independent Mobile phone volume control
- ▶ Mobile phone function has the highest priority

Stereo functions



- ▶ Bluetooth® A2DP music play
- ▶ Enjoy music from Mobile phone or other music sources
- ▶ Remote control music with AVRCP
- ▶ Independent music volume control
- ▶ Mobile phone function has the highest priority


- ▶ **DSP** technique, noise suppression and echo cancellation to optimize audio quality.
- ▶ **AGC** (Automatic Gain Control): In addition to manual volume control, the Blue Biker system will automatically increase and reduce its volume according to ambient noise and driving speed.

Installation

1. Mounting the Clip

The headset clip must be mounted onto the helmet. Once mounted, the headset unit can be attached or detached from the headset clip at any time. It can even be removed for charging and storage purposes.

Note: We recommend to remove the headset from the helmet when not in use.

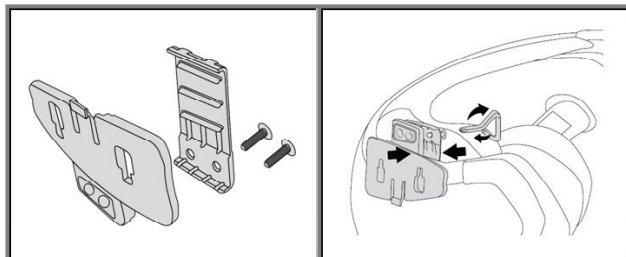

2. Mounting the microphone and speakers

- 2.1 The microphone must be positioned in front of the center of the mouth.
- 2.2 Attach the speakers to the Velcro inside your helmet opposite your ears (short speaker cord for left ear & long speaker cord for right ear), or use the supplied Velcro pads.
- 2.3 For some countries' traffic regulations, only one speaker is permitted to install in the helmet. In this case, the right side speaker can be detached.



Note: Always prioritize safety! Make sure to stay focused on the road during a mobile phone conversation. In bad weather and/or heavy traffic, we recommend pulling over and stopping, before answering the call.

Operation

Power On and Off

1. In power off mode: press **CTRL** button and hold it for 3 seconds until you hear a "di" tone. Release the button: the blue indicator will flash to indicate the Blue Biker is switched ON.
2. In power on mode: press **CTRL** button and hold it for 5 seconds until you hear a long "di" tone. The LED indicators will turn out to indicate the Blue Biker is switched off.

Pairing

Make sure that the Blue Biker is turned off (LED indicator = off). => Make sure that the Bluetooth® function of your mobile phone is turned ON and let your phone search for Bluetooth® devices. => Press and hold the CTRL button of the **Blue Biker** until the LED indicator starts flashing by blue and red colors alternately. => Your mobile phone, which is still in search mode, will show the **Blue Biker** in the list of found Bluetooth® devices. => Select the **Blue Biker** in your mobile phone and enter the PIN code **0000** to pair both devices. You will hear a long beep. => The blue LED indicator (5) will start flashing and you will hear a "di" tone.

Now you can use the headset to make handsfree calls (A) and enjoy the music (B) stored on your mobile phone.

A. Mobile phone operation

1. **Answer incoming call**

When you receive an incoming phone call, shortly press the **MFB button** to answer the call.

2. **Reject a call**

When you receive an incoming phone call, press and hold the **MFB button** for 2 seconds until you hear a “du” tone and the incoming call is rejected.

3. **End a conversation**

Press the **MFB button** to end the conversation.

4. **Last number redial**

Press the **Volume - button** twice, the mobile phone will dial the latest called number.

5. **Voice Dial**

Press the **Volume +** twice and you will hear a tone that indicates that you can say the desired name (“**voice tag**”). => Say the voice tag. => The phone plays the voice tag and dials the related phone number.

Attention!

The voice dialing function is only available if it is supported by your mobile phone!

6. **Volume control**

Press the **Volume + / Volume -** to adjust the volume.

7. **Transfer a call to the mobile phone**

Press the **MFB button** twice, you will hear a tone indicating the call was transferred to your mobile phone.

B. Music operation

1. **Play / Pause**

Shortly press the **MFB button** to play or pause the music.

2. **Track forward**

Press the **Volume +** button to skip to the next track.

3. **Track backward**

Press the **Volume -** button to skip to the previous track.

(Note: your Bluetooth® music device needs to support A2DP and AVRCP)

4. **Volume control**

Press the **Volume + / Volume -** to adjust the volume. When reaching the maximum/ minimum volume, a “DiDong” tone will be played.

Note: the mobile phone function always has the highest priority. An incoming mobile phone call will automatically mute the music. The music will be restored automatically after the call has ended.

GB Troubleshooting

1. The headset is not working

Please check the battery: it could be low, please charge it for 3 hours.

2. There is no sound coming out of the headset

Please check whether the speakers and microphone were connected right. Also check the volume: maybe you have set it too low?

3. Whistling of the speakers

If the microphone is too close to the speaker, the speaker could produce a 'whistling' sound. Enlarge the distance between the microphone and the speaker and the problem should be solved.

4. Lose connection with the mobile phone or music device

Please check the battery: if it is too low, the Blue Biker could lose the connection with the mobile phone.

5. Cannot reconnect with your mobile phone

Please consult the list of previously paired devices on your mobile phone: remove all the names on the list, then turn off the headset, and remove your mobile phone's battery for a few seconds. Replace the battery, turn on your mobile phone and let your phone search for Bluetooth® devices again. Now you can reconnect with the Blue Biker.

Charging the battery

Please charge the helmet headset for 3 hours until the red LED indicator turns off before use.

Note:

1. Please use the USB cables gently, do not pull too hard or the helmet headset may be damaged.
2. In order to optimize the battery capacity, please stock the headset in 15°C to 25°C environment while not in use.

LED light Indicator

LED Indicator type	Mode
All LED Indicators off	Power off
Red/Blue LED flash alternately	Pairing mode
Blue LED flashes shortly every 3 seconds	Standby state
Blue LED flashes long every 3 seconds	Connected
Red LED flashes every 3 seconds	Battery is low
Red LED lights continuously	Headset is being charged
Note: The red LED will turn off to indicate charging completed.	

GUARANTEE

GB GUARANTEE

Mr Handsfree is a registered trademark of TE-Group NV. The mr Handsfree brand stands for superior product quality and outstanding customer service. That is why mr Handsfree warrants this product against all defects in material and workmanship for a period of two (2) years from the date of original purchase of the product. The conditions of this guarantee and the extent of responsibility of mr Handsfree under this guarantee can be downloaded from our website: www.mrhandsfree.com.

NL GARANTIE

Mr Handsfree is een gedeponeerd handelsmerk van TE-Group NV. Het merk mr Handsfree staat voor producten van superieure kwaliteit en een uitstekende klantenservice. Daarom garandeert mr Handsfree dat dit product vrij is van materiaal- en fabricagefouten gedurende een periode van twee (2) jaar na de oorspronkelijke aankoopdatum van het product. De voorwaarden van deze garantie en de omvang van de verantwoordelijkheid van mr Handsfree onder deze garantie kunt u downloaden van de website: www.mrhandsfree.com.

FR GARANTIE

Mr Handsfree est une marque déposée de TE-Group NV. La marque de mr Handsfree est synonyme de produits de qualité supérieure et d'un service après-vente excellent. C'est la raison pour laquelle mr Handsfree garantit ce produit contre tout défaut de matériel ou de fabrication pour une période de deux (2) ans à compter de la date d'achat initiale. Les conditions de cette garantie et l'étendue de la responsabilité de mr Handsfree en vertu de cette garantie sont disponibles en téléchargement sur notre site Internet www.mrhandsfree.com.

DK GARANTI

Mr Handsfree er et registreret varemærke tilhørende TE-Group NV. Mr Handsfree brand står for overlegen produktkvalitet og fremragende kundeservice. Derfor er Mr. Handsfree garanterer, at dette produkt mod alle defekter i materiale og udførelse i en periode på to (2) år fra datoen for det oprindelige køb af produktet. Betingelserne for denne garanti, og omfanget af ansvaret for mr. Handsfree i henhold til denne garanti kan downloades fra vores hjemmeside: www.mrhandsfree.com.

CZ

ZÁRUKA

Mr Handsfree je registrovaná obchodná známka TE-Group NV.

Značka mr Handsfree predstavuje vynikajúcu kvalitu výrobkov a vynikajúce služby zákazníkom. To je dôvod, prečo mr Handsfree poskytuje záruku na tento produkt, na všetky chyby materiálu a spracovanie, 2 roky od dátumu pôvodného nákupu tohto produktu.

Podmienky tejto záruky a rozsah zodpovednosti mr Handsfree v rámci tejto záruky je možné stiahnuť z našich webových stránok: www.mrhandsfree.com.

SK

ZÁRUKA

Mr Handsfree je registrovaná obchodná známka TE-Group NV.

Značka mr Handsfree predstavuje vynikajúcej kvality výrobkov a vynikajúce služby zákazníkom. To je dôvod, prečo mr Handsfree poskytuje záruku na tento produkt na všetky chyby materiálu a spracovanie na 2 roky od dátumu pôvodného nákupu tohto produktu.

Podmienky tejto záruky a rozsahu zodpovednosti mr Handsfree v rámci tejto záruky je možné stiahnuť z našich webových stránok: www.mrhandsfree.com.

E

GARANTÍA

Mr Handsfree es una marca registrada de TE-Group NV. La marca mr Handsfree representa una calidad de producto superior y una excelente atención al cliente. Por esto es por lo que mr Handsfree garantiza este producto contra todos los defectos materiales y de mano de obra durante un periodo de dos (2) años a partir de la fecha de compra original del producto. Las condiciones de esta garantía y el alcance de la responsabilidad de mr Handsfree bajo esta garantía están disponibles en www.mrhandsfree.com.

I

GARANTÍA

Mr Handsfree es una marca registrada de TE-Group NV. La marca mr Handsfree representa una calidad de producto superior y una excelente atención al cliente. Por esto es por lo que mr Handsfree garantiza este producto contra todos los defectos materiales y de mano de obra durante un periodo de dos (2) años a partir de la fecha de compra original del producto. Las condiciones de esta garantía y el alcance de la responsabilidad de mr Handsfree bajo esta garantía están disponibles en www.mrhandsfree.com.