

# Barbie™

---

## Bloombox™ Portable CD-R/RW Boombox with AM/FM Stereo Radio



See page 16  
for your hidden  
GEMSTONE FUN  
button surprise!

### OWNER'S MANUAL

## BAR201

Barbie and associated trademarks and trade dress are owned by, and used under license from, Mattel, Inc. ©2007 Mattel, Inc. All Rights Reserved.

# SAFETY PRECAUTIONS



## CAUTION

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



### **DANGEROUS VOLTAGE:**

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



### **ATTENTION:**

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



### **DANGER:**

Invisible and hazardous laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

**LASER SAFETY:** This unit employs a laser. Only qualified service personnel should attempt to service this device due to possible eye injury.

**CAUTION:** USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE PROCEDURE HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

**FCC WARNING:**

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

**FCC INFORMATION:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

# SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this unit near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the unit.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this unit during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as the following: the power-supply cord or plug has been damaged; liquid has been spilled or objects have fallen into the unit; and/or the unit has been exposed to rain or moisture, does not operate normally, has changed its performance or has been dropped.
14. This unit should not be exposed to dripping or splashing water and no object filled with liquids such as vases should be placed on the unit.
15. Do not overload wall outlet. Use only power source as indicated.
16. Use replacement parts as specified by the manufacturer.
17. The product may be mounted to a wall only if recommended by the manufacturer.
18. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.

## **PROTECT YOUR FURNITURE**

This model is equipped with non-skid rubber “feet” to prevent the product from moving when you operate the controls. These “feet” are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives or cleaning sprays may cause the rubber “feet” to soften and leave marks or a rubber residue on your furniture. To prevent any damage to your furniture, we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber “feet” before you place the product on fine wooden furniture.

Emerson Radio Corp. has produced this audio product under license from Mattel. We have taken great care to make sure your unit was in perfect working order when it left our factory.

It has been designed to give you many years of enjoyment and trouble-free operation. Read this manual before operating this unit to become familiar with its features. In the event you require technical assistance, please contact the Emerson Radio Customer Service hotline at 1-800-898-9020. Retain this manual for future reference.



## WARNING

Choking Hazard—Small Parts and Packaging Materials. Not for children under 5 years.

- All materials for fastening or packing purposes are not part of the unit and should be discarded for children's safety.
- Please keep all information for future reference.
- This is not a toy.

### **CAUTION! ELECTRICALLY OPERATED PRODUCT:**

Not recommended for children under 5 years old. As with all electric products, precautions should be observed during handling and use to prevent electric shock. Ages 5+

### **NOTES:**

- Please avoid using this unit in places of high temperature or humidity over prolonged periods of time as damage may occur.
- Exposure to direct sunlight in places such as car interiors may cause the unit to become warped and/or lead to malfunctioning.
- Avoid using or storing this unit in dusty or sandy locations.

# PREPARATION FOR USE

## GETTING STARTED


- Operate controls and switches as described in the manual.
- Before turning on the power, make certain that the AC Power cord is properly installed.
- Store your CDs in a cool area to avoid damage from heat.
- When moving the unit, be sure to first disconnect the AC Power cord.

## UNPACKING AND SET UP

- Carefully remove the main unit and the AC Power cord from the display carton. Remove all the packing material from the unit. Remove any decorative or descriptive labels from the front or top of the cabinet. Do not remove any labels from the back or bottom of the cabinet.
- Carefully remove any small strips of tape that may have been used to prevent the CD door from opening in transit.
- Unwind the AC Power cord and extend it to its full length.
- This unit was shipped with a dummy CD transit card in the CD player. This dummy CD prevents the laser pick up from moving during shipment. This card must be removed before you can insert your own CDs. Lift the CD Door OPEN Tab to open the CD door. Carefully remove the dummy CD from the player and discard it. Close the CD door.
- Place the unit on a flat, level surface such as a table, desk, counter, shelf, etc, convenient to a 120V 60 Hz AC outlet, out of direct sunlight, and away from sources of excess heat, dust, moisture, or strong magnetic fields.

# LOCATION OF CONTROLS



## Top of Unit

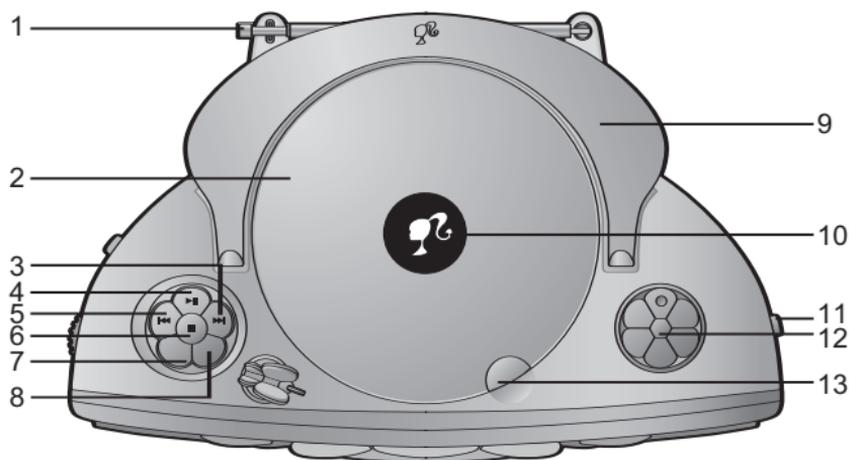

- |                          |                                    |
|--------------------------|------------------------------------|
| 1. FM Telescopic Antenna | 10. Barbie™ LED Indicator          |
| 2. CD Compartment        | 11. BAND (AM/FM/<br>FM ST.) Switch |
| 3. SKIP/SEARCH ►► Button | 12. TUNING Control                 |
| 4. PLAY/PAUSE ►   Button | 13. CD Door OPEN Tab               |
| 5. SKIP/SEARCH ◀◀ Button |                                    |
| 6. STOP (■) Button       |                                    |
| 7. REPEAT Button         |                                    |
| 8. PROG. Button          |                                    |
| 9. Carrying Handle       |                                    |

## LOCATION OF CONTROLS (CONTINUED)

### Front/Side of Unit

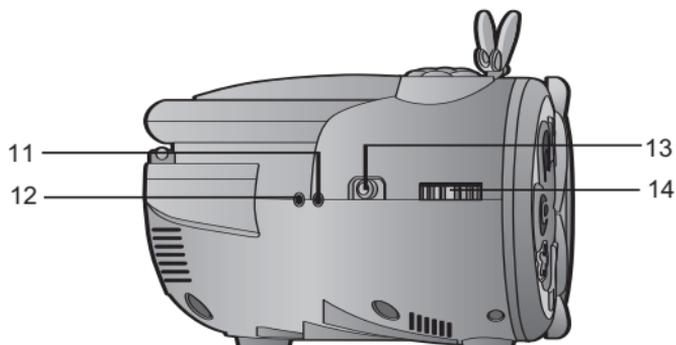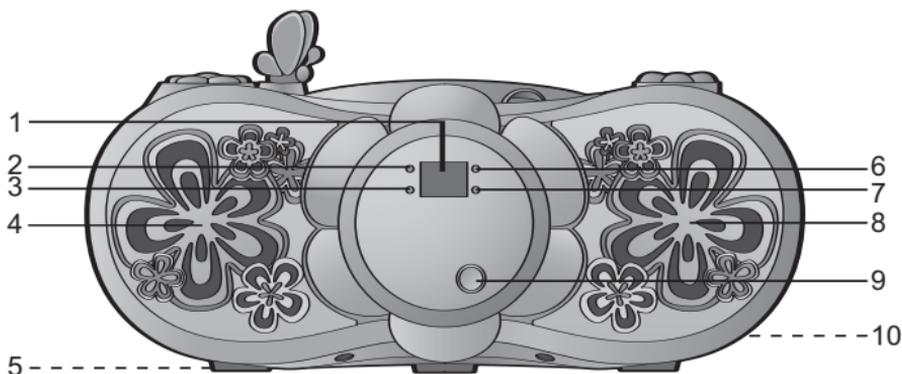


- |  |  |
|--|--|
| 1. Display                                 | 9. GEMSTONE FUN Button                     |
| 2. POWER Indicator                         | 10. AC Power Jack<br>(Rear of Unit)        |
| 3. REPEAT Indicator                        | 11. HEADPHONE Jack                         |
| 4. Left Speaker                            | 12. AUX IN Jack                            |
| 5. Battery Compartment<br>(Bottom of Unit) | 13. FUNCTION (AUX/RADIO/<br>OFF/CD) Switch |
| 6. FM ST. Indicator                        | 14. VOLUME Control                         |
| 7. PLAY/PROG. Indicator                    |  |
| 8. Right Speaker                           |  |

## POWER SOURCES

This boombox requires either six (6) "C" size batteries (not included) or an AC power cord (included).

### BATTERY INSTALLATION

1. Remove the Battery Compartment door on the bottom of the unit by pressing down on the ▼ marks and then sliding it open.
2. Insert six (6) "C" size batteries (not included) according to the polarity diagram inside the Battery Compartment (as shown below). Alkaline batteries are recommended for the longest playing time.
3. Replace the Battery Compartment door.

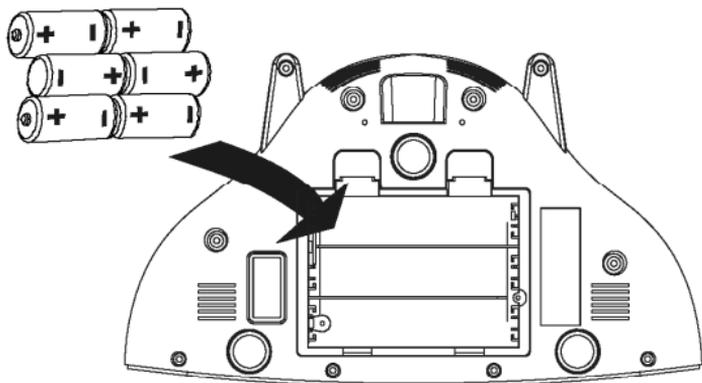


### BATTERY PRECAUTIONS

- \* Replacement of batteries must be done by an adult.
- \* Do not mix old and new batteries.
- \* Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- \* The supply terminals are not to be short-circuited.
- \* Non-rechargeable batteries are not to be recharged.
- \* Exhausted batteries are to be removed.
- \* Only batteries of the equivalent type are to be used.
- \* Batteries are to be inserted with the correct polarity.
- \* Dispose of batteries properly.
- \* Do not dispose of batteries in fire; batteries may explode or leak.


## POWER SOURCES (CONTINUED)

### AC OPERATION

To operate the unit using AC power, connect the small end of the AC power cord to the AC power jack on the rear of the unit and insert the plug into an AC outlet having 120V AC, 60Hz only. The batteries are automatically disconnected when the AC power cord is connected.

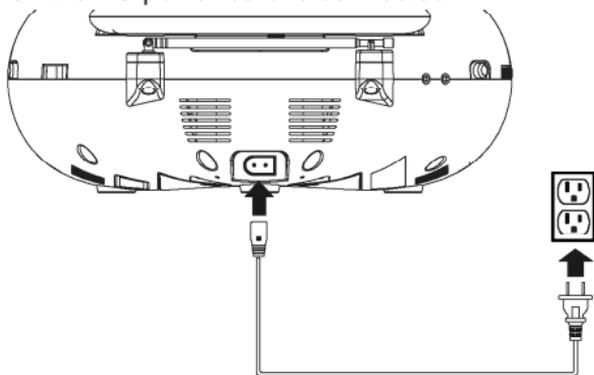

**NOTE:** The AC plug supplied with the unit is polarized to help minimize the possibility of electric shock. If the AC plug does not fit into a nonpolarized AC outlet, do not file or cut the wide blade. It is the user's responsibility to have an electrician replace the obsolete outlet.

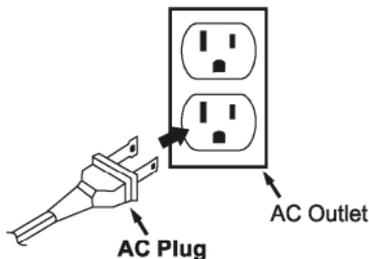


### CAUTION:

- When not using AC power, disconnect the AC power cord from the wall outlet and from the unit by pulling the plug (not the cord).
- Do not touch the AC power cord with wet hands.
- Fully insert the plug without exposing any part of the blade.

# OPERATION


## LISTENING TO THE RADIO

1

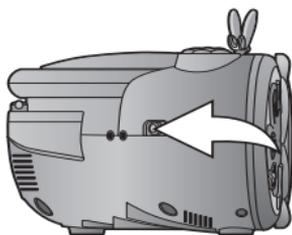

Slide the FUNCTION switch to the RADIO position to turn the unit on and select Radio mode; the POWER indicator will light.

2

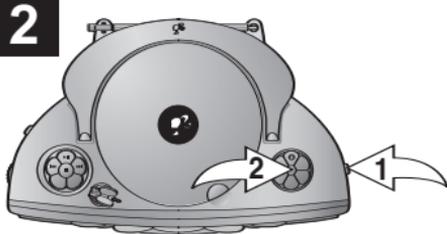


Slide the BAND switch ❶ to select AM, FM or FM ST. (Stereo). Tune a desired station by turning the TUNING control ❷.

### NOTES:


- If you select FM ST. and you tune to a FM Stereo station, the FM ST. indicator will light.
- If you are listening to a weak FM Stereo station, you can usually improve the reception by sliding the BAND switch from FM ST. to FM (the sound will now be in mono).

3

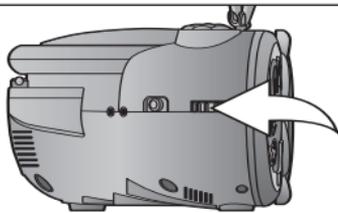

Adjust the VOLUME control as desired.

4

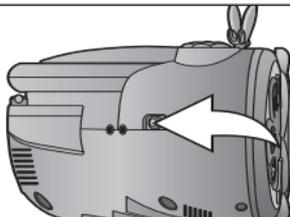

To turn the radio off, slide the FUNCTION switch to the OFF position; the POWER indicator will turn off.



### ANTENNAS

**AM**—This unit has a built-in ferrite rod antenna, which provides adequate reception in most areas. If reception is weak, turn the unit to improve reception.

**FM**—The FM Telescopic Antenna is for FM reception only. If reception is weak, adjust the length and the angle of the antenna.

## OPERATION (CONTINUED)

### TO INSERT AND PLAY A CD

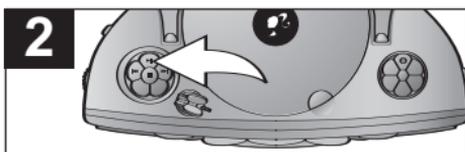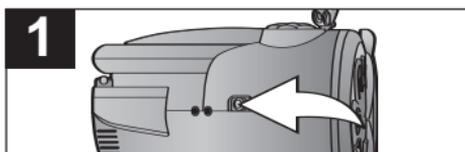



Slide the **FUNCTION** switch to the **CD** position to turn the unit on and select **CD** mode; the **POWER** indicator will light.

Open the **CD** compartment lid by lifting the **CD Door OPEN** tab. Insert a disc onto the center spindle (label side up) and push down gently to make sure it is securely on the spindle. Close the **CD** compartment lid.

Insert the headphones into the **HEADPHONE** jack or just listen through the speakers.

The player will read the **Table of Contents** and the display will show the total number of tracks on the disc.

Press the **PLAY/PAUSE** ►|| button to begin playback on **Track 1**; the **PLAY/PROG** indicator will light.

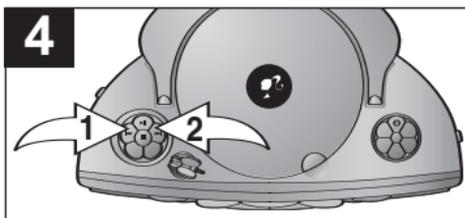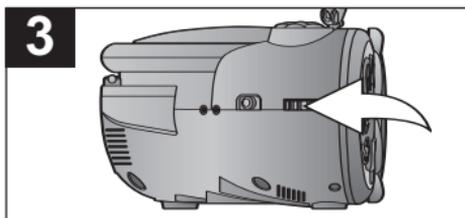


Adjust the **VOLUME** control as desired.

To skip forward or backward through the tracks on the disc, press and release the **SKIP/SEARCH** ◀❶ or ▶❷ button.


To search forward or backward through the disc, press and hold the **SKIP/SEARCH** ◀❶ or ▶❷ button.

**CONTINUED ON THE NEXT PAGE**

## OPERATION (CONTINUED)

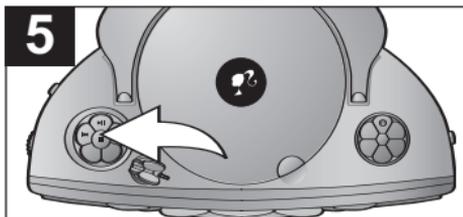


When the disc is through playing, it will stop. Press the STOP (■) button to stop the disc before it is finished.

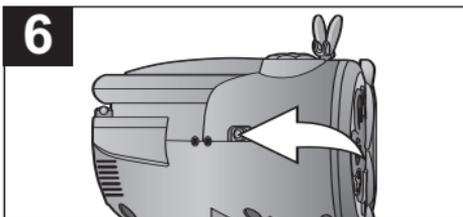

To turn the unit off, slide the FUNCTION switch to the OFF position; the POWER indicator will turn off.

### TO PAUSE PLAYBACK

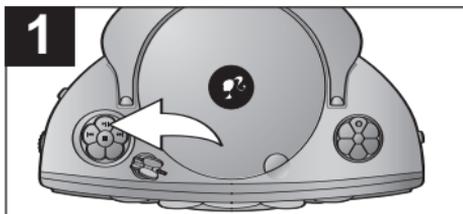

Press the PLAY/PAUSE ►|| button to pause playback; the track number will blink and the disc will continue to spin. Press the PLAY/PAUSE ►|| button to continue playback; the track number will stop blinking and playback will continue.

**PLEASE SEE NOTES ON THE NEXT PAGE**

## OPERATION (CONTINUED)

### CD PLAYBACK NOTES:

- This unit is capable of playing standard CDs or 3" singles; no adapter is required.
- If a disc is inserted incorrectly, dirty, damaged or not present at all, "no" will appear in the display.
- Although this unit can read CD-R and CD-RW discs, in addition to normal CDs, the playability of those discs may be affected by the type of software that was used to create the discs, as well as the blank media you are using. 100% playability cannot be guaranteed. This is not an indication of a problem with this unit.

### **AUX IN Jack**



By using a home audio connection cable (not included), you can listen to an external audio unit through this unit's speakers. Before making any connections, turn off the power to all equipment.

Slide the FUNCTION switch to AUX to turn the unit on and select AUX mode. Plug a connection cable (not included) between the AUX or LINE OUT jack on the external audio unit and this unit's AUX IN jack (side of the unit). (Do not connect it to this unit's HEADPHONE jack.) Turn on the external audio unit and start playback; the external unit's output sound will be heard through this unit's speakers. Rotate the VOLUME control to adjust the volume level as desired.

To turn the unit off, remove the plug from the AUX IN jack, then slide the Function switch to OFF.

## OPERATION (CONTINUED)



### TO REPEATEDLY PLAY BACK ONE TRACK

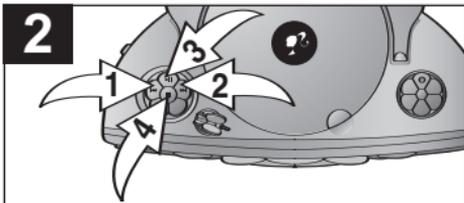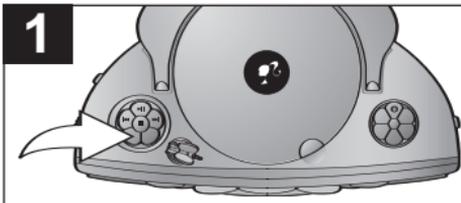

While either in CD Stop or Playback mode, press the REPEAT button once; the REPEAT indicator will flash.

Press the SKIP/SEARCH  $\ll$  ❶ or  $\gg$  ❷ button to select a track and press the PLAY/PAUSE ( $\triangleright\parallel$ ) button ❸ to start playback and the unit will play the selected track over and over until the STOP ( $\blacksquare$ ) button ❹ is pressed.

### TO REPEATEDLY PLAY BACK ALL TRACKS

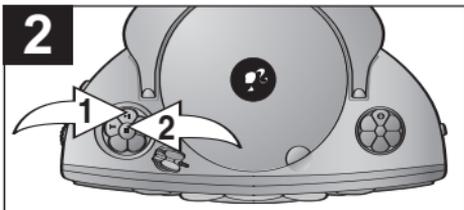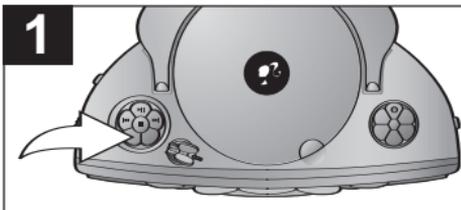

While either in CD Stop or Playback mode, press the REPEAT button twice; the REPEAT indicator will light.



Press the PLAY/PAUSE ( $\triangleright\parallel$ ) button ❶ to start playback and the unit will then play all the tracks on the CD over and over until the STOP ( $\blacksquare$ ) button ❷ is pressed.

### TO CANCEL OR STOP REPEAT PLAYBACK:

- **TO STOP REPEAT PLAYBACK**, press the STOP ( $\blacksquare$ ) button once.
- **TO CANCEL REPEAT PLAYBACK**, press the REPEAT button until the REPEAT indicator is no longer lit.



## OPERATION (CONTINUED)

### TO PROGRAM THE MEMORY (UP TO 20 TRACKS)

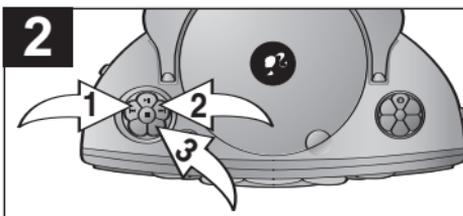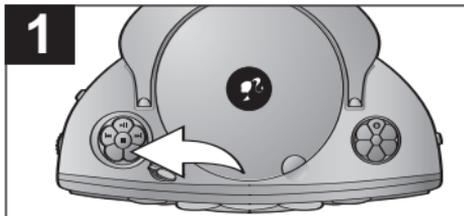

While in CD Stop mode, press the PROG. button; the PLAY/PROG indicator and "01" (the program number) will blink.

Select the first track to be played back using the SKIP/SEARCH  or  button, then press the PROG. button  again. Repeat this step to program additional tracks (up to 20 tracks).

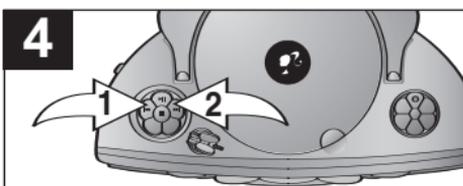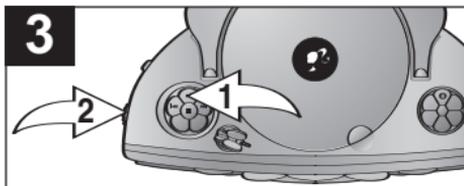

Press the PLAY/PAUSE  button  to begin Programmed playback; the PLAY/PROG indicator will blink. Adjust the VOLUME control  as desired.

To skip forward or backward through the programs, press the SKIP/SEARCH  or  button. When the disc is through playing, it will stop.

#### NOTES:


- Programming is the ability to preselect the order in which a series of tracks will be played.
- Press the REPEAT button twice during Programmed playback to activate Repeat All (all the tracks in the program will repeat continuously); the REPEAT indicator will light.
- Press the STOP  button to stop the disc before it is finished.
- Press the STOP  button while in the Stop mode to clear the program.

## OPERATION (CONTINUED)




Barbie™ has a surprise just for you! Just follow the instructions below and see what you can do with your GEMSTONE FUN button!

### Step 1

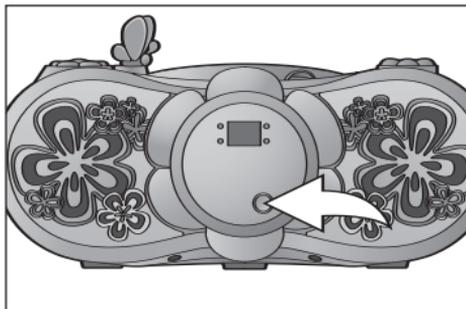

Press the GEMSTONE FUN button on the front of your Bloombox™.

### Step 2


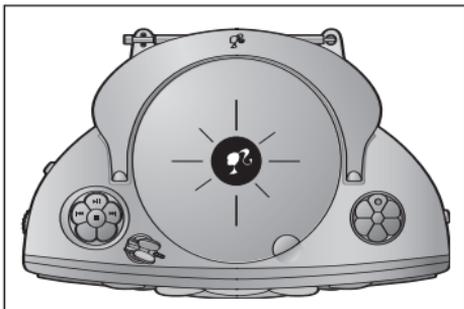


**SURPRISE!** Your Barbie™ LED indicator will flash in alternating colors of red and blue for 10 seconds.

## CARE AND MAINTENANCE

### CARING FOR COMPACT DISCS

- Treat the compact disc carefully. Handle the compact disc only by its edges. Never allow your fingers to come in contact with the shiny, unprinted side of the compact disc.
- Do not attach adhesive tape, stickers, etc. to the compact disc label.
- Clean the compact disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the compact disc. If necessary, use a CD cleaning kit.
- If a disc skips or gets stuck on a section of the compact disc, it is probably dirty or damaged (scratched).
- When cleaning the compact disc, wipe in straight lines from the center of the compact disc to the outer edge of the compact disc. Never wipe in circular motions.
- This unit is designed to play only compact discs bearing the identification logo as shown here. Other discs may not conform to the CD standard and may not play properly.
- Compact Discs should be stored in their cases after each use to avoid damage.
- Do not expose compact discs to direct sunlight, high humidity, high temperatures or dust, etc. Prolonged exposure or extreme temperatures can warp the compact disc.
- Do not stick or write anything on either side of the compact disc. Sharp writing instruments, or the ink, may damage the surface.

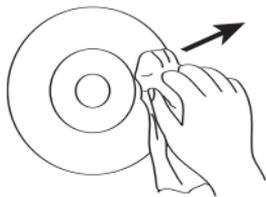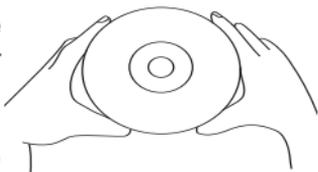

### CARE OF THE CABINET

If the cabinet becomes dusty, wipe it with a soft, dry dust cloth. Do not use any wax, polish sprays or abrasive cleaners on the cabinet.

### CAUTION

Never allow any water or other liquids to get inside the unit while cleaning.

## TROUBLESHOOTING GUIDE

If you experience a problem with this unit, check the chart below before calling for service.

SYMPTOM	CAUSE	SOLUTION
CD will not play.	FUNCTION switch not set to CD.	Set FUNCTION switch to CD.
	Disc inserted incorrectly.	Reinsert disc correctly.
	AC power cord not connected.	Check AC power cord connection.
CD skips while playing and/or erratic playback.	CD compartment not closed.	Close CD compartment.
	Disc inserted incorrectly.	Reinsert disc correctly.
	Dirty or defective disc.	Try another disc.
	Moisture condensation on disc.	Wipe disc with soft cloth.
AM or FM, poor or no sound.	Station is not tuned properly.	Retune the AM or FM broadcast station.
	FM: Antenna is not properly adjusted.	Reorient FM antenna.
	AM: Unit is not positioned correctly.	Rotate unit until best reception is obtained.
	FUNCTION switch not set to RADIO.	Set FUNCTION switch to RADIO.
	Volume at minimum.	Increase volume.

**EMERSON RADIO CORP.**  
**LIMITED WARRANTY (Valid in the United States)**

Emerson Radio Corp. warrants manufacturing defects in original material, including original parts and workmanship, under normal use and conditions, for a period of ninety (90) days from the date of original purchase in the U.S. With your dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product in our discretion. For repair or replacement, pack your unit in a padded box, enclose your check or money order payable to Emerson Radio Corp. in the amount of \$9.00 (not required by California residents) to cover shipping and handling costs, and enclose a copy of your proof of purchase. Send your unit to:

Emerson Radio Corp.  
5101 Statesman Drive  
Irving, TX 75063

This warranty does not cover damage from negligence, misuse, abuse, accident, failure to follow operating instructions, commercial use, rental, repairs by an unauthorized facility, or products purchased, used, serviced or damaged outside of the United States.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

AU898M

The serial number of your system is located on a label on the bottom cabinet. Please take a moment now to locate the serial number and write the number in the space provided below. You may be asked to provide this number when calling for product service.

**Model Number:**            **BAR201**

**Serial Number:** \_\_\_\_\_

 <b>Emerson</b> <sup>®</sup> SERVICE	TO FIND THE LOCATION AND PHONE NUMBER OF YOUR NEAREST SERVICE CENTER PERMITTED TO PERFORM WARRANTY...
CALL TOLL FREE: 1-800-695-0098	
FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE PLEASE CALL: 1-800-898-9020	
FOR CUSTOMER SERVICE, PLEASE WRITE TO: Emerson Radio Corp., Consumer Affairs Dept., 5101 Statesman Drive, Irving, TX 75063.	

**EMERSON® WARRANTY (Valid in Canada)**  
Consumer Electronics, Home Appliances and Home Office Products

**Thank you for choosing EMERSON®!**

SYNNEX Canada Limited gives the following express warranty to the original consumer purchaser or gift recipient for this EMERSON product, when shipped in its original container and sold or distributed in Canada by SYNNEX Canada Limited or by an Authorized EMERSON Dealer:

SYNNEX Canada Limited warrants that this product is free, under normal use and maintenance, from any defects in material and workmanship. If any such defects should be found in this product within the applicable warranty period, SYNNEX Canada Limited shall, at its option, repair or replace the product as specified herein. Replacement parts furnished in connection with this warranty shall be warranted for a period equal to the unexpired portion of the original equipment warranty.

This warranty shall not apply to:

- a. Any defects caused or repairs required as a result of abusive operation, negligence, accident, improper installation or inappropriate use as outlined in the owner's manual.
- b. Any EMERSON product tampered with, modified, adjusted or repaired by any party other than SYNNEX Canada Limited or EMERSON'S Authorized Service Centres.
- c. Damage caused or repairs required as a result of the use with items not specified or approved by SYNNEX Canada Limited, including but not limited to head cleaning tapes and chemical cleaning agents.
- d. Any replacement of accessories, glassware, consumable or peripheral items required through normal use of the product including but not limited to earphones, remote controls, AC adapters, batteries, temperature probe, stylus, trays, filters, cables, paper, cabinet, cabinet parts, knobs, buttons, baskets, stands, shelves, cookware and cooking utensils.
- e. Any cosmetic damage to the surface or exterior that has been defaced or caused by normal wear and tear.
- f. Any damage caused by external or environmental conditions, including but not limited to transmission line/power line voltage or liquid spillage.
- g. Any product received without appropriate model, serial number and CSA /cUL /cULus /cETL /cETLus markings.
- h. Any products used for rental or commercial purposes.
- i. Any installation, setup and/or programming charges.

Should this EMERSON product fail to operate during the warranty period, warranty service may be obtained upon delivery of the EMERSON product together with proof of purchase and a copy of this LIMITED WARRANTY statement to an Authorized EMERSON Service Centre. This warranty constitutes the entire express warranty granted by SYNNEX Canada Limited and no other dealer, service centre or their agent or employee is authorized to extend, enlarge or transfer this warranty on behalf of SYNNEX Canada Limited. To the extent the law permits, SYNNEX Canada Limited disclaims any and all liability for direct or indirect damages or losses or for any incidental, special or consequential damages or loss of profits resulting from a defect in material or workmanship relating to the product, including damages for the loss of time or use of this EMERSON product or the loss of information. The purchaser will be responsible for any removal, reinstallation, transportation and insurance costs incurred. Correction of defects, in the manner and period of time described herein, constitute complete fulfillment of all obligations and responsibilities of SYNNEX Canada Limited to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise.

**CARRY-IN PARTS & LABOUR WARRANTY PERIODS:**

- Audio Products: 1 Year (Remote Control, if applicable – 90 Days)
- Home Appliances: 1 Year
  - Microwave Magnetron parts only additional 3 Years
  - Refrigerator / Freezer Compressor parts only, additional 4 years
- Home Office Products: 1 Year

To obtain the name and address of the nearest Authorized EMERSON Service Centre or for more information on this warranty

- visit [www.emersonelectronics.ca](http://www.emersonelectronics.ca)
- mail your inquiry to: SYNNEX Canada Limited, EMERSON Customer Service  
200 Ronson Drive, Toronto, ON M9W 5Z9, or
- call toll free 1-800-663-5954, Monday to Friday 9:00am – 5:00pm Eastern Standard Time.

08.2007

