



URC 4063 Easy 4

User Manual


Previous Model Name: Big Easy Select

Overview

Thank you for purchasing the *One For All® Easy 4* universal remote control. Before you can use your new remote, you will need to program it to operate the specific home entertainment components you wish to control. Follow the instructions detailed in this manual to set up your *One For All® Easy 4* and enjoy your new remote control.

Features and Functions

The illustration below and the chart immediately after describe the features and functions of the *One For All® Easy 4* universal remote control. Use the drawing to locate each key on the remote, then refer to the chart for a description of the corresponding function each key performs.

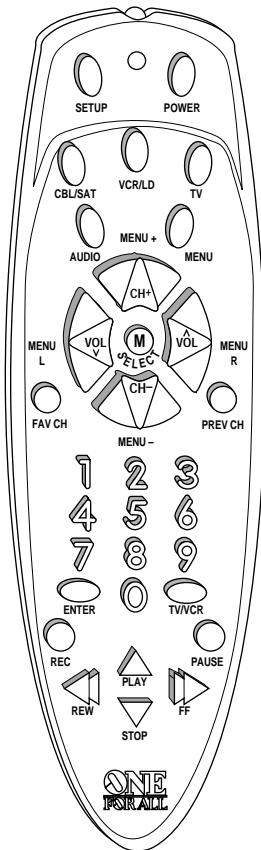 


Feature Function



The **Red Light (LED)** flashes red to show that the remote is working.



 The **SETUP** key is used to program your *One For All® Easy 4*.



The **GLOW keys: VOL +/-** (Volume Up and Down), **CH +/-** (Channel Up and Down), **M** (Mute), **POWER, TV/VCR, ENTER** and the **Digit Keys (0-9)** operate the same as on your original remote. These keys are made of a phosphorescent material that Glows-in-the-dark. To activate the "GLOW" Feature, you must expose the **GLOW Keys** to bright light. The length of time the **GLOW Keys** remain illuminated will be determined by the length of time the remote is exposed to bright light.



SEE BELOW

The **TV, VCR/LD, CBL/SAT, and AUDIO** keys are used to select the home entertainment component you want to control.

The **MENU** key operates the same as the **MENU** or **OSD** (On Screen Display) key on your original remote. When you press the **MENU** key, your *One For All® Remote Control* enters the menu mode and enables the **CH +/-** and **VOL +/-** keys to navigate through your menu. Pressing one of the device keys will exit the remote control's menu mode and revert **CH +/-** and **VOL +/-** to their original functions. If your original remote control had a **SELECT** key, for use in your menu, try **M** (Mute) or **ENTER**. Please consult the original owners manual of your home entertainment component for more detailed instructions on accessing and navigating your on-screen menus.



The **FAV CH** (Favorite Channel) key allows you to program your *One For All® Easy 4* with up to 10 of your favorite channels.



The **PREV CH** (Previous Channel) key operates the same as the **LAST CHANNEL** or **RECALL** key on your original remote.



The **REC** (Record), **PAUSE**, **REW** (Rewind), **PLAY**, **FF** (Fast Forward), and **STOP** keys operate the same as the keys on your original VCR and CD Player remote. **As a safety feature on the One For All® Easy 4, you must press the REC key twice.**



Installing the Batteries

Your *One For All® Easy 4* requires four (4) new AAA alkaline batteries. To install the batteries:

- On the back of the *One For All® Easy 4*, push down on the tab and lift the battery cover off.
- Match the + and - marks on the batteries to the + and - marks in the battery case, then insert the batteries.
- Press the battery cover back into place.
- Test the unit by pressing **POWER**. If the batteries are inserted correctly, the red light (LED) will blink once.

NOTE: Removing the batteries for more than 15 minutes will require you to reprogram your remote.

Setting Up Your Components

Programming the One For All® Easy 4 to operate your TV:

Locate the brand name of your TV and then write it in the space below.

TV Brand: _____

Locate the brand name of your TV in the "SETUP CODES FOR TVs" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *One For All Easy 4* to operate your TV.

To program the *One For All Easy 4* to operate your TV:

- Turn on your TV.
- Press **TV** and release. Press and hold **SETUP** until the *One For All® Easy 4*'s red light blinks twice, then release **SETUP**.
- Enter the first three-digit TV code listed for your brand in the "Set-Up Codes for TVs" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
- Aim the *One For All® Easy 4* at your TV and press **POWER**. Your TV should turn off. If your TV does not respond, repeat Steps 2-4, trying each code listed for your brand until you find the one that operates your TV.
- Your *One For All® Easy 4* is now programmed to operate your TV. Write your TV code in the boxes to the left for future reference.

Remember, if you want to use your *One For All® Easy 4* to operate your TV, press the **TV** key first.

Set-Up Codes for TVs

A-Mark	003	Anam	
Admiral	093, 016, 180, 165, 179	National	055
Adventura	046	AOC	030, 019, 185, 137, 003, 180, 056
Aiko	092	Archer	003
Akai	030, 056, 145, 151	Audiovox	180, 003
Alleron	179	Belcor	019, 030
Ambassador	177	Bell &	
Amstrad	171, 177	Howell	016, 154, 179, 180
Anam	180	Blue Star	282
		BPL	282
		Bradford	180



Attention Consumers

DO NOT USE the **MENU-** key on your *One For All® Easy 4* remote control with TVs manufactured by **Mitsubishi** in **1996** or **1997**, or on any TV manufactured in 1996 or 1997 using **TV code 150**. In 1996, Mitsubishi changed the frequency used to operate the menu down feature on these TVs. Consequently, using the **MENU-** key on your *One For All® Easy 4* remote control with these Mitsubishi TVs or with TVs using TV Code 150 will put your TV in a service mode. Universal Electronics Inc. assumes no responsibility for this change in the manufacturer's design or for any damage to your TV or any other damages that you incur as a result of these changes.

Setup Codes for URC 4063

Set-Up Codes for TVs

Mark 003
 Admiral 093, 016, 180, 165, 179
 Adventura 046
 Aiko 092
 Akai 030, 056, 145, 151
 Alleron 179
 Ambassador 177
 Amstrad 171, 177
 Anam 180
 Anam National 055
 AOC 030, 019, 185, 137, 003, 180, 056
 Archer 003
 Audiovox 180, 003
 Belcor 019, 030
 Bell & Howell 016, 154, 179, 180
 Blue Star 282
 BPL 282
 Bradford 180
 Brockwood 019
 Broksonic 236, 463, 003, 180
 Candle 030, 056, 186, 046
 Carver 054, 187
 Celebrity 000
 Citizen 092, 060, 030, 056, 280, 186, 046, 039
 Clairtone 185
 Concerto 056
 Contec 180, 185
 Craig 180
 Crown 180, 039
 Curtis Mathes 047, 060, 054, 154, 030, 039
 CXC 180
 Daewoo 451, 092, 019, 039
 Daytron 019, 056, 092
 Dumont 017, 019
 Electroband 000, 185
 Electrohome 150, 056, 000, 154, 185, 039
 Emerson 463, 236, 180, 177, 179, 280, 178, 282, 154, 019, 039, 185
 Envision 030
 Finlux 179
 Fisher 154, 159
 Fujitsu 179
 Funai 171, 179, 180
 Futuretech 180
 GE 047, 451, 051, 021, 027, 282, 178, 135, 174
 Gibraltar 019, 030, 017
 Goldstar 060, 056, 030, 019, 178
 Goodmans 179
 Granada 145, 151, 178
 Grandin 282, 180
 Grunpy 179, 180
 Hallmark 178, 179, 236, 019
 Harvard 180, 236, 178, 179
 HCM 282
 Hinari 179
 Hisawa 282
 Hitachi 151, 145, 056
 Hypson 282
 Ima 180
 Infinity 054
 Janeil 046
 JBL 054, 046
 JCB 000
 JVC 053
 Kaisui 282
 KEC 180, 060
 Kenwood 030, 019
 Kloss 046, 024, 030
 KTV 180, 030, 280, 185, 039
 Logik 016, 180, 236
 Luxman 056
 LXI 047, 054, 154, 178, 156
 Magnavox 054, 096, 030, 186, 187, 024, 171, 179
 Majestic 016, 017
 Marantz 054, 030, 096, 187
 Matsui 177, 039
 Megatron 178, 145, 003, 151
 MEI 185
 Memorex 150, 154, 056, 016, 178
 MGA 150, 030, 019, 178
 Midland 047, 051, 017, 135, 039
 Minutz 021, 027
 Mitsubishi 150, 019, 178, 093
 Motorola 093, 055, 054, 150, 051
 MTC 060, 056, 030, 019, 185
 Multitech 180, 179
 NAD 156, 166, 178, 019
 NEC 030, 056, 019
 Nesco 179
 Nikko 092, 030, 178
 NTC 092
 Onwa 180
 Optimus 166, 154, 150, 165
 Optonica 093, 165
 Orion 236, 463, 180, 179
 Panasonic 250, 051, 055, 054
 Penney 047, 051, 060, 019, 018, 030, 156, 021, 027, 178, 003, 135, 039, 250
 Philco 054, 096, 030, 019, 187
 Philips 054, 096, 030, 019, 187
 Pilot 030, 019, 039, 060, 178, 051
 Pioneer 166
 Portland 092, 019, 039

Priceclub 060
 Prism 051, 055
 Proscan 047
 Proton 466, 178, 003
 Pulsar 017, 092, 019
 Pulser 019, 017, 092
 Quasar 250, 051, 055
 RadioShack 180, 165, 039, 056, 047, 030
 RCA 047, 018, 135, 090, 019, 174, 093
 Realistic 154, 165, 056, 030, 019, 178, 180, 039
 Rhapsody 185
 Runco 060, 494, 030, 017
 Saisho 177
 Sampo 030, 039
 Samsung 060, 427, 056, 030, 019, 178
 Samsux 039
 Sanyo 154, 159, 146
 Scimitsu 019
 Scotch 178
 Scott 236, 019, 178, 180, 179
 Sears 047, 054, 154, 171, 056, 156, 178, 179, 146, 451
 SEI 177
 Sharp 093, 491, 165, 039
 Shogun 019
 Signature 2000 016, 047, 054, 019
 Simpson 186, 187, 030
 Sinudyne 177
 Sony 000, 080
 Soundesign 178, 180, 179, 186
 Spectricon 003, 137, 180, 030, 019, 056
 Squareview 171
 SSS 019, 180, 236
 Starlite 180, 236, 019
 Supra 039
 Supre-Macy 046, 039, 186
 Supreme 000
 Sylvania 054, 096, 030, 187, 186
 Symphonic 171, 179, 180
 Tandy 093, 165, 039, 054, 047
 Tatung 055, 003, 051
 Technics 250, 051, 055
 Technol Ace 179
 Techwood 051, 056, 003, 055, 250
 Teknika 092, 054, 060, 056, 019, 016, 180, 179, 186, 039
 Tera 178
 TMK 156, 177, 178, 236
 Tomashi 282
 Toshiba 156, 154, 060
 Tosonic 185
 Totevision 039
 Triumph 177
 Universal 027, 021, 047
 Vector Research 030
 Victor 053
 Vidikron 054
 Vidtech 019, 178
 Viking 046
 Wards 054, 016, 096, 030, 174, 056, 165, 019, 021, 027, 020, 178, 179, 080
 Yamaha 030, 019
 Zenith 017, 092, 016
 Zonda 003

Set-Up Codes for VCRs

Admiral 048
 Action 317
 Adventura 000
 Aiko 278
 Aiwa 000, 307, 406, 468
 Akai 041, 061, 315
 Akiba 072
 Alba 020, 278
 American High 035, 081
 Amstrad 000, 325
 Anitech 072
 ASA 037, 081
 Asha 240
 Asuka 037
 Audiovox 037, 038
 Baird 000, 041, 104
 Basic Line 072, 020, 278
 Beaumark 240
 Bell & Howell 104, 048, 046
 Blaupunkt 162, 034
 Brandt Elect-ronique 041
 Broksonic 184, 121, 211, 295, 361
 Bush 072, 278
 Calix 037
 Candle 037, 038
 Canon 035
 Capehart 020
 Carver 081
 CCE 278, 072
 CGE 000
 Cimline 072
 Citizen 037, 278, 240, 035, 000
 Clatronics 020
 Colt 072
 Condor 020
 Craig 240, 072, 037, 047, 271

Crown	072, 020, 278
Curtis	
Mathes	035, 060, 202, 041
Cybernex	240
Daewoo	278, 020, 045, 046
Dansai	072
Daytron	020, 278
De Graaf	042
Decca	081, 000
Dual	041
Dumont	038, 240, 045
Dynatech	000
Electro-	
home	037, 240, 043
Electro-	
phonic	037
Emerex	032
Emerson	278, 184, 479, 000, 002, 121, 211, 037, 043, 061, 208, 295, 361
Ferguson	041
Fidelity	000
Finlandia	081, 110, 104
Finlux	000, 042, 104, 081
Firstline	072, 043, 045, 037
Fisher	104, 046, 047, 066, 054
Frontech	020
Fuji	033, 035, 032, 034
Funai	000, 278, 072, 325, 240
GAB	072
Garrard	000, 325
GE	060, 202, 035,
GEC	081
Go Video	232, 350, 240
Goldstar	037, 038, 278
Goodmans	278, 000, 020, 072, 037, 062
Gradiente	000
Granada	048, 035
Grandin	072, 000, 037
Grundig	081
Harley	
Davidson	000
Harman/	
Kardon	038
Harvard	072
Harwood	072
Head-	
quarter	046
Hi-Q	047
Hinari	072, 240
Hitachi	042, 000, 041
Imperial	000
Interfunk	081
ITT	041, 104, 046, 240
Jensen	041, 067
JVC	067, 008, 041
Kaisui	072
KEC	037, 278
Kenwood	067, 008, 041, 038
KLH	072
Kodak	035, 037
Lloyd's	000, 208, 072, 038
Logik	072
Luxor	043, 104, 046, 062
LXI	037, 000
Magnavox	035, 081, 039, 110, 149
Magnin	240
Marantz	035, 081, 110
Marta	037
Matsushita	035, 081
Matsui	208, 295
MEI	035
Memorex	000, 035, 048, 104, 037, 039, 240, 047, 046, 307
Metz	162, 454
MGA	043, 061
MGN	
Technology	240
Minolta	042
Mitsubishi	043, 061, 067, 008, 173
Motorola	035, 048
MTC	000, 240
Multitech	000, 072
NEC	038, 041, 067, 008, 104
Nikko	037
Noblex	240
Nokia	104, 240, 046, 041
Olympus	035
Optimus	048, 037, 104
Optonica	062
Orion	184, 278, 479, 121, 211, 295, 208
Panasonic	162, 035, 454
Penney	035, 037, 240, 042, 162, 038, 454
Pentax	042
Philco	035, 081
Phillips	081, 035, 062, 110
Pilot	037
Pioneer	067, 162
Portland	020
Profitronic	240
Proline	000
Proscan	060, 202
Protec	072
Pulsar	039, 240, 278
Quarter	046
Quartz	046
Quasar	162, 035
RadioShack	000, 035, 037, 048
Radix	037
Randex	037

RCA	060, 202, 042, 035, 149, 048, 240
Realistic	000, 035, 048, 240, 104, 037, 046, 047, 066, 062
Ricoh	035, 034
Runco	039
Samsung	240, 045
Sanky	048, 039
Sansui	041, 000, 067, 072, 271
Sanyo	104, 047, 046, 240
Scott	184, 043, 045, 211, 121
Sears	104, 035, 000, 037, 042, 046, 047, 066, 054
SEI	081
Semp	045
Sharp	048, 062
Shintom	072, 000, 240
Shogun	240
Singer	072, 037, 240
Sony	032, 033, 034, 000, 035
STS	042
Sylvania	081, 035, 043, 110, 000
Symphonic	000
Tatung	041, 067, 000
TEAC	000, 041
Technics	162, 035
Teknika	035, 000, 037
Thomas	000
TMK	240
Toshiba	043, 045, 066
Totevision	240, 037
Triumph	208
Unitech	240
Vector	045
Vector Research	038
Video Concepts	045, 061
Videosonic	240, 000, 072
Videotronic	035
Wards	048, 000, 035, 042, 047, 060, 202, 072, 081, 240, 149, 062
White Westinghouse	278
XR-1000	000, 035, 072
Yamaha	038
Zenith	000, 039

Set-Up Codes for TV/VCR Combos

American	
High	035*
Brocksonic	002, 294, 479
Colt	072
Curtis	
Mathes	035*
Daewoo	278
Emerson	002, 294, 479
Funai	000
GE	035*, 060*, 048*, 240
Hitachi	035*, 000
HQ	000
Lloyds	000
MGA	240
Magnavox	000, 035*, 081*
Magnin	240
Memorex	037, 162*
Mitsubishi	048*
Orion	002, 294, 479
Panasonic	035*, 162*
Penney's	035*, 240, 162*
Quasar	035*, 162*
RCA	060*, 035*, 048*
Sansui	000, 479
Sanyo	240
Sears	000, 037
Symphonic	000
Zenith	000

Set-Up Codes for Cable Converters

ABC	001, 003, 007, 008, 011, 013, 014, 017
Allegro	153, 315
Antronix	022
Archer	022, 153
Belcor	056
Cable Star	056
Cabletenna	022
Cableview	022
Century	153
Citizen	153, 315
Colour Voice	025
Comtronics	040
Contec	019
Eastern	002
Everquest	015, 040
Focus	400
GC	
Electronics	056
Garrard	153
Gemini	015
General	
Instruments	011, 476
Goldstar	040, 144
Hamlin	009, 020, 034, 259
Hitachi	011
Hytex	007
Jasco	153, 315
Jerrold	003, 011, 012, 014, 015, 476
Movie Time	063, 156
NSC	063, 156
Novaplex	618
Oak	007, 019

Optimus	021
Panasonic	021, 107
Philips	025, 153
Pioneer	144
Popular	
Mechanics	400
RCA	021
RadioShack	015, 315
Recoton	400
Regal	020, 259
Regency	002
Rembrandt	011
SL Marx	040
Samsung	040, 144
Scientific	
Atlanta	008, 017, 477
Signal	015, 040
Signature	011
Sprucer	021
Starcom	003, 015
Stargate	015, 040
Starquest	015
Sylvania	001
TV86	063
Tandy	258
Televiow	040
Texscan	001
Tocom	012, 013
Tusa	015
Unika	022, 153
United Artists	007
United Cable	003
Universal	022, 056, 153
Videoway	250
Viewstar	063, 258
Zenith	525
Zentek	400

Set-Up Codes for Satellites

Channel	
Master	018
Chaparral	053
Citoh	164
Drake	018, 064
Echostar	775, 269, 280
ExpressVu	775
General	
Instruments	547, 038, 050, 361
HTS	775
Homecable	238
Hughes	
Network	
Systems	749
IQ	210
Janeil	152
Jerrold	361, 627
Legend	269
Macom	018, 050
Memorex	269
Panasonic	152, 701
Primestar	627, 361
RCA	566
Realistic	052
STS	210

Set-Up Codes for CD Players

Aiwa	124, 157
California	
Audio Lab	029
Carver	57, 179
DKK	000
Denon	003
Emerson	305
Fisher	048, 088, 179
Garrard	393
Genexxa	032, 305
Hitachi	032
JVC	072
Kenwood	028, 037, 048, 190
Krell	157
LXI	305
Linn	157
MCS	029
Magnavox	157, 305
Marantz	029, 157
Mission	157
NSM	157
Onkyo	101
Optimus	000, 032, 037, 048, 145, 179, 305, 468
Panasonic	029
Philips	157
Pioneer	032, 305, 468
Proton	157
QED	157
Quasar	029
RCA	053, 179, 305
Realistic	179
Rotel	157
SAE	157
Sansui	157, 305
Sanyo	179
Scott	305
Sears	305
Sharp	037
Sony	000, 185, 490, 604, 605
Soundesign	145
TEAC	393
Technics	029, 303
Victor	072
Wards	157
Yamaha	036, 187

highlighted with an asterisk (*), you may need to program a separate TV code in order to control the volume. Check the list of codes below and follow the instructions detailed in the "Programming the One For All Easy 4 to Operate Your TV" section to program the supplied TV code.

TV/VCRs working on VCR code 035 may require TV code 051 for volume control.

TV/VCRs working on VCR code 048 may require TV code 093 for volume control.

TV/VCRs working on VCR code 060 may require TV code 047 for volume control.

TV/VCRs working on VCR code 081 may require TV code 054 for volume control.

TV/VCRs working on VCR code 162 may require TV code 250 for volume control.

Programming the One For All® Easy 4 to operate your Cable Converter or DBS Satellite:

Set-Up Codes for Laser Discs

Carver 194	Pioneer 059, 023
Disco Vision 023	Quasar 204
Hitachi 023	Sega 023
Magnavox 194	Sony 201
Marantz 194	Theta Digital 194
Mitsubishi 059	
NAD 059	
Panasonic 204	
Philips 194	

Locate the brand name of your Cable Converter or Satellite and then write it in the space below.

Cable or Satellite Brand: _____

Locate the brand name of your Cable Converter or Satellite in the "SETUP CODES FOR CABLE CONVERTERS" or "SETUP CODES FOR SATELLITES" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your One For All Easy 4 to operate your Cable Converter or Satellite.

To program the One For All Easy 4 to operate your Cable Converter or Satellite:

- 1 Turn on your Cable Box, Satellite or DSS.
- 2 Press **CBL/SAT** and release. Press and hold **SETUP** until the *One For All® Easy 4's* red light blinks twice, then release **SETUP**.
- 3 Enter the first three-digit Cable Box, Satellite or DSS code you wrote down in the "Looking Up Set-Up Codes for Your Components" section. If you perform this procedure correctly, the red light will blink twice.
- 4 Aim the *One For All® Easy 4* at your Cable Box, Satellite or DSS and press **POWER**. Your Cable Box, Satellite or DSS should turn off. If your Cable Box, Satellite or DSS does not respond, repeat Steps 2-4, trying each code listed for your brand until you find the one that operates your Cable Box, Satellite or DSS.
- 5 Your *One For All® Easy 4* is now programmed to operate your Cable Box, Satellite, or DSS. Write your Cable Box, Satellite, or DSS code in the boxes to the left for future reference.

NOTE: If your original Cable Box remote control did not have an "ON" key, press **CH+** on the *One For All® Easy 4* to turn your Cable Box ON.

Set-Up Codes for Cable Converters

ABC 001, 003, 007, 008, 011, 013, 014, 017

Remember, if you want to use your *One For All® Easy 4* to operate your Cable Box, Satellite, or DSS, press the **CBL/SAT** key first.

Allegro 153, 315	Stargate 015, 040
Antronix 022	Starquest 015
Archer 022, 153	Sylvania 001
Belcor 056	TV86 063
Cable Star 056	Tandy 258
Cabletenna 022	Televue 040
Cableview 022	Texscan 001
Century 153	Tocom 012, 013
Citizen 153, 315	Tusa 015
Colour Voice 025	Unika 022, 153
Comtronics 040	United Artists 007
Contec 019	United Cable 003
Eastern 002	Universal 022, 056, 153
Everquest 015, 040	Videoway 250
Focus 400	Viewstar 063, 258
GC	Zenith 525
Electronics 056	Zentek 400
Garrard 153	
Gemini 015	

Set-Up Codes for Satellites

Channel	
Master 018	
Chaparral 053	
Citoh 164	
Drake 018, 064	
Echostar 775, 269, 280	
ExpressVu 775	
General	
Instruments 547, 038, 050, 361	
HTS 775	
Homecable 238	
Hughes	
Network	
Systems 749	
IQ 210	
Janeil 152	
Jerrold 361, 627	
Legend 269	
Macom 018, 050	
Memorex 269	
Panasonic 152, 701	
Primestar 627, 361	
RCA 566	
Realistic 052	
STS 210	

Programming the One For All® Easy 4 to operate your CD Player:

Locate the brand

name of your CD Player and then write it in the space below.

CD Player Brand: _____

Locate the brand name of your CD Player in the "SETUP CODES FOR CD PLAYERS" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your One For All Easy 4 to operate your CD Player.

To program the One For All Easy 4 to operate your CD Player:

- 1 Turn on your CD Player and insert a compact disc.
- 2 Press **AUDIO** and release. Press and hold **SETUP** until the *One For All® Easy 4's* red light blinks twice, then release **SETUP**.
- 3 Enter the first three-digit CD Player code you wrote down in the "Looking Up Set-Up Codes for Your Components" section. If you perform this procedure correctly, the red light will blink twice.
- 4 Aim the *One For All® Easy 4* at your CD Player and press **PLAY**. Your CD Player should play your disc. If your CD Player does not respond, repeat Steps 2-4, trying each code listed for your brand until you find the one that operates your CD Player.
- 5 Your *One For All® Easy 4* is now programmed to operate your CD Player. Write your CD Player code in

the boxes to the left for future reference.

Remember, if you want to use your *One For All® Easy 4* to operate your CD Player, press the **AUDIO** key first.

Set-Up Codes for CD Players

Aiwa 124, 157		Panasonic 029
California		Philips 157
Audio Lab 029		Pioneer 032, 305, 468
Carver 57, 179		Proton 157
DKK 000		QED 157
Denon 003		Quasar 029
Emerson 305		RCA 053, 179, 305
Fisher 048, 088, 179		Realistic 179
Garrard 393		Rotel 157
Genexxa 032, 305		SAE 157
Hitachi 032		Sansui 157, 305
JVC 072		Sanyo 179
Kenwood 028, 037, 048, 190		Scott 305
Krell 157		Sears 305
LXI 305		Sharp 037
Linn 157		Sony 000, 185, 490,
MCS 029		604, 605
Magnavox 157, 305		Soundesign 145
Marantz 029, 157		TEAC 393
Mission 157		Technics 029, 303
NSM 157		Victor 072
Onkyo 101		Wards 157
Optimus 000, 032, 037, 048, 145, 179, 305, 468		Yamaha 036, 187

Reassigning Device Keys




You can use the *One For All® Easy 4* to operate a second TV or a second VCR or any combination of four home entertainment components. For example, you may want your *One For All® Easy 4* to control 1 TV, 1 CD Player and 2 VCRs. To accomplish this, you would reassign the **CBL/SAT** key to operate the desired component, in this case, a second VCR. The chart below shows you how to reassign a particular device key and then set up your new component.


TV to VCR/LD	SETUP* + 992 + VCR/LD + TV + TV + SETUP* + VCR or Laser Disc code.
TV to CBL/SAT	SETUP* + 992 + CBL/SAT + TV + TV + SETUP* + Cable or Satellite code.
TV to AUDIO	SETUP* + 992 + AUDIO + TV + TV + SETUP* + CD Player code.
VCR/LD to TV	SETUP* + 992 + TV + VCR/LD + VCR/LD + SETUP* + TV code.
VCR/LD to CBL/SAT	SETUP* + 992 + CBL/SAT + VCR/LD + VCR/LD + SETUP* + Cable or Satellite code.
VCR/LD to AUDIO	SETUP* + 992 + AUDIO + VCR/LD + VCR/LD + SETUP* + CD Player code.
CBL/SAT to TV	SETUP* + 992 + TV + CBL/SAT + CBL/SAT + SETUP* + TV code.
CBL/SAT to VCR/LD	SETUP* + 992 + VCR/LD + CBL/SAT + CBL/SAT + SETUP* + VCR or Laser Disc code.
CBL/SAT to AUDIO	SETUP* + 992 + AUDIO + CBL/SAT + CBL/SAT + SETUP* + CD Player code.
AUDIO to TV	SETUP* + 992 + TV + AUDIO + AUDIO + SETUP* + TV code.
AUDIO to VCR/LD	SETUP* + 992 + VCR/LD + AUDIO + AUDIO + SETUP* + VCR or Laser Disc code.
AUDIO to CBL/SAT	SETUP* + 992 + CBL/SAT + AUDIO + AUDIO + SETUP* + Cable or Satellite code.

***NOTE:** Here you must hold **SETUP** until the *One For All® Easy 4's* red light blinks twice.


Using the Favorite Channel Key

Your *One For All® Easy 4* is equipped with a favorite channel key (FAV CH). You can set up the FAV CH key with a list of up to 10 of your favorite channels for either your TV, VCR, Cable Box, Satellite or DSS. Please note, the FAV CH key can only be set up for one device key (TV, VCR/LD or CBL/SAT) at a time. You cannot set up a favorite channel list for another device key until you have cleared the FAV CH key of your original list.


- 1  Press the device key (TV, VCR/LD, or CBL/SAT) for the home entertainment component that will contain your favorite channel list.
- 



- 2  Press and hold SETUP until *One For All® Easy 4*'s red light blinks twice. Release SETUP and press 9-9-6.

9-9-6

- 3  Enter the channel number of the first channel you would like to add to your favorite channel list. Then press SETUP.


- If you are entering a single digit channel number, you must press 0 first.
- If you are entering a channel that is three digits long, such as 103, you do not have to press SETUP after you have entered the channel number.
- If your original remote control required you to use an ENTER key to change channels, press ENTER instead of SETUP after entering your channel number. For example, if you want to add TV channel "4" to your favorite channel list, you would: Press TV, then press and hold SETUP until the *One For All® Easy 4*'s red light blinks twice, then release SETUP and press 9-9-6. Press 0-4, followed by ENTER. Then, add your second channel, followed by ENTER and continue adding your favorite channels until you have added the 10 channels you desire in your favorite channel list.

 
- 4  Continue adding your favorite channels, up to 10 channels. Once you have finished, press and hold SETUP until the *One For All® Easy 4*'s red light blinks twice.

- 5  To scan through your favorite channel list, press FAV CH. Your *One For All® Easy 4* will automatically scan through your favorite channel list, stopping at each channel for three seconds.

- 6 To stop at one of your favorite channels, press any key on the *One For All® Easy 4*.

To clear an entire favorite channel list from the FAV CH key:

- 1  Press and hold SETUP until the *One For All® Easy 4*'s red light blinks twice, then release SETUP.

- 2  Press 9-9-6, then press and hold SETUP until the *One For All® Easy 4*'s red light blinks twice.



Troubleshooting

Problem	Solution
Red light not blinking when you press a key?	Replace the batteries with four (4) new AAA alkaline batteries.
The red light blinks when you press a key but you receive no response from your home entertainment component?	Make sure you are aiming your <i>One For All® Easy 4</i> at your home entertainment component and that you are within 15 feet of the component you are trying to operate before using your remote.
The <i>One For All® Easy 4</i> does not operate your home entertainment component or is not performing commands properly?	Try all the codes listed for your home entertainment component in the "Set-Up Codes" section. Many set-up codes may allow for partial functionality, however, only one set-up code will operate your home entertainment component properly. Make sure that all of the components you are setting up are able to be operated with an infrared remote control.
Problems programming a TV/VCR combo?	Use the VCR set-up codes for your brand. Some combo units may require both a TV code to control volume and a VCR code for full operation.
VCR not recording?	As a safety feature on the <i>One For All® Easy 4</i> , you must press the REC key twice.
No volume when in the Cable mode or when operating a second TV or TV/VCR combination?	Press and hold SETUP until the <i>One For All® Easy 4</i> 's red light blinks twice. Release SETUP and enter 9-9-3 followed by VOL+.
Channel +/- and RECALL not working for your RCA TV?	Due to RCA design (1983-1987), only the original remote control will operate these functions. However, using the FAV CH key will allow you to run through a list of up to 10 of your favorite channels.
Problems changing channels?	If your original remote control required a ENTER keystroke when changing channels, press the ENTER key on the <i>One For All® Easy 4</i> after you enter the channel number.
Keypad scrambled?	Press and hold SETUP until the <i>One For All® Easy 4</i> 's red light blinks twice. Release SETUP and enter 9-6-9.

World Wide Web: <http://www.oneforall.com>

This product has been discontinued and is no longer supported.

One For All® is a trademark of Universal Electronics Inc.

Copyright 1996 by Universal Electronics Inc. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics Inc.

This *One For All®* product is designed for compatibility in North America excluding Mexico.

URC-4063 - *One For All® Big Easy Select Easy 4*.
M4022

5/98