

**PYLE**<sup>®</sup>

**INSTRUCTION MANUAL**

PLVH72




Thank you for purchasing the color LCD monitor. To enjoy the features of this device and to ensure years of trouble-free operation, please read this manual carefully and follow the instructions.

## FRONT PANEL



- |                                 |                        |
|---------------------------------|------------------------|
| 1. Power on/off                 | 2. Positive adjustment |
| 3. Activation of menu indicator | 4. Negative adjustment |
| 5. IR                           |                        |

## REMOTE CONTROL

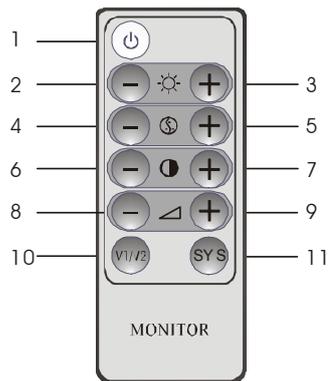

- |                        |
|------------------------|
| 1. Power On/Off        |
| 2. Brightness -        |
| 3. Brightness +        |
| 4. Color -             |
| 5. Color +             |
| 6. Contrast -          |
| 7. Contrast +          |
| 8. Volume -            |
| 9. Volume +            |
| 10. Video select       |
| 11. System auto switch |

Contents and specifications can be subjected to change without prior notice.

## BASIC OPERATION

1. Make sure the video and power connection are properly executed.
2. Press SEL to display the adjustments in this order: Brightness--Color--Contrast--volume--brightness
3. Adjust the values by pressing up or down buttons.
4. The POWER button activates/deactivates the monitor. It is not necessary to disconnect the power source.

## SPECIFICATIONS

Screen size:	7.2inch
System:	PAL & NTSC
Power source:	DC12V+/-10%
Power consumption:	<7.2W
Video input:	Composition Video Signal
Operating Temperature:	0°C-60°C
Storage Temperature:	-20°C~80°C

## ACCESSORIES

1xremote control	1xheadrest bracket
1xstand alone bracket	1xdin lead
1xwarranty card	1xoperation manual

NOTE: Although the effective pixels for the liquid crystal is given as 99.98% or more, 0.02% of pixels may not light or may light incorrectly. It is a very common phenomenon in active matrix display technology, do not indicate fault or broken of the unit.