

***Bose® LIFESTYLE® RC-38S Remote Control***

Owner's Guide and Bose® Link  
Expansion Overview

### **Thank you for choosing the RC-38S remote**

As the owner of a Bose® LIFESTYLE® RC-38S remote control, you can enjoy a wide variety of new options with your LIFESTYLE® DVD home entertainment system.

This remote is one of many Bose® link compatible products designed to work with the LIFESTYLE® 38 or 48 systems. Built-in compatibility makes this additional remote useful in any area of your home...wherever you want to hear Bose quality sound from your system!

#### **Where to use this expansion remote**

Using the RC-38S remote in another room, you can turn your LIFESTYLE® system on and tune in audio from the media center located in the main room. You can even select a different sound source, changing from CD to FM radio, or access the uMusic™ intelligent playback system.

The remote works with:

- Bose® link compatible powered speakers
- Bose® link amplifiers with passive speakers
- Certain other stereo amplifiers.

By using one of the expansion room solutions above, you can enjoy LIFESTYLE® system sound in another area of your house. Depending on which expansion product you choose, you may be able to connect a local sound source in that expansion room to further extend your choice of audio. You may then use the RC-38S remote to access all connected sources, regardless of where they're located.

Engineered to emit radio frequency signals that work through walls and floors, the RC-38S can command sound from different floors of your residence, too.

#### **How it differs from your primary remote**

The RC-38S remote works as a complement to the primary remote that came with your LIFESTYLE® system. This additional remote provides the control you need to listen to your system in other areas of your house.

 **Note:** *Unauthorized modification of the receiver or radio remote control could void the user's authority to operate this equipment.*

**Where to find ...**

Introduction ..... 2

    Thank you for choosing the RC-38S remote ..... 2

        Where to use this expansion remote ..... 2

        How it differs from your primary remote ..... 2

Deciding Where and How ..... 4

    Setting up your expansion products ..... 4

        To get an additional room of sound ..... 4

            With a Bose SA-2 or SA-3 amplifier and speakers: ..... 4

            With a 3•2•1 or 3•2•1 GS Series II system ..... 5

            With older Bose® products for expansion ..... 6

        To add more rooms of sound ..... 6

Preparing the Remote ..... 7

    Getting the remote ready to use ..... 7

        To install batteries ..... 7

    What each button does ..... 8

        System ON, OFF, silenced ..... 8

        Select the source ..... 8

        Select an audio program ..... 9

        Select a play mode ..... 9

        Confirm and return ..... 10

        uMusic™ intelligent playback system ..... 10

Audio Possibilities ..... 11

    Using the remote to control other audio ..... 11

        Two streams, two choices for you ..... 11

        Main room requirements ..... 11

            Other room and stream scenarios ..... 11

        How to make it happen ..... 13

Code Switch Setting ..... 14

    Some simple rules to keep it all straight ..... 14

        Additional legacy product rules ..... 15

        Make sure the house code settings match ..... 16

        How to change the settings, as needed ..... 17

            First check the house code setting (switches 1-4) ..... 17

            To receive the same audio stream as the main room ..... 17

            To set your RC-38S remote for other room use (switches 6-9) ..... 17

        Keep the room codes consistent ..... 18

    Now for the rewards ..... 18

Reference ..... 19

    Technical information ..... 19

    Troubleshooting ..... 20

    Log for remote switch settings and products ..... 21

### Setting up your expansion products

If you have purchased other Bose® link compatible products, you can pair them to work seamlessly with your new remote. This allows you to command sound from your LIFESTYLE® system in an entirely different part of your home.

#### **To get an additional room of sound**

It takes only a few steps to set up one additional room of sound with Bose products. With batteries installed in the RC-38S remote, you can use it to control these additional products.

#### **With a Bose SA-2 or SA-3 amplifier and speakers:**

1. Arrange and connect the speakers and amplifier as instructed in the amplifier owner's guide. (A Bose® link 'A' cable is supplied with the amplifier only.)
2. Check the room setting on the amplifier, as instructed in the owner's guide that came with it. This setting must be different from the main room remote.
3. Check the switch settings inside the battery compartment of the RC-38S remote. These include:
  - House code (switches 1-4): Must match the main room remote control house code setting.
  - Audio stream (switch 5): May be set like that of the main room remote *or* be set to receive a different audio stream instead. Set switch 5 in the RC-38S accordingly.
  - Room setting (switches 6-9): These must be different from the main room remote and identical to the room settings in the amplifier.

 **Note:** *Your RC-38S remote and the SA-2 or SA-3 amplifier switches are set at the factory with identical house codes, with switch 5 set to command audio stream 2, and with room switches set for use in Room B.*

4. If your amplifier and remote switches do not match, refer to "How to change the settings, as needed" on page 17.

## With a 3•2•1 or 3•2•1 GS Series II system

The 3•2•1 Series II and 3•2•1 GS Series II DVD home entertainment systems are also Bose® link compatible products designed to work with your LIFESTYLE® system.


This gives you the choice of listening to any of the 3•2•1 system sound sources or to audio stream 1 or 2 of the LIFESTYLE® system. All it requires is that the two systems be connected.

This connection requires use of a Bose® link 'B' cable. If you do not yet own one, you can purchase this cable by requesting Part Number 273619 from your authorized Bose dealer. Or, to contact Bose directly, refer to the address list included in the carton with your system.

This cable connects to the rear panel of both the 3•2•1 and LIFESTYLE® system media centers as shown (Figure 1). Use the Bose® link jack for this connection.

### Figure 1

Connecting 3•2•1  
(or 3•2•1 GS)  
Series II and  
LIFESTYLE®  
media centers

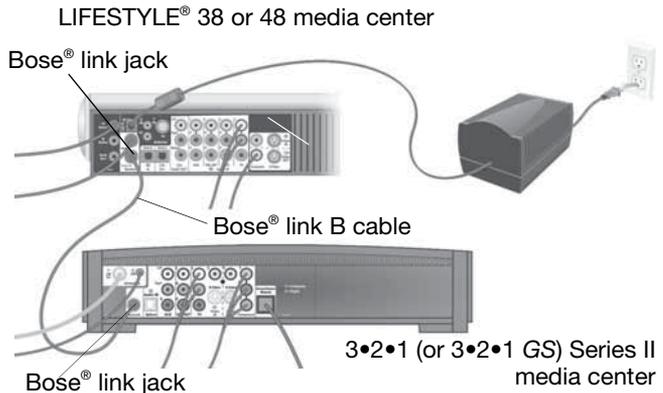

When the connections are completed, you can operate either system using the RC-38S remote.

By pressing the **Local** button, you tell the remote to control your 3•2•1 system. For access to the more advanced features of the 3•2•1 system, however, be sure to use the remote that came with it.

### ***With older Bose® products for expansion***

Some other Bose® products, which you may already own, can also connect to your LIFESTYLE® system. However, if the product you add is not Bose® link compatible, you are limited to expanding your system to one additional room.

How you make this connection will depend on the type of product you have. It could be:

- powered speakers, such as an Acoustimass® 5 powered speaker system
- an earlier system, such as a 3•2•1 Series I system, a Wave® radio or Wave® radio/CD
- indoor or outdoor speakers connected to a Bose SA-1 amplifier

For details, refer to “Some simple rules to keep it all straight” on page 14.

For more information on compatibility and cables, please contact Bose. Refer to the address list provided with your LIFESTYLE® system.

### ***To add more rooms of sound***

To set up Bose® link products in multiple rooms, you can connect Bose SA-2 and SA-3 amplifiers in a daisy-chain arrangement. To include more than one non-amplifier solution, such as a 3•2•1 or Wave® product, you need the 50-foot Extension/Expansion cable from Bose. This cable connects to the Bose® link jack on your system media center, or to the pass-through jack on the last connected amplifier. Then, at the other end, its 4-jack connector allows you to connect more products.

To purchase the Extension/Expansion cable from your authorized Bose dealer, ask for Part Number 275475-050. Or, to contact Bose directly, refer to the address list provided with your LIFESTYLE® system.

## Getting the remote ready to use

You can use your RC-38S remote control as soon as the batteries are installed. It is pre-set at the factory for use outside the main room where your LIFESTYLE® system is located, in an area where another Bose® system or speaker pair is set up.

Or, you can use it as a secondary remote in the same room with the LIFESTYLE® system instead. To learn how to set switches inside the battery compartment for that purpose, refer to “How to change the settings, as needed” on page 17.

### To install batteries


1. Slide the battery cover off the back of the remote.

**Note:** You may notice the small switches just above the batteries inside the compartment. These are the house code, stream selection, and room code switches, explained on page 12.

2. As you install the four supplied batteries, match the polarity markings (+ and -) on each one to markings inside the battery compartment (Figure 2).

**Figure 2**

Polarity marked on the batteries

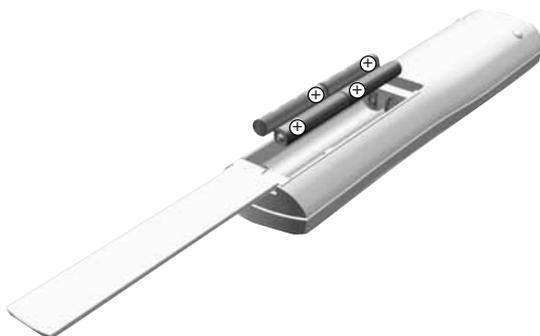

3. Slide the battery cover back into place until it snaps closed.

**Note:** If you notice a decrease in the range or response of the RC-38S remote control, the batteries may need to be changed.

## What each button does

Styled after the primary remote, which is packed with the media center, the RC-38S remote has similar buttons.

### System ON, OFF, silenced



Turns the system on and off. Selects the source last used.



Mutes the volume for all connected speakers (main and in other rooms).



Mutes or unmutes the volume in the current room.

### Select the source



Selects the audio source located in the room where the remote is designated for use. Also switches between the local source inputs.



Turns the system on and selects the source connected to the TV input on the media center.



Turns the system on and selects the source connected to the CBL/SAT input on the media center.



Turns the system on and selects the source connected to the VCR input on the media center.



Turns the system on and selects the uMusic™ intelligent playback system mode of stored CD play. Overrides other stored CD modes.




Turns the system on and selects the built-in disc player as source.




Turns the system on and selects the built-in FM/AM radio tuner set to the station last selected. Switches between FM and AM when the radio is on.



Turns the system on and selects an AUX source connected to the media center.

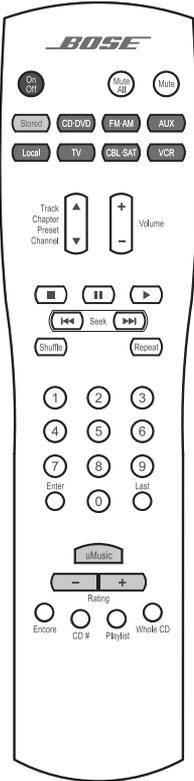


## Select an audio program

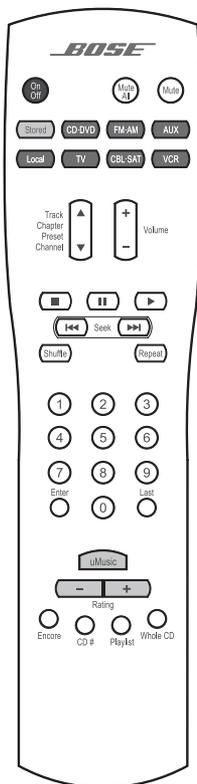

Seek backward or forward to the next strong radio station.



Skip backward or forward to the next CD track, DVD chapter, radio preset, or TV channel.

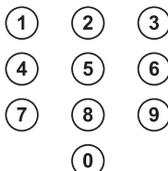

Select a CD track, DVD chapter, radio station, or TV channel that corresponds to the numbers pressed.

## Select a play mode



Starts the disc player.



Pauses the disc player.



Stops the disc player.



Plays CD tracks out of order. Press Shuffle again to cancel this mode.



Repeats a whole CD or track, DVD chapter, or DVD title. Press Repeat again to cancel the repeat mode.

## Confirm and return

Enter




Confirms the channel selection on certain TVs.

Last



Returns to the previous TV channel (if the TV supports this feature).

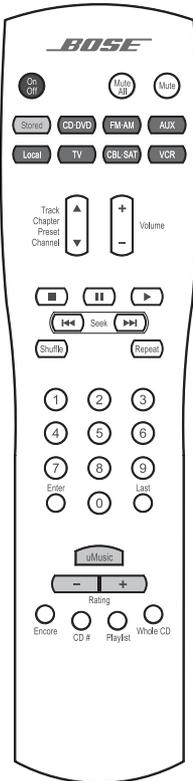

## uMusic™ intelligent playback system



Selects the uMusic intelligent playback system mode of stored CD play.

Overrides other stored CD modes. Available with LIFESTYLE® 38 and 48 systems only.



Rating

Applies a negative (-) or positive (+) rating to the stored music playing.

Immediately moves to a new track if a negative rating is applied. To make sure that your voting is affecting the appropriate preset, press the Stored button, then the number of the desired preset, whenever you listen to the uMusic intelligent playback system.



Encore

Queues up and plays stored music that most closely matches the style of the current track.



CD #

Plays the tracks from a specific CD when it is pressed just before pressing the number keys for that stored CD.



Playlist

Plays all the tracks, if any, assigned to a playlist. Can be used with additional play modes, like Encore. To add a Stored track to a playlist, press and hold the Playlist button.



Whole CD

Skips from the track currently playing to the first track on the CD of origin and plays that CD from beginning to end.

## Using the remote to control other audio

Your RC-38S remote is capable of working with other audio components connected to your LIFESTYLE® system media center. While it cannot turn these components on or off, it can change the volume, start or stop play, and control other basic operation. Try it and see.

 **Note:** *With a CD changer connected to your LIFESTYLE® system, commands from the RC-38S remote can affect the current CD, but cannot change to another CD.*

### **Two streams, two choices for you**

When you set up speakers in another room, you have some choices for what those speakers will play.

Your LIFESTYLE® system provides an exciting set of options for you by offering two independent audio streams. So, even when you are in the other room, you can choose to listen to whatever is playing in the main room, or to another audio source that's part of the system.

Two streams are simply the means to these added choices. They can carry audio from the same source or from two sources, like the CD player and FM tuner, or even two uMusic system presets, at the same time, to a multitude of rooms — up to 15 in all!

So before you use an RC-38S remote control in another room, you can plan how you want the audio assigned.

### **Main room requirements**

To simplify your choices, some LIFESTYLE® system assignments are fixed, and do not vary. These include:


- Stream 1 audio is the only stream available in the main room (Room A) where your LIFESTYLE® system is installed.
- Room switches in the primary remote control *must always* be set for use in Room A.

### **Other room and stream scenarios**

It is possible for a total of 15 rooms (A - O) to have Bose® link products installed.

Here are some other rooms where the Stream 1 audio might be appreciated, if Room A is your living room:

## Audio Stream 1 Listening Area

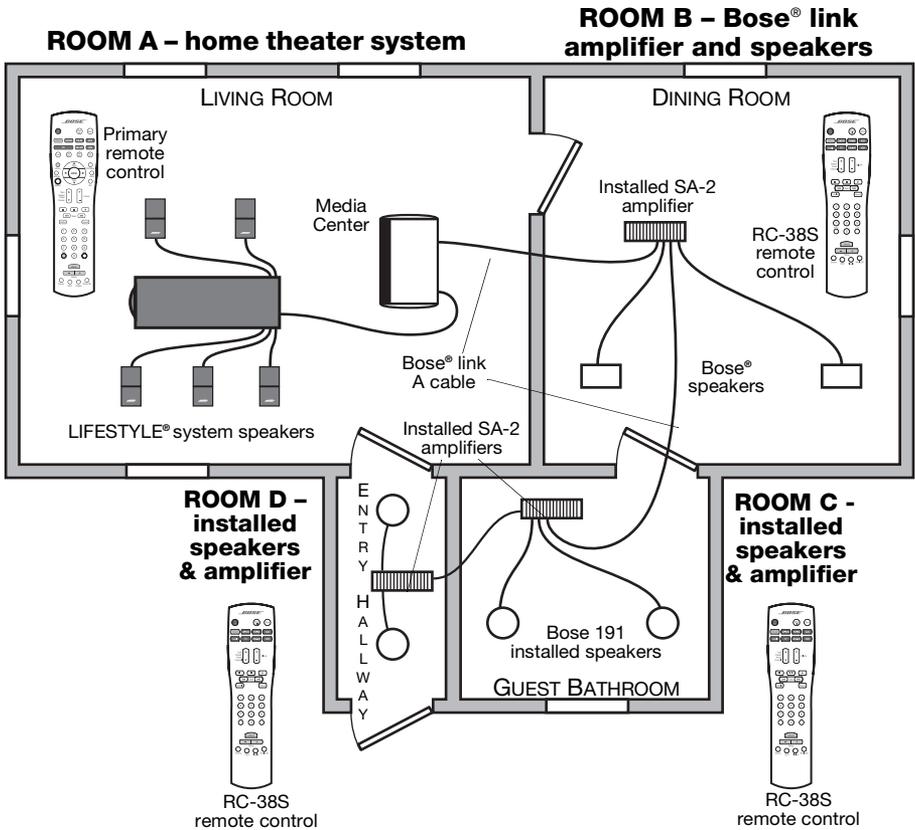

- Dining area, assigned as Room B
- Guest Bathroom, assigned as Room C
- Hallway to the front door, assigned as Room D

In this case, here are some rooms you might want to have receive Stream 2, instead (see “Other room and stream scenarios - 2” on page 19)

- Kitchen, assigned as Room E
- Den next to kitchen, assigned as Room F
- 3-season porch off the kitchen, assigned as Room G
- Area around an outside pool, assigned as Room H

You can assign a Bose® link compatible device to rooms B through N. Room O is reserved for non-Bose amplifiers and legacy (older) Bose powered speakers.

For connecting an SA-1 amplifier, see the instructions on page 15.

### ***How to make it happen***

First decide which rooms you want to group to receive the same audio stream. Then adjust the room and stream settings, using the small switches inside the RC-38S remote control battery compartment.

For details, refer to “How to change the settings, as needed” on page 17.

### **Some simple rules to keep it all straight**

Whether you use just one or many RC-38S remotes, keep these guidelines in mind.

- Remote controls for other-room use must be set with:
  - the same house code as the primary remote.
  - a different room code from the primary remote.
  - a different room code from every other RC-38S remote, with one exception. If you want to use the RC-38S as an extra main-room remote, it must be set for use in Room A, the same as the primary remote.
- If the RC-38S remote will be used with Bose® link compatible products, such as:
  - with a LIFESTYLE® SA-2 or SA-3 amplifier and passive speakers, the amplifier and remote must be set to the same room code.
  - with a 3•2•1 Series II or 3•2•1 GS Series II system, the remote and system must be set to the same room code.
- If the remote will be used with older Bose® products:
  - with Bose legacy speakers or systems (purchased before 2004), only the remote needs a room code setting. Set it as Room O.
  - with a LIFESTYLE® stereo amplifier (SA-1) the RC-38S must be set to Room B so it matches the amplifier room setting.

### **Additional legacy product rules**

With a few special settings, and operational limitations, legacy Bose (and other brand) products can work with your LIFESTYLE® 38 or 48 DVD home entertainment system. They may pre-date the Bose® link system of multi-room expansion, but older speakers and systems can still benefit from its flexibility for renewed performance.

Please note the special rules that apply below.

- To use a LIFESTYLE® stereo amplifier (SA-1), which is set to receive audio stream 2:
  - keep the RC-38S remote set to receive audio stream 2.
  - set the *Protocol* option under the *Media Center* feature in the System menu to *Legacy*. Refer to your system *Operation Guide* for details on making System menu changes.
- To use a Wave® radio, a Wave® radio/CD, Acoustimass® 5 powered speakers, or LIFESTYLE® powered speakers:
  - set the RC-38S remote in that expansion room for Room O and to receive audio stream 2.
  - if your expansion product includes a remote control (the Wave® radio, for example) set that remote to the maximum volume you want. Then use the RC-38S remote to adjust the volume as needed.
- To use a LIFESTYLE® stereo amplifier (SA-1) or Acoustimass® 5 powered speakers you need a legacy variable speaker adapter (Part Number 278894-103).


### **Make sure the house code settings match**

For all of your secondary remote controls to work, the house code in each must match the one in your primary remote.

The first four switches define the house code and establish which media center the remote can control.

**Figure 3**

*Nine switches inside the battery compartment*

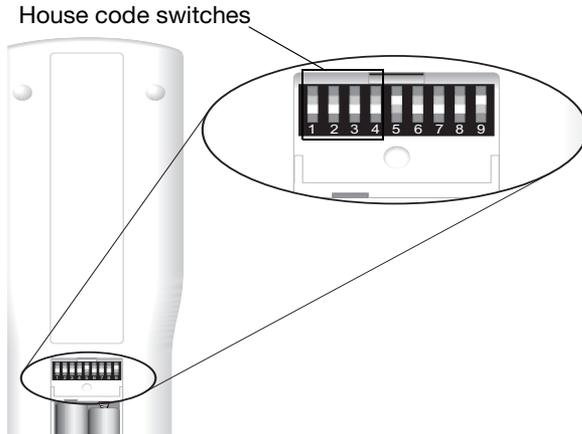

At the factory, RC-38S remotes are set with the same house code as your LIFESTYLE® system. Unless you've changed house codes, you do not need to change these first four switches.

However, in the case of a house code conflict with another nearby LIFESTYLE® system, you can change the house code in the primary remote to resolve the conflict. If you ever use this option, the changed house code must be applied to any expansion remote controls used with this system, too.

At the factory, each RC-38S remote has its remaining switches set:

- To receive audio stream 2 (switch 5)
- To be used in Room B (switches 6-9)

To check the settings in your new remote, remove the battery cover to see the small switches just above the batteries.

### **How to change the settings, as needed**

Use a fine-pointed pen or other small tool to move each switch to its new position.

#### **First check the house code setting (switches 1-4)**

Make sure that the first four switches on the left, as you face them, match the house code settings in your primary remote. For more details on these switches, refer to the *Operation Guide* provided with your system.

#### **To receive the same audio stream as the main room**

Switch 5, the middle switch in the row, is set currently to receive audio stream 2, which is different from the stream heard in the main room (A).

To receive audio stream 1 instead, set switch 5 *down*.

#### **To set your RC-38S remote for other room use (switches 6-9)**

Before you change them, the RC-38S room switches are set for its use in Room B (as shown in the table on page 18).


If you use more than one RC-38S remote, each one must have unique room switch settings, to operate independently of the others. It must also match the room settings of any Bose® link amplifiers you will control using the RC-38S in that room.

# Code Switch Setting

## Keep the room codes consistent

Use one of the codes shown in the chart below for each room where a remote will be used.

You may also use the log on the inside back cover of this guide to note the room and audio stream assignments for multiple rooms and remotes.

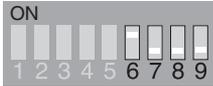	Room		Room
	B		I
	C		J
	D		K
	E		L
	F		M
	G		N
	H		O

## Now for the rewards

By following these instructions, you can be sure your new RC-38S remote is set to work with your LIFESTYLE<sup>®</sup> system. And you can get ready for wide-area Bose<sup>®</sup> quality audio performance.

Enjoy!

## Technical information

**Remote control range:** 65 ft (20 m)

**Size:** 9.1"H x 2.2"W x 0.9"D (23 cm x 5.7 cm x 2.4 cm)

**Weight:** 5.6 oz (160 G)


**Battery type:** AAA or IEC-LR3 1.5V batteries (4)

**Frequency:** U.S./Canada: 27.145 MHz  
EU/other: 40.685 MHz

**RF Field Strength:** <80dBµV/m@ 3 meters (average)

## Other room and stream scenarios - 2

### Audio Stream 2 Listening Area

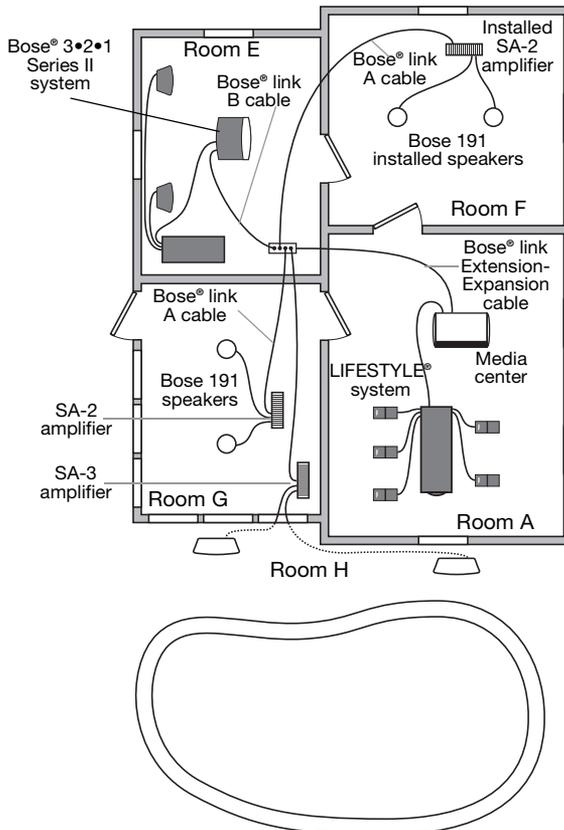

## Troubleshooting

English

### Problem

### What to do

No sound

- Make sure the house code setting of the RC-38S remote control matches the house code setting of the primary remote.
- Make sure the remote room code setting is correct.
- If used in a room where a Bose® amplifier is located make sure:
  - the remote and amplifier room codes match.
  - the indicator on the amplifier is lit to show it is working.

Intermittent response from the LIFESTYLE® system to RC-38S remote commands

- Check the batteries to see if they need changing.
- Move the remote to see if the problem is simply caused by “dead spots” in the building.
- If the above actions do not solve the problem, you may need to obtain a remote control antenna extender cable.
- To request one from Bose, refer to the address list provided with your system.

Your system turns on or off unexpectedly, or other tuning changes occur when no buttons on the RC-38S remote have been pressed

- Check to see if someone in the main room is using the primary remote control.
  - If not, you may be experiencing a control conflict with another LIFESTYLE® system near your home. Changing the house codes in the primary and in the RC-38S remotes should solve this problem.
- Refer to your system *Operation Guide* for details on when and how to change the house code and get your system to respond to the new code.

## Log for remote switch settings and products

Use the table below to list the Bose® link products you add, and note which:

- area of your house where you will use the remote
- room code you assign to it
- audio stream you choose to receive in that area.

<b>Floor &amp; Location</b>	<b>Room Code</b>	<b>Audio Stream</b>	<b>Remote Type</b>	<b>Product in the Room</b>
	<b>A</b>	<b>1</b>	<b>Primary</b>	<b>LIFESTYLE® system</b>
	<b>B</b>		<b>RC-38S</b>	
	<b>C</b>			
	<b>D</b>			
	<b>E</b>			
	<b>F</b>			
	<b>G</b>			
	<b>H</b>			
	<b>I</b>			
	<b>J</b>			
	<b>K</b>			
	<b>L</b>			
	<b>M</b>			
	<b>N</b>			
	<b>O</b>			

***BOSE***<sup>®</sup>  
*Better sound through research*<sup>®</sup>

©2004 Bose Corporation, The Mountain  
Framingham, MA 01701-9168 USA  
278399-001-ENGvo AM Rev.00 CCM-000708