

AM/FM Pocket Radio (120-0454)

Features

Faxback Doc. # 3667

The Radio Shack AM/FM Pocket Radio is designed to provide you with high-quality sound. The lightweight, portable design lets you listen to radio programs almost anywhere you go. With the supplied earphone, you can listen to the radio in privacy.

#### INSTALLING BATTERIES

Your radio uses three AA batteries. For the best performance, we recommend alkaline batteries such as Radio Shack Cat. No. 23-552.

1. Slide the battery compartment cover in the direction indicated by the arrow.
2. Insert the batteries as indicated by the polarity symbols (+ and -) marked inside the battery compartment.
3. Replace the battery compartment cover.

Notes: Replace the batteries when the radio's sound weakens.

If you plan not to use the radio for a month or more, remove the batteries.

#### PLAYING THE RADIO

1. Rotate OFF/VOL downward until it clicks to turn on the radio.
2. Set FM/AM to the desired band.
3. Adjust TUN to tune to the desired station.

Note: For the best FM reception, fully extend the telescoping antenna. To improve AM reception, adjust the radio's position.

4. Adjust OFF/VOL to a comfortable listening volume level.
5. Set TONE HI/LO to the desired setting:

HI - for normal sound

LO - to reduce high frequencies

To turn off the radio, rotate OFF/VOL upward until it clicks.

#### USING THE EARPHONE

To listen in privacy, plug the supplied earphone into the EAR jack.

Note: The internal speaker automatically disconnects when you plug in the earphone.

#### Listening Safely

Do not listen at extremely high-volume levels. Extended high-volume listening can lead to permanent hearing loss. To protect your hearing, follow these guidelines when you use earphones.

Set the volume to the lowest setting before you begin listening.

After you begin listening, adjust the volume to a comfortable level.

Once you set the volume, do not increase it. Over time, your ears adapt to the volume level, so a volume level that does not cause discomfort might still damage your hearing.

## Traffic Safety

Do not wear the earphone while operating a motor vehicle or riding a bicycle. This can cause a traffic hazard and is illegal in some areas.

Even though some earphones are designed to let you hear some outside sounds when you listen at normal volume levels, they still present a traffic hazard.

## FCC INFORMATION

The radio might cause interference on the TV or another radio's receiver, even when it is operating properly. To determine whether the radio is causing the interference, turn it off. If the interference goes away, the radio is causing the interference. Try to eliminate the interference by:

- Moving the radio away from the receiver

- Contacting your local Radio Shack store for help

If you cannot eliminate the interference, the FCC requires that you stop using the radio.

The following suggestions will help you care for the Radio Shack AM/FM Pocket Radio so you can enjoy it for years.

Keep the radio dry. If it gets wet, wipe it dry immediately.

Use and store the radio only in normal temperature environments.

Handle the radio gently and carefully.

Keep the radio away from dust and dirt, which can cause premature wear of parts.

Wipe the radio with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the radio.

Use only fresh batteries of the required size and type. Always remove old or weak batteries.

Modifying or tampering with the radio's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it. If the radio is not performing as it should, take it to your local Radio Shack store for assistance.

