

FCC Information

English

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For Your Safety

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way. If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. **Do not attempt to bypass this safety feature.**

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Have a Blast-Just Not in your eardrums! Make sure you turn down the volume on the unit before you put on headphones. Increase the volume to the desired level only after headphones are in place.

Main plug is used as the disconnect device, it shall remain readily operable and should not be obstructed during intended use. To be completely disconnected the apparatus from supply mains, the main plug of the apparatus shall be disconnected from the mains socket outlet completely.

Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies. This product complies with DHS Rules 21 CFR Subchapter J. Applicable at the date of manufacture.



Precautions

General Precautions

Water and Moisture - Do not use this product near water for example, near a bathtub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool, and the like. Do not spill liquids on your Portable DVD or its components as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. To clean your Portable DVD use a soft slightly damp cloth. Always allow all the components to dry completely before using again.

Cleaning - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

Heat - The product should be placed away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. Do not expose the Portable DVD or any of its components to extreme heat or cold. Do not expose the player to direct sunlight.

Attachments - Do not use attachments not recommended by the product manufacturer as they may cause hazards.

Precautions when watching and playing


When using your Portable DVD player do not sit or stand too close to the screen. Play as far back from the screen as possible. For the best game image, look directly at the Portable DVD display on your TV screen and only operate in good light. Do not play if you are tired or need sleep. Always play in a well-lit room. Some people may experience fatigue or discomfort after playing for a long time. Be sure to take a 10 to 15 minutes break at least every hour while playing.

Specifications

- Model: DRC635N
- TV System: NTSC
- Supported Disc Formats: DVD, SVCD, VCD, CD, HDCD, CD-R, CD-RW, DVD+R, DVD+RW
- Supported File Formats: DivX, MPEG, MP3, WMA, JPEG, Kodak, Picture CD
- DVD Regional Code: 1
- AV Input/Output: Composite x 1
- Power Requirement: DC in 9V (power adapter bundled)
- Power Consumption: <10W
- Operating Temperature: 5°C to 35°C (41°F to 95°F)
- Operating Humidity: 5% to 90% (no condensation)
- Size (without battery): 200(W) x150(D) x 32(H) mm
- Weight (without battery): 760g

General Controls

Main Unit

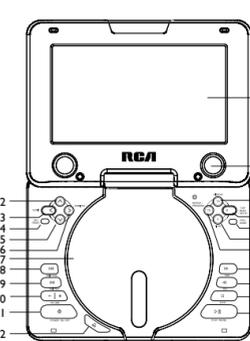


Rear Side



Front Side



Remote Control

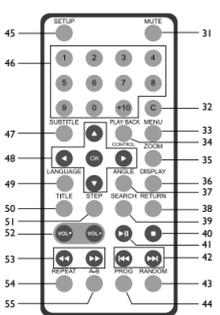

General Controls

- LCD display
- Speakers
- Selects display information
- Enters player's setup menu or disc's menu
- Returns to disc's menu
- Enters disc's title menu (if available)
- Accesses repeat and program modes
- Searches forward
- Searches backward
- Stops playback
- Starts and pauses playback
- Moves upward in menu
- Moves leftward in menu, selects audio setting
- Confirms selections
- Moves downward in menu
- Moves rightward in menu, selects subtitle setting
- Disc compartment door
- Skips forward a chapter/track
- Skips backward a chapter/track
- Adjusts volume
- Switches on / off the player
- Opens disc compartment door
- Headphone jacks
- Function switch
- USB connector
- Audio input / digital output jack
- Video in / out jack
- Power jack
- Power indicator
- Low battery indicator
- Muting sound
- Clears input
- Enters disc's menu
- Enters VCD playback control menu
- Selects zoom options

- Selects display information
- Selects DVD's angle setting
- Returns to top of menus
- Enters search menu
- (STOP) - stops playback
- (PLAY/PAUSE) - starts and pauses playback
- (SKIP FWD/ SKIP REV) - skips backward or forward a chapter or track
- Selects random playback mode
- Enters program mode
- Enters player's setup menu
- Numeric input keys
- Selects subtitle setting
- Navigation keys in indicated direction, press OK to confirm selection
- Selects language setting
- Enters title menu (if available)
- Enters step advance mode
- Adjusts volume
- (FWD / REV) - search backward or forward
- Selects repeat modes
- Performs A-B repeat


Notes on the remote control
On the remote control, remove the plastic tab from the battery compartment before first use. To replace battery, slide the release lock to the right and pull out the battery tray. (One button type, CR2025 battery required)

When using the remote control, make sure you are pointing the remote sensor located at the front of the player (where the power indicator is located).

CAUTION
Danger of explosion if battery is incorrectly installed. Replace only with the same or equivalent type of battery.

Tomcom: 5632 6258

user manual

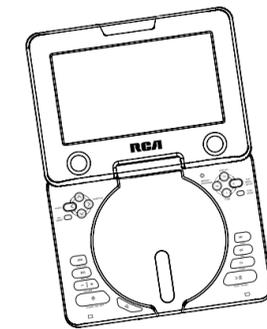

EN/E DRC635N

Please read this user manual carefully to ensure proper use of this product. Keep this manual for future reference. Es importante leer este manual antes de usar por vez primera su equipo.

Connections

Connecting the Power Adapter

- Connect the power adapter to the DC jack of the unit.
- Connect the other side of the power adapter with the wall plug or car adapter.
- Turn on the power.
- Disconnect the adapter if the set is not used for a period of time.

Installing the Battery

- Plug in the battery at the bottom of the unit.
- Slide the battery to the side until a "click" is heard.
- The unit is now powered by the battery.

Removing the Battery

- Turn the unit upside down.
- Locate the lock at the bottom.
- Push down the lock and slide the battery to the side to release.

Charging the Battery

- Connect the power adapter to the power jack of the unit.
- Turn off the power to start charging.
- The indicator is red when charging and will turn green when the battery is fully charged.
- The battery cannot be charged while the unit is being used.

External Connections

- This player can output sound and picture to external devices. To do so, slide the Function Switch on the rear side of the unit to the DVD MODE position. Always switch off the player before connecting to any devices.
- Connect the smaller yellow connector to the VIDEO IN/OUT jack of the player.
 - Connect the larger yellow connector (with pin) to the video input jack of external device.
 - Connect the black connector to the AUDIO IN/DIGITAL OUT jack of the player.
 - Connect the orange connector (with pin) to the audio input jack of the external device.

This player can also be used as a display for other devices at DVD player, game console etc. To do so, slide the Function Switch on the rear side of the unit to the AV IN position. Always switch off the player before connecting to any devices.

- Connect the smaller yellow connector to the VIDEO IN/OUT jack of the player.
- Connect the larger yellow connector (without pin) to the video output jack of external device.
- Connect the black connector to the AUDIO IN/DIGITAL OUT jack of the player.
- Connect the white and red connectors (without pin) to the audio output jacks of the external device.

Quick Start & Player Setup

Accessories

- Check that all the following accessories come with your unit in the package:
- Audio/Video cable x 2
 - Lithium Ion Polymer Battery x 1
 - AC/DC power adapter x 1
 - Car power adapter x 1
 - Carrying case x 1

Quick Start

- Press **POWER ON/OFF** to turn on the player. The DVD logo appears on the screen.
- Open the disc compartment door. Place a disc in the tray with the printed side up. Push back the compartment door. The player will automatically try to read and play the disc. If a menu appears, one of its options can be selected to start playing the disc. Select it using **▲ ▼ < >** keys and press **OK**.

Player Setup

When disc playback is stopped, press **SETUP** and the player's setup menu will show on screen.

Select a menu icon using **< >** keys. Then select one of the available options using **▲ ▼** keys. Press **>** key to access the submenus and use **▲ ▼** keys to select an option. Press **OK** to confirm your selection, return to a previous menu using **<** key.

To exit from the player menu, press **SETUP** again.

System Setup
Setup the source, TV system, TV type, password, rating, screen format and restore to default settings.

Rating feature is a parental guardian feature

which disables playback of certain DVDs based on their ratings: from 1 (most restrictive) to 8 (least restrictive). DVDs that are rated above the level you set will not play until the correct password is entered. If a password has been set, you cannot change the rating without entering the correct password. To set up the password, highlight the Password part to input a 4-digit password with the numeric keys on the remote control. Press **OK** to set the password.

Language Setup
Setup the language of the OSD, Audio, Subtitle and Menu. Also register your DivX VOD files in the DivX(R) VOD menu (see "Registration for DivX Files" for details). Use the numeric keys on the remote control for inputting the registration number. For DivX playback, you need to select the correct channel set between Western and Central European in "DivX Subtitle" in order to display properly subtitles in some eastern European languages.

Audio Setup
Setup the audio output format.

Video Setup
Setup the brightness, contrast, hue and saturation levels.

Digital Setup
Setup the DRC (Dynamic Range Compression).

TVG Setup
TVG is the Foul Language Filtering technology to remove offensive language from the programs you watch. You need to purchase a license to activate this feature (for details: www.tvguardian.com).

For more information, refer to More Information

- More on TVG.

DVD Playback

Playback

For basic playback, refer to "Quick Start". Note: The player stops the point where playback was interrupted. If you press **PLAY/PAUSE** again, playback resumes from this point. To stop playback completely or to start from the beginning, press **STOP** twice.

Accelerated Play

While the disc is playing, press **REV** or **FWD** one or more times to vary the speed and the rating without entering the correct password. To set up the password, highlight the Password part to input a 4-digit password with the numeric keys on the remote control. Press **OK** to set the password.

Still Image
While the disc is playing, press **PLAY/PAUSE** once to freeze frame.

Frame Advance

While the disc is paused, press **STEP** (remote control) to activate STEP mode. Each press of **STEP** will advance forward image by image. Press **PLAY/PAUSE** to resume normal playback.

Changing Chapter / Track

While the disc is playing, press **SKIP REV / FWD** to go immediately to the next or previous chapter, or to the next or previous track.

Repeat Playback

During playback, press **REPEAT** repeatedly to select repeating a chapter or a title (DVD disc).

A-B Repeat

During playback, press **A-B** (remote control) once at the start and press again at the end of a desired repeat section. The section will repeat continuously until you press **A-B** to resume normal playback.

More Information

Game Operations

Games	Directions(1)	Action keys
Sudoku	L,R,U,D	A (access the number list, confirm number selection), B (access option menu)
Space Castle	L,R	A (fire)
VR Racing	L,R	A (start), T/A/A (accelerate), T/B/B (brake)
Sea War	L,R	TA (continuous fire), A (fire)
Dragon Fire	L,R,U,D	-
Golden Arrow	L,R,U,D	TA/A (set angle / fire arrows), T/B/B (set the wind strength)
Push the Box	L,R,U,D	TA/A (start / undo last move), T/B/B (restart current level)
Bean's Adventure	L,R,U,D	TA/A (abandon this attempt)
Ball Clash	L,R	TA/A (pick up ball / throw ball)
Block Out	L,R	TA/A (launch the ball)
Road Star	L,R,U,D	TA/A (hold to set acceleration, release to start jump slowly), T/B/B (continue the game)
Super Surfing	L,R	TA/A (jump)
Bubble Blaster	L,R,U,D	TA/A (shooting)
Fish Catcher	L,R	TA/A (catch action)
Ball Mania	L,R,U,D	TA/A (pause the game)
Grass Cutter	L,R,U,D	-
Jewel Master	L,R,U,D(3,D)	TA/A/T/B/B (change sequence of three jewels)
Motor Rally	L,R	T/B/B (brake), A (accelerate)
Bitlie Nest	L,R	-
Insect Chase	L,R,U,D	-
Bingo Zap	L,R,U,D	TA/A/T/B/B (start next screen)
Last Cabra	L,R,U,D	TA (continuous fire), A (fire)
Ocean Quest	U,D	A (accelerate), B (brake)
Pinball Track	L,R,U,D	-
Runner Car	L,R	A (accelerate), T/B/B (brake)
Spin Ball	L,R,U,D	-
Animal Pool	L,R	TA/A (throw the ball), T/B/B (pick up the ball)
Go Bango	L,R,U,D	TA/A (put the chess)
Garden Maze	L,R,U,D	TA/A (exchange the blank tile with the selected one)
Submarine War	L,R,U,D	TA/A (confirm the selection, bombing), T/B/B (change direction)

- Note:
- (1) L = <, R = >, U = ▲, D = ▼
 - (2) L key rotates the center disc counter-clockwise, R key rotates the center disc clockwise.
 - (3) Press U key to accelerate.
- Press **OK/RESET** anytime during a game to stop playing and return to main game menu.

The descriptions and characteristics in this owner's manual are for the purpose of general reference only and not as a guarantee. In order to provide you with the highest quality product, we may make changes or modifications without prior notice. The English version serves as the final reference on all product and operational details should any discrepancies arise in other languages.

DVD Regional Code

Your DVD player has been designed to process regional management information that is stored on DVD discs. The regional code for your player is 1 (The U.S., U.S. Territories and Canada). Only DVD discs that have regional codes of 1 or ALL (for all regions) can be played by your player.


DVD Copy Protection

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited consumer uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

More Information

Car Mounting

You can easily mount the player on the back of a car seat with the help of the carrying case. See illustration below:

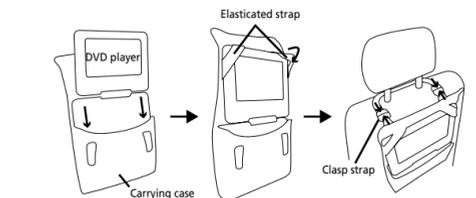

More on TVG

The license provides you with a 5 digit activation code. Input the activation code in this setup menu with the numeric keys on the remote control. Press **OK** to confirm. When activation is successful, a message "TVG ACTIVATED..." shows at the bottom of the menu. After you have activated TVG, more settings can be defined.

TVG Mode:
Select among Off, Tolerant, Moderate and Strict with increasing filtering standards.

Word Subtitle Filtering:
In addition to the main TVG mode listed above, you can turn certain word subsets on or off:

Damn and Hell - filters out variations of "Damn" and "Hell".

More Information

Troubleshooting Tips

- The unit is not working.
- Make sure the power cord or battery is properly connected and battery is not empty.
- The unit cannot operate when the car adaptor power supply voltage is above 16V.
- There is no sound or picture.
- Check the connection to the mains socket or battery.
- Make sure the power switch is on.
- Make sure the power outlet is operational.
- Make sure the power cord is not damaged.
- Make sure the volume is not set too low.
- There is no sound or sound quality is poor.
- Make sure the audio jacks are securely connected.
- Make sure the audio connector is not damaged.
- Make sure the volume is turned up.
- Make sure you have set the player's audio settings correctly.
- Make sure you have entered the correct AV input for your TV.
- Make sure the audio is not set to mute.
- There is no picture or picture quality is poor.
- Make sure that the Function Switch is on the proper position.
- Make sure the video jacks are securely connected.
- Make sure you have entered the correct AV input for your TV.

Troubleshooting Tips


Car Mounting

- The unit is not working.
- Make sure the power cord or battery is properly connected and battery is not empty.
- The unit cannot operate when the car adaptor power supply voltage is above 16V.
- There is no sound or picture.
- Check the connection to the mains socket or battery.
- Make sure the power switch is on.
- Make sure the power outlet is operational.
- Make sure the power cord is not damaged.
- Make sure the volume is not set too low.
- There is no sound or sound quality is poor.
- Make sure the audio jacks are securely connected.
- Make sure the audio connector is not damaged.
- Make sure the volume is turned up.
- Make sure you have set the player's audio settings correctly.
- Make sure you have entered the correct AV input for your TV.
- Make sure the audio is not set to mute.
- There is no picture or picture quality is poor.
- Make sure that the Function Switch is on the proper position.
- Make sure the video jacks are securely connected.
- Make sure you have entered the correct AV input for your TV.

Troubleshooting Tips

Car Mounting

You can easily mount the player on the back of a car seat with the help of the carrying case. See illustration below:

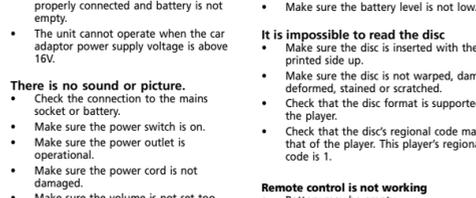

More on TVG

The license provides you with a 5 digit activation code. Input the activation code in this setup menu with the numeric keys on the remote control. Press **OK** to confirm. When activation is successful, a message "TVG ACTIVATED..." shows at the bottom of the menu. After you have activated TVG, more settings can be defined.

TVG Mode:
Select among Off, Tolerant, Moderate and Strict with increasing filtering standards.

Word Subtitle Filtering:
In addition to the main TVG mode listed above, you can turn certain word subsets on or off:

Damn and Hell - filters out variations of "Damn" and "Hell".

U.S. Limited Warranty

What your warranty covers:
• Defects in materials or workmanship.
For how long after your purchase:
• 90 days from date of purchase - unit exchange, which includes parts and labor. 91 days to 1 year from date of purchase - unit exchange, which includes parts only; you pay the labor.

What we will do:
• Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.
• Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

How to make a warranty claim:
• Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
• Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

**Thomson Inc.,
Product Exchange Center,
11721 B Alameda Avenue,
Somero, Texas 79227**

• Insure your shipment for loss or damage. Thomson accepts no liability in case of damage or loss en route to Thomson.
• Pay any charges billed to you by the Exchange Center for service not covered by warranty.
• A new or refurbished unit will be shipped to you freight prepaid.

What your warranty does not cover:
• Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.)
• Installation and set-up service adjustments.
• Batteries.
• Damage from misuse or neglect.

U.S. Limited Warranty

• Products which have been modified or incorporated into other products.
• Products purchased or serviced outside the USA.
• Acts of nature, such as but not limited to lightning damage.
Product Registration:
• Please complete and mail the Product registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

Limitation of Warranty:
• THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
• REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How state law relates to this warranty:
• Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
• This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your product outside the USA:
• This warranty does not apply. Contact your dealer for warranty information.

More Information

Troubleshooting Tips

- The unit is not working.
- Make sure the power cord or battery is properly connected and battery is not empty.
- The unit cannot operate when the car adaptor power supply voltage is above 16V.
- There is no sound or picture.
- Check the connection to the mains socket or battery.
- Make sure the power switch is on.
- Make sure the power outlet is operational.
- Make sure the power cord is not damaged.
- Make sure the volume is not set too low.
- There is no sound or sound quality is poor.
- Make sure the audio jacks are securely connected.
- Make sure the audio connector is not damaged.
- Make sure the volume is turned up.
- Make sure you have set the player's audio settings correctly.
- Make sure you have entered the correct AV input for your TV.
- Make sure the audio is not set to mute.
- There is no picture or picture quality is poor.
- Make sure that the Function Switch is on the proper position.
- Make sure the video jacks are securely connected.
- Make sure you have entered the correct AV input for your TV.