


WineCooler

INSTRUCTION BOOKLET

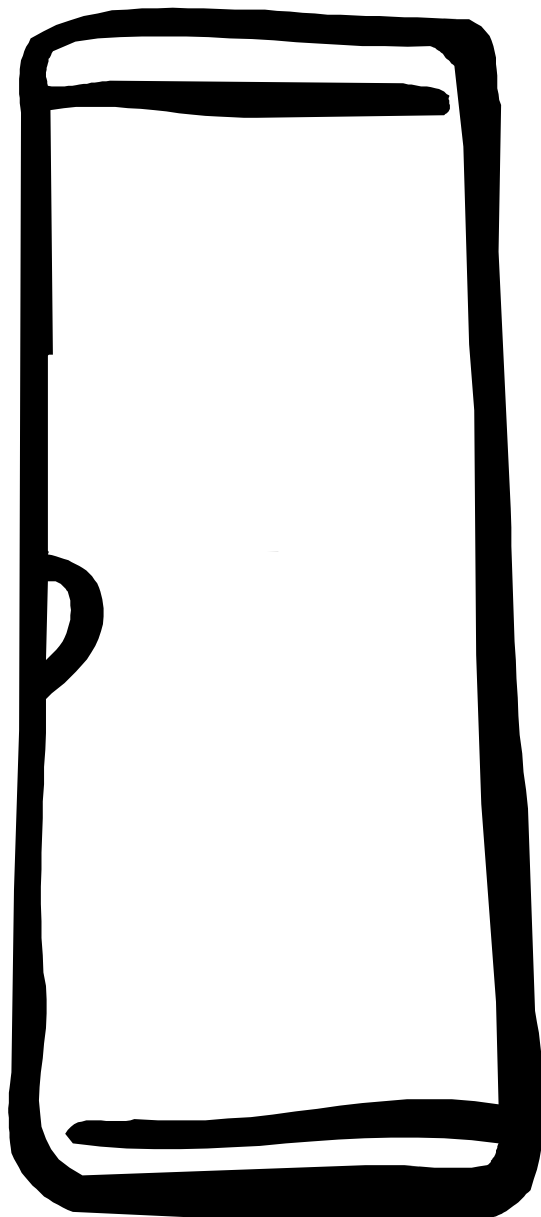

ERC3711WS

Important Safety Instructions

Your new Wine cooler may have other functions compared to your previous one.

These warnings are provided in the interests of your safety. Ensure that you understand them all before installing or using the appliance. Your safety is of paramount importance. If you are unsure about any of the meanings or warnings contact the Customer Care Department.

Keep the instruction booklet. It will come in handy if you later sell the appliance or give it to somebody else.

Prior to Installation

- Check the appliance for transport damage. Under no circumstances should a damaged appliance be installed. In the event of damage please contact your retailer.

Installation

- This appliance is heavy. Care should be taken when moving it.
- It is dangerous to alter the specifications or attempt to modify this product in any way.
- Ensure that the appliance does not stand on the electrical supply cable. If the supply cable is damaged, it must be replaced by a cable available from your local Service Force Centre.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Parts which heat up should not be exposed. Whenever possible, the back of the appliance should be close to a wall, but leaving the required distance for ventilation, as stated in the installation instructions.
The appliance should be left for 2 hours after installation before it is turned on, in order to allow the refrigerant to settle.

Child Safety

- Do not allow children to tamper with the controls or play with the product.
- There is a risk of suffocation! Keep packaging material away from children.

During Use

- This appliance is designed for domestic use only, specifically for the storage of edible foodstuffs. It is not intended for commercial or industrial use.
- Containers with flammable gases or liquids can leak at low temperatures. Do not store any containers with flammable materials, such as spray cans, fire extinguisher refill cartridges etc. in the refrigerator or freezer.

Do not let sharp objects come into contact with the refrigerating system on the back of and inside the cabinet. If the refrigerating system is punctured, the cabinet will be damaged and foodstuff inside may spoil.

If the refrigerant circuit should become damaged:

avoid open flames and sources of ignition
thoroughly ventilate the room in which the appliance is placed

The refrigerant isobutane (R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable.

- Do not place carbonated or fizzy drinks in the freezer compartment. Bottles and cans must not be placed in the freezer compartment as they can burst when the contents freeze.

Maintenance and Cleaning

- Before cleaning, always switch off the appliance and disconnect from the electrical supply
- When unplugging always pull the plug from the mains socket, do not pull on the cable.

Servicing

- This product should be serviced by an authorised engineer and only genuine spare parts should be used.
- Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Force Centre.

At the end of the Appliance Life

- When disposing of your appliance use an authorised disposal site.
- Remove the plug and ensure that any locks or catches are removed, to prevent young children being trapped inside.

Scrapping old cabinets

When discarding the cabinet, hand it over to a recycling station. For more information, contact your local Council or Environmental Health office.

Contents

Important Safety Instructions	2
Scrapping old cabinets	2
Contents	3
Description of the Appliance	4
Control Panel	4
Before use	4
Using the wine cooler	5
To start the wine cooler and set the correct temperature	5
Temperature inside the wine cooler	5
Wine Placement	
Storage tips	5
Measuring the temperature	6
Switching off	6
Alarms and other features	6
Lighting	6
Cabinet interior	6
Hints and Tips	6
Energy Saving Advice	6
Food Storage	6
Protect the environment	7

Maintenance and Cleaning	7
Removing the ventilation grille	7
Internal Cleaning	7
External Cleaning	7
Defrosting the wine cooler	7
To change the light bulb	8
When the appliance is not in use	8
Something Not Working	8
Service and Spare Parts	9
Customer Care Department	9
Guarantee Conditions	9
Standard Guarantee Conditions	9
Technical Specification	9
Installation	9
Electrical cord	9
Unpacking	10
Removing the transport supports	10
Cleaning	10
Installing the appliance	10
Door Reversal	11
Electrical connection	12

Guide to use the instruction book

The following Symbols will be found in the text to guide you through the instructions



Safety instructions


1, 2, 3 ...

Step by step instructions for an operation



Hints and tips


Description of the Appliance

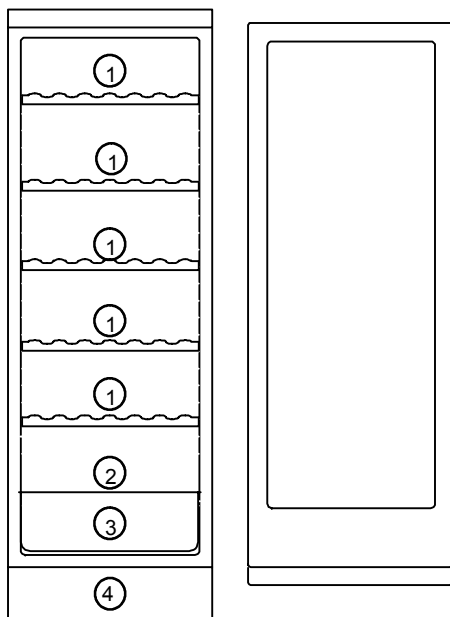

Modell ERC3711WS

1. Shelf
2. Cover
3. Drawer
4. Ventilationgrille

Control Panel

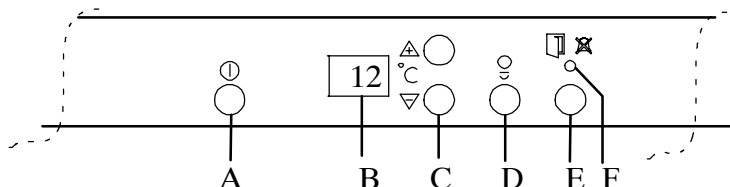

A. Wine cooler power switch

Switches the wine cooler on and off.

B. Temperature display

Shows the average temperature in the middle of the wine cooler.

C. Temperature adjustment buttons/thermostat

Used to set the temperature.

D. Lighting

E. Alarm off button

Used to turn the audible alarm off.

F. Red warning lamp

Flashes when the alarm in the cabinet has been triggered.


Before use

- Remove all securing tapes.
- Wash the inside of the appliance with lukewarm water with a little bicarbonate of soda added (5ml to 0,5 litre of water). Do not use soap or detergent as the smell may linger. Dry the appliance thoroughly.



Do not use detergents, abrasive powders, highly perfumed cleaning products, wax, polishes or products containing alcohol.

- Check that the drain hose at the rear of the cabinet discharges into the drip tray.
- Before inserting the power plug into the socket and switching on the appliance for the first time, leave it standing upright for about 30 minutes, or for 2 hours if it was transported horizontally. Otherwise the compressor may sustain damage. This time will allow the oil sufficient time to return to the compressor.

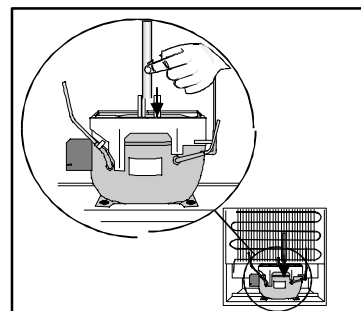

Using the wine cooler

To start the wine cooler and set the correct temperature

Switching on:

Switch on the wine cooler by pressing the power switch.

Setting the temperature

Press the buttons until the desired temperature flashes in the temperature display (The temperature can be set between +6°C and +17°C.)

"+" raises the temperature.

"-" lowers the temperature.

Once set, the temperature display shows the current temperature inside the cabinet.

NOTE: The controllable area is limited by a room temperature of 17°C or below.

Allow the appliance to run for a period of 24 hours whenever the temperature setting is changed. This will allow the temperature to stabilise inside the appliance.

It is not necessary to reset the temperature when the cabinet is switched on after it has been out of use.

The thermostat recalls the previously set temperature.

Temperature inside the wine cooler

NOTE: The picture shows the coldest and warmest places inside the fridge. (+ warm, - cold)

Wine Placement

Storage tips



The amount of time to store wine depends on its maturity, type of grape, alcohol content, and dissolved fructose and tannins. When purchasing your wine, find out whether it is mature or if it will improve over time.

In the lower part of the cooler. Cold air prolongs the time to maturity. Accordingly, store old and mature wine as well as wine you would like to store for a long time in the lower portion of the cooler. The lower part should also be used to store wine that is to be served cold.

In the upper part of the cooler. In the upper part, store wine that you wish to let further mature, wines that are served at a warmer temperature, and those wines you intend to consume relatively soon.

Store the bottles lying down so that the corks do not dry out.

Store the wine in the dark. The cooler doors are made with double-paned glass with a dark coating. This will protect the wine against light damage if the cooler is placed in a well-lit area.

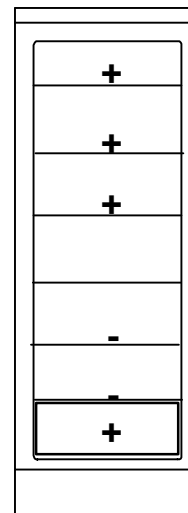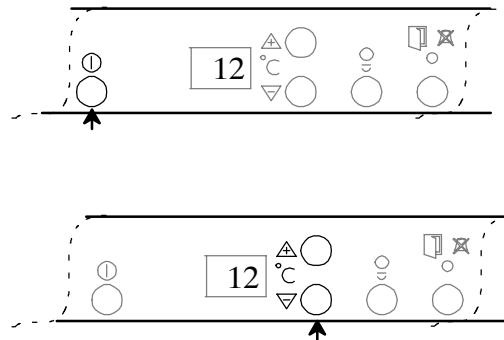

Avoid turning on the light in the cooler too often or for too long. The wine should be stored in the dark.

Handle the bottles with care, so that the wine is not agitated.

Heed any advice and recommendations given at the time of purchase or in the professional literature concerning the wine's quality, durability and optimal storage temperature.

Recommended storage temperatures:

- for white wines +10 to +12°C
- for rosé wines and light red wines +12 to +16°C
- for champagne and sparkling wines +6 to +8°C

If you stack several bottles on top of one another, make sure they do not touch the cabinet's cooling plate.

Measuring the temperature


If the temperature is measured using a standard, single thermometer, this should be put in a glass of water centrally placed inside the appliance. This will reflect the temperature inside the food products. Do not place the thermometer hanging or lying directly on the shelf.

Switching off

Switch off the cabinet by pressing the power switch. Keep the button pressed for approx. 1 second.



Power to the cabinet is completely interrupted only when the power plug is disconnected.

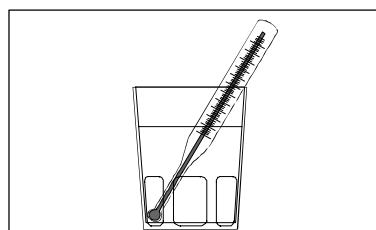


Alarms and other features

Door open alarm

If the fridgedoor remains open for more than 5 minutes, the red warning lamp starts flashing and an audible alarm sounds.

To switch off the alarm:

Press the "alarm shut-off button". The red warning lamp goes out when the door is closed.

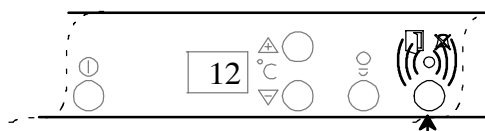


Lighting

The cooler lighting may be turned on with the door closed. This makes it easy to survey the contents of the cooler without opening the door. The cooler lighting should normally be off, so that the wine is not unduly exposed to light. The lighting turns off automatically after about 5 minutes.

Cabinet interior

The shelves may be placed flat or at an angle. Angle the shelf by placing the front pegs in a lower set of tracks. You can store already opened bottles on the shelf in this position.

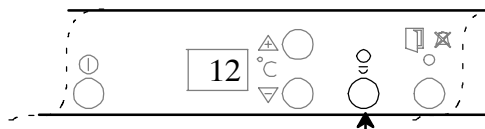

Hints and Tips

Energy Saving Advice

- Pay careful attention to where the cabinet is placed. See the section "Installation". When installed correctly, the cabinet will consume less energy.
- Try to avoid keeping the door open for long periods, or opening the door too frequently as warm air will enter the cabinet, and cause the compressor to switch on unnecessarily often.
- Ensure there are no obstructions preventing the door from closing properly.
- It is advisable to periodically clean the refrigeration system at the back of the appliance with a duster or vacuum cleaner.
- Make sure the door gasket is complete and always clean.

Food Storage

- To obtain the best results from your appliance, neither hot foods nor liquids which may evaporate, should be placed in the larger compartment.
 - Keep the time between buying chilled food and placing it in your fridge as short as possible.
 - Do not push food together too much, try to allow air to circulate around each item.
 - Do not store food uncovered.
- Remove suspect food from your refrigerator and clean, refer to cleaning and maintenance.

Protect the environment

- Hand over the cabinet packaging and discarded fridges and freezers to a recycling station. Contact your local city office or your closest dealer for more information.
- When cleaning the cabinet, use a mild

washing-up detergent.

- Follow the advice in the section "Saving energy"
- The door gasket and coolant used in this cabinet will not harm the ozone layer.
- All parts in the packaging can be recycled.
- The cabinet has been designed for easy dismantling and subsequent recycling.

Maintenance and Cleaning

Removing the ventilation grille

The ventilation grille can be removed, e.g. to wash the grille.

Make sure the door is open when removing the ventilation grille. Unsnap the upper edge of the grille by pulling outward/downward. Then pull the grille straight out to completely remove it.

Internal Cleaning

Clean the inside and the accessories with warm water and bicarbonate of soda (5 ml to 0,5 litre of water).

Rinse and dry thoroughly.



Do not use detergents, abrasive powders, high perfumed cleaning products, wax polishes or cleaning products containing bleach or alcohol .

Regularly check the door seals and wipe clean to ensure they are clean and free from debris.

Disconnect the appliance from electricity supply.

Clean out the drip channel inside the wine cooler at regular intervals and ensure that the drip channel is clear at all times. If blocked carefully clear using a piece of flexible curtain wire inserted into the drain outlet to remove the blockage.

Internal Cleaning

Clean the inside and accessories with warm water and bicarbonate of soda (5ml to 0,5 litre water)

Rinse and dry thoroughly.





Regularly check the door seals and wipe clean to ensure they are clean and free from debris.

Clean off the interior wooden details with a moist rag and mild kitchen soap. Do not soak the wood.

External Cleaning

Wash the outer cabinet with warm soapy water.

Remove the ventilation grille (see the section "Removing the ventilation grille") and vacuum-clean under the cabinet. Once or twice a year dust the condenser (black grille) and the compressor at the back of the appliance, with a brush or vacuum cleaner, as an accumulation of dust will affect the performance of the appliance and cause excessive electricity consumption.

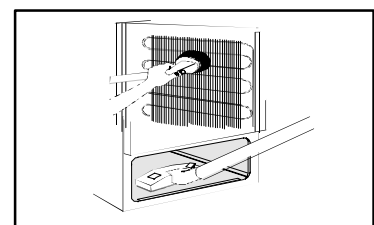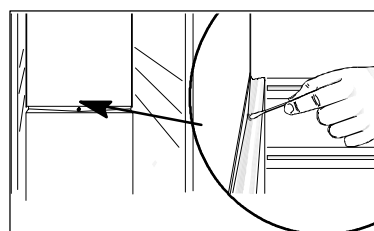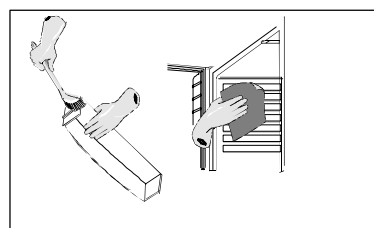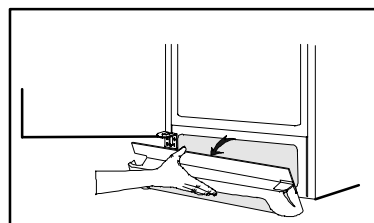

When moving the cabinet, lift it by the front edge to avoid scratching the floor.

Defrosting the wine cooler

The wine cooler is defrosted automatically every time the compressor stops. Frost formation can be prevented by:


- not putting warm foodstuff inside the cabinet.
- avoiding frequently opening the door or keeping it open too long.

To change the light bulb

Before replacing the light bulb, disconnect the power plug from the outlet.

Fold the grille backward by unsnapping the front edge.

Use a bulb of the same type, E14 socket, maximum rating of 15 W.

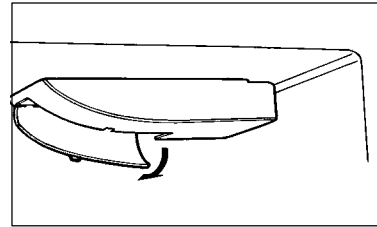

When the appliance is not in use

Disconnect the appliance from electricity supply.

Empty all foods and clean the appliance, leaving the doors ajar to prevent unpleasant smells.

If the appliance is left on, e.g. while on holiday, ask somebody to check it once in a while to prevent the food inside from spoiling in case of a power failure.

Something Not Working

Before contacting your local Service Force Centre check the following points:

Symptom	Solution
"□" is displayed in the temperature display.	An error has occurred in measuring the temperature. Call your service representative. (The cooling system will continue to keep food products cold, but temperature adjustment will not be possible.)
It is too warm inside the wine cooler.	Set a lower temperature. Make sure that the door is completely closed and that the rubber door seal is complete and clean.
It is too cold inside the wine cooler.	Set a warmer temperature.
There is water on the cooling plate inside the wine cooler.	This is normal. During automatic defrosting, frost thaws on the cooling plate.
Water is running inside the wine cooler.	Clean the water drain and drain hole inside the wine cooler using e.g. cotton swabs or a bottle cleaner brush. Food products could have been placed near the rear of the appliance, preventing the water from running into the drain.
Water comes out on the floor.	Place the drain hose at the back of the appliance above the drain bowl. See the chapter "Before use"
The compressor operates continuously.	Set a warmer temperature. Make sure that the door is completely closed and that the rubber door seal is complete and clean.
The cabinet does not operate at all. Cooling or interior light does not operate. No indicator lamps light.	The appliance is not switched on. Power does not reach the appliance. (Try connecting another electrical device to the power outlet.) The fuse has blown. The power plug is not properly connected.
Noise Carefully follow the instructions in the chapter "Installing the cabinet".	The refrigerating system will always produce some sounds. A pulsing sound is heard when coolant is pumped inside the cooling pipes. A ticking sound from the thermostat can be heard when the compressor switches on and off. The sound level varies depending on the operation of the cabinet. If you feel the sound level is incorrect: Make sure the pipes at the back of the cabinet not touch each other. Carefully bend them if they do. If the cushion spacers (between the cabinet wall and pipes) come loose, put them back in place again.

Service and Spare Parts

SERVICE FORCE

In the event of your appliance requiring service, or if you wish to purchase spare parts please contact your local Electrolux Service Force Centre by telephoning:

08705-929929

Your call be routed the Service Force Centre covering your post code area.

For the address of your local Service Force Centre and further information about Service Force, please visit the website at www.serviceforce.co.uk

Before calling out an engineer, please ensure you have read the details under the heading "Something Not Working"

When you contact the Service Force Centre you will need to give the following information:

1. Your name, address and post code
2. Your telephone number
3. Clear and concise details of the faults
4. The model and serial number of the appliance (found on the rating plate)
5. Purchase date.....

Customer Care Department

For general enquiries concerning your Electrolux appliance or further information on Electrolux products, you are invited to contact our Customer Care Department by letter or phone as follows or visit our website at www.electrolux.co.uk

Customer Care Department
Electrolux
55-77 High Street
Slough
Berkshire
SL1 1DZ

Tel: 08705 950950*

* calls to this number may be recorded for training purposes.

Guarantee Conditions

Standard Guarantee Conditions

See Guarantee Conditions on the Registration Card.

Technical Specification

Model	ERC3711WS
Volume	361 l
Width	595 mm
Height	1800 mm
Depth	600 mm
Rated power	110W

Installation

Electrical cord

Do not remove the power cord by pulling on its lead, particularly when the product is being pulled out of its niche.

- Damage to the cord may cause a short-circuit, fire and/or electric shock.
- In the event of damage to the appliance's main cable, only an authorised service company recommended by the manufacturer or a similarly qualified person may adjust it in order to avoid shock hazard for the user.

Electrolux 818 35 40-00/7

Unpacking

Unpack the appliance and check that it is in good condition and free of any transport damage. Notify the dealer immediately of any damage. Hand the packaging over for recycling.



Do not allow children to play with the packaging. The plastic film can cause suffocation.

Removing the transport supports

Remove the tape and the transport supports from

- the door sides
- inside the door hinges
- the shelves

Remove the transport hinge.

Mounting the handle

The handle is included in the packaging material of the cabinet.

Secure the handle.

Cleaning

Wash the inside of the cabinet using lukewarm water, a mild washing-up detergent and a soft cloth. Clean off the interior wooden details with a moist rag and mild kitchen soap. Do not soak the wood.

Installing the appliance

Make sure that the power plug is not squashed or damaged by back of the product.

- A damaged power plug may overheat and cause a fire.

Do not place heavy articles or the product itself on the power cord.

- there is a risk of a short circuit and fire.

If the power plug socket is loose, do not insert the power plug.

- there is a risk of electric shock or fire.





To obtain the best performance from the appliance, ensure :

- the appliance is placed in a dry, cool place and is not exposed to direct sunlight.
- the appliance is not placed close to a source of heat, e.g. a cooker or dishwasher.
- the appliance is level. The appliance should not lean against any wall. If necessary adjust the feet using the adjustment spanner supplied.
- there is good air circulation around the appliance and that the air channels below and behind the appliance are not blocked. The ventilation space above the appliance must be at least 4 cm.

The ventilation space can either be

a) directly above the appliance, or

b) behind and above the top cupboard. In this case, the space behind the cupboard must be at least 50 mm deep.

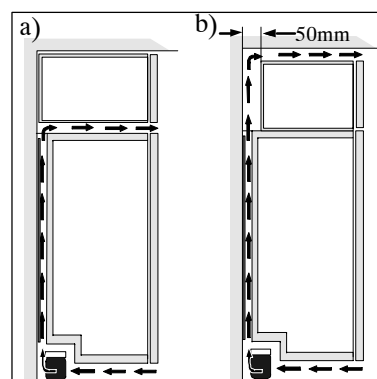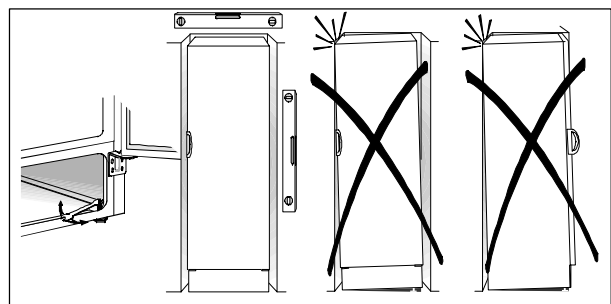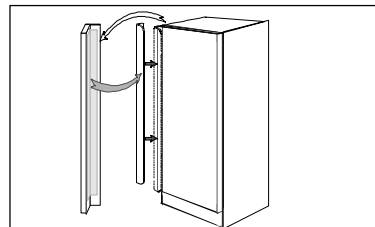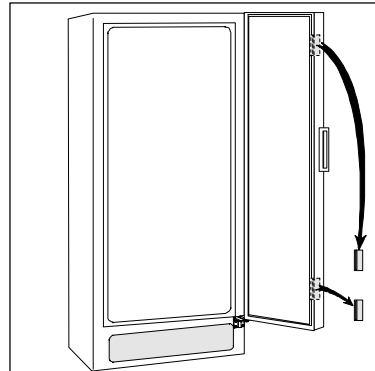

The appliance must be placed at a location whose ambient temperature corresponds to the climate classification*, for which the appliance is designed.

* See on the rating plate on the inside of the appliance.

The following table shows which ambient temperature is correct for each climate classification.

Climate classification	for an ambient temperature of
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+18°C to +38°C
T	+18°C to +43°C

Door Reversal

1. Close the appliance and disconnect the appliance from the electricity socket.

2. Remove the ventilation grille. There is a part on the grille that can be removed. Remove and reposition it on the opposite side.

3. Support the appliance on a wooden block when it is laid down. This will make it easier to grip under the appliance when returning to an upright position.

4. On the upper part of the appliance. Remove the hinge pin and replace on the other side.
On the lower part of the appliance. Unscrew the hinge. Move the hinge pin and plastic cover. Secure the hinge on the other side.
Remove any play in the door by adjusting the height of the lower hinge with the supplied spanner. Secure with the lock-nut.

5. Raise the appliance and replace the ventilation grille.




6. Move the handle.
Unscrew the handle and secure it to the other side. Press the supplied plastic plugs into the holes to which the handle was previously fitted.

7. Put the appliance in position. Check that the appliance is level. See the section "Positioning the appliance".

Check that the drain hose at the rear of the appliance discharges into the drip tray.

If the appliance is placed in a corner and the side with the hinges facing the wall, the distance between the wall and the appliance must be at least 230 mm to allow the door to open enough so that the shelves can be removed.

The power plug must be accessible after installation of the appliance.

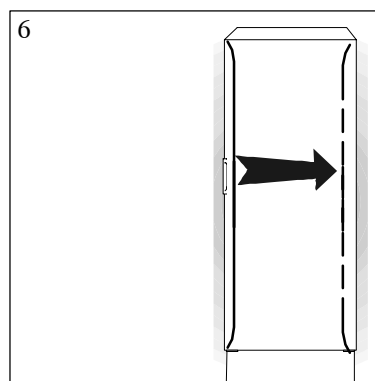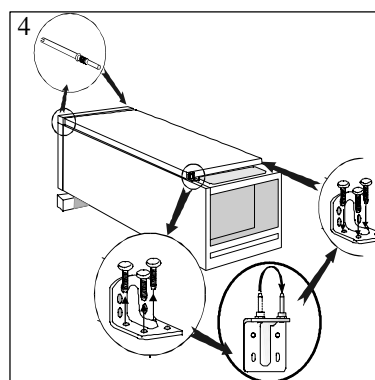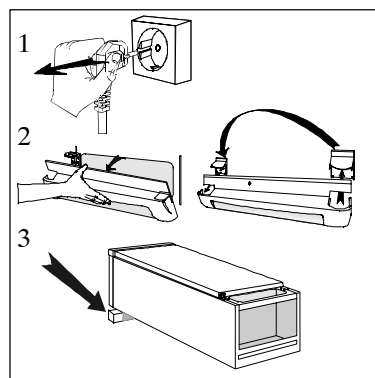

Electrical connection



Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. This appliance must be earthed.

The manufacturer declines any liability should these safety measures not be observed.


Electrical Requirements

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance rating plate.

The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1362) fuse must be used.

Should the plug need to be replaced for any reason. The wires in the mains lead are coloured in accordance with the following code:


Green and yellow	-Earth
Blue	-Neutral
Brown	-Live

The wire coloured green and yellow must be connected to the terminal marked with the letter "E" or by the earth symbol  or coloured green and yellow.

The wire coloured blue must be connected to the terminal marked "N" or coloured black

The wire coloured brown must be connected to the terminal marked "L" or coloured red.

Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.

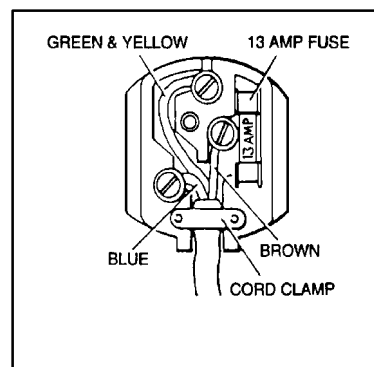

 **The Electrolux Group. The world's No.1 choice.**

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.



 **Electrolux**

ELECTROLUX HOME PRODUCTS OPERATIONS EUROPE

MARIESTAD AV