


INSTRUCTION BOOK

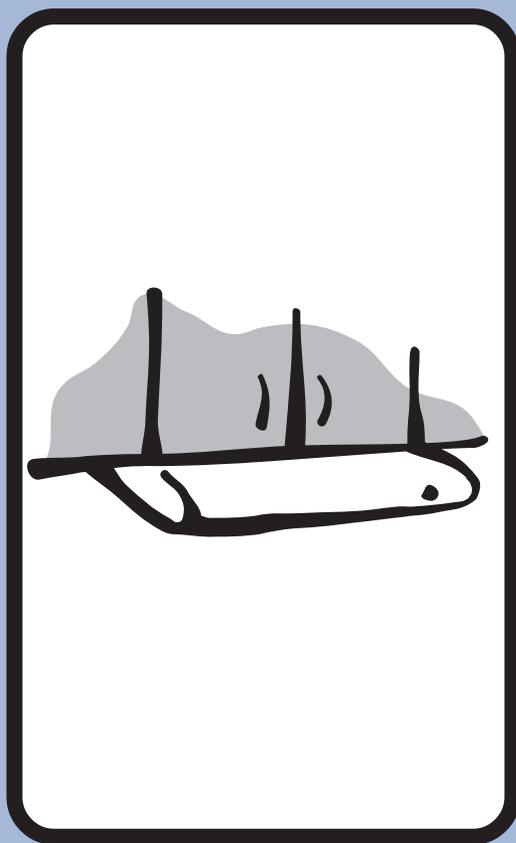

FOR ELECTROLUX
COOKER HOOD
EFG 520

 **Electrolux**

UK

Thank you for buying an Electrolux product.

To enable you to use your appliance effectively and safely, please read this instruction book carefully before using the appliance and retain for future reference. If you require guidance in the use of the appliance or require further information on Electrolux Products, please contact our Customer Care Department. For general enquiries concerning your Electrolux appliance or for further information, visit our website at <http://www.electrolux.se>

Customer Care Department
Electrolux
55 - 77 High Street
Slough
Berkshire
SL1 1DZ

Tel: 08705 950 950
Fax: 01635 42970

To register ownership, please ensure you complete and return the guarantee card supplied with the appliance.

For the User

Important Safety Information

Your Appliance

Operating Instructions

Cooker Hood Controls
To Operate
Extraction
Recirculation

Maintenance and Cleaning

External Cleaning
Charcoal Filters
To Remove the Charcoal Filter
Synthetic Grease Filter
To Replace the Paper Grease Filter
Changing the Light Bulb

Something Not Working

Service and Spare Parts

Guarantee Conditions

For the Installer

Installation Instructions

Technical Information

Electrical Connections

Electrical Requirements
Electrical Connection

Installing the Cooker Hood

Installation Requirements
Ducting
Clearance Height
Unpacking
Fixing the Cooker Hood into the Housing/Canopy
Positioning of the Cooker Hood
Venting
Recirculation Mode
Insert the Charcoal Filter
Extraction
Ducting

Service Force Centres

To register ownership, please ensure you complete and return the guarantee card supplied with the appliance.

Guide to use the instruction book

The following Symbols will be found in the text to guide you through the instruction book



Safety instructions



Step by step instructions

IMPORTANT SAFETY INFORMATION

These warnings are provided in the interests of your safety. Ensure that you understand them all before installing or using this appliance. Your safety is of paramount importance. If you are unsure about any of the meanings of these warnings contact the Customer Care Department.

■ Installation

- Any installation work must be undertaken by a qualified electrician or a competent person.
- This hood must be installed in accordance with the installation instructions and all measurements must be adhered to.
- If the cooker hood is installed for use above a gas appliance then the provision for ventilation must be in accordance with the Gas Safety Codes of Practice BS.6172, BS.5440 and BS.6891 (Natural Gas) and BS.5482 (LP Gas) 1994, the Gas Safety (Installation & Use) Regulations, the Building Regulations issued by the Department of the Environment, the Building standards (Scotland) (Consolidated) Regulations issued by the Scottish Development Department.
- The fan motor of this cooker hood incorporates a cut-out device which will operate if the cooker hood is installed below the minimum height recommended under section 'Clearance Height', or if the motor becomes overheated. If the cut-out device is activated, switch off the fan motor and allow the cooker hood to cool. The cut-out device will reset itself when the fan motor has cooled significantly.
- It is dangerous to alter the specifications or modify this product in any way.
- When installed between adjoining wall cabinets the wall cabinets must not overhang the hob.
- If the room where the hood is to be used contains a fuel burning appliance such as a central heating boiler then its flue must be of the room sealed or balanced flue type.
- If other types of flue or appliances are fitted ensure that there is an adequate supply of air to the room.
- The ducting system for this appliance must not be connected to any existing ventilation system which is being used for any other purpose.

- Do not install above a cooker with a high level grill.

■ Child Safety

- This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the appliance.


■ During Use

- This product is for domestic use only.
- Never leave frying pans unattended during use as over-heated fats and oils might catch fire.
- Never do flambé cooking under this cooker hood.
- Do not leave naked flames under the hood.

■ Maintenance and Service

- This appliance can be a hazard if the synthetic paper and charcoal filters are not replaced as recommended.
- Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or more serious malfunction. Refer to your local Electrolux Service Force Centre. Always insist on genuine spare parts.

YOUR APPLIANCE

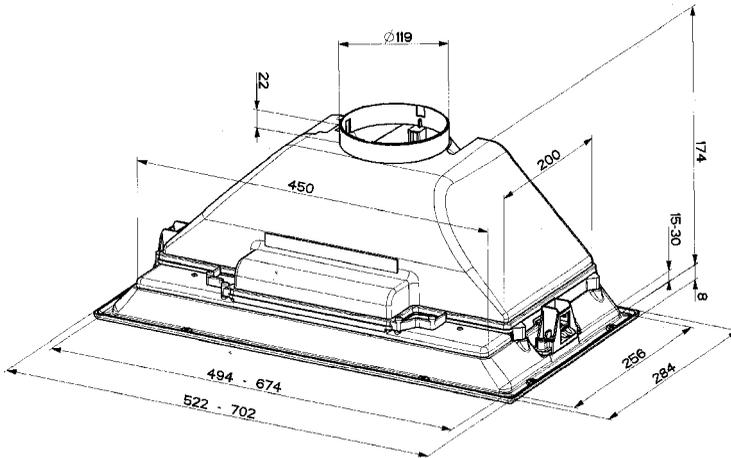

OPERATING INSTRUCTIONS

The cooker hood is designed to extract unpleasant odours from the kitchen, it will not extract steam.


To obtain the best performance it is advisable to switch on the hood a few minutes before you start cooking and leave it running for approximately 15 minutes after finishing.

Cooker Hood Controls

The cooker hood functions are controlled by two slide switches, located centrally in the front edge of the metal grille panel.

L. Light ON/OFF control
0 - Off
1 - On

V. Fan Speed Control
Position 0 - Off
Position 1 - Low
Position 2 - Normal
Position 3 - Boost

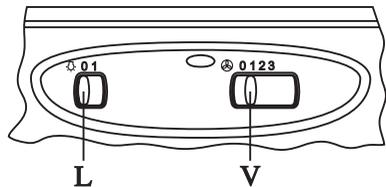

To Operate

Select the required functions.


The appliance can be installed to recirculate or extract contaminated air. The cooker hood is more effective when used in the extraction mode.

Extraction

In the extraction mode the contaminated air enters the cooker hood, passes through the grease filter and out through the ducting to the atmosphere.

Recirculation

In the recirculation mode contaminated air is passed through the charcoal filters to be purified and recirculated into the kitchen through a recirculation grille. Ensure the charcoal filters are in position.

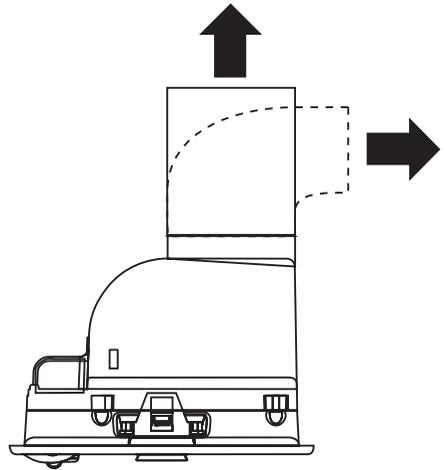

When the ducting mode is selected the charcoal filters are not required.

Never do flambé cooking under this cooker hood.

Never leave frying pans unattended during use as over-heated fats and oils can catch fire.

Do not leave naked flames under the cooker hood.

Ensure heating areas on your hob are covered with pots and pans when using the hob and cooker hood simultaneously.

MAINTENANCE AND CLEANING

 Before carrying out any maintenance or cleaning isolate the cooker hood from the mains supply.

The cooker hood must be kept clean, as a build up of grease or fat can be a fire hazard.

The external surfaces of the hood should be cleaned regularly. Wipe the cooker hood frequently with warm soapy water using a mild detergent. Dry thoroughly after cleaning.

 Always wear protective gloves when cleaning the hood.


Never use scouring pads or abrasive cleaners.

Never use excessive amounts of water when cleaning particularly around the control panel.

Charcoal Filter


The charcoal filters absorb the odours from cooking. They will slowly become saturated and gradually less effective.

The charcoal filters cannot be cleaned, we recommend they are replaced every 3-6 months or more often if the hood is used for more than 3 hours per day.

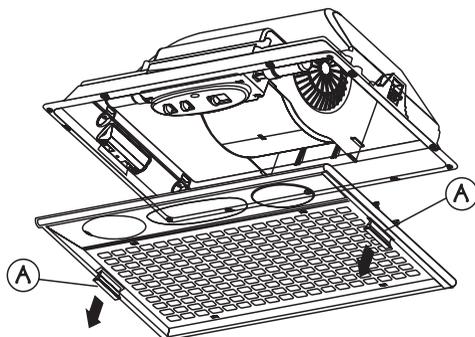

To Remove/Replace the Charcoal Filters

1. Remove the lower grille, supporting the grille with one hand and draw down on the two grey handles (located on each side of the grille).
2. The charcoal filters are handed and should be fitted one at a time.
3. Insert one end of the filter into the slots in the fan housing then lower the other end until the tab engages the slot in the casing.

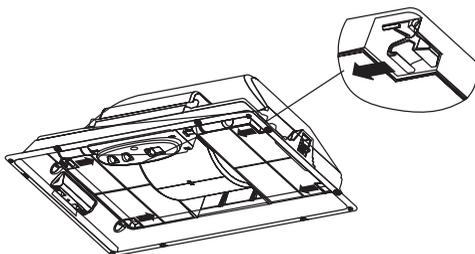


Synthetic Grease Filter

The grease filter has saturation indicators, which are small squares made from a series of dots. When the white paper inside the squares becomes saturated with grease the coloured dots start to run and spread across the paper, indicating that the filter has reached saturation point and must be replaced.

 *The synthetic grease filter cannot be cleaned.*

It cannot be washed.

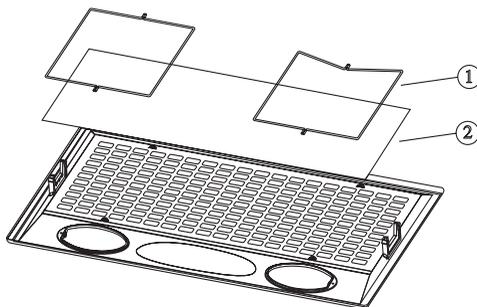

To Replace the Synthetic Grease Filter

1. Remove the lower grille.
2. Push the wire retaining clips to the side and remove.
3. Clean the metal grille and clips before replacing the paper grease filter.


 *The clips have sharp points, handle with care and keep away from children.*

This appliance is a possible fire hazard if the grease and charcoal filters are not replaced as recommended.

Changing the Light Bulb

The bulb should be replaced with a 220-240 volt 40 watt clear cylindrical shape bulb with a small Edison (E14) screw thread.

Replacement filters, and light bulbs can be obtained from your local Service Force Centre.

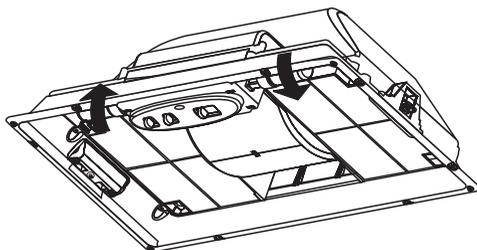

SOMETHING NOT WORKING

If, having followed these instructions carefully, your cooker hood fails to work properly please carry out the following checks.

Symptom	Solution
The cooker hood will not start	<ul style="list-style-type: none"> • Check the hood is connected to the electricity supply. • Make sure the switch is in the 'ON' position.
The cooker hood is not working effectively	<ul style="list-style-type: none"> • The fan speed is set high enough for the task • The grease filter is clean. • The kitchen is adequately vented to allow the entry of fresh air. • If set up for recirculation, check that the charcoal filter is still effective. • If set up for extraction, check that the ducting and outlets are not blocked.
The cooker hood has switched off during operation	<ul style="list-style-type: none"> • The safety cut-out device has been tripped. • Turn off the hob and then wait for the device to reset.

If after all these checks, the fault persists, contact your local Service Force Centre, quoting the model and serial number.

Please note that it will be necessary to provide proof of purchase for any in-guarantee service calls.

In-guarantee customers should ensure that the above checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

SERVICE AND SPARE PARTS

If you require an engineer or spare parts contact your local Service Force Centre by telephoning:

0990 929929

Your telephone call will be routed to your local Service Force Centre. The addresses are listed in the back of the book.

For general assistance with your appliance or for further information on Electrolux products please contact our Customer Care Department.

Customer Care Department,
Electrolux
55 - 77 High Street
Slough
Berkshire
SL1 1DZ

Tel: 08705 950 950*

* calls to this number may be recorded for training purposes.

GUARANTEE CONDITIONS

We, Electrolux Ltd., undertake that if within twelve months of the date of the purchase this Electrolux built-in appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, the company will, at our option repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electrical supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- All service work under this guarantee must be undertaken by Electrolux Service Force Centre.
- Any appliance or defective part replaced shall become the property of this company.

Home visits are made between **8.30am and 5.30pm Monday to Friday**. Visits may be available outside these hours in which case a premium will be charged.

EXCLUSIONS

This Guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right appliances improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are the subject of rental agreements.
- Products of Electrolux manufacture which are not marked by Electrolux Ltd.

This guarantee is in addition to your statutory and legal rights.

ELECTROLUX EUROPEAN GUARANTEE

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.
- This guarantee relates to you and cannot be transferred to another user.
- Your new home is within the European Community (EC) or European Free Trade Area.
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.

Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0)3 44 62 22 22
Germany	Nurnberg	+49 (0)911 323 2600
Italy	Pordenone	+39 (0)1678 47053
Sweden	Stockholm	+46 (0)20 78 77 50
UK	Newbury	+44 (0)1635 522 799

INSTALLATION INSTRUCTIONS



It is dangerous to alter the specifications or attempt to modify this product in any way.

Technical Information

DIMENSIONS

HEIGHT:	20cm
WIDTH:	52,2cm
DEPTH:	28-50cm
DUCTING OUTLET:	120cm

WEIGHT

GROSS:	4,8kg
NET:	5,8kg

ELECTRICAL SUPPLY:

Voltage (50Hz) 220-240 V

POWER CONSUMPTION:

190W

FAN MOTOR:

110W

LAMP:

2 x 40 W

80W

SUITABLE FOR INSTALLATION ABOVE:

ELECTRIC HOB:	7KW (max)
GAS HOB:	10KW (max)
SLOT-IN GAS COOKER	13.5KW (max)
SLOT-IN ELECTRIC COOKER	12.4KW (max)



Note: CE Marking certifies that this appliance complies with the requirements laid down in EEC directive 89:336. (Electromagnetic compatibility) and subsequent modifications and Low Voltage directive 72/23/E.

ELECTRICAL CONNECTIONS



WARNING: DOUBLE INSULATED-DO NOT EARTH

Electrical Requirements

Any permanent electrical installation must comply with the latest I.E.E. Regulations and local Electricity Board regulations. For your own safety this should be undertaken by a qualified electrician e.g. your local Electricity Board, or a contractor who is on the roll of the National Inspection Council for Electrical Installation Contracting (NICEIC).

Electrical Connection

Before connecting to the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the cooker hood.

This appliance is fitted with a 2 core mains cable and must be permanently connected to the electricity supply via a double-pole switch having 3mm minimum contact gap on each pole. A Switched Fuse Connection Unit to BS.1363 Part 4, fitted with a 3 A fuse is a recommended mains supply connection accessory to ensure compliance with the Safety Requirements applicable to fixed wiring instructions.

This appliance conforms to BS.800: 1988 and EEC Directive No. 78 308 regarding suppression of radio and television interference.

INSTALLING THE COOKER HOOD

Please ensure that when the appliance is installed it is easily accessible to an engineer in the event of a breakdown.



All installations must comply with the local authorities requirements for the discharge of exhaust air.

Incorrect installation may affect the safety of this cooker hood.

Installation Requirements



Before fitting the hood beneath any type of canopy or wall cabinet, ensure that the housing is firmly fixed to the wall in accordance with the manufacturer's instructions.

If it is necessary to fix the housing for the canopy to a hollow construction plaster or partition board structure then it should be sufficiently reinforced to be quite rigid in the area of the cabinet housing fixings.

Ducting

The ducting must be fire retardant 125mm (5ins) in diameter and the length should be no more than:

3 metres with one 90° bend

2 metres with two 90° bends

Bends of more than 90° will reduce the efficiency of the hood and reduce the airflow.

Clearance Height

The cooker hood is designed to be fitted over a cooking appliance at the clearance heights stated, providing the maximum output of the appliance beneath does not exceed the maximums quoted in the Technical Specifications.


If the output of the appliance below the cooker hood exceeds the maximum outputs quoted, please refer to the cooker manufacturer's installation instructions.

Clearance Height

A minimum clearance height of 650mm (25 1/2 ") is required when installed above a built-in electric hob, or 700mm (27 1/2 ") when installed above a built-in gas hob.

A minimum clearance height of 685mm (27") is required when installed above a slot-in electric cooker, or 787mm (30 1/2 ") when installed above a slot-in gas cooker.

When installed between adjoining wall cabinets, the wall cabinets must not overhang the hob and the distance between the underside of the cabinet and the worktop must be 450mm. If the height of the wall cabinet is less than 450mm, a gap of 50mm must be maintained either side of the hob.

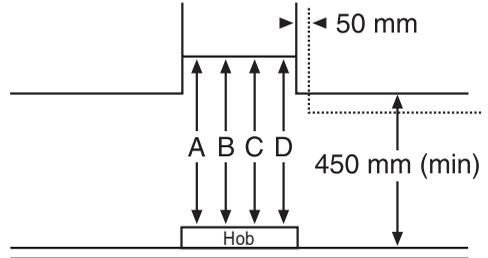

- A: Built-in Electric Hob: 650mm minimum clearance
- B: Built-in Gas hob: 700mm minimum clearance
- C: Slot-in Electric Cooker: 685mm minimum clearance
- D: Slot-in Gas Cooker: 787mm minimum clearance



This cooker hood must not be installed above a cooking appliance with a high level grill.


Unpacking

The fittings supplied to install this cooker hood can be found with the instruction book inside the packaging:

- 10 x 13mm fixing screws
- 120 - 125 mm ducting collar

Fitting the Cooker Hood into the Housing/Canopy

The hood is fixed to the housing using the screw holes located around the base of the casing. Access to the screw holes will require the removal of the metal grille panel.

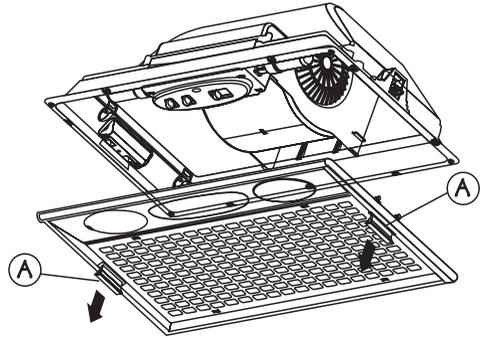


Positioning the Cooker Hood

Measure the underside of the canopy or kitchen cabinet to mark the position for the cut-out. The cut-out measurement should be:

- 497mm (19 5/8") wide
- 259mm (10 1/4") deep

Check the position of the hole is correct with the measurements above before making the cut-out.


The hood is fixed using the holes located in

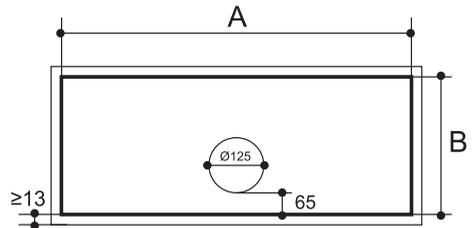

the rim around the base of the casing visible when the inlet grille is in the open position.

Support the grille panel with one hand and draw down on the two grey handles (A) which are located on each side of the grille with the other hand.

Raise the hood into the cut out and mark the positions for the fixing screws. Pilot drill the fixing holes and fit the hood using the fixing screws supplied.

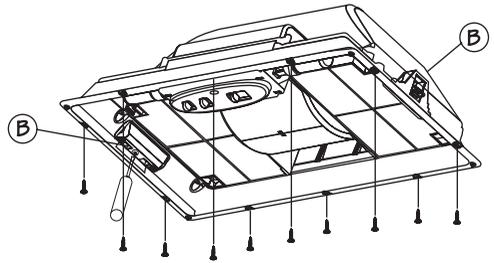

Venting

The hood is more effective when used in the extraction mode (ducted to the outside).

Venting kits maybe purchased through your retailer or DIY store, and must be ducted to an outside vent of 125mm (5") minimum.



The ducting used must be manufactured from fire retardant material.

When the hood is ducted externally the charcoal filters must be removed.

Recirculation

If you are using the hood for recirculating, ensure the charcoal filters are in position following the instructions below.

Inserting the Charcoal Filters

1. Remove the grille panel, support the grille with one hand and draw down on the two grey handles (located at each side of the grille).
2. The charcoal filters are handed and should be fitted one at a time.
3. Insert one end of the filter into the slots in the fan housing, then lower the other and until the tab engages the slot in the casing.

Extraction

The charcoal filters are not required in this mode and should be removed. To do this reverse the procedure described in Inserting the 'Charcoal Filters'.

Ducting

The ducting used must be fire retardant 125mm (5") in diameter. If possible duct through the wall at the rear of the canopy or wall cabinet. For the best performance use the shortest possible duct run and the minimum number of bends. Where flexible ducting is fitted it should not be turned through very tight bends as this may impair the performance of the hood. It is recommended a maximum length of 3m, to be installed, to be reduced 1m for each 90° bend installed in the ducting run. If the distance is greater than 3m the efficiency of the hood could be impaired.

A ducting collar of 120-125 mm (5") is supplied for attaching to ducting if you are using the appliance in the extraction mode.



If the room where the cooker hood is to be used contains a fuel burning appliance such as a central heating boiler, then its flue must be of the room sealed or balanced flue type.

If other types of flue or appliances are fitted ensure that there is an adequate supply of air to the room.

The cooker hood ducting (extraction version) must never be connected to central heating flues, radiators or water heaters etc.

To contact your local Electrolux Service Centre telephone **08705 929 929**

CHANNEL ISLANDS

GUERNSEY Guernsey Electricity
PO Box 4
Vale, Guernsey
Channel Islands

JERSEY Jersey Electricity Company
PO Box 45
Queens Road
St Helier, Jersey
Channel Islands JE4 8NY

SCOTLAND

ABERDEEN 54 Claremont Street
(M05) Aberdeen AB10 6RA

AUCHTERMUCHY 33a Burnside
(M03) Auchtermuchy
Fife KY14 7AJ

BLANTYRE Unit 5
(M07) Block 2
Auchenraith Ind Estate
Rosendale Way
Blantyre G72 0NJ

DUMFRIES 93 Irish Street
(M01) Dumfries
Scotland DG1 2 PQ

DUNOON Brair Hill
(M67) 7 Hill Street
Dunoon
Argyll PA23 7AL

GLASGOW 20 Cunningham Road
(M04) Clyde Estate
Rutherglen
Glasgow G73 1PP

INVERNESS Unit 3B
(M06) Smithton Ind Estate
Smithton
Inverness IV1 AJ

ISLE OF ARRAN Arran Domestic
Unit 4 The Douglas Centre
Brodick
(OWN SALES) Isle of Arran KA27 8AJ

ISLE OF BARRA J Zerfah
244 Bruemish
Isle of Barra
(OWN SALES) Western Islands HS9 5QY

ISLE OF BUTE Walker Engineering
(M66) Glenmhor
Upper Serpentine Road
Rothesay
Isle of Bute PA20 9EH

ISLE OF LEWIS ND Macleod
(M69) 16 James Street
Stornoway
Isle of Lewis PA87 2QW

KELSO 2-8 Wood Market
(M08) Kelso
Borders TD5 7AX

ORKNEY Corsie Domestic
(M65) 7 King Street
Kirkwall
Orkney KW15

PERTH Hydro Electrical
Inveralmond House
Ruthervenfield Road
Perth PH1 3AQ

PERTH Graham Begg
(OWN SALES) Unit 4
Airport Ind Estate
Wick KW1 4QS

SHETLAND Tait Electronic Systems Ltd
(OWN SALES) Holmsgarth Road
Lerwick
Shetland ZE1 0PW

SHETLAND Bolts Sheltand Ltd
(OWN SALES) 26 North Road
Lerwick
Shetland ZE1 0PE

WHALSAY Leask Electrical
(OWN SALES) Harlsdale
Symbister, Whalsay
Shetland ZE2 9AA

NORTHERN IRELAND

BELFAST Owenmore House
(M27) Kilwee Business Park
Upper Dunmury Lane
Belfast
BT17 0HD

To contact your local Service Centre telephone **08705 929929**

WALES

CARDIFF
(M28) Guardian industrial Estate
Clydesmuir road
Tremorfa,
Cardiff CF2 2QS

CLYWD
(M14) Unit 6-7 Coed -Parc
Abergele Road
Rhuddlan
Clwyd
Wales LL18 5UG

DYFED
(M77) Maes Y Coed
High Mead
Llanybydder
Carmarthenshire
SA40 9UL

HAVERFORDWEST
(M75) Cromlech Lodge
Ambleston
Haverfordwest
Pembrokeshire
SA62 5DS

OSWESTRY
(M17) Plas Flynnon Warehouse
Middleton Road
Oswestry
SY11 2PP

NORTH EAST

GAESHEAD
(M39) Unit 356a
Dukesway Court
Dukesway
Team Valley
Gateshead NE11 0BH

GRIMSBY
(M42) 15 Hainton Avenue
Grimsby
South Humberside
DN32 9AS

HULL
(M41) Unit 1
Boulevard Industrial Estate
Hull
HU3 4AY

LEEDS
(M37) 64-66 Cross Gates Road
Leeds
LS15 7NN

NEWTON AYCLIFFE
(M45) Unit 16
Gurney Way
Aycliffe Industrial Estate
Newton Aycliffe
DL5 6UJ

SHEFFIELD
(M38) Pennine House
Roman Ridge Ind.
Roman Ridge Road
Sheffield S9 1GB

NORTH WEST

BIRKENHEAD
(M11) 1 Kelvin Park
Dock Road
Birkenhead
L41 1LT

CARLISLE
(M10) Unit 7 James Street
James Street Workshops
James Street
Carlisle
Cumbria CA2 5AH

ISLE OF MAN
(M64) South Quay Ind Estate
Douglas
Isle of Man

LIVERPOOL
(M15) Unit 1
Honeys Green Precinct
Honeys Green Lane
Liverpool
L12 9JH

MANCHESTER
(M09) Unit B
Central Industrial Estate
St Marks Street
Bolton
BL3 6NR

PRESTON
(M13) Unit 250
Dawson Place
Walton Summit
Bamber Bridge
Preston
Lancashire PR5 8AL

STOCKPORT
(M16) Unit 20 Haigh Park
Haigh Avenue
Stockport
SK4 1QR

To contact your local Service Centre telephone **08705 929929**

MIDLANDS

BIRMINGHAM (M18)	66 Birch Road East Wyrley Road Ind Estate Wilton Birmingham B6 7DB
BOURNE (M44)	Manning Road Ind Estate Pinfold Road Bourne PE10 9HT
BRIDGNORTH (M72)	68 St. Mary's Street Bridgnorth Shropshire WV16 4DR
GLOUCESTER (M23)	101 Rycroft Street Gloucester GL1 4NB
HEREFORD (M31)	Unit 3 Bank Buildings Cattle Market Hereford HE4 9HX
HIGHAM FERRERS (M51)	30 High Street Higham Ferrers Northants NN10 8BB
ILKESTON (M43)	Unit 2 Furnace Road Ilkeston DE7 5EP
LEICESTER (M22)	Unit 7 Oaks Ind Estate Coventry Road Narborough Leicestershire LE0 5GF
LINCOLN (M40)	Unit 8 Stonefield Park Clifton Street Lincoln LN5 8AA
NEWCASTLE UNDER LYME (M12)	18-21 Croft Road Brampton Ind Estate Newcastle under Lyme Staffordshire ST5 0TW
NUNEATON (M21)	19 Ptarmigan Place Townsend Drive Nuneaton CV11 6RX

REDDITCH (M20)	13 Thornhill Road North Moons Moat Redditch Worcestershire B98 9ND
-------------------	--

TAMWORTH (M19)	Unit 3 Sterling Park Claymore Tamworth B77 5DO
-------------------	--

WORCESTER (M73)	Unit 1 Northbrook Close Gregorys Mill Ind Estate Worcester WR3 8BP
--------------------	--

LONDON & EAST ANGLIA

BECKENHAM (M79)	11a Gardener Ind Estate Kent House Lane Beckenham Kent BR3 1QZ
--------------------	---

CHELMSFORD (M47)	Hanbury Road Widford Ind Estate Chelmsford Essex CM12 3AE
---------------------	---

COLINDALE (M53)	Unit 14 Capitol Park Capitol Way Colindale London NW9 0EQ
--------------------	---

ELTHAM (M78)	194 Court Road Mottingham Eltham London SE9 4EW
-----------------	--

ENFIELD (M49)	284 Alma Roa Enfield London EN3 7BB
------------------	---

GRAVESEND (M57)	Unit B4 Imperial Business Estate Gravesend Kent DA11 0DL
--------------------	--

HARPENDEN (M46)	Unit 4 Riverside Estate Coldharbour Lane Harpenden AL5 4UN
--------------------	--

To contact your local Service Centre telephone **08705 929929**

LETCHWORTH (M50) 16-17 Woodside Ind Est
Works Road
Letchworth
Herts SG6 1LA

LONDON (M76) 2/4 Royal Lane
Yiewsley
West Drayton
Middlesex UB7 8DL

MAIDENHEAD (M60) Reform Road
Maidenhead
Berkshire
SL6 8BY

MOLESEY (M61) 10 Island Farm Avenue
West Molesey
Surrey KT8 2UZ

NEWBURY (M24) 9 Pipers Court
Berkshire Drive
Thatcham
Berkshire
RG19 4ER

IPSWICH (M48) Unit 6C
Elton Park Business Centre
Hadleigh Road
Ipswich
IP2 0DD

NORWICH (M52) 2b Trafalgar Street
Norwich
NR1 3HN

SUNBURY (M63) Unit 1a
The Summit
Hanworth Road
Hanworth Ind Estate
Sunbury on Thames
TW16 5D

SOUTH EAST

ASHFORD (M58) Unit 2
Bridge Road Business Est
Bridge Road
Ashford
Kent TN2 1BB

FLEET (M59) Unit 1
Redsfield Ind Estate
Church Crookham
Fleet
Hampshire GU13 0RD

HAYWARDS HEATH (M55) 21-25 Bridge Road
Haywards Heath
Sussex RH16 1UA

SOUTH WEST

BARNSTAPLE (M30) Main Road
Fremington
Barnstaple
North Devon EX31 2NT

BOURNEMOUTH (M26) 63-65 Curzon Road
Bournemouth
Dorset
BH1 4PW

BRIDGEWATER (M35) 6 Hamp Ind Estate
Bridgewater
Somerset TA6 3NT

BRISTOL (M25) 11 Eldon Way
Eldonwall Trading
Bristol
Avon BS4 3QQ

EMSWORTH (M33) 266 Main Road
Southbourne
Emsworth
PO10 8JL

ISLE OF WIGHT (M34) Unit 8
Enterprise Court
Ryde Business Park
Ryde
Isle of Wight PO33 1DB

NEWTON ABBOT (M29) Unit 2
Zealley Ind Estate
Kingsteignton
Newton Abbot
S. Devon
TQ12 3TD

PLYMOUTH (M32) 16 Faraday Mill
Cattledown
Plymouth PL4 0ST

REDRUTH (M36) Unit 7D
Pool Ind Estate
Wilson Way
Redruth
Cornwall TR15 3QW



55 - 77 High Street - Slough
BERKSHIRE SL1 1DZ

© Electrolux Household Appliances Limited 2000