



# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for FRIGIDAIRE FDB1100RHC. You'll find the answers to all your questions on the FRIGIDAIRE FDB1100RHC in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual FRIGIDAIRE FDB1100RHC**  
**User guide FRIGIDAIRE FDB1100RHC**  
**Operating instructions FRIGIDAIRE FDB1100RHC**  
**Instructions for use FRIGIDAIRE FDB1100RHC**  
**Instruction manual FRIGIDAIRE FDB1100RHC**

**Dishwasher**  
**Use & Care Guide**  
*1500 Series with Fully Electronic Control*



For a more indepth description of your product's features and solutions to common dishwasher problems visit our Web Site at [www.frigidaire.com](http://www.frigidaire.com) to download a free copy of the Use and Care Manual or simply call us at 1-800-944-9044 and one will be sent to you.

**Versión en español**  
Si desea obtener una copia en español de este Manual del Usuario, sírvase escribir a la dirección que se incluye a continuación. Solicite la P/N 154659803. Spanish Use & Care Manual, Electrolux Home Products North America, P.O. Box 212378, Augusta, GA 30917.

**Product Registration Card**  
Please fill in completely, sign and return promptly!

**Safety Instructions**.....2

**Operating Instructions**.....3

**Dishwasher Features**.....4

**Preparing and Loading Dishes**.....5

**Dishwasher Dispenser and Detergents**.....6

**Care and Cleaning**.....7

**Consumer Services**  
Warranty & Service.....8

**Record All Information For Future Reference**

Brand: \_\_\_\_\_ Purchase Date: \_\_\_\_\_

Model #: \_\_\_\_\_

Serial #: \_\_\_\_\_  
(see Features page for location)

**Questions? 1-800-944-9044**  
(United States)

**1-866-213-9397**  
(Canada)

**READ AND SAVE THESE INSTRUCTIONS** PIN 154659801 (0706)

 [Your user manual](#)  
[FRIGIDAIRE FDB1100RHC](#)

**Manual abstract:**

Check with manufacturer for recommendations, if not marked. Items that are not dishwasher safe may melt and create a potential fire hazard. · If the dishwasher drains into a food disposer, ©2003 Electrolux Home Products, Inc. All rights reserved. · · When loading items to be washed: SAVE THESE INSTRUCTIONS Printed in U.S.A. 2 Operating Instructions Appearance may vary from your model. Cycle Chart Cycle Pots & Pans For pots, pans, casseroles and dinnerware with dried-on or baked-on soils. Normal Wash For regularly soiled dishes and silverware.

To Select Cycle Water (approx.) 8.5 gal. 7.1 imp.

gal. 32.2 liters Time\* (minutes) 104 Washes/ Rinses 2 washes 5 rinses Select POTS & PANS and desired OPTIONS. HI-TEMP WASH and SANITIZE will automatically be provided. Select NORMAL WASH and desired OPTIONS.

6.1 to 8.4 gal. 5.1 to 7.0 imp. gal. 23.1 to 31.8 liters 4.

9 gal. 4.1 imp. gal. 18.6 liters 89 2 washes 3 rinses Eco Wash For lightly soiled and pre-rinsed dishes and silverware. Upper Rack 74 Select ECO WASH and desired OPTIONS. 2 wash 2 rinses For lightly soiled or pre-rinsed Select UPPER RACK and dishes and silverware when desired OPTIONS. you do not have a full load. Rinse Only For rinsing dishes that will be washed later.

3.7 gal. 3.1 imp. gal.

14.0 liters 2.4 gal. 2.0 imp.

gal. 9.1 liters 65 2 wash 1 rinses 18 2 rinses Select RINSE ONLY. DO NOT USE detergent. \* Includes drying time. 3 Dishwasher Features Your dishwasher cleans by spraying a mixture of hot water and detergent through the spray arms against soiled surfaces. Next, the dishwasher fills with water covering the filter area. Water is then pumped through the filter and spray arms. Soil particles go down the drain as the water is pumped out and replaced with clean water. The number of water fills will vary with the cycle being used.

Nozzle Cup Shelves (on some models) Serial Label (located on right side of tub) Middle Spray Arm Bottom Rack Silverware Basket Lower Spray Arm Overflow Protector Detergent Dispenser Rinse Aid Dispenser Glass Trap Self-Cleaning Filter Heating Element Top Rack Tub Gasket Vent Appearance may vary from your model. Very Important Information--Read Before Operating Your Dishwasher! Normal Operating Sounds This dishwasher does not sound like most dishwashers--IT'S QUIETER. Your Precision Direct Wash System® dishwasher uses energy efficient motors for the wash and drain portions of the cycle you select. Each cycle has a series of water fills and drains for washing and rinsing dishes. As each cycle begins, you may not hear the drain motor. The next sound you will hear is the splashing water as it enters the tub. Then the lower arm rotates and circulates water. This is followed by a pause and a slightly different sound as the upper arms spray water. If you listen closely, you will hear the change in sound as the wash action switches from one arm to the other. PLEASE BE ADVISED: If you compare this dishwasher to previous models, you may be surprised at what you DON'T hear! Getting Started Load dishwasher Add detergent Add rinse aid, if needed Close door to latch.

Select desired CYCLE Select desired OPTIONS. The indicator light above the pad will glow when selected. 7. Run hot water faucet nearest dishwasher until water is hot. Turn water off.

8. To start, press START/CANCEL pad. 1. 2. 3.

4. 5. 6. 4 Loading the Silverware Basket Wash Cycle Selections Note: Cycle times are approximate and will vary with options selected. Hot water is necessary to activate dishwasher detergent and melt fatty food soils. Hot water is needed for best dishwashing and drying results. Water entering dishwasher should be at least 120°F (49°C) to give satisfactory results. Load sharp items (knives, skewers, etc.) pointing down. Failure to do so may result in injury.

Sanitize Option (available on select models) To sanitize your dishes and glassware, select the SANITIZE option. When selected, the light above the pad will come on and remain on until end of cycle. The water temperature in the final rinse will be raised to 155°F (68°C) and will maintain that temperature for 9 minutes. This option is available in POTS & PANS, NORMAL WASH and ECO WASH..



[Your user manual](#)

[FRIGIDAIRE FDB1100RHC](#)