

***Emerson***<sup>®</sup>


***AM/FM STEREO CLOCK RADIO  
with COMPACT DISC PLAYER  
and DUAL ALARM SYSTEM***

***OWNER'S MANUAL***

***RET66TQ - Blue***

***RET66BK - Black***

Visit our web site at [www.emersonradio.com](http://www.emersonradio.com)

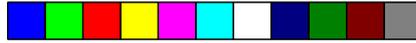

## CAUTION

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

### CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN

 

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## IMPORTANT SAFETY INSTRUCTIONS

- 1.) Read these instructions.
- 2.) Keep these instructions.
- 3.) Heed all warnings.
- 4.) Follow all instructions.
- 5.) Do not use this apparatus near water.
- 6.) Clean only with dry cloth.
- 7.) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8.) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9.) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10.) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11.) Only use attachments / accessories specified by the manufacturer.
- 12.) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13.) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14.) This appliance shall not be exposed to dripping or splashing water and no object filled with liquids such as vases shall be placed on the apparatus.
- 15.) Do not overload wall outlet. Use only power source as indicated.
- 16.) Use replacement parts as specified by the manufacturer.
- 17.) The product may be mounted to a wall only if recommended by the manufacturer.
- 18.) Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.

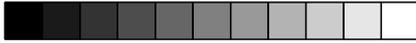

**Thank you.....**

for purchasing this Emerson dual alarm stereo clock radio CD player with 20 track programmable memory. The dual alarm system can be used to wake two people at two different times, or use one alarm for weekdays and the other for weekend wake-ups. In addition you have the choice of waking to an electronic 'Buzzer' alarm, the AM/FM radio, or your favorite CD. You can also fall asleep to music – either radio or CD – and the system will shut itself off automatically.



Of course there's also a battery back up system to maintain your clock and alarm settings in the event of a power interruption.

This system was designed to give you many years of enjoyment with an absolute minimum of care and maintenance. Please read this Owners Manual carefully and completely to ensure that you get the maximum benefit from all the outstanding features we have included in this product. If you encounter any problem with the set up or operation of this model please do not return it to the retail store. Please call the Emerson Customer Service Hotline toll free at 1-800-898-9020. One of our service technicians will try to diagnose the problem for you.

Once again thanks for choosing this Emerson audio product.

**Model No: RET66TQ / RET66BK**

**Serial No:** \_\_\_\_\_

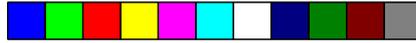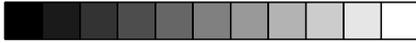

## IMPORTANT NOTES

- Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, on top of other stereo equipment that radiates too much heat, places lacking ventilation or dusty areas, places subject to constant vibration and/or humid or moist areas.
- Do not attempt to clean this unit with chemical solvents as this might damage the finish. Use a clean dry cloth.
- Operate controls and switches as described in the manual.
- Before turning 'On' the power, make certain that power cord is properly installed.
- Store your CDs, in a cool area to avoid damage from heat.
- When moving the set, be sure to first disconnect the power cord.

### CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT  
APPAREIL À LASER DE CLASSE 1  
PRODUCTO LASER DE CLASE 1

CAUTION  
INVISIBLE LASER RADIATION  
WHEN OPEN AND INTERLOCKS  
DEFEATED.  
AVOID EXPOSURE TO BEAM



**This product contains a low power Laser Device.**

 

### FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:



- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

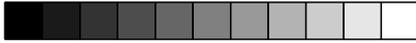

## PREPARATION FOR USE

### UNPACKING AND SET UP

  
- Carefully remove the main unit and the accessories from the display carton and remove all the packing material from the unit.
- Carefully remove any small strips of tape that may have been used to prevent the CD door from opening in transit.
- Unwind the AC power cord and extend it to its full length. The FM antenna is built into the AC power cord.
- This unit was shipped with a dummy CD transit card in the CD player. This dummy CD prevents the laser pick up from moving during shipment. This card must be removed before you can insert your own CDs. Press on the CD door in the area marked '**OPEN**'. Remove the transit card from the CD player and discard it.
- Place the unit on a flat, level surface such as a table, desk, counter, shelf, etc, convenient to a 120V 60Hz AC outlet, out of direct sunlight, and away from sources of excess heat, dust, moisture, or strong magnet fields.




## BATTERY BACK UP SYSTEM

This model includes a battery back up circuit that will maintain the clock and alarm settings in the event of a temporary power interruption. The battery back up system requires one 9-Volt battery, not included. The battery compartment is located on the back of the cabinet.

- 1.) Press downward on the battery door locking tab and remove the door.

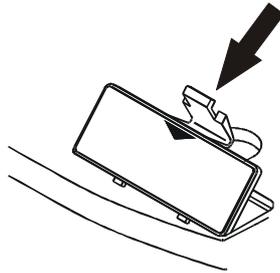


- 2.) Attach a fresh 9-Volt alkaline battery to the battery contacts as shown, and push the battery back into the battery compartment.

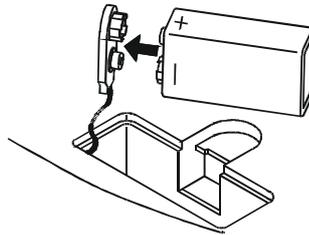

- 3.) Replace the battery door.

If the power is interrupted the display will go off and the radio will not work. However the battery will maintain the clock and alarm settings in memory. When the power is restored the display will come on again and the clock and alarm settings will be correct.

 The life of the battery will depend on the frequency and length of the power interruptions that you experience. For best results we suggest you install a fresh battery every 9 to 12 months. Always use a well-known brand of alkaline battery.




## POWER SOURCE

This radio is designed to operate on 120V 60Hz AC only. Attempting to operate this radio on any other power source could cause damage to the unit and such damage is not covered by your warranty.


Make sure the radio is connected to an AC outlet that is always “live”. Do not connect the radio to an outlet that is controlled by a wall switch.

**NOTE:** This unit has a polarized AC plug with one wide blade and one narrow blade. This plug will only fit into a matching polarized AC outlet. This is a safety feature to reduce the possibility of electric shock. If this plug will not fit in your AC outlet, you probably have an outdated non-polarized outlet. You should have your outdated outlet changed by a qualified, licensed electrician. Do not file the wide blade on the plug, or use an adapter to make the plug fit into your outlet. This defeats the safety feature and could expose you to electric shock.

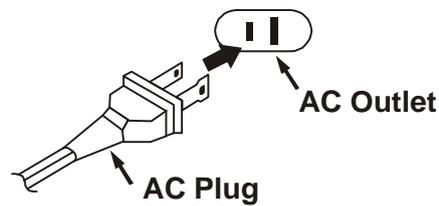


## PROTECT YOUR FURNITURE

 This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.






# LOCATION OF CONTROLS AND INDICATORS

## FRONT PANEL


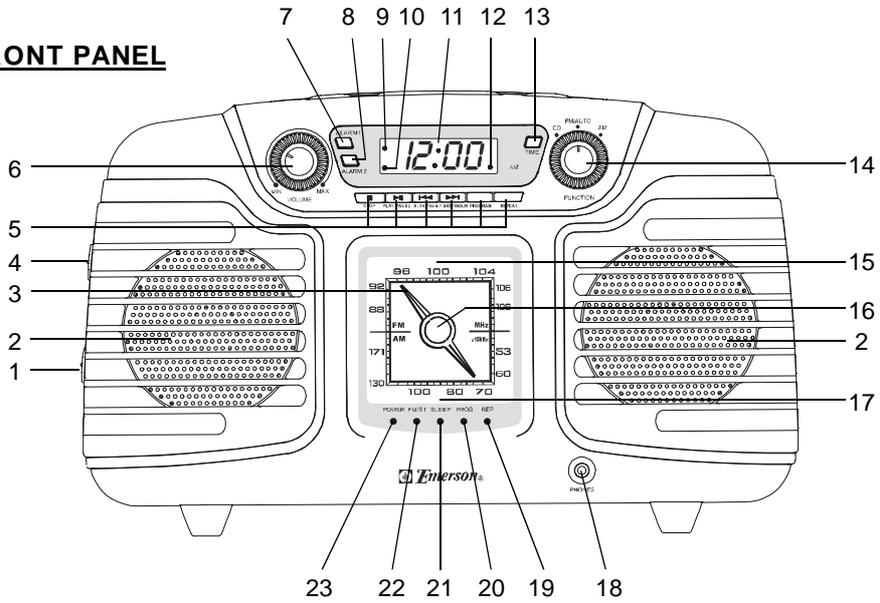


## TOP PANEL

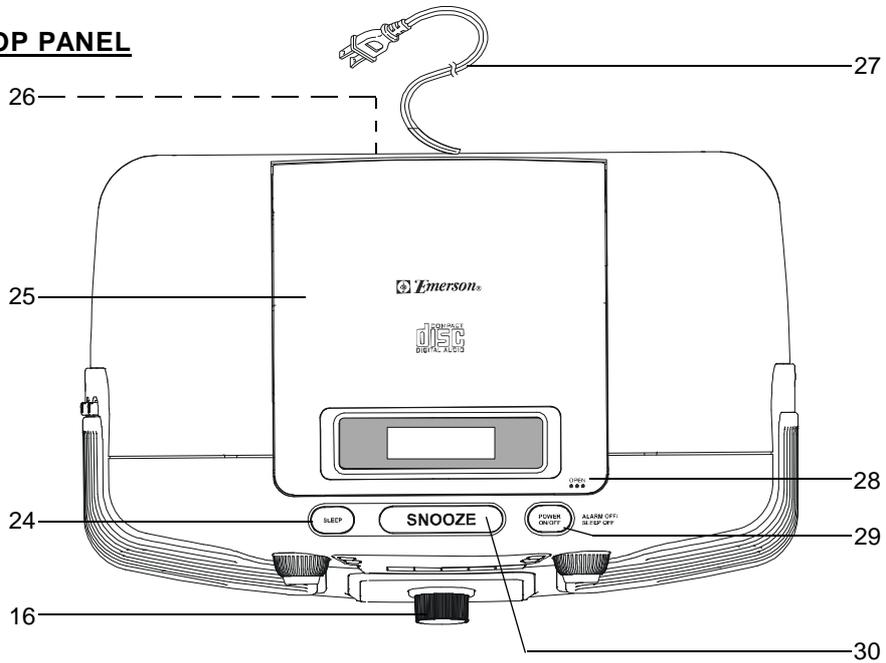

  

- 1.) **ALARM 1 / ALARM 2 / ALARM 1+2** Selector Switch.
- 2.) Speakers.
- 3.) Dial Pointer.
- 4.) Alarm Mode **BUZZ / AUTO / OFF** Selector Switch.
- 5.) CD Control Buttons:  
**STOP ■ / PLAY-PAUSE ▮ / R-SKIP (MIN) ◀◀ / F-SKIP (HOUR) ▶▶**  
**/ PROGRAM / REPEAT.**
- 6.) **VOLUME** Control.
- 7.) **ALARM 1** Set Button.
- 8.) **ALARM 2** Set Button.
- 9.) Alarm 1 'On' Indicator.
- 10.) Alarm 2 'On' Indicator.
- 11.) Clock Display.
- 12.) **AM** Indicator.
- 13.) **TIME** Set Button.
- 14.) **FUNCTION (CD / FM-AUTO / AM)** Selector Switch.
- 15.) **FM** Radio Dial.
- 16.) Tuning Knob.
- 17.) **AM** Radio Dial.
- 18.) **PHONES** Jack.
- 19.) **REP** (Repeat) Indicator.
- 20.) **PROG** (Program) 'On' Indicator.
- 21.) **SLEEP** 'On' Indicator.
- 22.) **FM ST.** 'On' Indicator.
- 23.) **POWER** 'On' Indicator.
- 24.) **SLEEP** 'On' Button.
- 25.) CD Door.
- 26.) Back Up Battery Compartment (Back Cabinet).
- 27.) AC Power Cord.
- 28.) CD Door **OPEN** Position.
- 29.) **POWER ON/OFF** Button.
- 30.) **SNOOZE** Button.

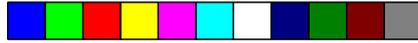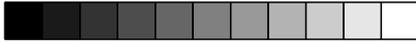

## OPERATING INSTRUCTIONS

- Make sure you have installed the back up battery in the battery compartment.
- Make sure you have removed the dummy CD transit card from the CD compartment.
- Connect the AC power cord plug to a 120V 60Hz AC outlet.

### SETTING THE CLOCK

When the radio is connected to the AC outlet for the first time the display will show



- 1.) Depress and hold the **TIME** button until the display begins flashing. Continue to hold the **TIME** button and repeatedly press the **▶|/HOUR** button to adjust the display to the correct hour, AM or PM.

**Note:** If the “**AM**” indicator is ‘On’, the time displayed is AM.



- 2.) Continue to depress the **TIME** button and repeatedly press the **◀|/MIN** button to adjust the display to the correct minute.
- 3.) When the display shows the correct time release all the buttons.



## SETTING THE WAKE-UP TIME

- 1.) Depress and hold the **ALARM 1** button. The display will change from clock time to wake-up time and flash “12:00”.



Continue to hold the **ALARM 1** button and repeatedly press the **▶▶/HOUR** button to adjust the display to the correct wake-up hour, AM or PM.

- 2.) Continue to depress the **ALARM 1** button and repeatedly press the **◀◀/MIN** button to adjust the display to the correct wake-up minute.
- 3.) When the display shows the desired Alarm 1 wake-up time release all the buttons.


Repeat this procedure with the **ALARM 2** button to set the desired wake up time for Alarm 2.

To check the wake-up times just press the **ALARM 1** or **ALARM 2** buttons at any time. The display will show the wake-up times as long as the ALARM set buttons are depressed.



## LISTENING TO THE RADIO


- 1.) Set the **FUNCTION** selector switch, located on the front cabinet, to the **FM/AUTO** or **AM** position.
- 2.) Press the **POWER ON/OFF** button on the top panel to turn the system 'On'. The **POWER** indicator and the radio dial lighting come 'On'.
- 3.) Rotate the Tuning knob to tune in the desired station. If you tune to an FM Stereo station the **FM ST.** indicator will light.
- 4.) Rotate the **VOLUME** control to the desired level.
- 5.) When you are finished listening press the **POWER ON/OFF** button on the top panel to shut the power 'Off'. The **POWER** indicator and the dial lighting goes 'Off'.

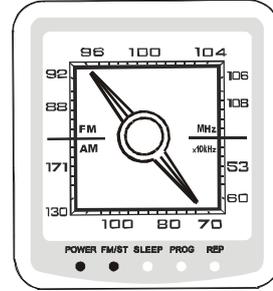


## Hints For Better Reception

**FM** – The FM Antenna is built in to the AC power cord. Make sure that the cord is extended to its full length.

 **AM** – The AM bar antenna is inside the cabinet. IF AM reception is unsatisfactory try turning the cabinet slightly until the internal antenna picks up the strongest signal.

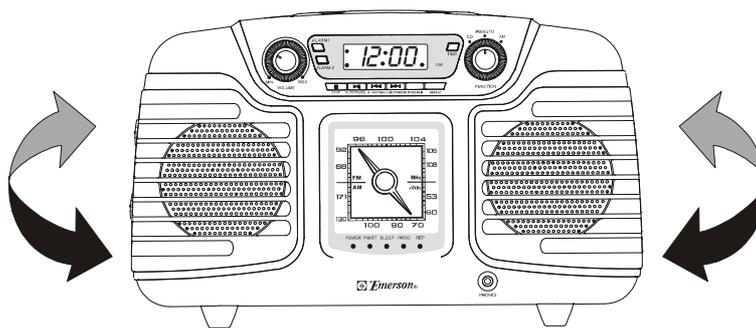



## PLAYING COMPACT DISCS

1. Set the **FUNCTION** selector switch on the front cabinet to the **CD** position.
2. Press the **POWER ON/OFF** button on the top panel. The **POWER** indicator and the radio dial lighting come 'On'.
3. Press the area marked "**OPEN**" on the CD door. When the door opens remove the dummy CD transit card if you have not already done so.
4. Place your disc on the center spindle with the printed label side facing up and close the CD door. The disc will spin for a few seconds while the player reads the TOC (Table of Contents) on the disc. The disc will stop spinning and the display will briefly show the total number of tracks on the disc, then the display will return to the correct time.





5. Press the **PLAY/PAUSE**  button on the front panel. The display briefly shows "01" and playback begins on track 1.




Adjust the **VOLUME** control to the desired level.

- 6.) Playback will continue until the last track has played then the disc stops. To stop playback before the disc ends press the **STOP**  button on the front panel at any time.
7. If you are finished listening press the "**OPEN**" mark on the CD door, remove your disc from the player, and then close the door again.
8. To listen to the radio set the **FUNCTION** selector switch back to the **FM/ST** or **AM** position, or press the **POWER ON/OFF** button to shut the system 'Off'.

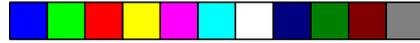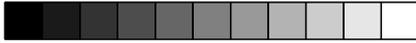

## Pause Control



To pause momentarily during CD playback press the **PLAY/PAUSE**  button on the front panel again. The sound stops and the track number display flashes for a few seconds but the disc continues to spin. Press the **PLAY/PAUSE**  button again to cancel the Pause mode and resume normal playback. The sound resumes at the same point on the disc.

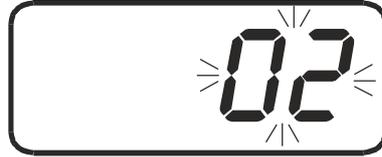

## Skip/Search / Controls

During playback press the **F-SKIP**  or **R-SKIP**  buttons on the front panel repeatedly to skip forward or back to higher or lower numbered tracks. Playback will start at the beginning of the selected track.

 - To search within a track for a specific musical passage depress and hold the **F-SKIP**  or **R-SKIP**  buttons on the front panel. The player will search rapidly forward or backward as long as the buttons are depressed. When you hear the desired passage release the buttons and normal playback will resume at that point.
- To start playback from a specific track load your disc as usual and wait until the display shows the total number of tracks. Press the **F-SKIP**  or **R-SKIP**  buttons repeatedly until the desired track number appears in the display then press the **PLAY/PAUSE**  button to begin playback on the desired track.

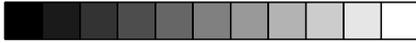

## Special Playback Modes

### Repeat Playback

You can program the player to continuously repeat a single track or the entire disc. The Repeat mode can be selected while the disc is playing or while the disc is stopped.

#### Single Track Repeat

Select the track to be repeated and then press the **REPEAT** button on the front panel once. The **REP** indicator begins flashing. If necessary, press the **PLAY/PAUSE**  button to begin playback. The selected track will be repeated continuously.




#### All Tracks Repeat

Press the **REPEAT** button on the front panel twice. The **REP** indicator remains 'On'. If necessary, press the **PLAY/PAUSE**  button to begin playback. The entire disc will be repeated continuously.



To cancel Repeat playback press the **REPEAT** button on the front panel until the **REP** indicator goes 'Off'. Repeat Playback mode may also be cancelled by pressing the **STOP**  button, switching to Radio function, or opening the CD door.

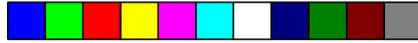

## Programmed Playback


Use the Programmed Playback feature to play up to **20** tracks on a disc in any desired order. You may also program a particular track to play several times within a programmed sequence if desired.

**Note:** You cannot program a disc while it is playing. Press the **STOP** ■ button to stop playback and then follow the programming steps below.

- 1.) Load your disc as usual and wait until the display shows the total number of tracks on the disc.



- 2.) Press the **PROGRAM** button on the front panel. The **PROG** indicator begins flashing and “P 01” appears in the display, indicating that you may enter the first track in program memory #01.

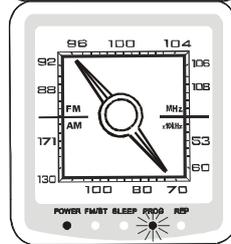

- 3.) Press the **F-SKIP** ►► or **R-SKIP** ◄◄ buttons to select the first track number to be programmed.



Example: Track number **07**.

When the desired track number appears in the display press the **PROGRAM** button again. Track 07 is now entered in Program Memory number “P 01”. The program memory number now advances to number “P 02” and the **PROG** indicator continues flashing.



**Note:** After pressing the **PROGRAM** button you must select a track number and press the **PROGRAM** button again while the **PROG** indicator is still flashing (within 10 seconds). After 10 seconds the **PROG** indicator goes ‘Off’ and you cannot enter a track in the memory. If this occurs, press the **PROGRAM** button again to start the **PROG** indicator flashing and enter a track in the memory within 10 seconds.



4.) Repeat step 3, selecting a different track number each time until you have entered up to 20 tracks in the program memory.

5.) When you have completed programming the desired tracks press the **PLAY/PAUSE**  button to begin programmed playback. The **PROG** indicator stops flashing and remains 'On'. Playback will begin on the first track you programmed and will continue until the last programmed track has played.



6.) When the program is completed the player stops and the display again shows the correct time. However the **PROG** indicator remains 'On' and the player remains in the Programmed Playback mode. If you press the **PLAY/PAUSE**  button the programmed sequence will play again.

To cancel the Programmed Playback mode press the **STOP**  button while in programming mode. The **PROG** indicator goes 'Off'.


Programmed Playback may also be canceled by opening the CD door.


### Programmed Repeat Playback

 You may use the Programmed Playback and Repeat features together to continuously repeat a programmed sequence.

First program the desired sequence according to steps 1 through 4 above.

When Programmed Playback begins press the **REPEAT** button twice to select the Repeat All Tracks mode. The **REP** indicator and the **PROG** indicator remains 'On'. The programmed sequence will be repeated continuously.

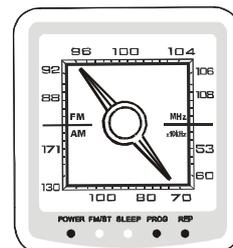




## Dual Alarm Function

You can use the alarm function to wake you to an electronic buzzer tone, the radio, or your favorite CD.

First press the **ALARM 1** and/or **ALARM 2** buttons on the front panel to check the Wake Up time settings. Adjust the Wake Up time if necessary.

### Wake To Buzzer

Press the **POWER ON/OFF** button to shut the power 'Off' if necessary. Set the **BUZZ/AUTO/OFF** switch on the left side panel to the **BUZZ** position, and set the ALARM selector to the desired position for **ALARM 1**, **ALARM 2**, or **ALARM 1+2**. The appropriate Alarm 1 and/or Alarm 2 LED indicators will appear in the display to confirm that the alarms are set.


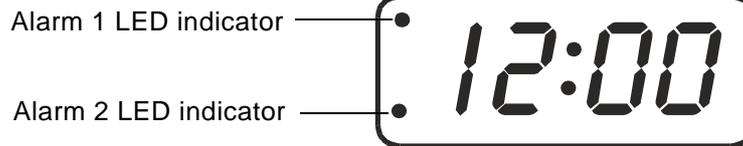


At the selected wake up time the buzzer will sound. It will continue for one hour and then shut off automatically. To stop the alarm sooner, press the **POWER ON/OFF** button on the top panel.

### Wake To Radio

  Tune to the desired radio station and adjust the volume to the level you want to hear in the morning when the alarm comes on. Press the **POWER ON/OFF** button to shut the system 'Off'. Set the **BUZZ/AUTO/OFF** switch on the left side panel to **AUTO**. Set the ALARM selector to the desired position for **ALARM 1**, **ALARM 2**, or **ALARM 1+2**. The appropriate Alarm 1 and/or Alarm 2 LED indicators will appear in the display to confirm that the alarms are set.

At the selected wake up time the radio will turn on. It will continue for one hour and then shut off automatically. To stop the radio sooner, press the **POWER ON/OFF** button on the top panel.



## Wake To CD

Load the desired CD, begin playback and adjust the volume to the desired level. Press the **POWER ON/OFF** button to shut the system 'Off'. Set the **BUZZ/AUTO/OFF** switch on the left side panel to **AUTO**. Set the ALARM selector to the desired position for **ALARM 1**, **ALARM 2**, or **ALARM 1+2**. The appropriate Alarm 1 and/or Alarm 2 LED indicators will appear in the display to confirm that the alarms are set. At the selected wake up time the power will turn 'On' and the CD will begin to play. It will continue for one hour, or until the disc ends and then shut off automatically. To stop the CD player sooner, press the **POWER ON/OFF** button on the top panel or press the **STOP ■** button.

## Set and Forget Alarm

The Alarms will automatically repeat each day at the selected Wake Up times as long as the alarm selector (**BUZZ/AUTO/OFF**) remain set to either the '**AUTO**' or '**BUZZ**' positions and the Alarm 1 and/or Alarm 2 LED indicators remain in the display. To cancel the alarms, set the **BUZZ/AUTO/OFF** selector on the left side panel to the **OFF** position.

## Snooze Function

After the alarm turns on in the morning you can use the Snooze function to grab a few more minutes sleep before the alarm sounds again. To activate the Snooze function, press the **SNOOZE** button on the top cabinet. The Snooze function will stop the alarm for 6 minutes and then turn the alarm on again. The Snooze operation can be repeated several times within one hour. But after one hour the alarm will not turn on again.






## PHONES Jack

The Stereo Headphone Jack is located on the front panel. Connect a set of stereo headphones (not included) to this jack for private listening without disturbing others. The internal speakers are automatically disconnected when headphones are connected to the **PHONES** jack.

**IMPORTANT:** When using headphones always set the volume control to a low level before you put the headphones on. Then put the headphones on and gradually increase the volume to a comfortable listening level.




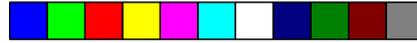


## CARE AND MAINTENANCE

### COMPACT DISC CARE

- To remove a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.

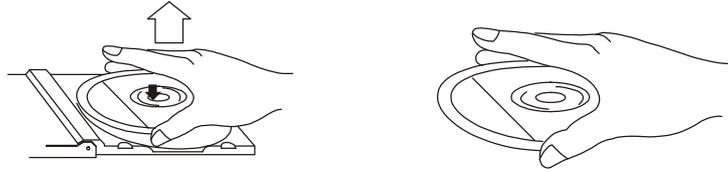

- Fingerprints and dust should be carefully wiped off the disc's recorded surface with a soft cloth. Unlike conventional records, compact discs have no grooves to collect dust and microscopic debris, so gently wiping with a soft cloth should

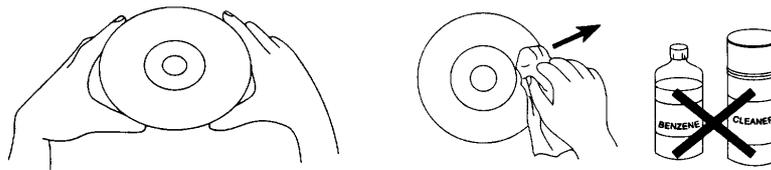

remove most particles. Wipe in a straight line from the inside to the outside of the disc. Small dust particles and light stains will have absolutely no effect on reproduction quality.


- Clean the disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the disc. If necessary, use a CD cleaning kit.
- Never write on or affix labels to the surface of compact discs.

### CARE OF THE CABINET

If the cabinet becomes dusty wipe it with a soft dry dust cloth. Do not use any wax, polish sprays, or abrasive cleaners on the cabinet.

### CAUTION

Never allow any water or other liquids to get inside the unit while cleaning.

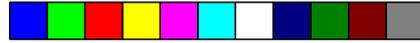

**LIMITED WARRANTY**

Emerson Radio Corp. warrants manufacturing defects in original material, including original parts and workmanship, under normal use and conditions, for a period of ninety (90) days from the date of original purchase in the U.S. With your dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product in our discretion. For repair or replacement, pack your unit in a padded box, enclose your check or money order payable to Emerson Radio Corp. in the amount of \$9.00 (not required by California residents) to cover shipping and handling costs, and enclose a copy of your proof of purchase. Send your unit to:

Emerson Radio Corp.  
1901 Diplomat Drive.  
Farmers Branch, TX 75234.

This warranty does not cover damage from negligence, misuse, abuse, accident, failure to follow operating instructions, commercial use, rental, repairs by an unauthorized facility, or products purchased, used, serviced or damaged outside of the United States.

**THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.**

**AU898M**



TO FIND THE LOCATION AND PHONE NUMBER OF YOUR NEAREST SERVICE CENTER PERMITTED TO PERFORM WARRANTY...

CALL TOLL FREE: 1-800-695-0098

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE  
PLEASE CALL:  
1-800-898-9020

FOR CUSTOMER SERVICE, PLEASE WRITE TO:  
Emerson Radio Corp.  
Consumer Affairs Dept.  
1901 Diplomat Drive,  
Farmers Branch, TX 75234.



**EMERSON**  
**Part No. : 16-2947**  
**408-02**

**Printed in China**