



Quick Reference Guide

Parts Descriptions

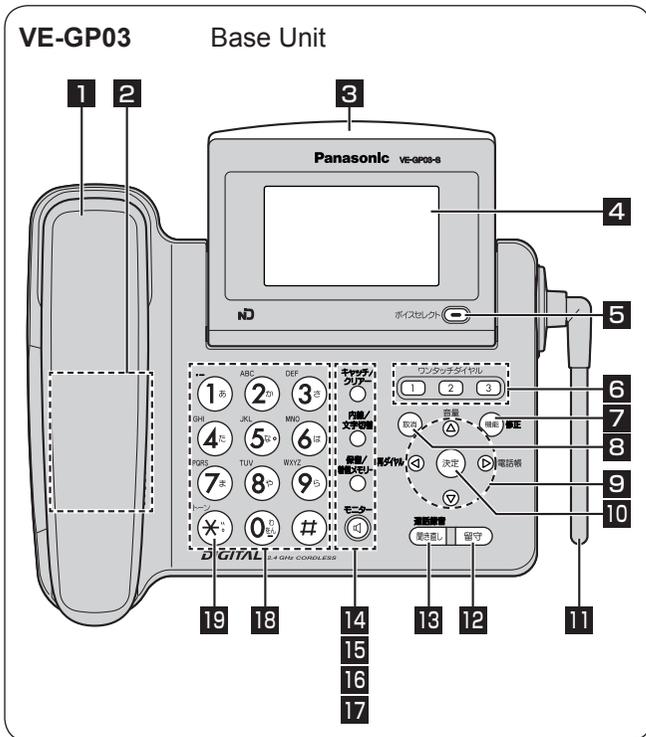

- 1 Handset
- 2 Speaker
- 3 Call indicator
- 4 Liquid crystal display
- 5 Voice select button
- 6 One-touch Dial buttons
- 7 Function/Edit button
- 8 Cancel button
- 9 Redial button (再ダイヤル)
- Phone book button (電話帳)
- Volume control buttons (音量)
- 10 Set button
- 11 Antenna
- 12 Auto Answer button & indicator
- 13 Playback/Call Record button
- 14 Flash/Clear button
- 15 Intercom/Character entry mode button
- 16 Hold/Caller ID button
- 17 Monitor button
- 18 Numeral/Character buttons
- 19 Tone button (to switch to DTMF tone)

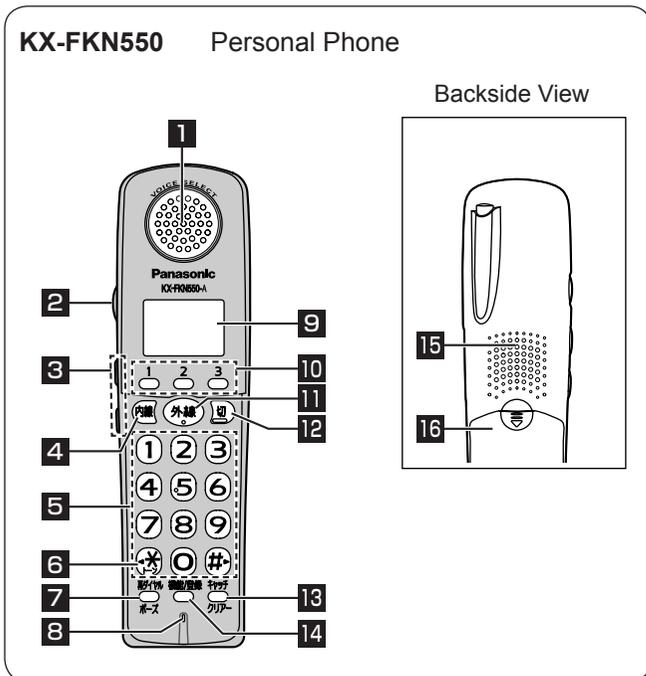

- 1 Earpiece
- 2 Voice select button
- 3 Volume control/Function select buttons
- 4 Intercom button
- 5 Numeral/Character buttons
- 6 Tone button (to switch to DTMF tone)
- 7 Redial/Pause button
- 8 Microphone
- 9 Liquid crystal display
- 10 One-touch Dial buttons
- 11 Talk button & indicator
- 12 Off button
- 13 Flash/Clear button
- 14 Function/Set button
- 15 Speaker
- 16 Battery cover

- 本機は日本国内用です。国外での使用に対するサービスは致しかねます。
- This product is designed for use in Japan.
Panasonic cannot provide service for this product if used outside Japan.

Basic Operations

- The number after the button shows the location of the button described in the previous page.

Base unit (VE-GP03)

■ To make a call

Lift the handset. → Dial.

■ To receive a call

When the phone rings... → Lift the handset.

■ To place the current call on hold

Press  (16) during a call.

(You can place the handset on the base unit.)

■ To retrieve the held call

- If you have returned the handset on the base unit, lift the handset.

- If you have not returned the handset on the base unit, press  again.

■ To transfer the held call to the personal phone

Press  (15) during a call. (→ When you use multiple personal phones, press ① - ⑥ (Intercom No.)) → Place the handset on the base unit when the other party answers.

■ To use TAM (Telephone Answering Machine)

When you leave home, press  (12) to turn on the indicator.

(To deactivate, press  again to turn off the indicator.)

→ When receiving a call while TAM is activated, it answers the call automatically in Japanese, and records the incoming messages.

Then, the  indicator starts flashing.

→ When you return home, press  to play back the messages.

The  indicator turns off and the answering mode is deactivated.

After playing back the messages, press  to erase

the messages or press  to keep the messages.

To play back the message while TAM is

deactivated, press  (13).

*Up to 50 messages can be recorded for approx. 12 minutes in total.

■ To hear recorded messages while away from home (Remote control)

Preparation before you leave home

Store a remote control number.

With the handset placed on the base unit, press

    . → Enter the desired 4-digit

number. → Press , then press .

When you leave home, press  to turn on the indicator.

To hear messages

Dial your home phone number. → While the outgoing message is played back...

→ Enter your remote control number.

→ Announcement → Press . → You will hear recorded messages if any.

NOTE

- This operation can be made only from telephones which can send DTMF signals.

Personal phone (KX-FKN550)

■ To make a call

Lift the personal phone from the charger and press

 (11). → Dial.....To end the call, place the personal phone on the charger or press .

■ To receive a call

When the phone rings... → Lift the personal

phone from the charger or press . →

Talk.....To end the call, place the personal phone on the charger or press .

■ To transfer the held call to the base unit

Press  (4) during a call. (→ When you use multiple personal phones, press .)

→ Place the personal phone on the charger, or press  when the other party answers.

■ To transfer the held call to another personal phone

Press  during a call. → Press ① - ⑥

(Intercom No.) → Place the personal phone on the charger, or press  when the other party answers.