



eVENT shell closed



Mesh bug netting closed

THREE WIRE BIVY SETUP INSTRUCTIONS

1. Remove contents from stuff sack and lay the bivy out on the ground
2. Assemble the pole, it will form a cross shape - notice there is one section of the pole with a longer side and a shorter side (relative to the plastic hub piece where all four sections of the poles meet)
3. Insert the longest pole section into the hole located at the top center of the hood, under the visor.
4. Fit the end of that pole into the reflective webbing pocket inside the hood located at the seam between the floor and the hood. Wrap the Velcro piece around the pole for more stability.
5. Pull the visor over the opposite end of the pole (the shorter end) and fit the end of the pole into the webbing pocket located at the edge of the visor.
6. Insert one of the two remaining free ends of the pole into its respective grommet at the bottom, side of the hood, making sure the pole threads through the opening (not in front of it) of the visor and into the grommet.
7. Repeat step 6 with the remaining free pole section.
8. Stake out the bivy for maximum stability and ventilation.

**Separate 6", large diameter pole segment included for emergency field repair.
Slide repair pole over the break to act as a splint.**

HELPFUL HINTS

- Our shelters are easy to set up but we suggest you practice once at home before using them for the first time to avoid fumbling around in the dark.
- Before pitching the bivy, clear campsite of debris that may pierce the floor.
- Big Agnes bivy sacks don't require stakes, but we recommend staking them out to increase space and keep your bivy from becoming a tumbleweed.
- Hang onto your stuff sacks while pitching or they'll blow away and create backcountry litter.



Cut here to remove. Do Not Tear!

Thanks for choosing a Big Agnes tent!

Please feel free to contact us if you have any questions or comments.

info@bigagnes.com or call toll free **877-554-8975**

TENT CARE

Storage

Always make sure your tent is dry and free of debris before storing. Stuff or fold your tent a different way each time to avoid permanent creases. Store in a cool, dry place. Never leave your tent in very hot temperatures (such as a car trunk), as it will damage the material coatings. Storing your tent damp can result in mildew growth, which may cause your tent to smell, leak or delaminate. Mildew damage is not covered under warranty.

Cleaning

For light cleaning, you can sponge the tent with warm water. If it's necessary to wash the entire tent, always use cleaners recommended specifically for tents. We recommend McNett Mirazyme cleaner, or Nikwax Tech Wash. Do not dry clean or machine-wash your tent. Detergents and dry cleaning solvents will damage the fabric and ruin waterproofing. Never use hot water, bleach, liquid detergents or dishwashing liquids.

Seam Sealing

Seam tape alone is durable enough to prevent water leakage. Any seams that have been taped do not need to be seam sealed with a liquid sealer unless you want extra protection. Make sure the seam-sealer is completely dry before re-packing your tent. Damage caused by misapplication may void warranty.

Zippers

Keeping your zippers clean will help keep the coils and sliders from wearing out. If filled with dirt, vacuum or brush zippers before storing tent.

Repairs and Warranty

All Big Agnes tents are guaranteed against manufacturing or material defect. We do not warranty products damaged from normal wear and tear, alteration made by owner, misuse, accidents or damages caused by uses other than intended. Damage due to misuse, normal wear and tear, or improper care may be repaired at a reasonable charge. Tents returned for repair must be clean and free of debris.



P.O. Box 773072 • Steamboat Springs, Colorado • 80477
Toll Free: 877.554.8975 • info@bigagnes.com • www.bigagnes.com