

Attaching the Speaker Stand Adapters

The PV-802 speakers can each be mounted on speaker stands using a VocoPro speaker stand adapter (sold separately).

NOTE: These speaker stand adapters are included with the purchase of VocoPro SS-88 speakers stands. Contact your local VocoPro dealer to order a pair of VocoPro SS-88 speaker stands.

Attaching the Adapter to the Speakers

NOTE: The 4 mounting screws are included with the PV-802.

1. Remove the rubber pads covering the screw openings on the bottom of the PV-802 speakers to reveal the holes for the mounting screws. (Fig A)

NOTE: DO NOT remove the screw that is already on the bottom of the PV-802 main speaker. This screw is keeping the internal amp and mixer in place and must not be removed.

2. Align the slots on the flat part of the adapter with the holes on the bottom of the PV-802 speaker (Fig. B)
3. Screw in the screws, tightly fastening the adapter to the speaker.

NOTE: Make sure the adapter is attached firmly to the speaker.

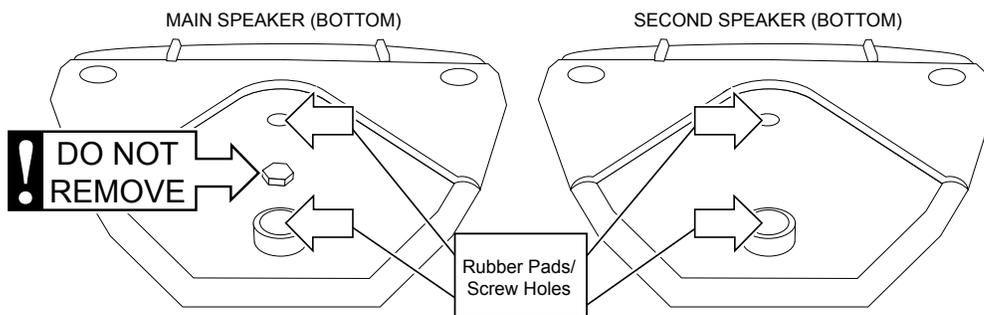


Fig.A

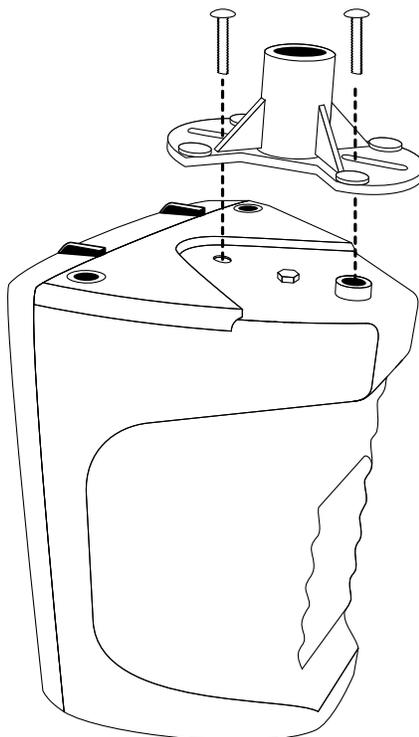


Fig.B

Mounting on a Speaker Stand / Voltage Selector

Setting up the Speaker Stands


Setup each SS-88 speaker stand by extending the support legs to a position that is stable and tighten the tension mechanism firmly.

Each end of the SS-88 pole has a particular diameter fitted for common speakers' mounting cavities. If the SS-88 pole does NOT fit flush into the mounting adapter on the PV-802, loosen the SS-88 pole and reverse it in the stand and then remount the speaker.

Mounting the Speaker(s)

Once the adapter is securely attached to the speaker:

1. Place the PV-802 on the SS-88 speaker pole
2. Fasten the fastener on the adapter until it is secured tightly
3. Repeat this for the next speaker

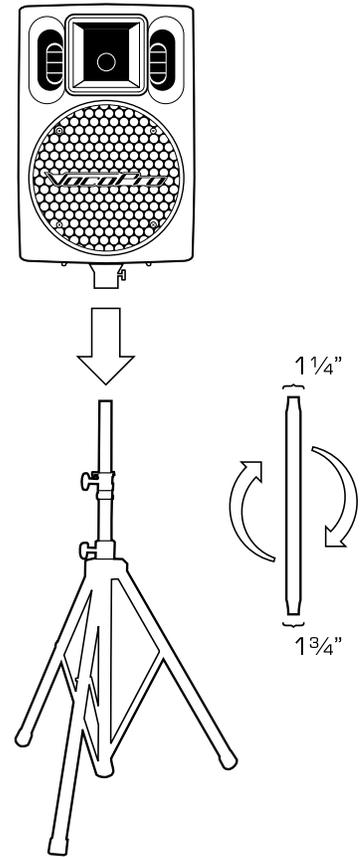

Switching Voltage

The PV-802 has a voltage selector on the rear panel that switches between two voltage settings:

- 115V - North America, Canada, some South America
- 220V - Europe, Asia, some South America

Note: The PV-802 comes preset to 115V and will only need to be switched if it is being used in a region that requires 220V.

To switch the voltage

1. Locate the voltage selector by removing the VOLTAGE SELECT sticker on the rear panel of the powered PV-802 speaker
2. Switch the selector to the proper voltage

CAUTION: Using the speakers while set to the wrong voltage can result in permanent damage and will void the warranty. Make sure you have set the PV-802 to the correct voltage before using.

