

## English

### Connect wires: ISO connectors

- Caution**



  - Ensure that all loose leads are insulated with electrical tape.
- Pull out the ISO connectors from the car dashboard and connect them to the bigger end of the supplied standard connector.
- Connect the other end of supplied standard connector to the unit.
- Do the other connections, if applicable.

### Attach the front panel

- Attach the trim plate.
- Insert the left side of the panel in the chassis until it is correctly engaged.
- Press the right side of the panel until the mechanism locks it into place.
- Close the front panel.

### Mount in the dashboard

- Note**
- For proper operation of the DVD player, the chassis must be mounted within 20 degree horizontal. Ensure that the unit is mounted within this limitation.
- If the car does not have an on-board drive or navigation computer, disconnect the negative terminal of the car battery.
    - If you disconnect the car battery in a car that has an on-board drive or navigation computer, the computer may lose its memory.
    - If the car battery is not disconnected,

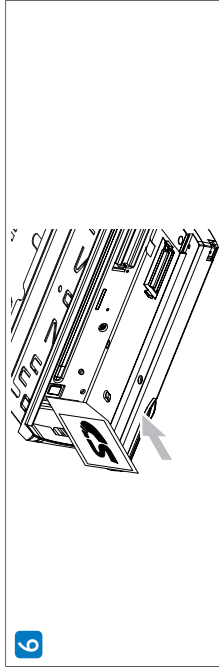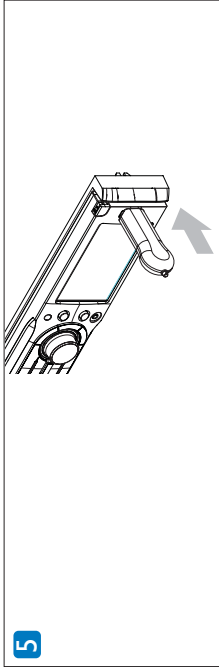

- to avoid short-circuit, ensure that bare wires do not touch each other.
- Ensure that car dashboard opening is within these measurements:
  - Remove the two transport screws on the top of the unit.
  - Remove the mounting sleeve with the removal keys.
  - Install the sleeve into the dashboard and bend the tabs outward to fix the sleeve.
    - If the unit is not fixed by sleeve but by the supplied screws, skip this step.
  - Place the rubber cushion over the end of the bolt.
  - Slide the unit into the dashboard until a click sound is heard.
  - Reconnect the negative terminal of the car battery.

### Detach the front panel

The front panel can be detached and taken with you to deter theft.

- Note**
- Before installing the unit, detach the front panel.

- Press **⏏** to release the panel.
- Open the panel, then push the right side panel toward the left side to disengage it from the chassis.
- Take off the panel and store it in the supplied carry case to protect it from dirt or damage.

### Turn on

- Press the **⏏** knob to turn on the unit.
  - The unit plays the last listened program: DVD Tuner, USB or SD/MMC Card (if there is USB device or SD/MMC card connected).
- To turn off the unit, press the **⏏** knob for more than 2 seconds.

- When the unit is idle for over 5 minutes, it goes to standby mode and displays screen saver.

### Set clock

- Press **MENU**.
- Press the navigation buttons to select **[SET-TUNING]**, then press **SEL** on the remote control.
- Select **[SYSTEM]**, then press **▶▶**.
- Select **[TIME MODE]**, then press **▶▶**.
  - The time mode options are displayed:
    - [12 HOUR MODE]**
    - [24 HOUR MODE]**
- Select a mode, then press **SEL**.
- Press **◀◀** to return to previous menu and select **[TIME ADJUST]**, then press **▶▶**.
- Press **▲** or **▼** to enter clock, then press **SEL**.

### Tune to a radio station

- Press **SOURCE** to select Tuner.
- Press **▲** or **▼** to select band.
  - [FM]** or **[AM]** is displayed.
- Press **◀◀** or **▶▶** to tune to a radio station manually.
  - To search for radio station automatically, press **◀◀** or **▶▶** for 3 seconds.

### Play discs

- Press **▶** to open the front panel.
- Insert the disc into the disc slot with label side facing up.
  - Play resumes from the point where it was last stopped.
- To remove the disc, press the **▲** button.
  - When the disc is ejected, the unit switches to **TUNER** mode automatically.
- Close the front panel.
  - After a few seconds, the screen turns on.

- For video discs, if a menu appears, press **▲** or **▼** to select an item, then press **⏏** to start play.
- For discs that contain MP3s, WMAs, or JPEGs, press **▲** or **▼** to select a folder/track/picture, then press **⏏** to start play.

### Insert USB device

- Slide down the USB socket cover.
- Insert the USB device into the USB socket.
  - The unit starts playing from the USB device automatically.

### Insert SD/MMC card

- Press **▶** to open the front panel.
- Insert the SD or MMC card into the card slot.
  - The unit starts playing from the SD/MMC card automatically.

